


**BOSCH**

V 360-0722044366-D1,A1

V 360-0722044384-GB1

V 360-0722044385-F1

V 360-0722044389-N1,SF1

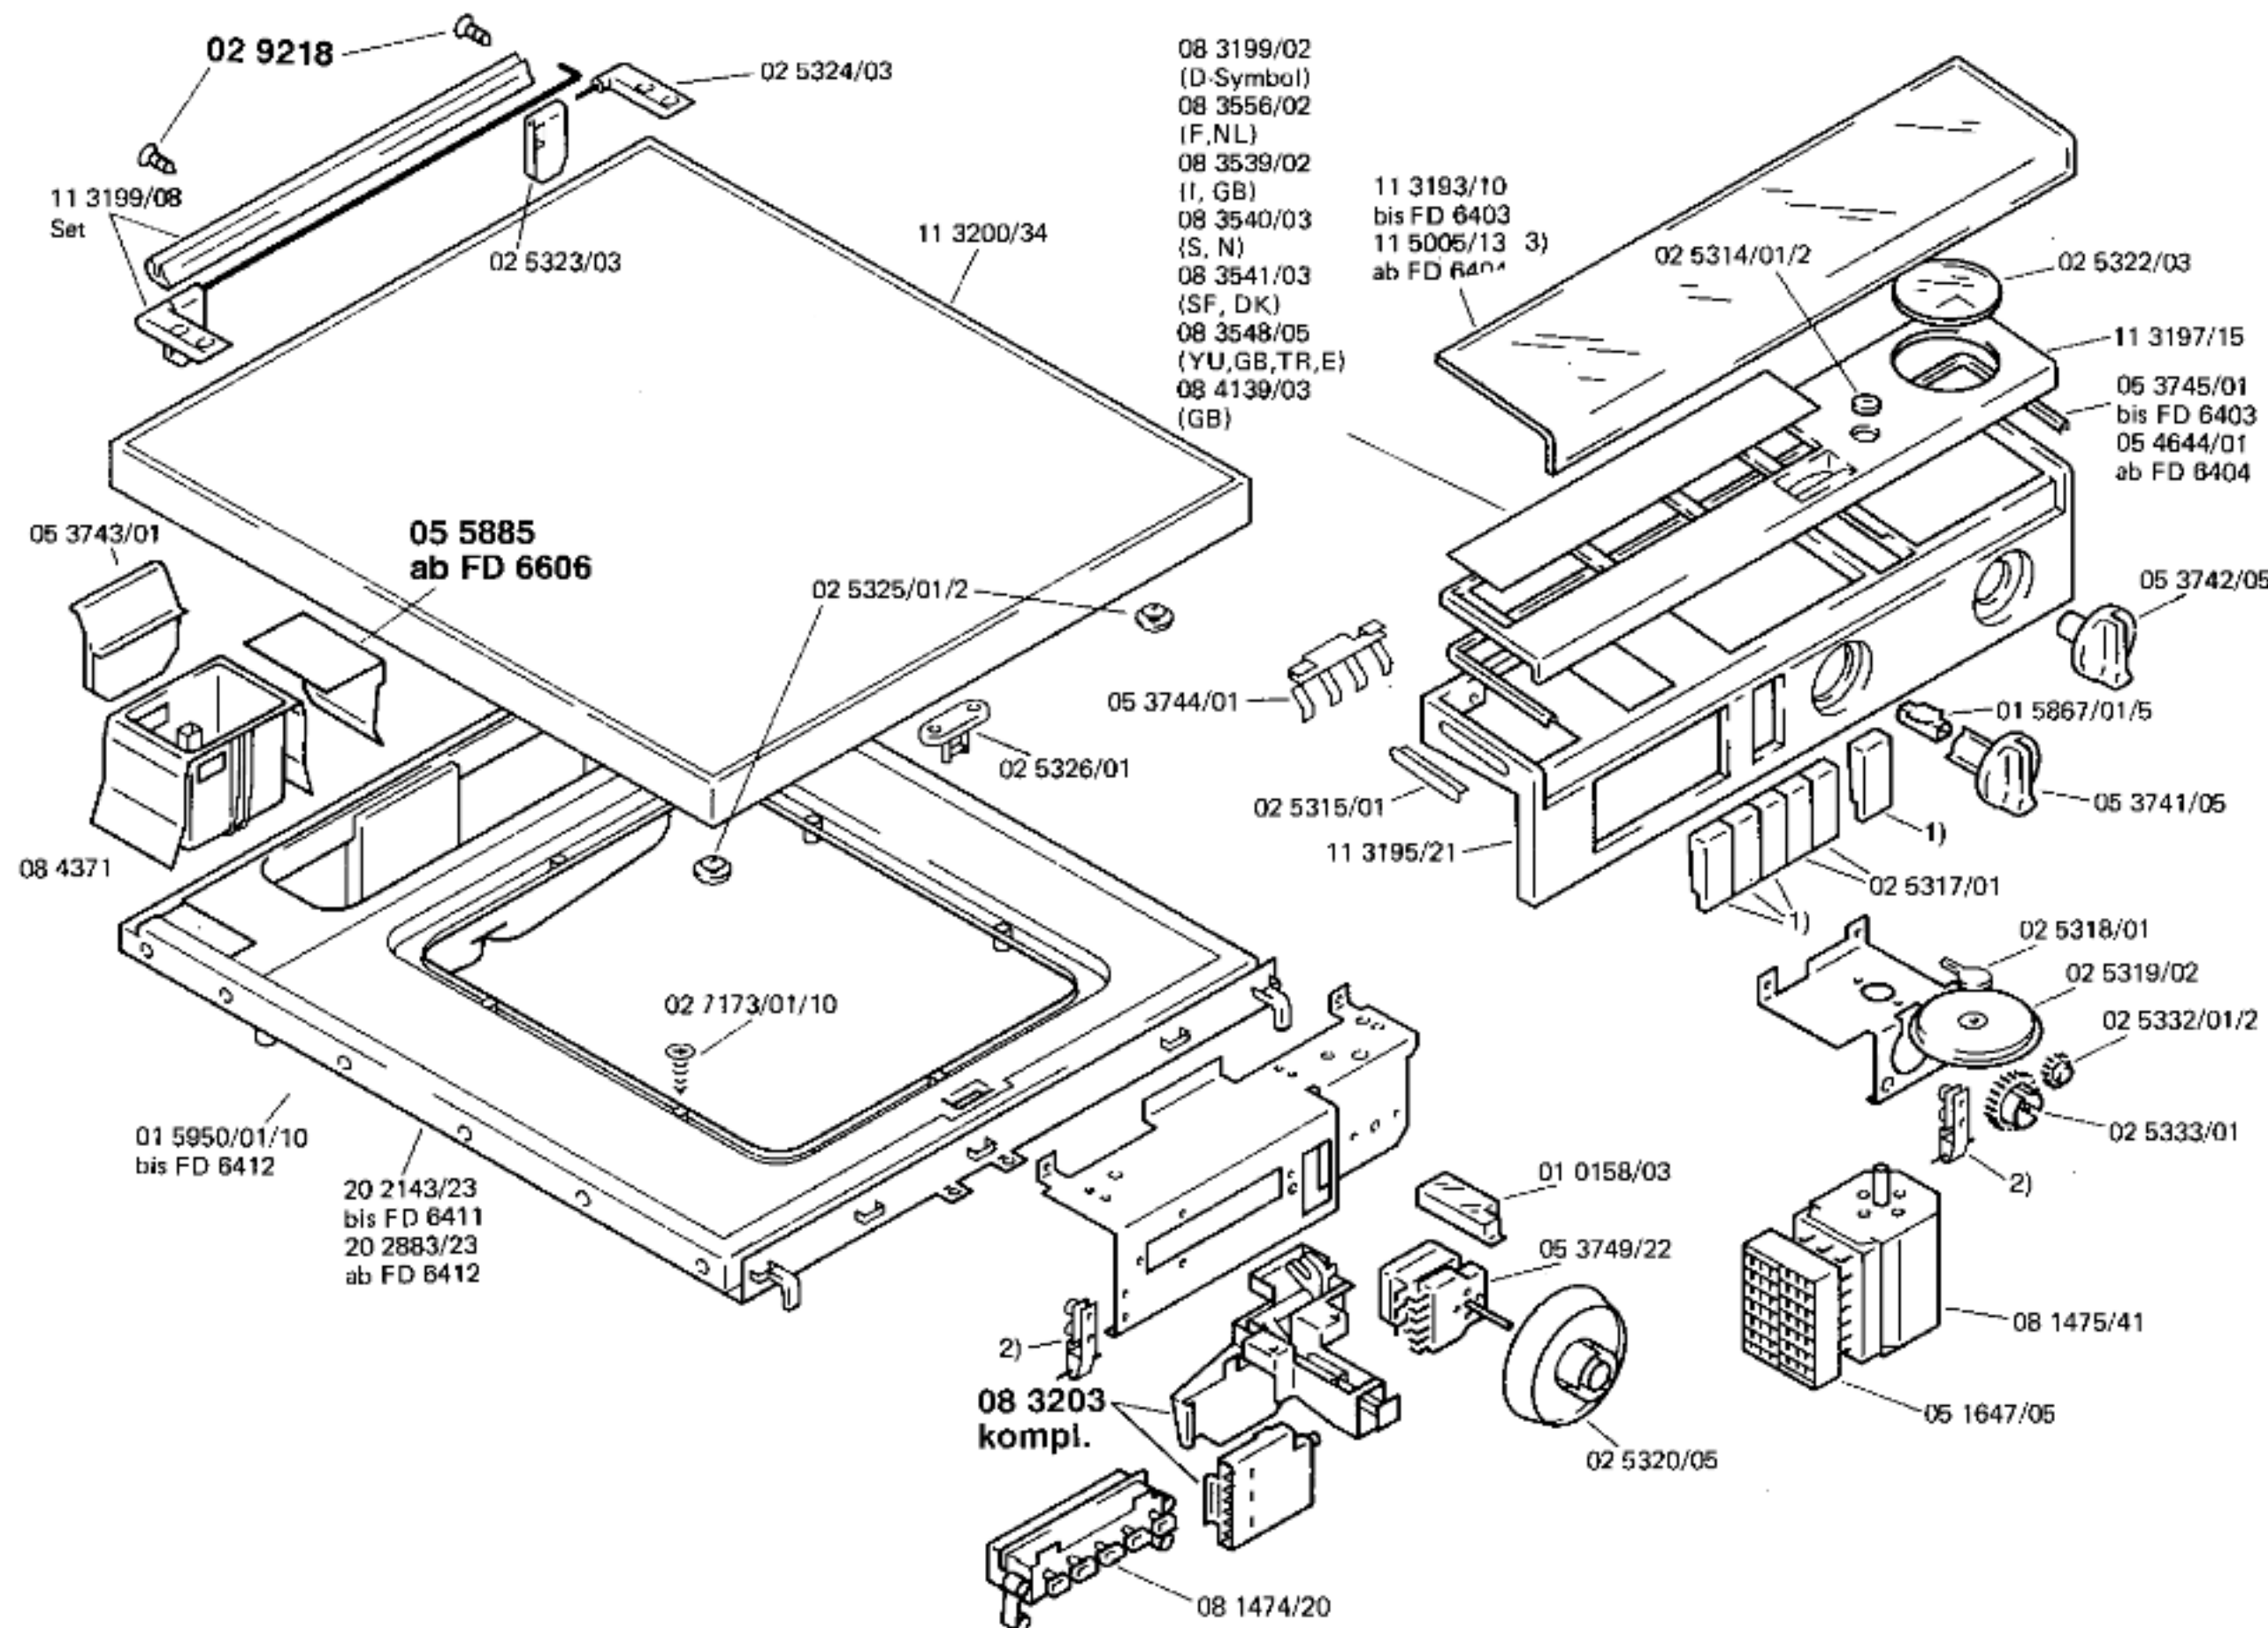WASCHGERÄTE
WaschvollautomatenIdent - Nummern - Konstante
3740

Aufstellanweisungen:

51 1497/00
(D,GB,F,I,NL)
51 1674/00
(D,I,S,DK,N,SF)

Gebrauchsanweisungen:

51 1496/00
(D,GB,F,I,NL)
51 1690/00
(F)
51 1891/00
(D,I,S,DK,N,SF)

Programmtabellen

51 1492/00
(D,GB,F,I,NL)
51 1689/00
(D,I,S,DK,N,SF)
51 2018/00
(GB)


1) 02 5321/01
2) 02 5334/01/2
3) einschl. 05 4644

**BOSCH**

V 360-0722044366-D1,A1
 V 360-0722044384-GB1
 V 360-0722044385-F1
 V 360-0722044389-N1,SF1

WASCHGERÄTE
 Waschvollautomaten

Ident - Nummern - Konstante
 3740

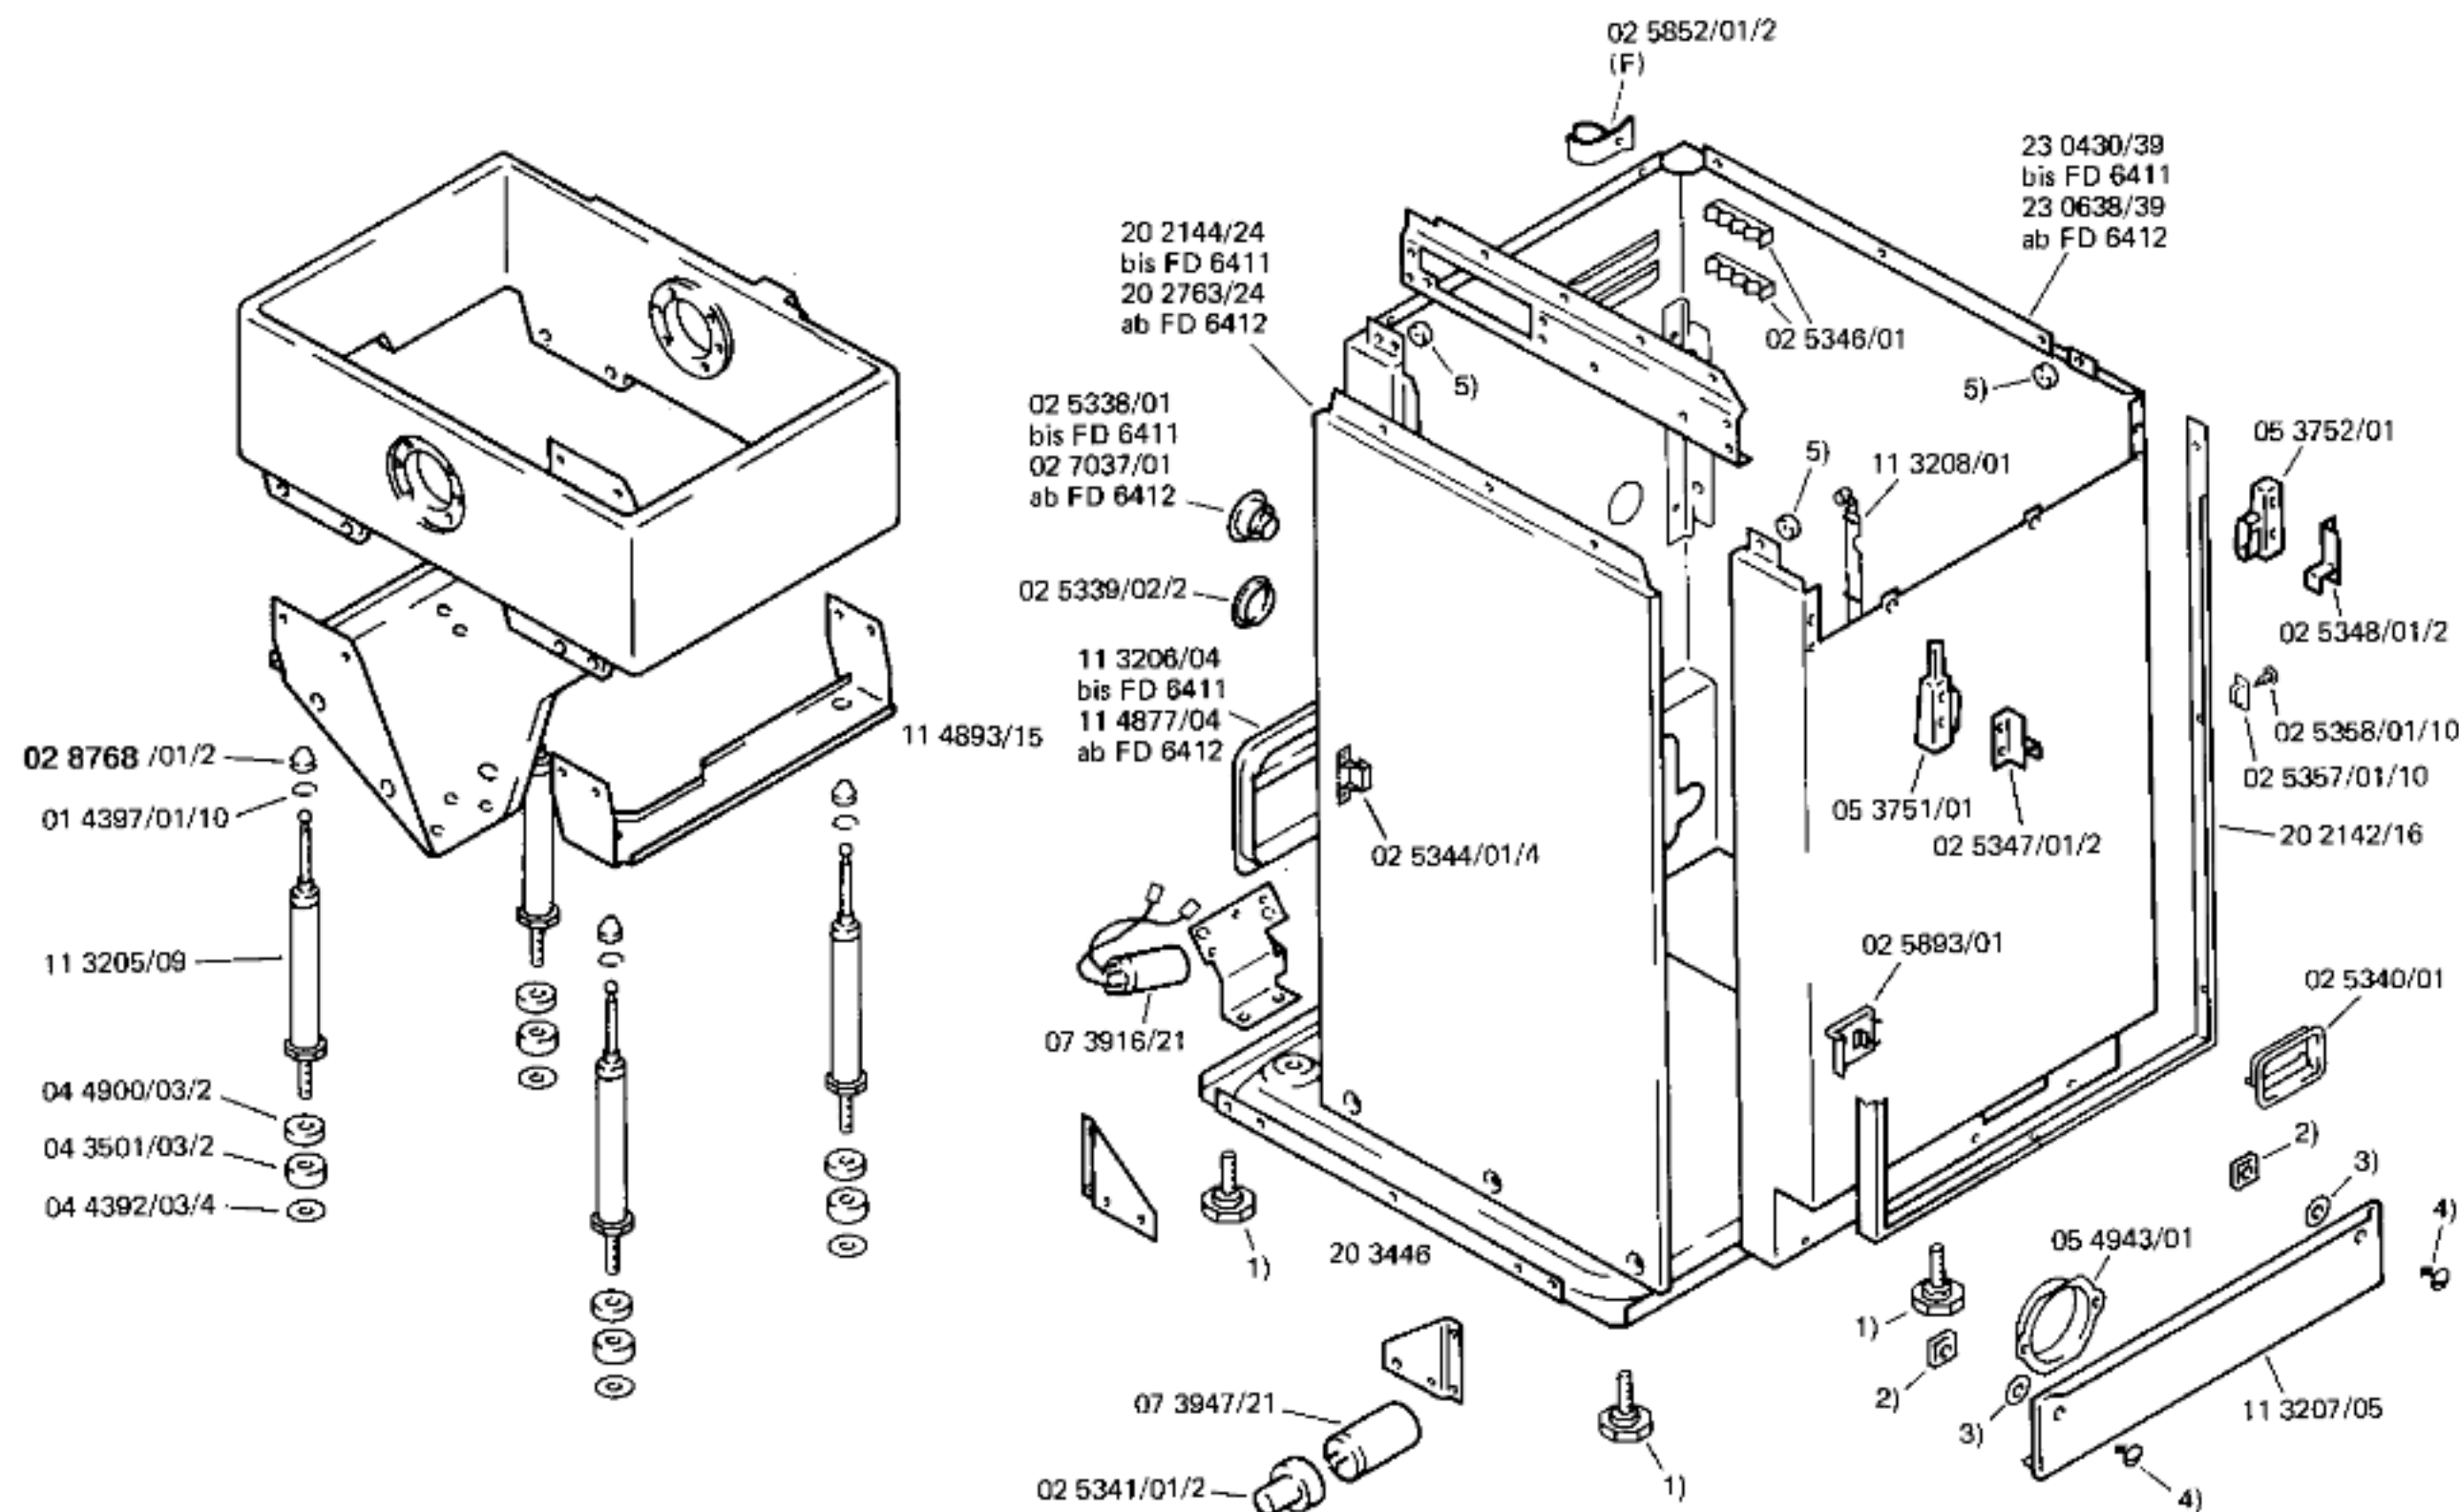





BOSCH

V 360-0722044366-D1,A1
V 360-0722044384-GB1
V 360-0722044385-F1
V 360-0722044389-N1,SF1

WASCHGERÄTE
Waschvollautomaten

Ident - Nummern - Konstante
3740

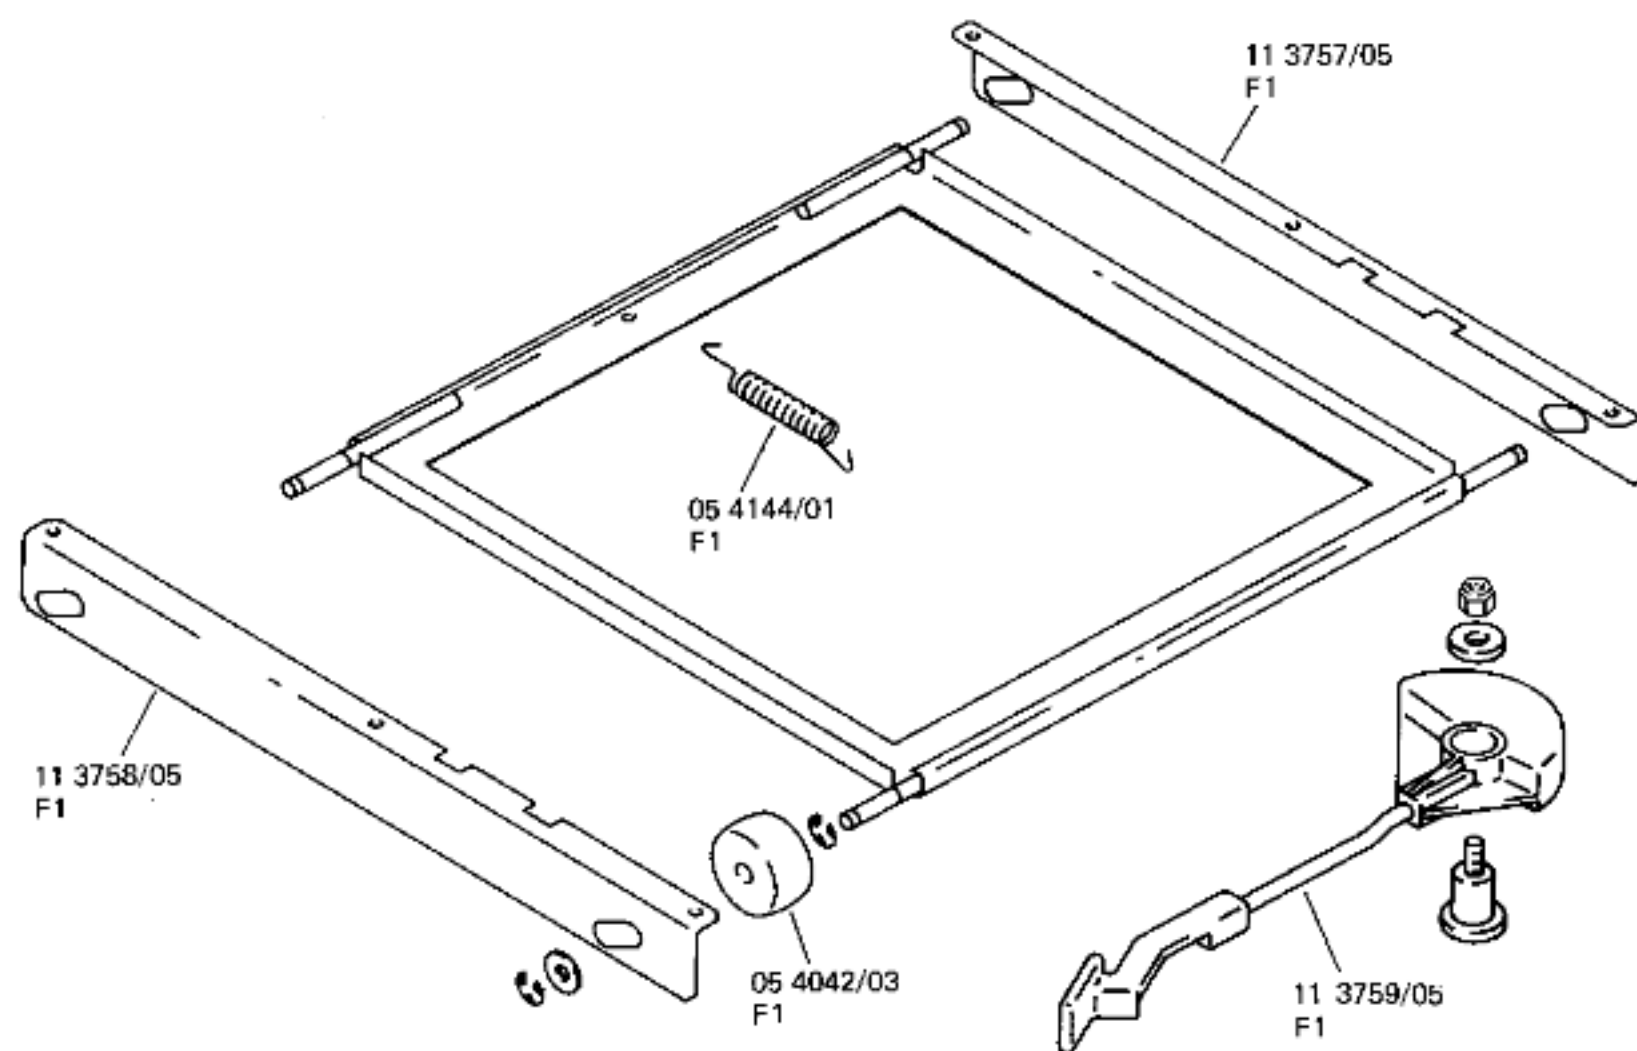

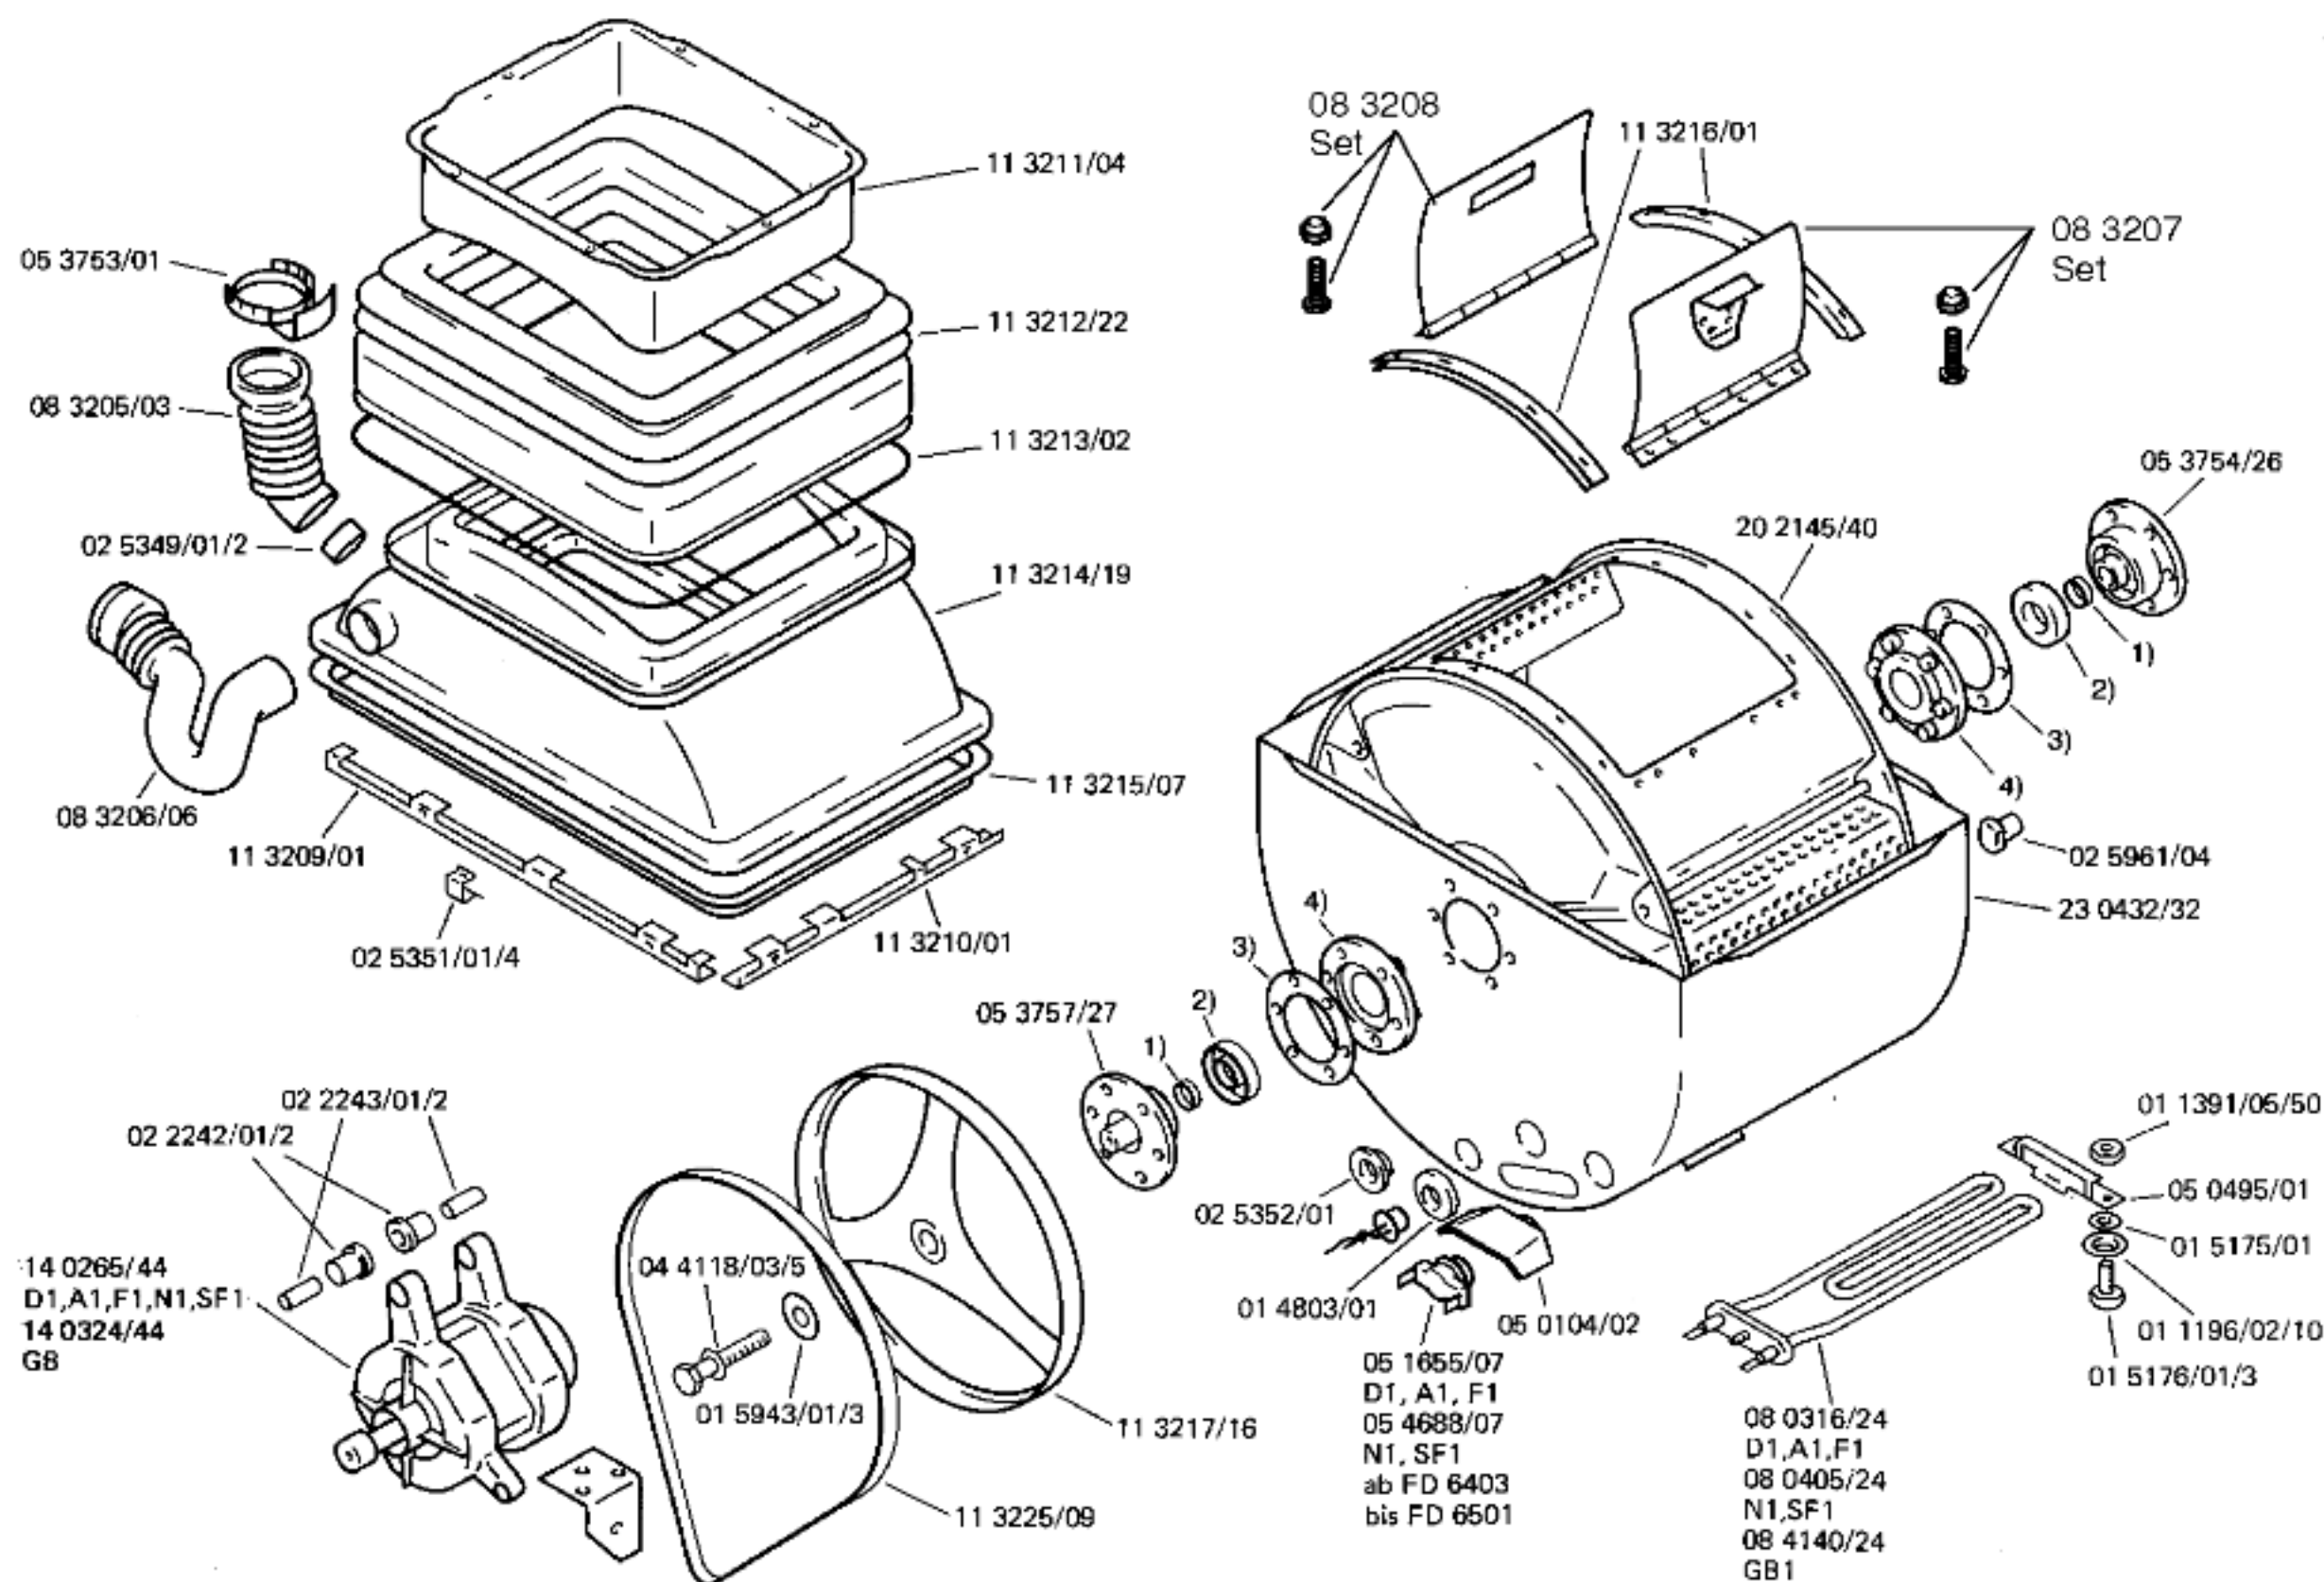

Ident – Nummern – Konstante
3740

- 1) 04 2309/03/10
- 2) 02 5350/04
- 3) 05 3755/01
- 4) 05 3756/03

**BOSCH**

V 360-0722044366-D1,A1
 V 360-0722044384-GB1
 V 360-0722044385-F1
 V 360-0722044389-N1,SF1

WASCHGERÄTE
 Waschvollautomaten

Ident - Nummern - Konstante
 3740

