


Ident-Nummern-Konstante
3740

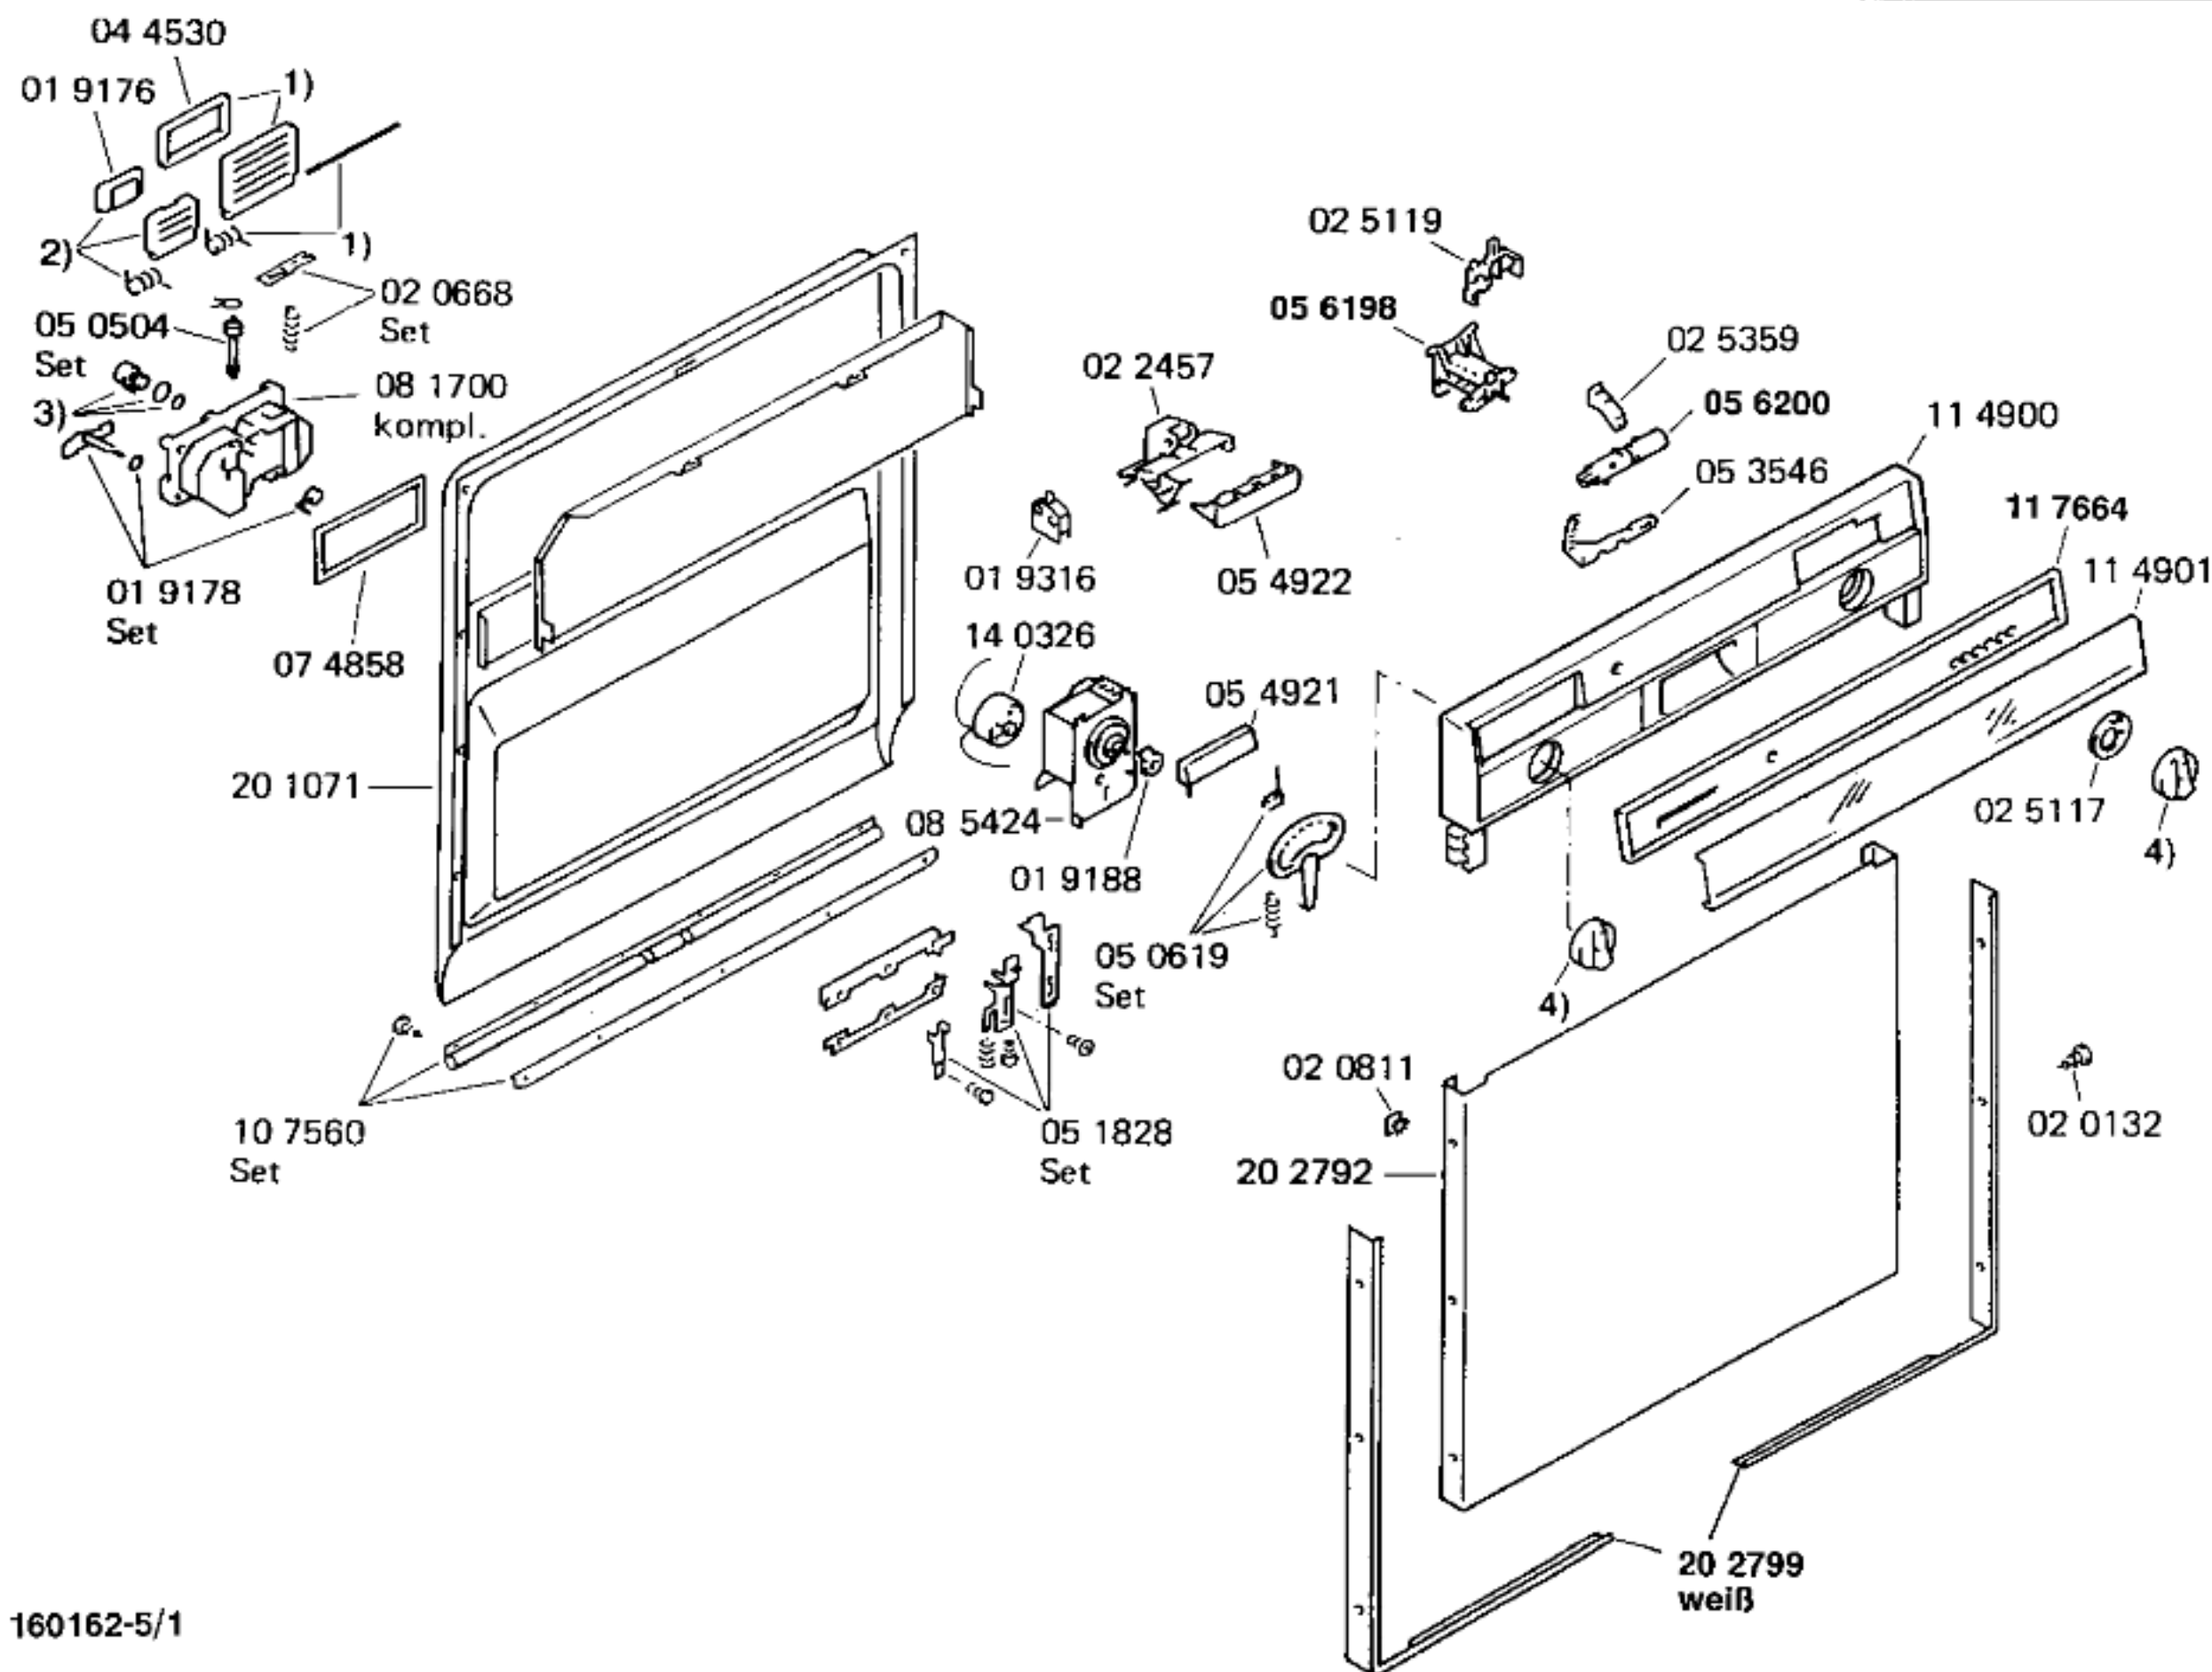



51 3031
Gebrauchsanweisung
(D,GB,F,I,NL,E,P)
51 2277
Aufstellanleitung

- 1) 04 2085
Set
- 2) 04 2105
Set
- 3) 01 9177
Set
- 4) 05 4924

**BOSCH**


S512 - SMS 5122G - 0 730 102 837-CH1

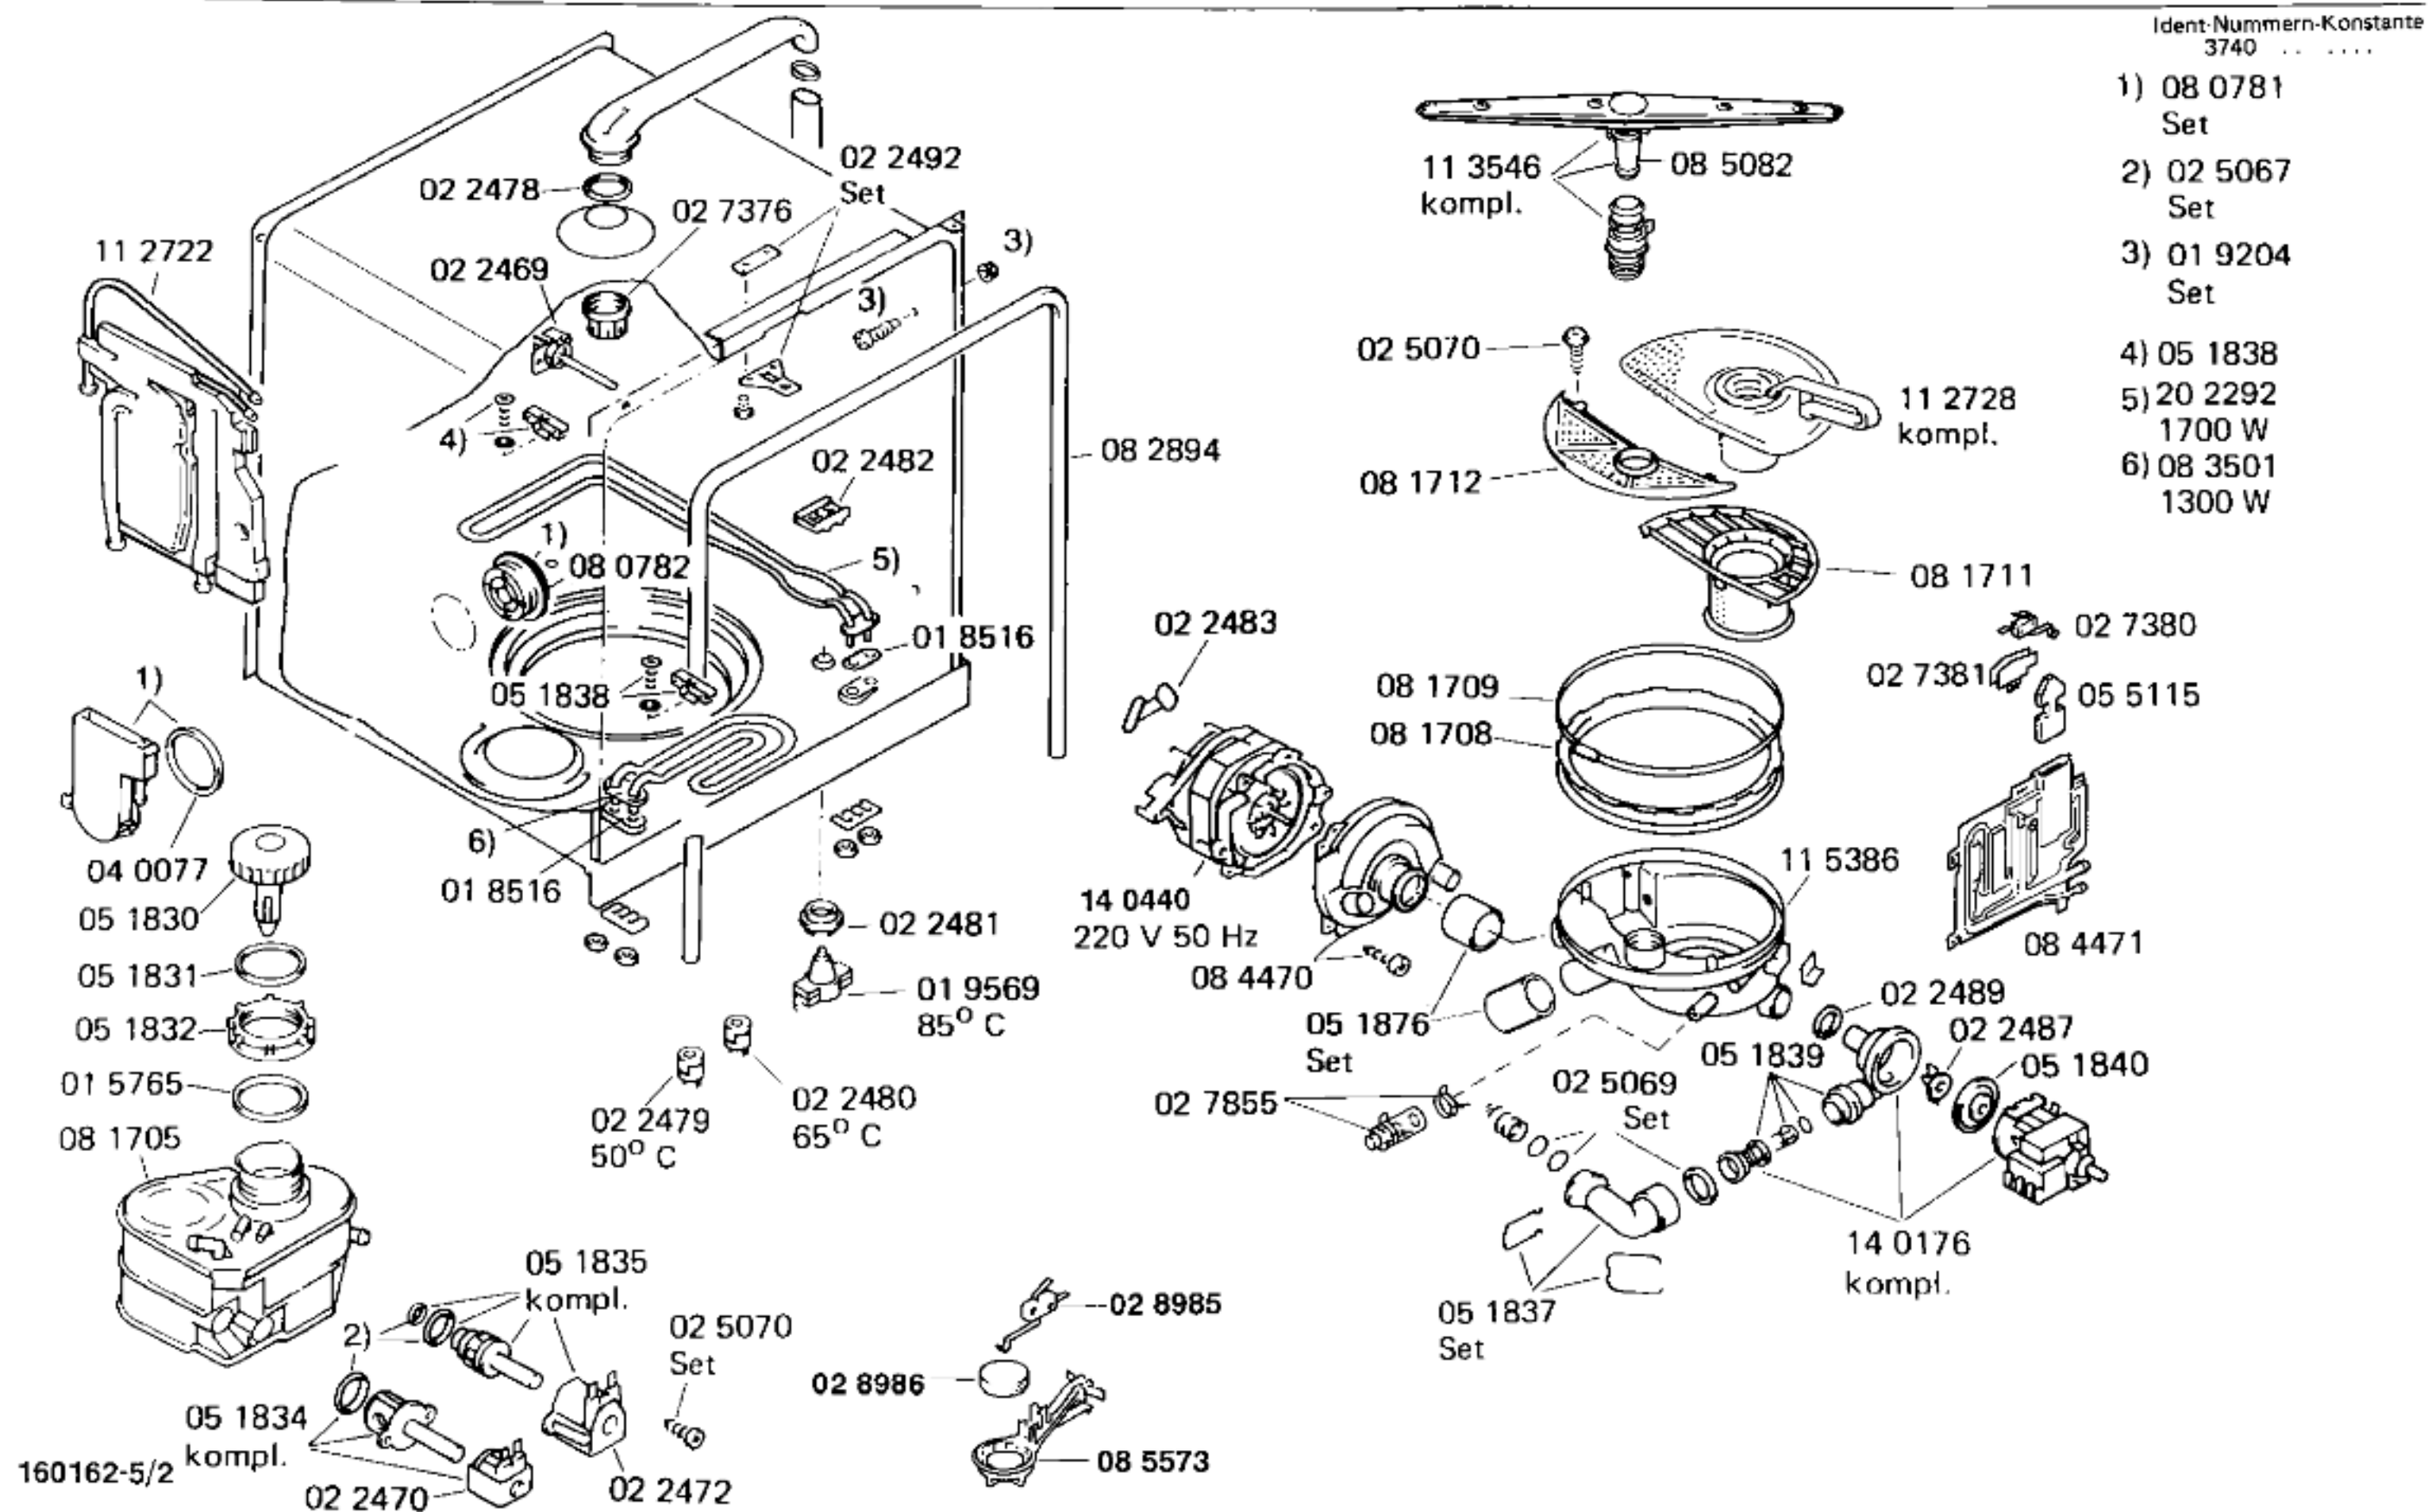GESCHIRRSPÜLGERÄTE
Standgeräte

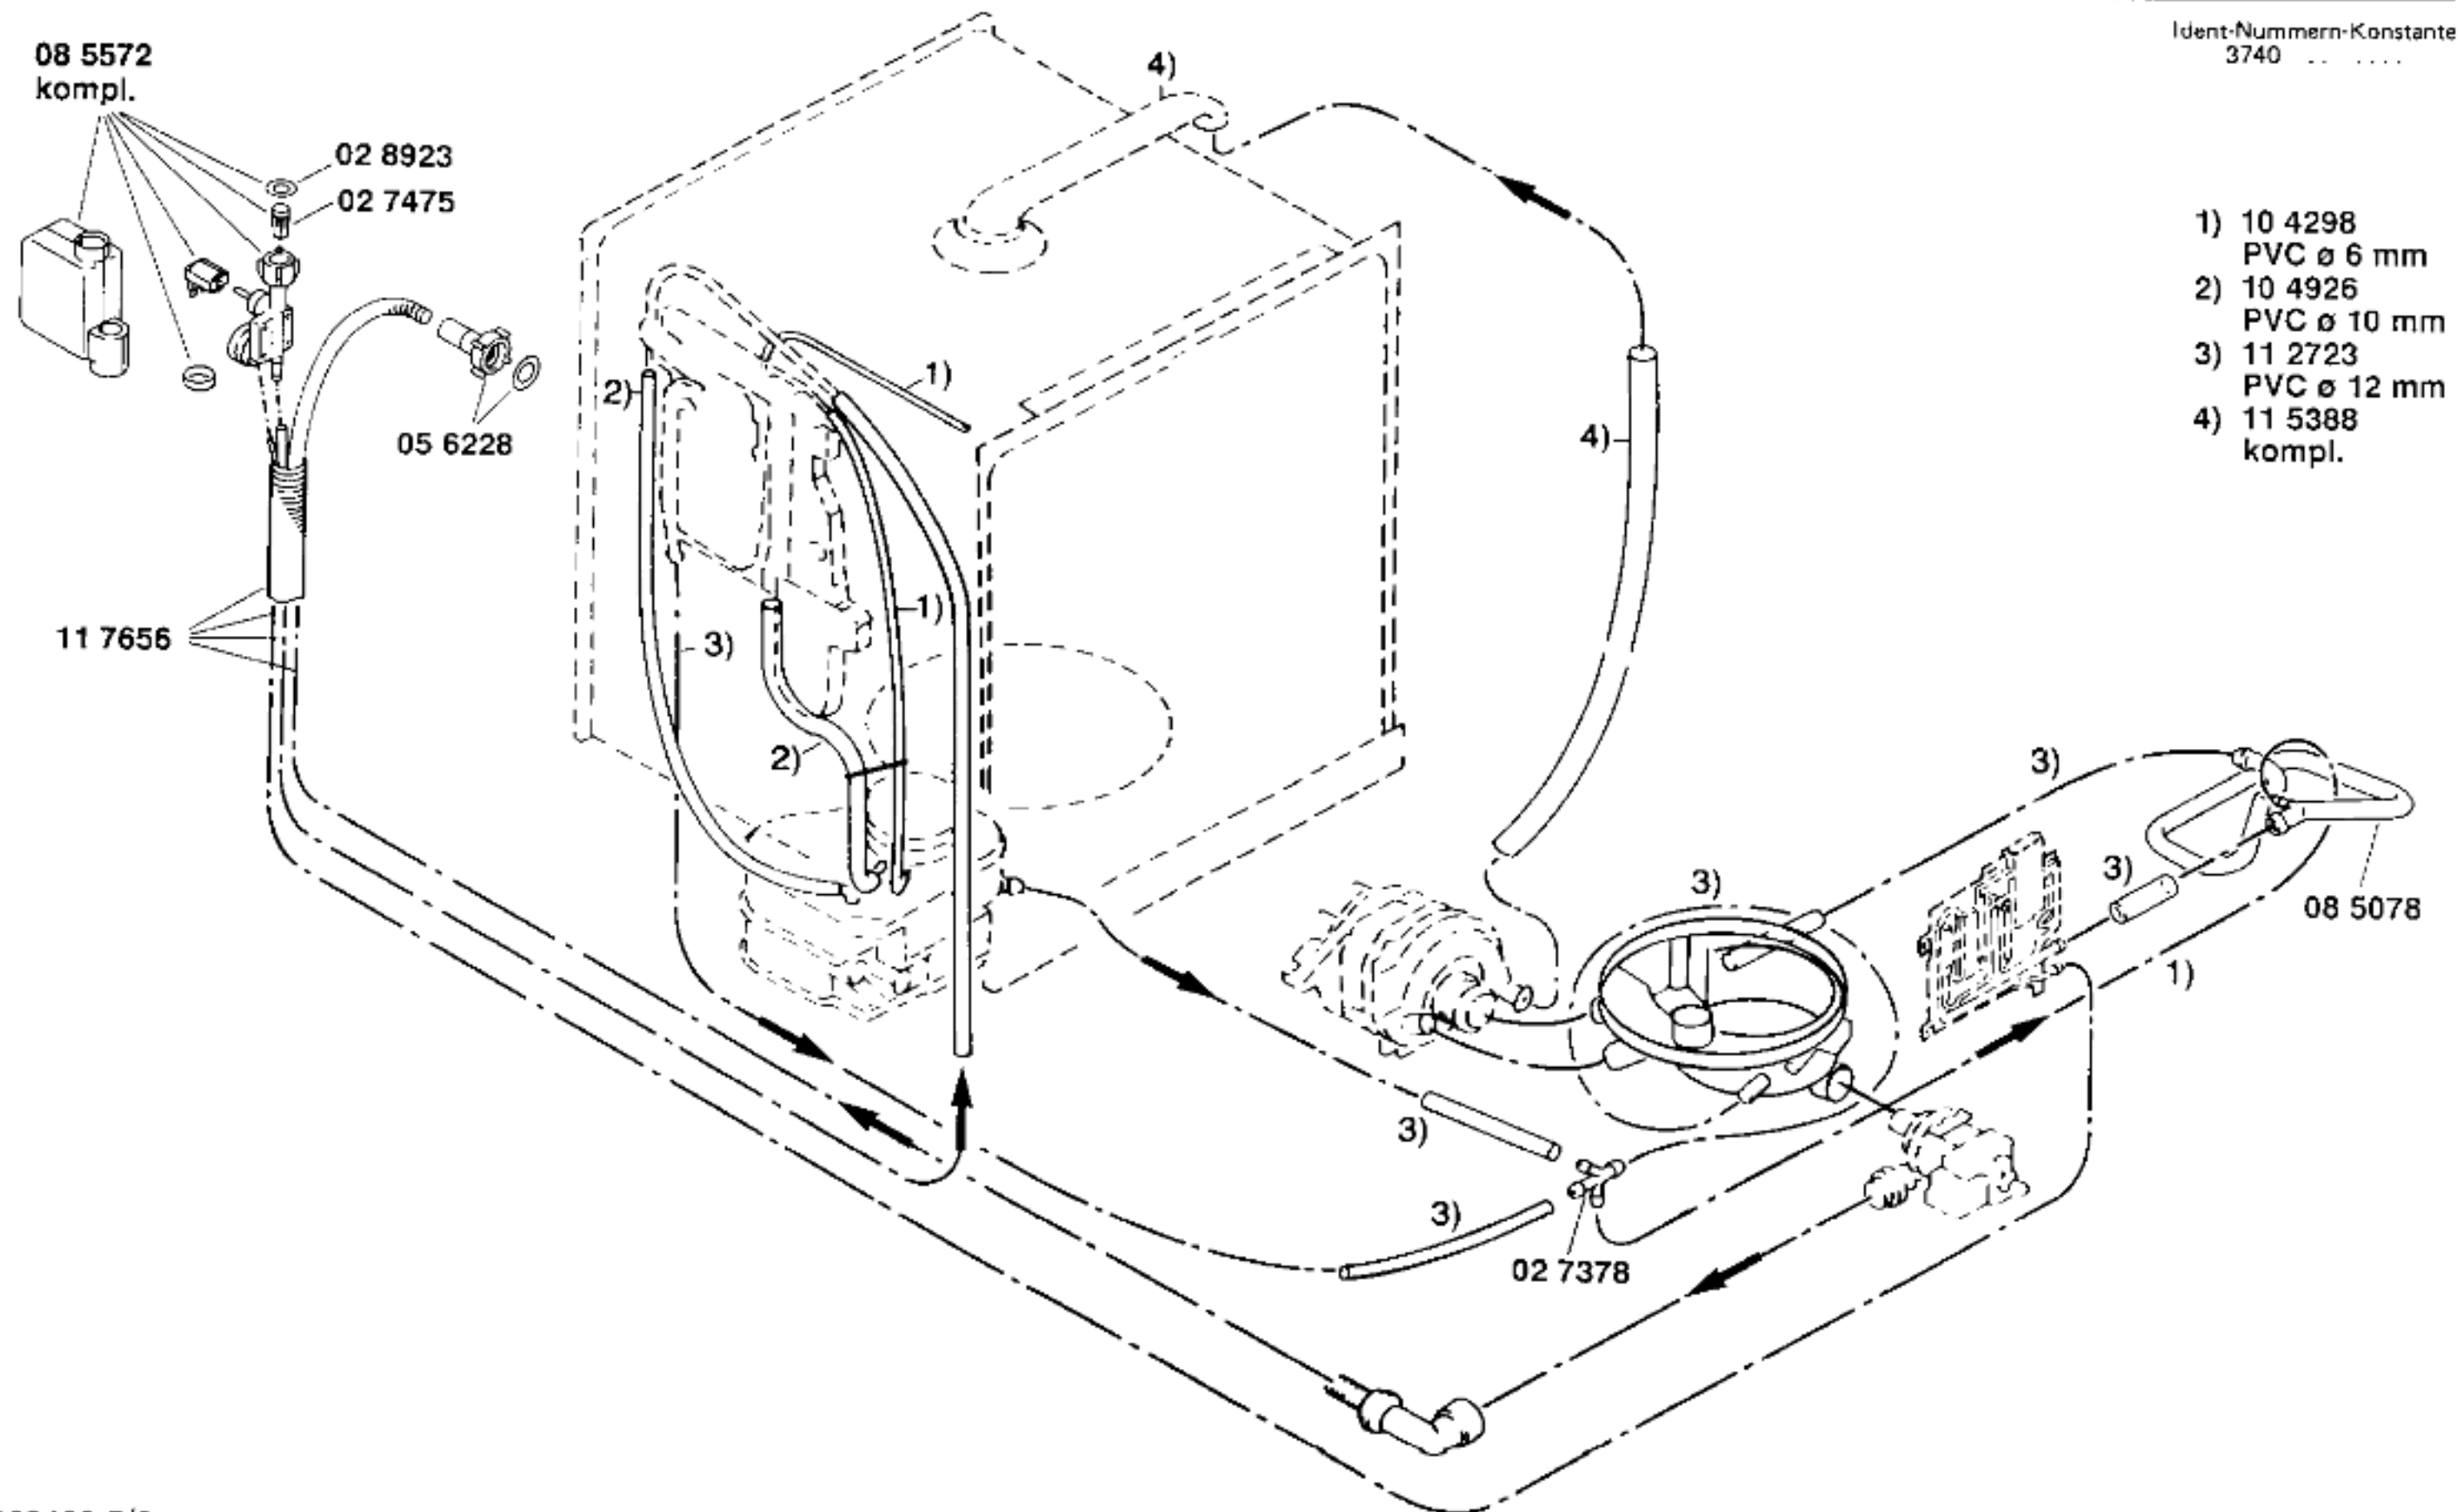

**BOSCH**

S512 - SMS 5122G - 0 730 102 837-CH1

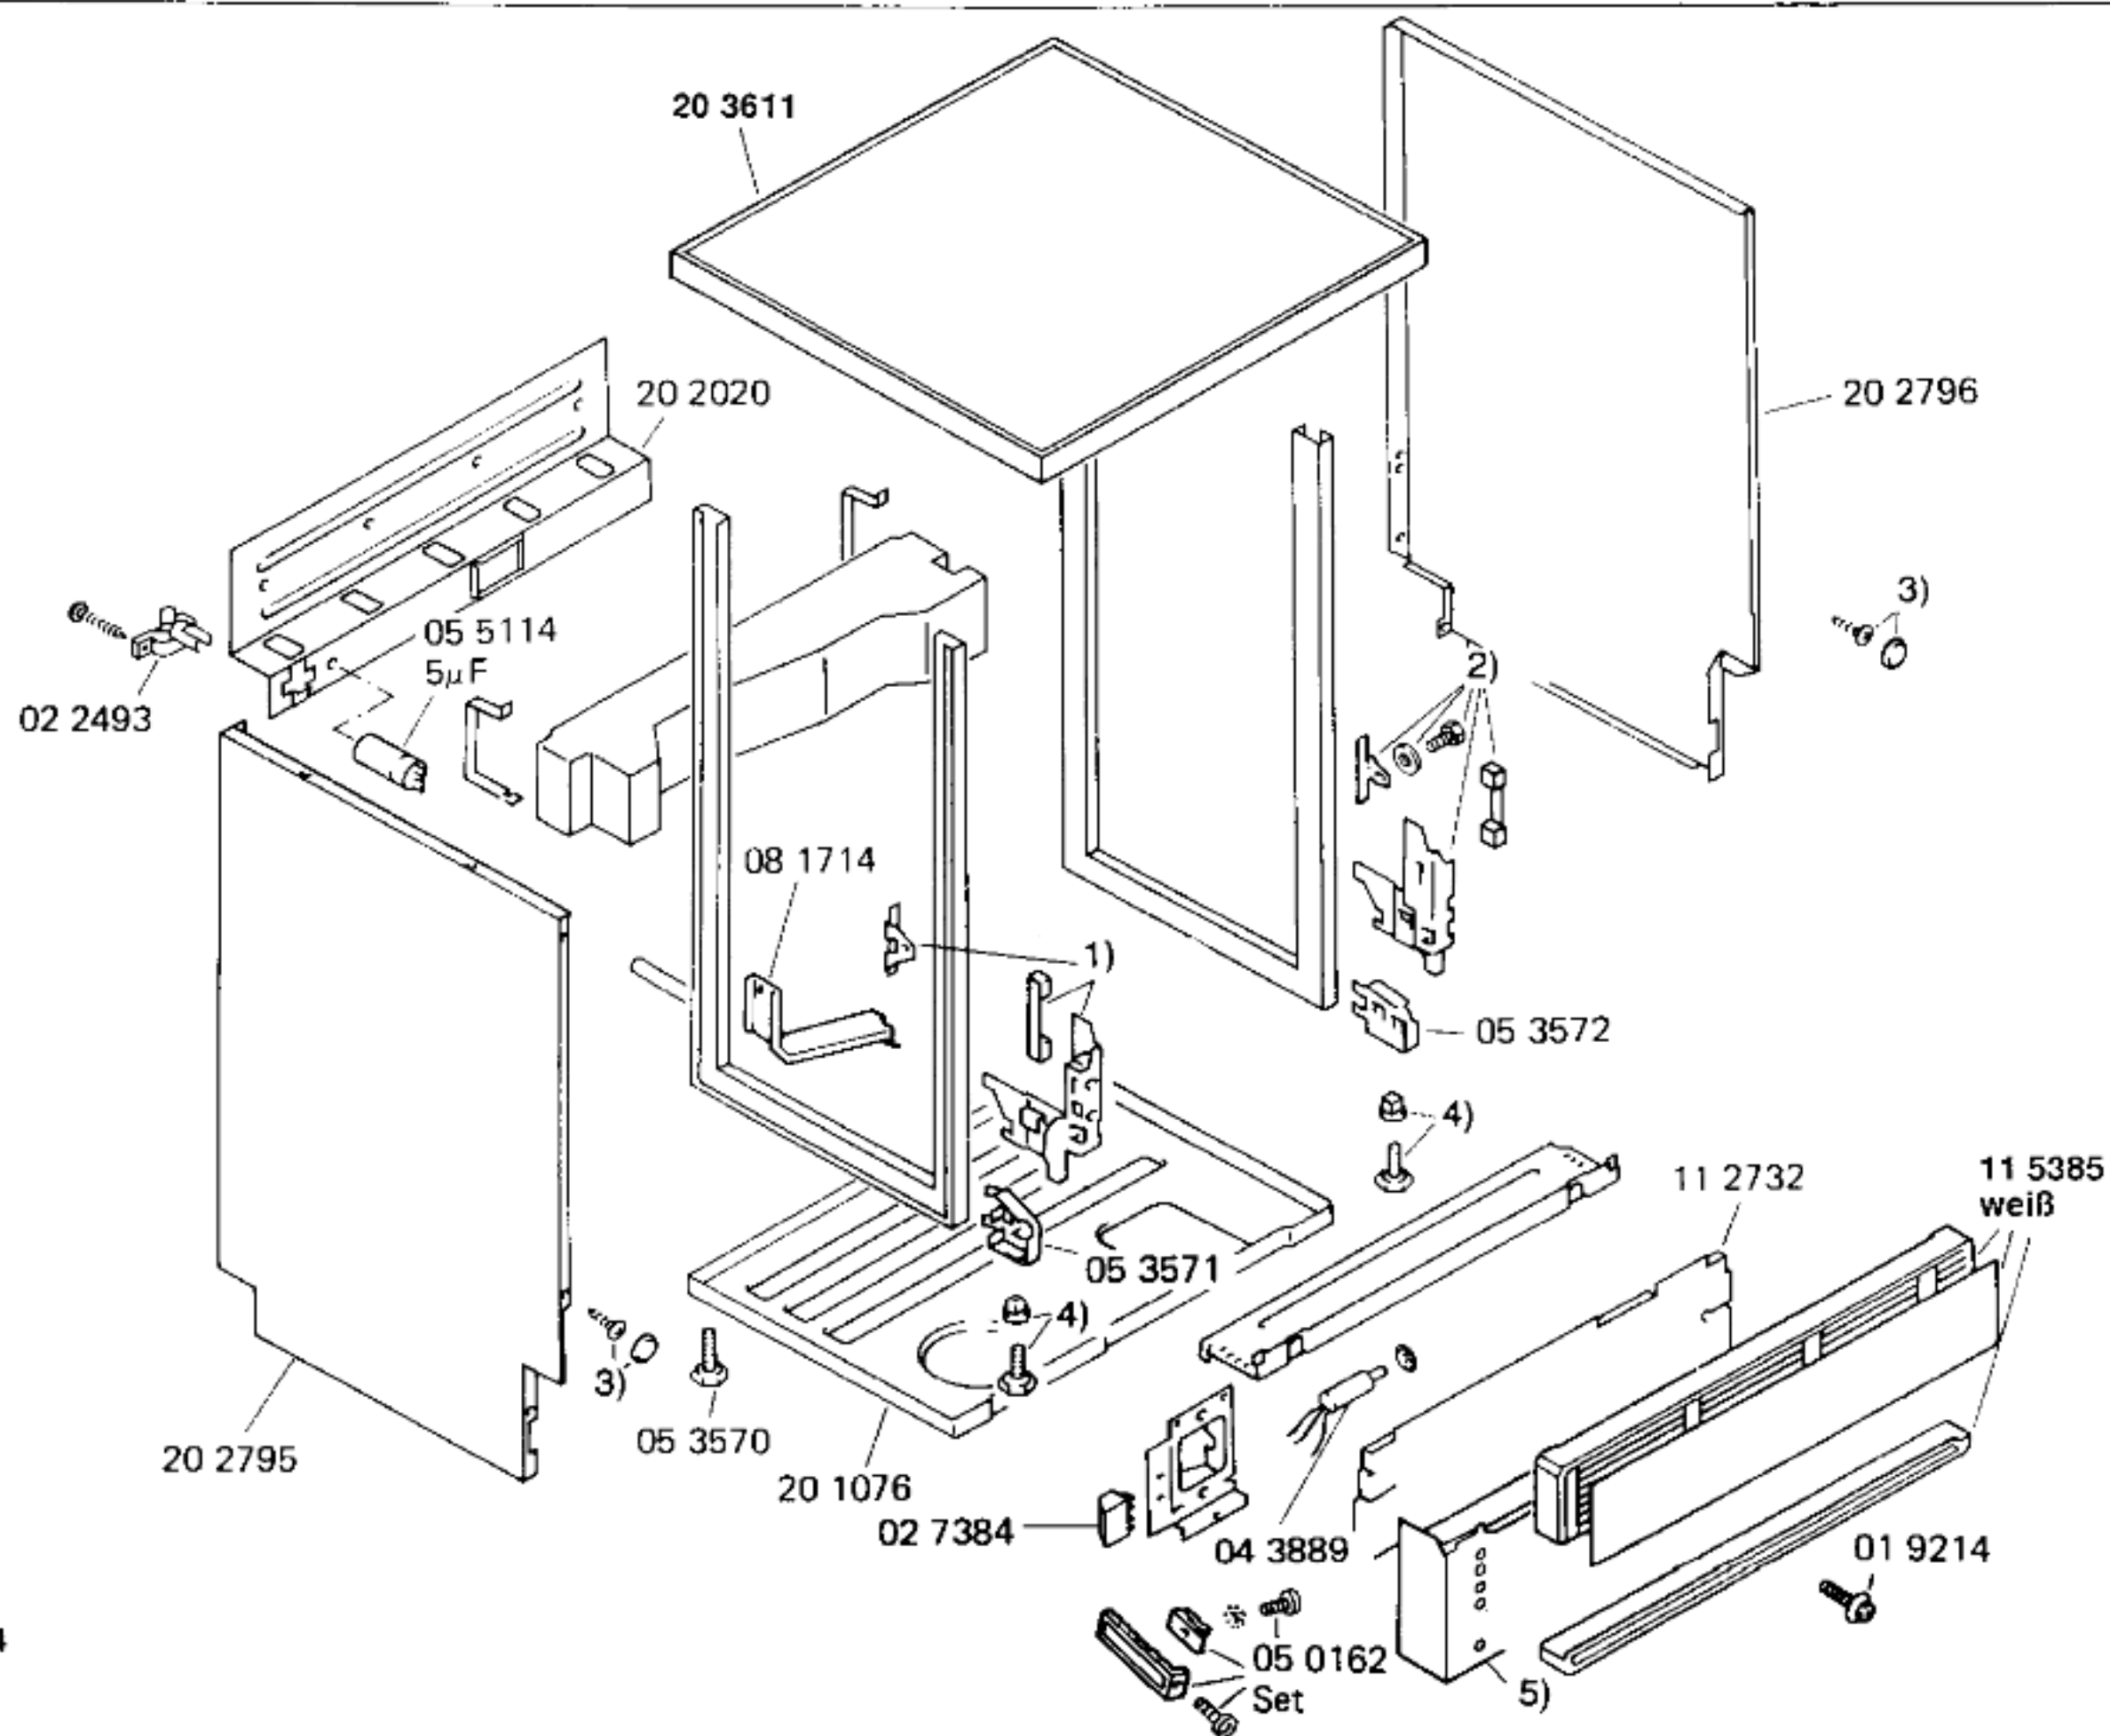GESCHIRRSPÜLGERÄTE
StandgeräteIdent.-Nummern-Konstante
3740

- 1) 08 2970
- 2) 08 2971
- 3) 01 3861
Set
- 4) 02 7386
- 5) 20 3372
weiß

**BOSCH**

S512 - SMS 5122G - 0 730 102 837-CH1

GESCHIRRSPÜLGERÄTE
StandgeräteIdent-Nummern-Konstante
3740

- 1) 01 9202
- 2) 11 0668
Set
- 3) 05 1287
Set

