 
 


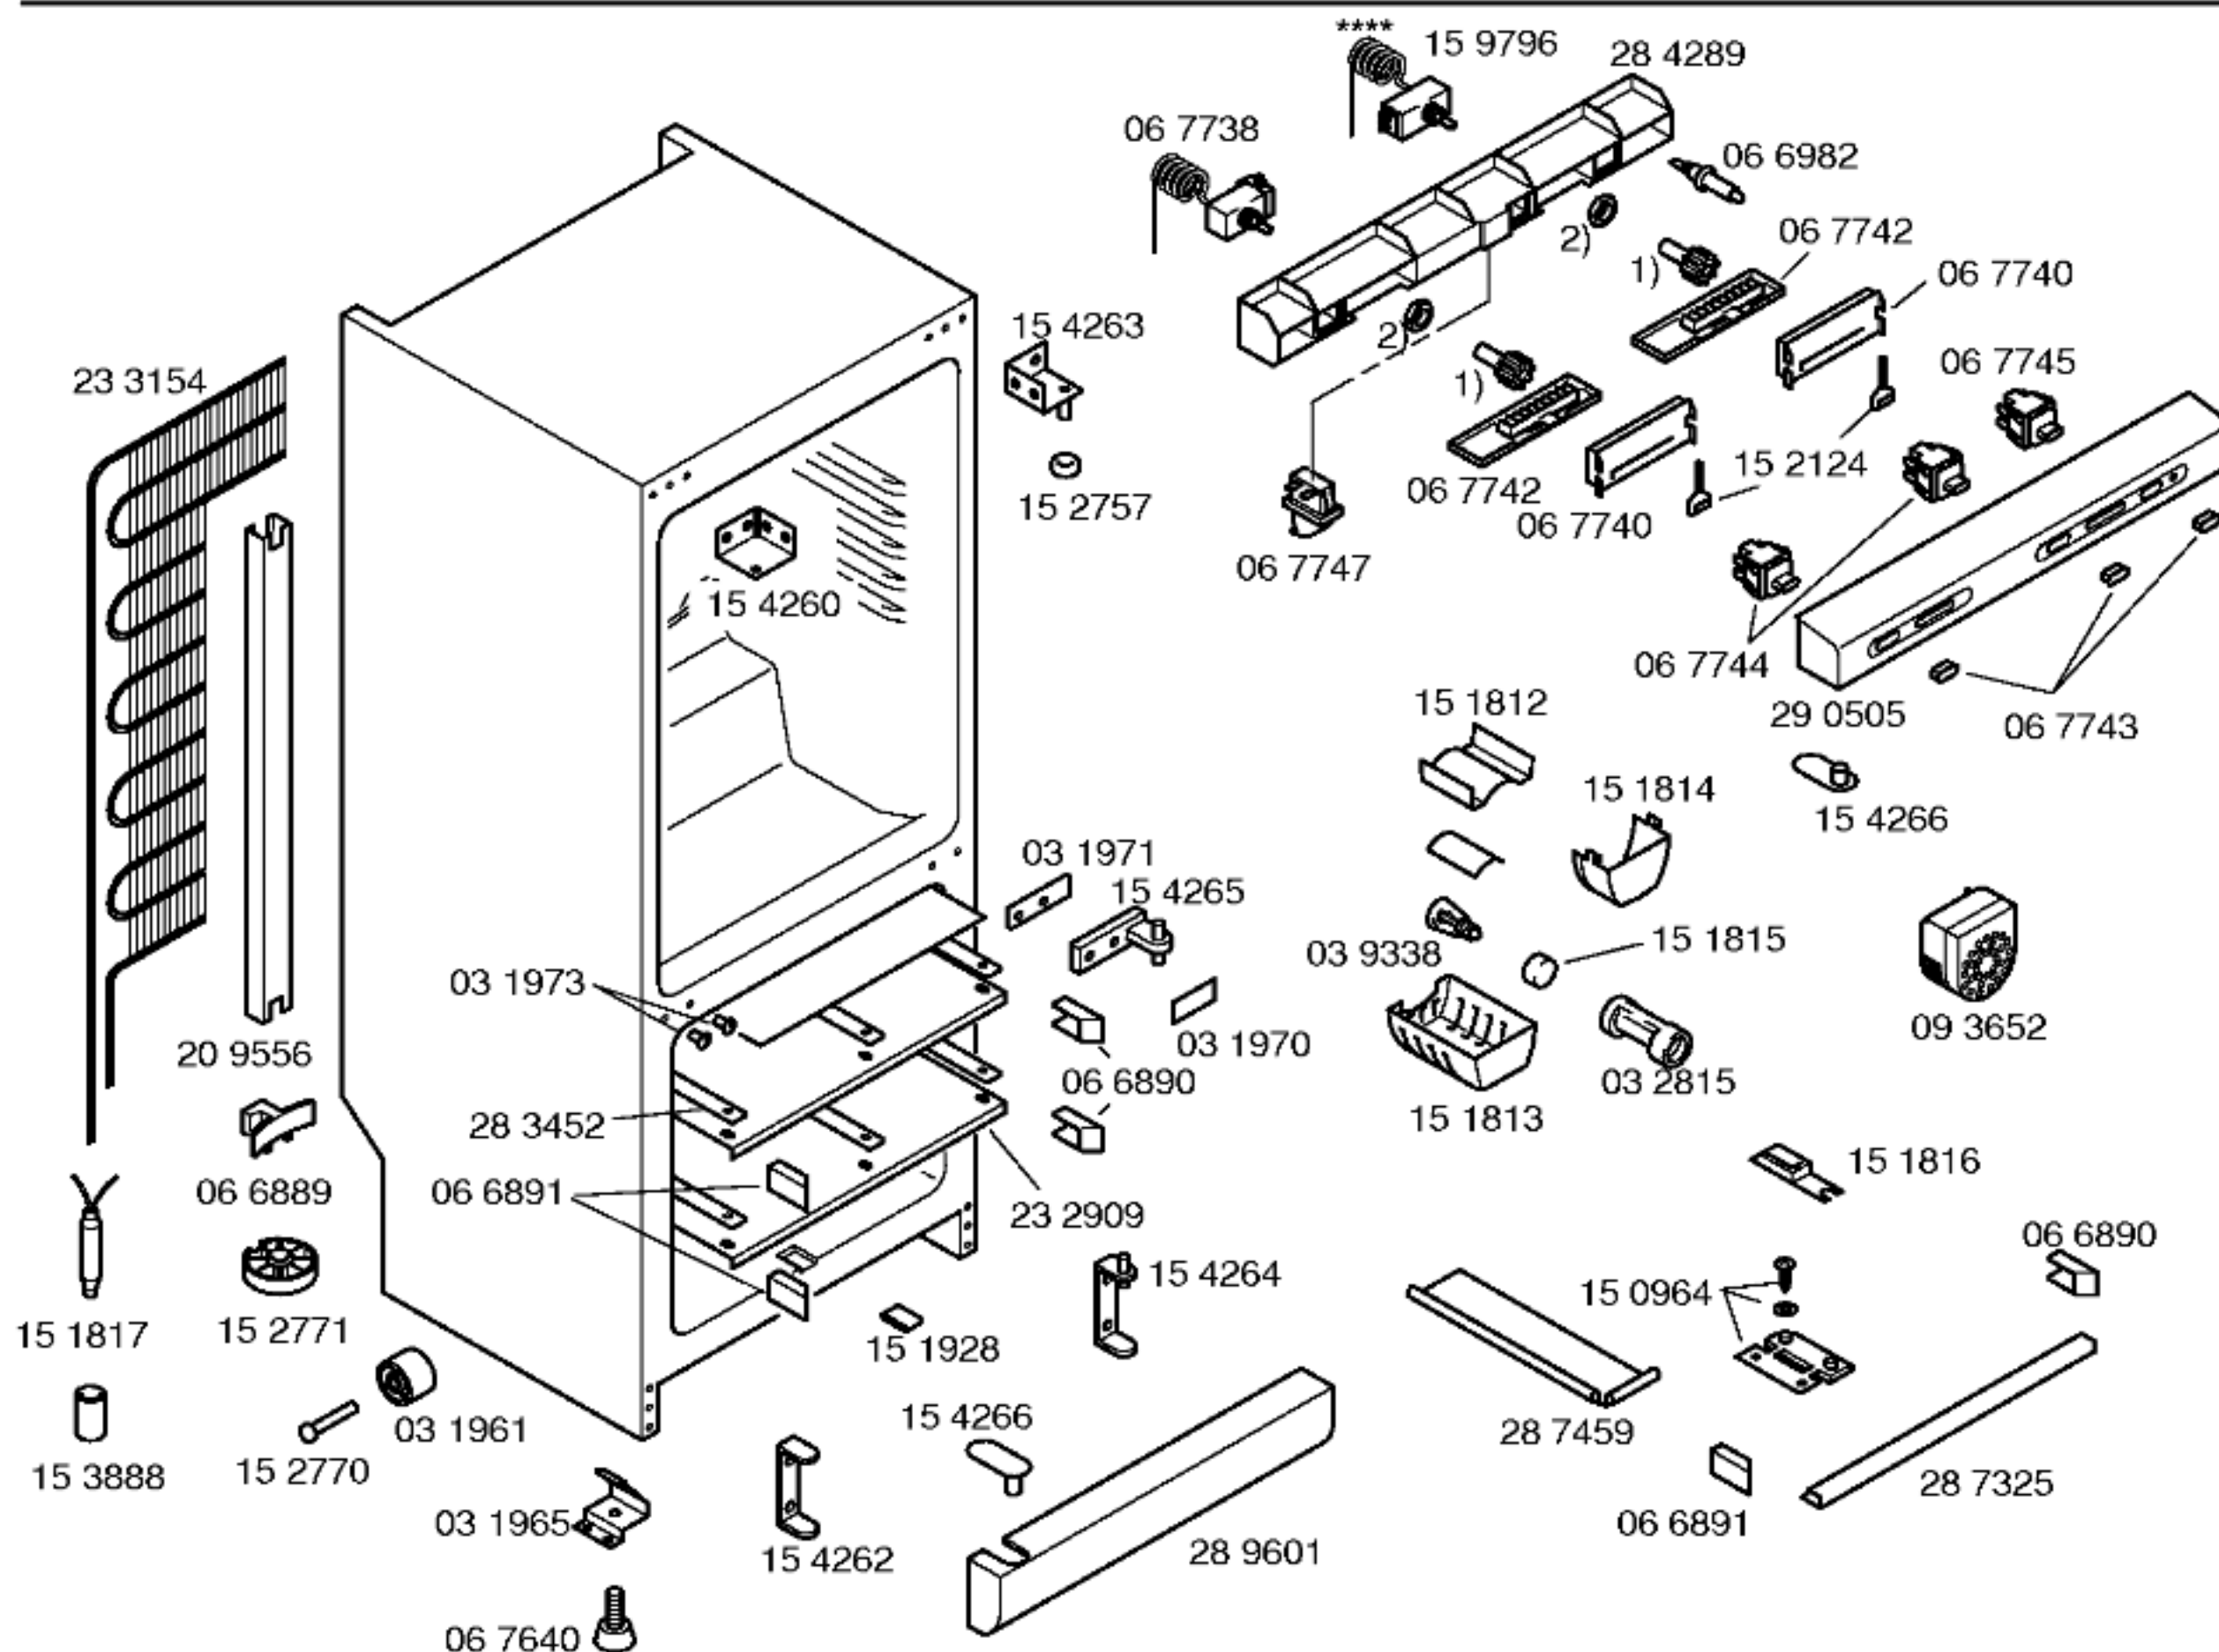


Libro de instrucciones
51 7464
(E,P,GB,F,NL,GR)

Instrucciones de montaje
51 7252
(D,GB,F,I,NL,E,P,GR)

1) 067746
2) 03 3055

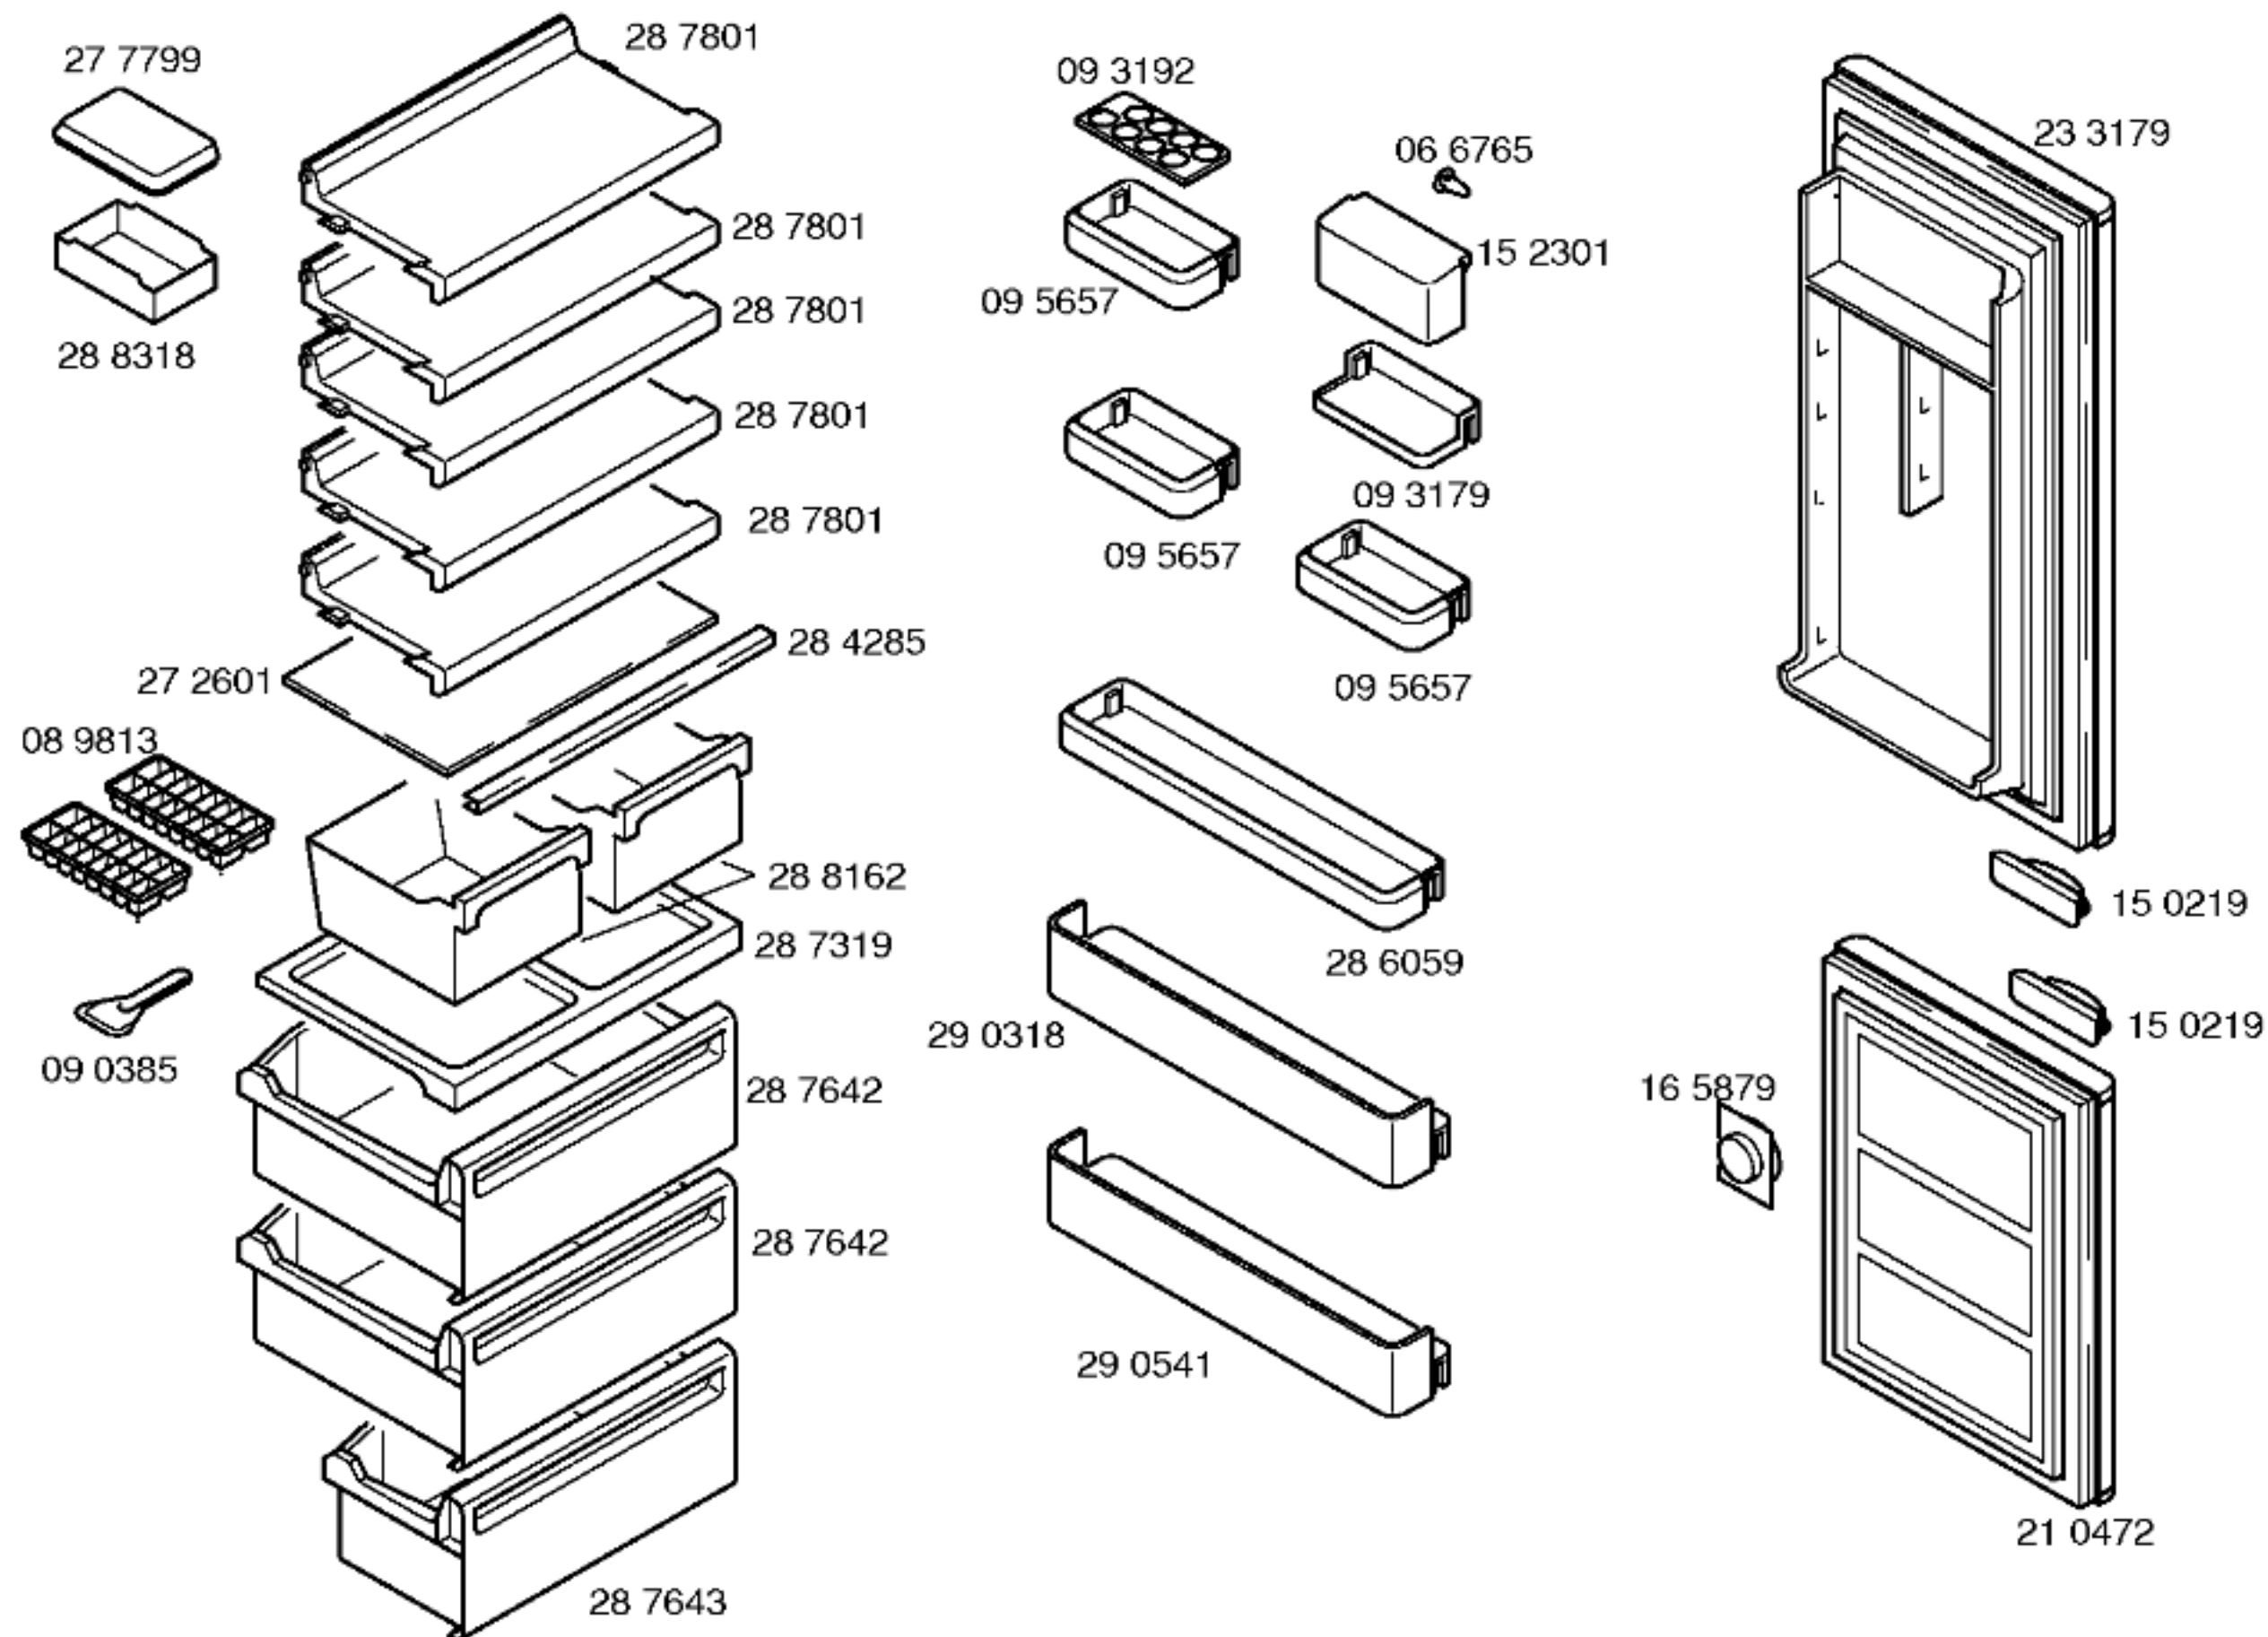

 1) 06 7731

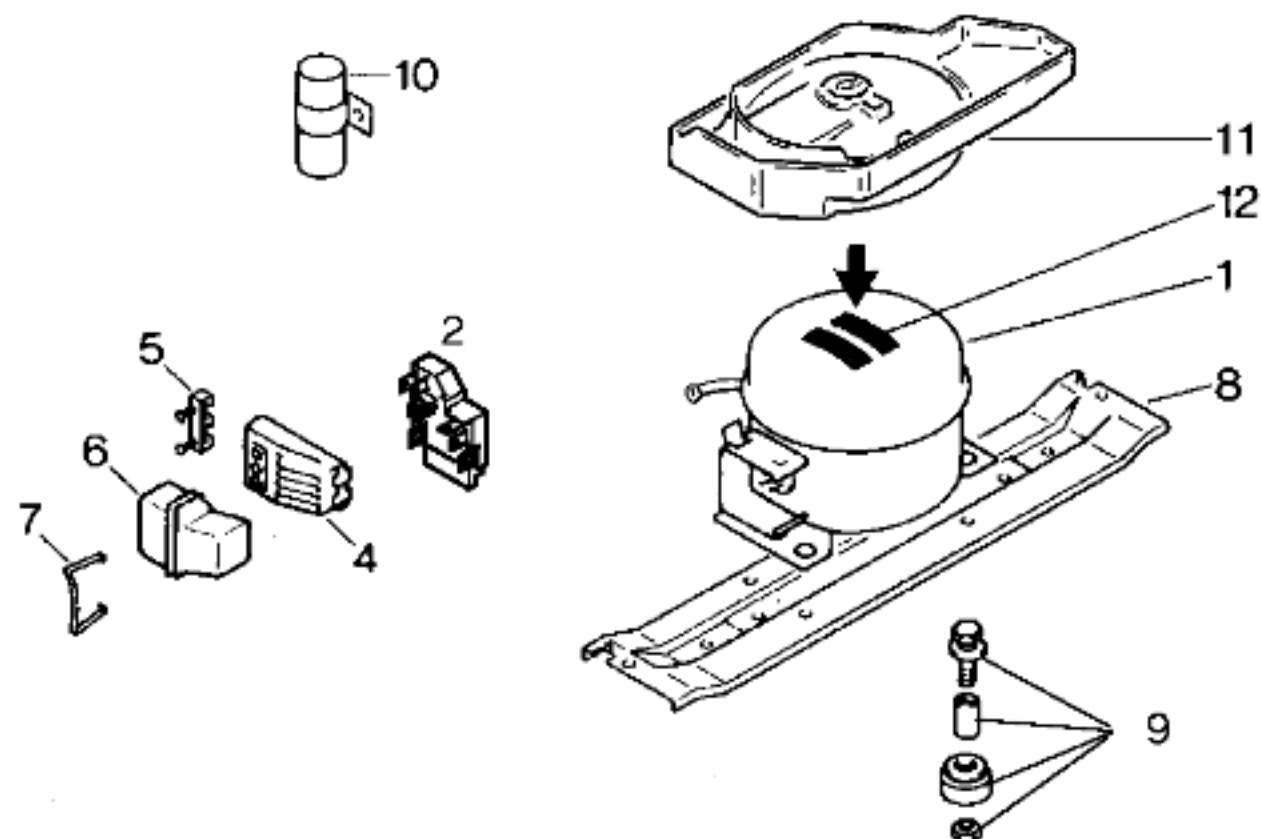

Pos.	****	
	U. HERMÉT.	ASPERA
	GL45AA	BPM1084Z
1	14 1374	14 1343
2	15 5130	15 4315
3		
4		
5		
6		
7		
8	28 0162	
9	05 0166	05 0166
10		
11	09 6883	
12		
13		

TECHNISCHE DATEN/TECHNICAL DATA/DONNEES TECHNIQUES/DATOS TECNICOS

Verdichter/Compressor/Compresseur/Compresor Typ/Type/Tipo Förderleistung/Delivery/Debit/Aspiración l/h Anlaufstrom/Starting current/Cour.démarrage/Int.arranque A Widerstand/Resistance/Resistencia. Ha/main/prin. Ohm Hi/aux.	U. Hermét. GL45AA	Aspera BPM1084Z
	8,3	
	21,2	27,80
	24,3	38,5

Temp.Reyler/Thermostat/Termostato Typ/Type/Tipo Reglerstellung/Position/Conexión Schaltwerte/Switching values/ ..ein/conex.°C Valeurs de commutation/Desconex. ..aus"/descon. (..abtaven' od) ..alarm'		RANCO K54L1940 MIN. MAX -14° -22° -20° -28° -10° -18°
---	--	--

Füllmenge/Fill. quantily/Charge/Carga 134a	g	50	125
--	---	----	-----

Anschlusswert/Comm. load/Puiss. Connect./Potenc.	W	87	84
--	---	----	----

Heizung/Heater/Chaufrage/Resistenc.descong. Widerstand/Resistance/Resistencia Leistung/Power/Puissance/Potencia	Ohm W		
---	----------	--	--

Ventilador/Blower/Ventilateur/Ventilador Widerstand/Resistance/Resistencia	Ohm		
---	-----	--	--

Magnetventil/Magnetic valve/Electrovanne/Electrovalvula Widerstand/Resistance/Resistencia Spannung/Voltage/Tension/Tensión	Ohm V		
--	----------	--	--

Temp.Reyler/Thermostat/Termostato ambiente para ventilador refrigerador			
--	--	--	--