


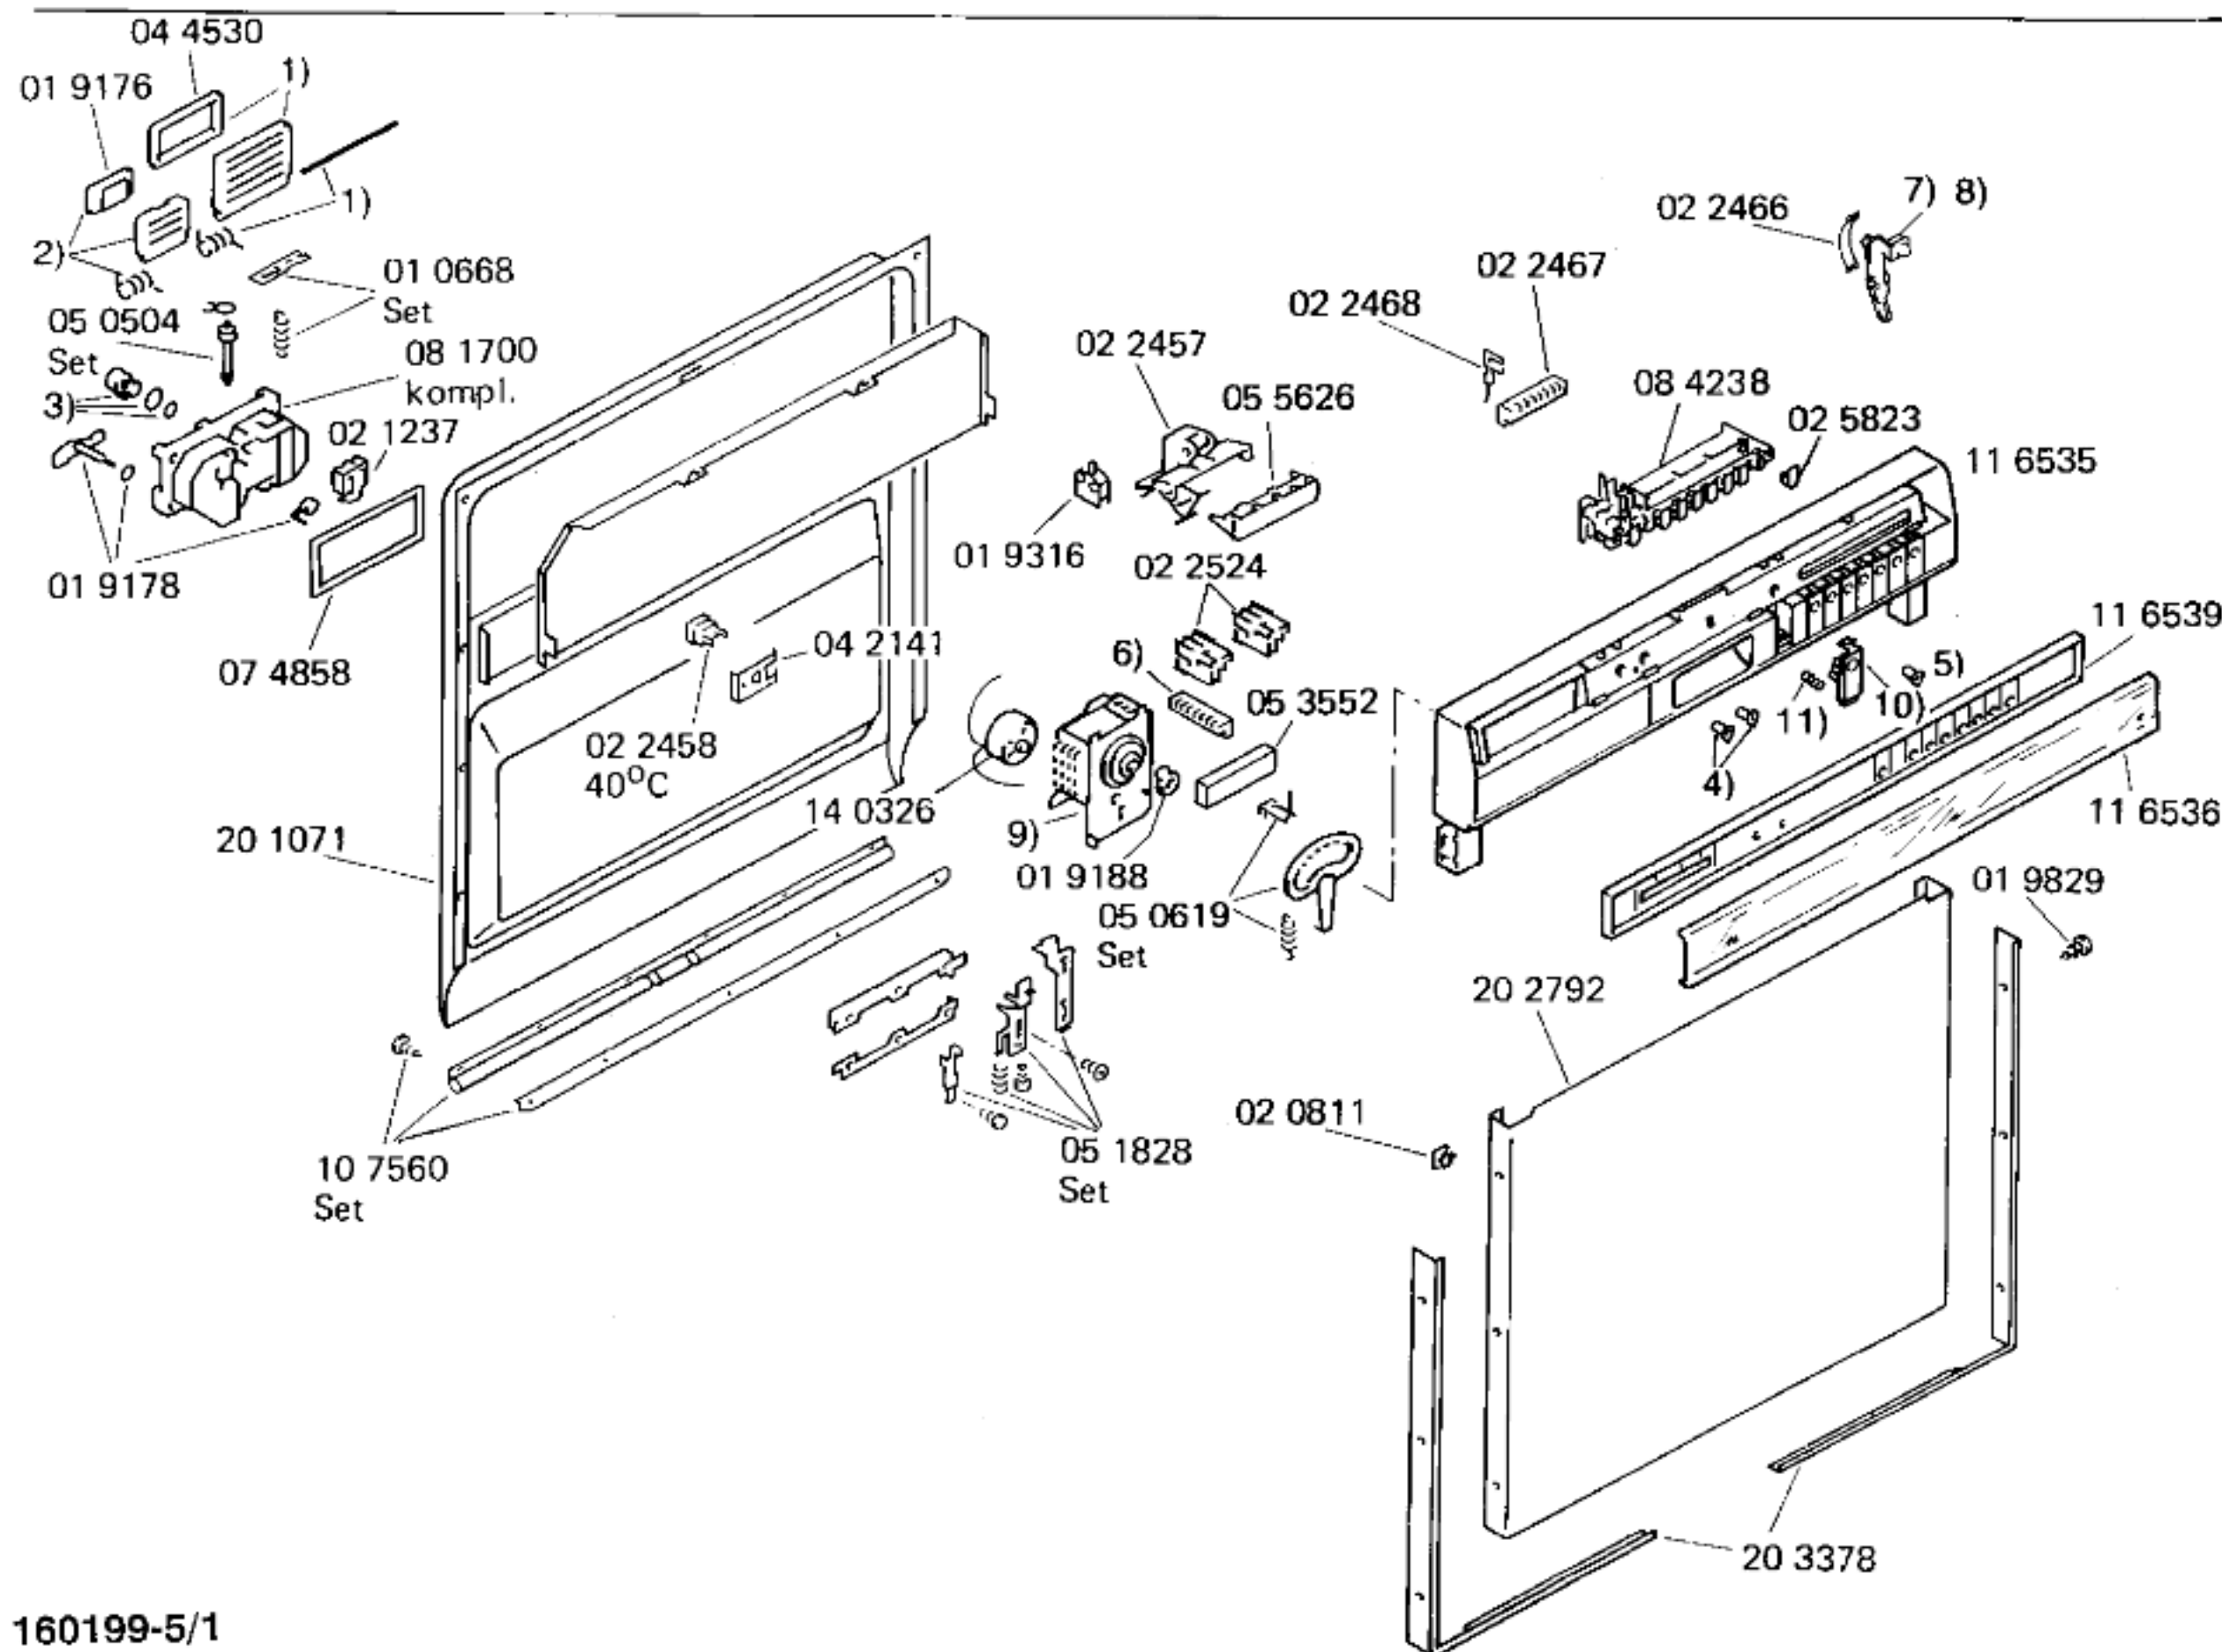


Ident-Nummern Konstante
3740

Gebrauchsanweisung
51 2262
bis FD 6604
51 2823
ab FD 6605
EU1
(D,GB,F,I,NL,DK)


- 1) 04 2085
Set
- 2) 04 2105
Set
- 3) 01 9177
Set
- 4) 02 5122
- 5) 02 5123
- 6) 02 2459
- 7) 02 5657
rot
- 8) 02 5658
grün
- 9) 08 4059
bis FD 6604
08 5079
ab FD 6605
- 10) 02 5823
- 11) 02 5824

Ident Nummern-Konstante
3740

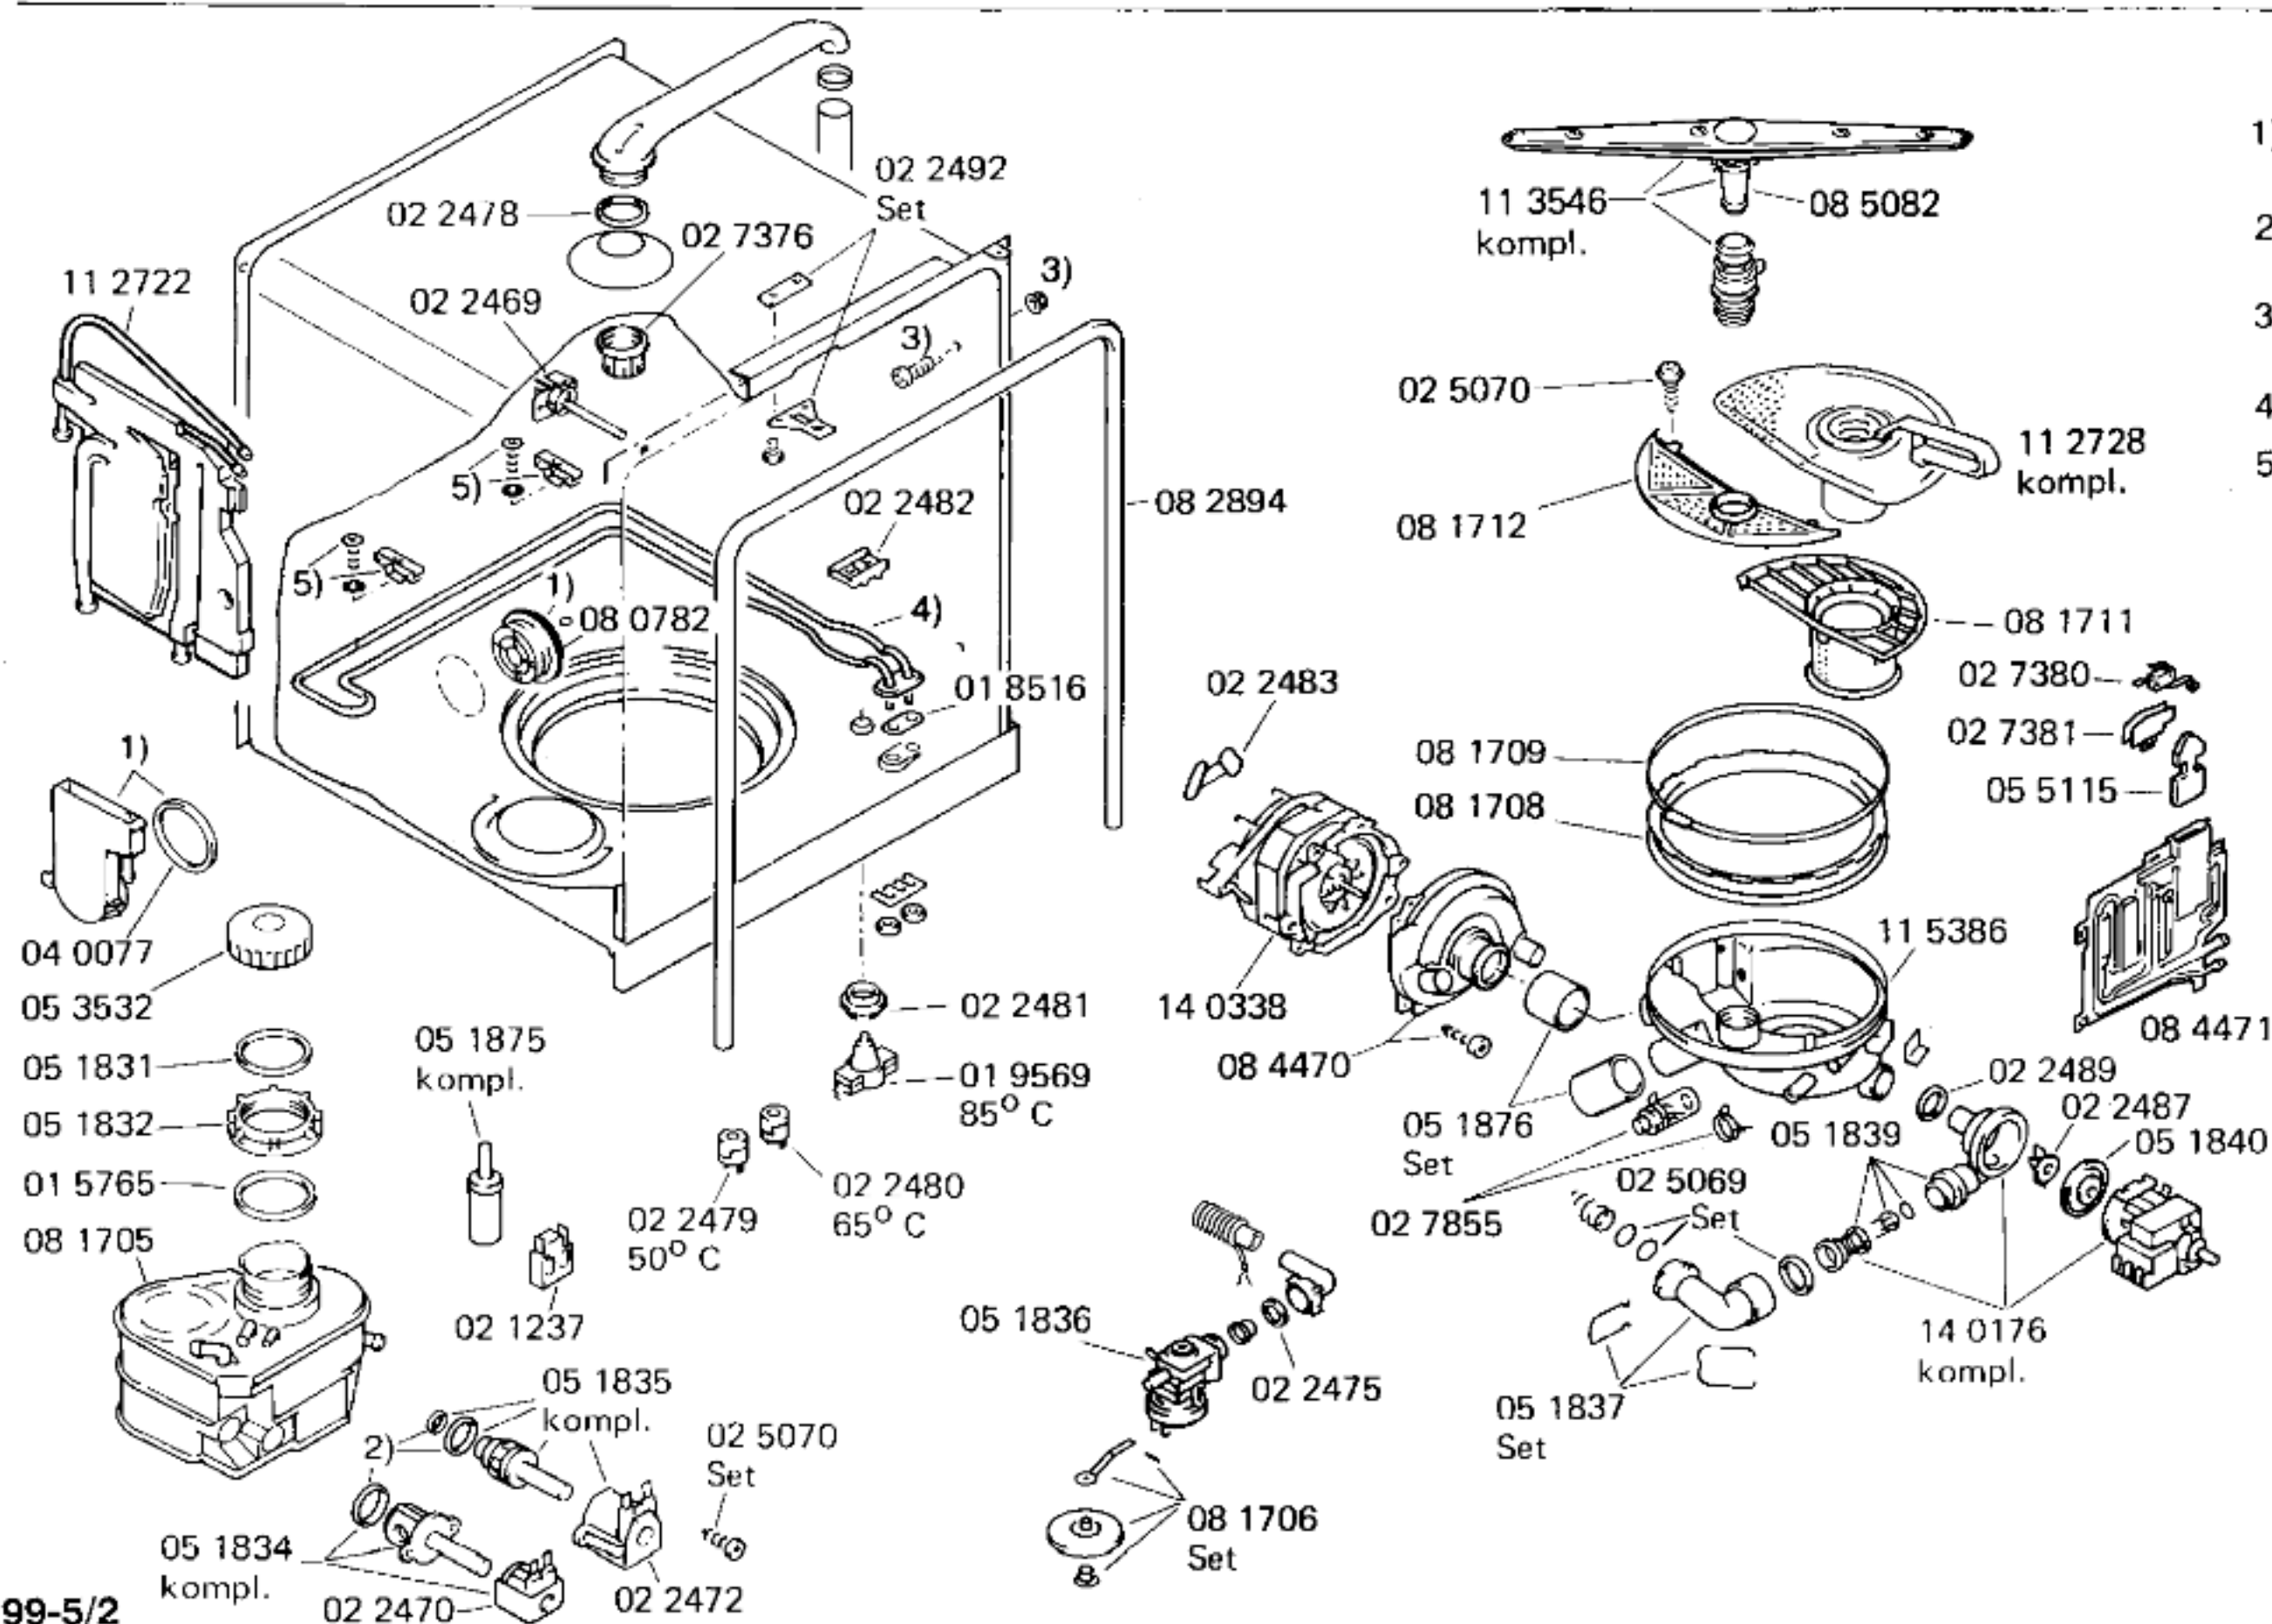


**BOSCH**

SMS 7100 — 0 730 100 629—EU1

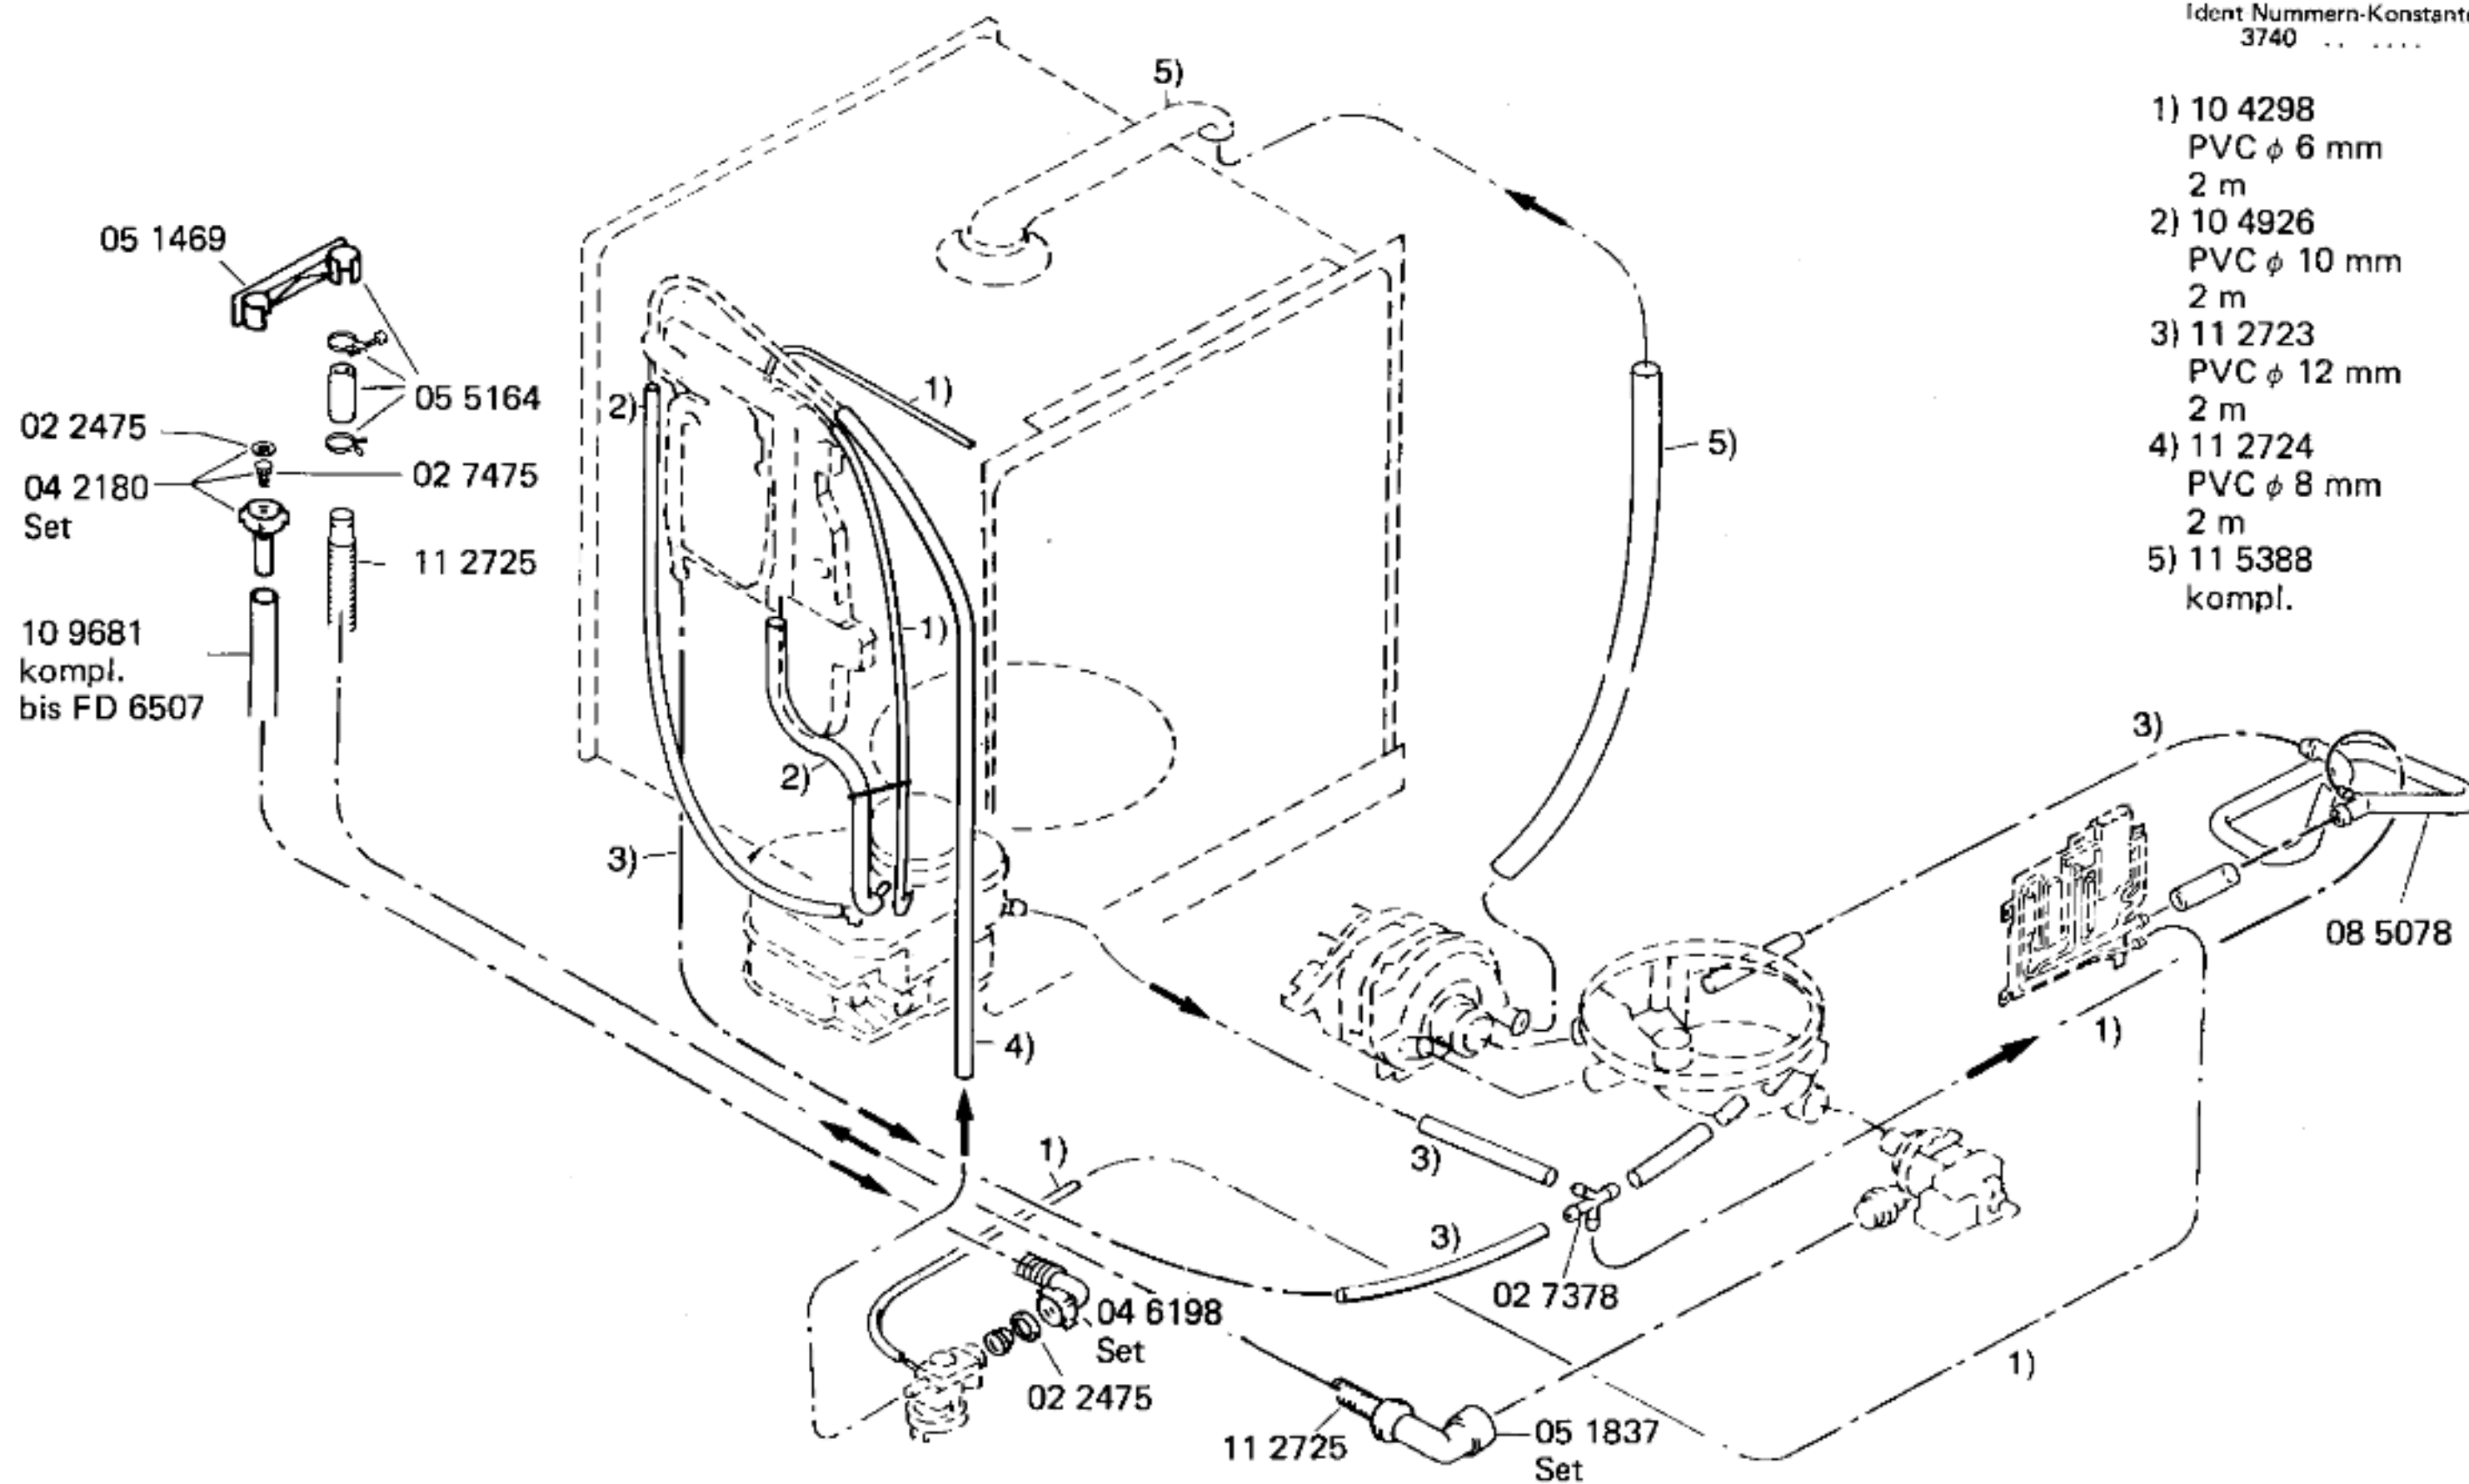
GESCHIRRSPÜLGERÄTE
StandgeräteIdent Nummern-Konstante
3740

Ident Nummern Konstante
3740

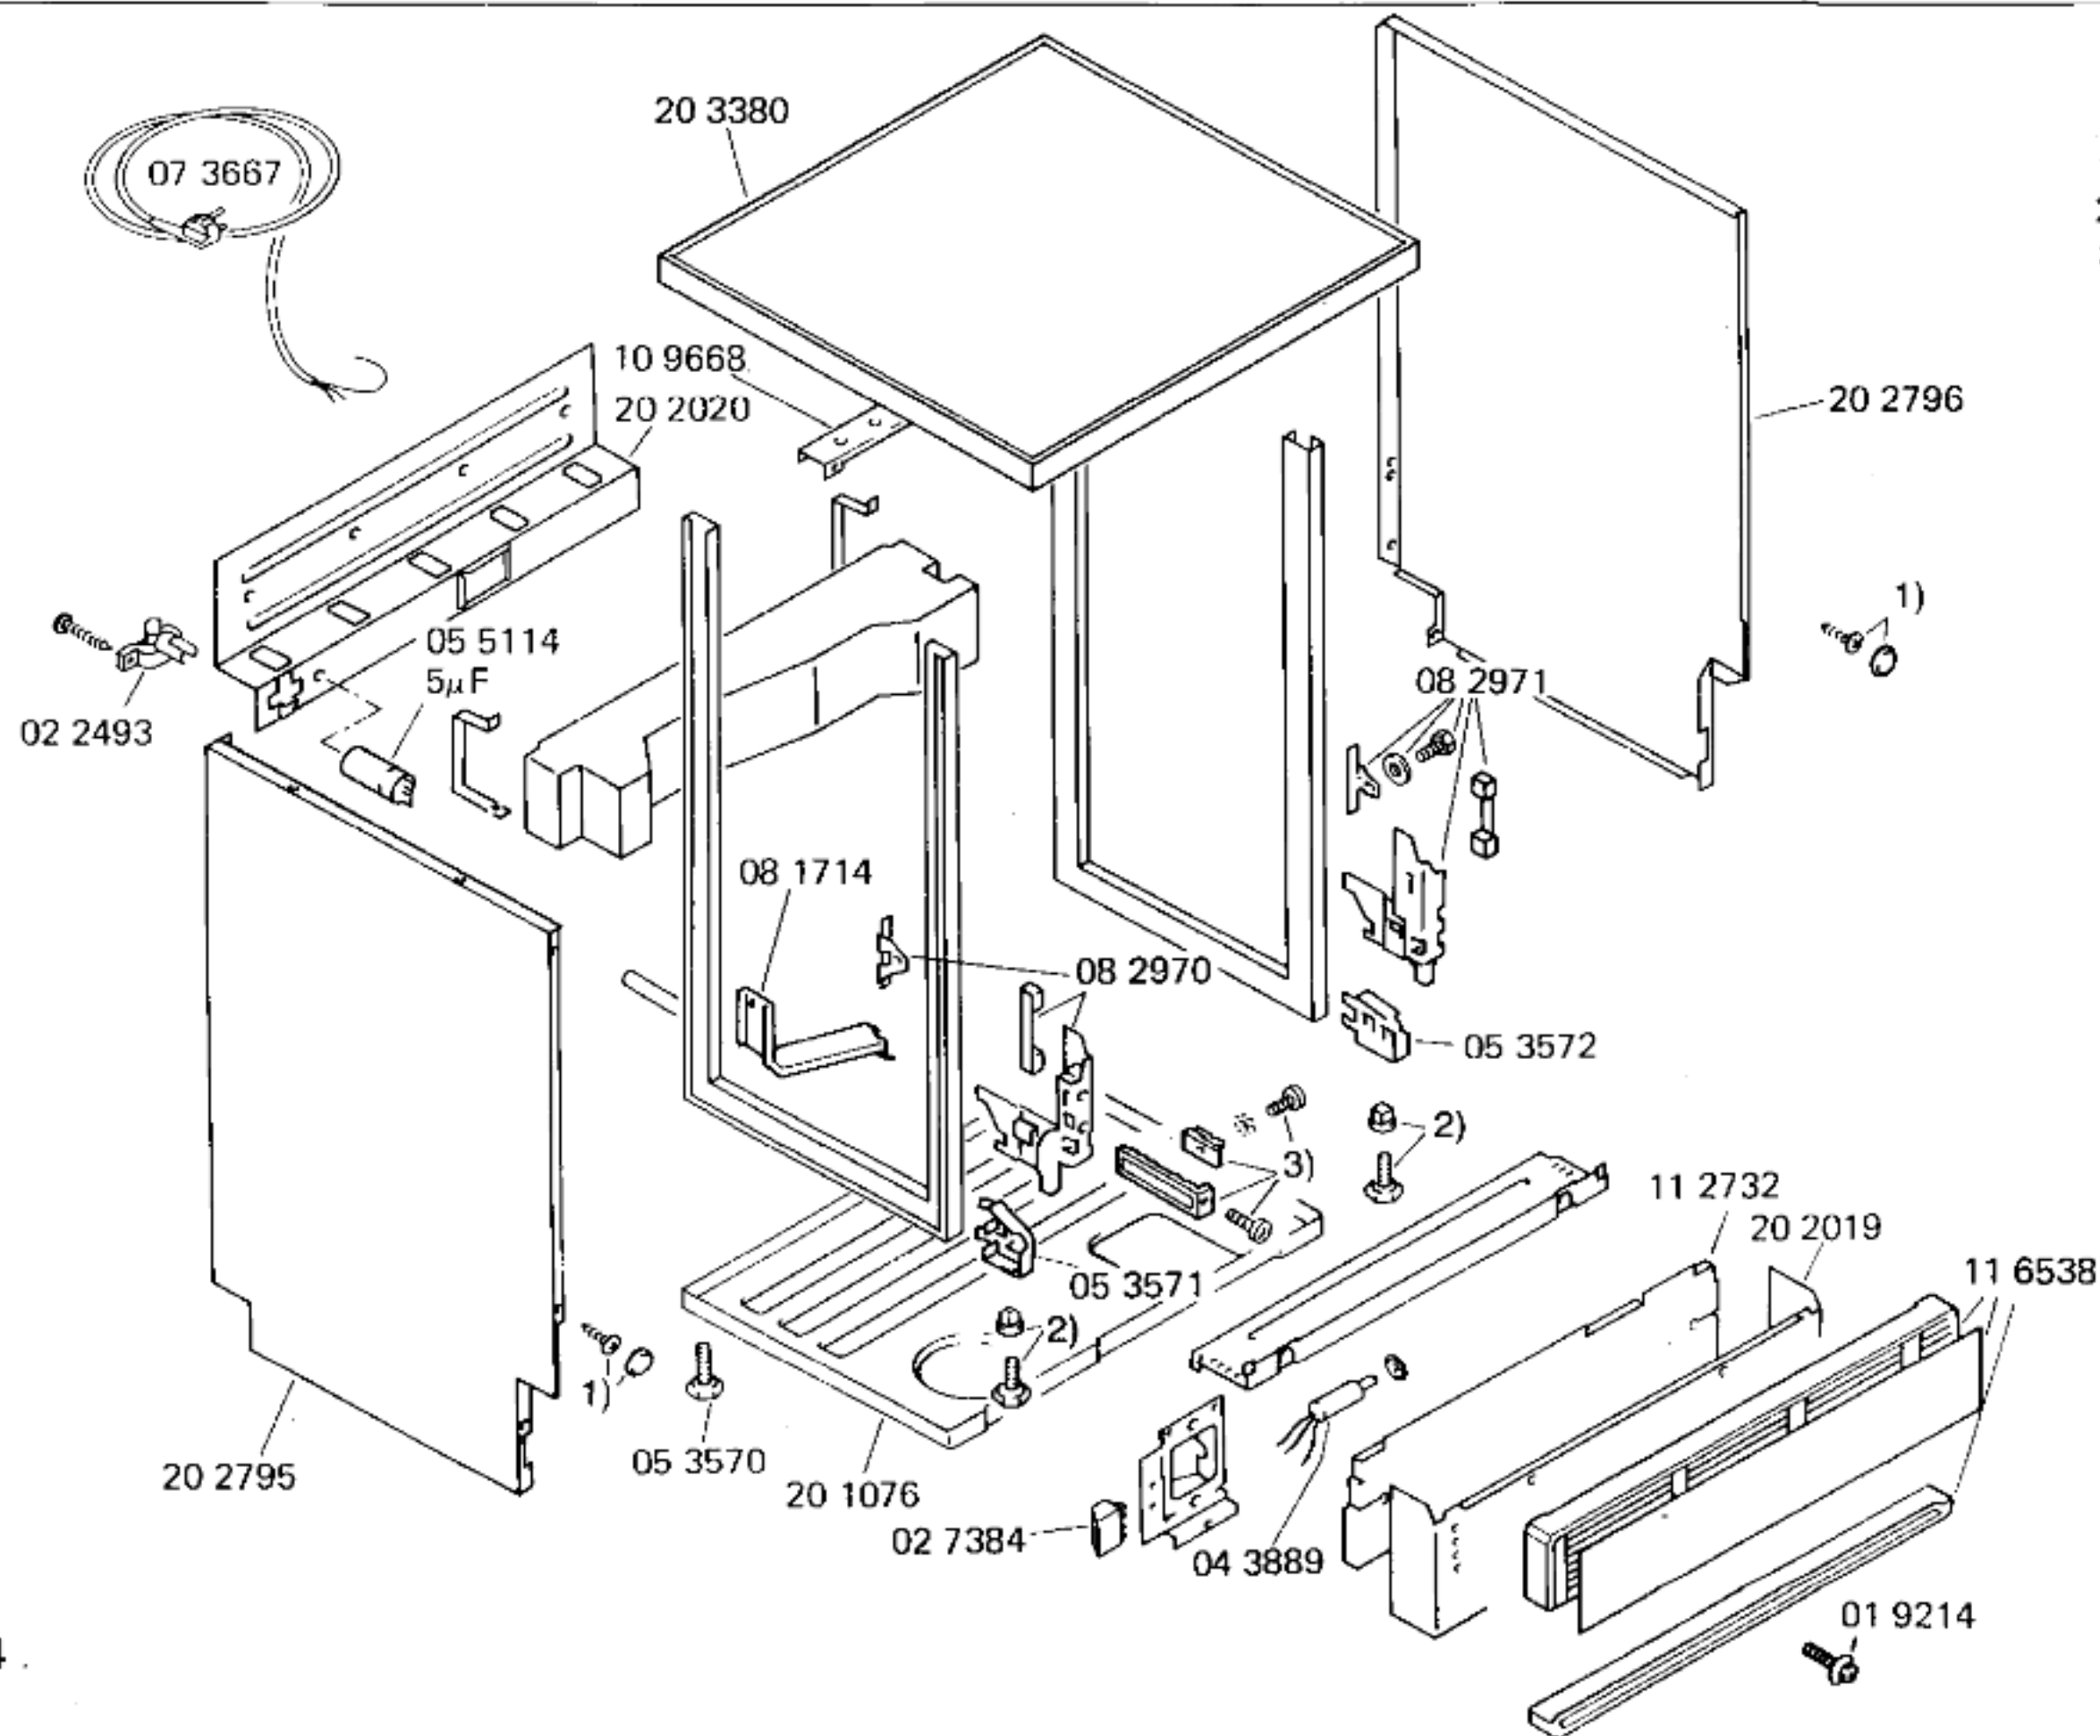

**BOSCH**

SMS 7100 — 0 730 100 629—EU1

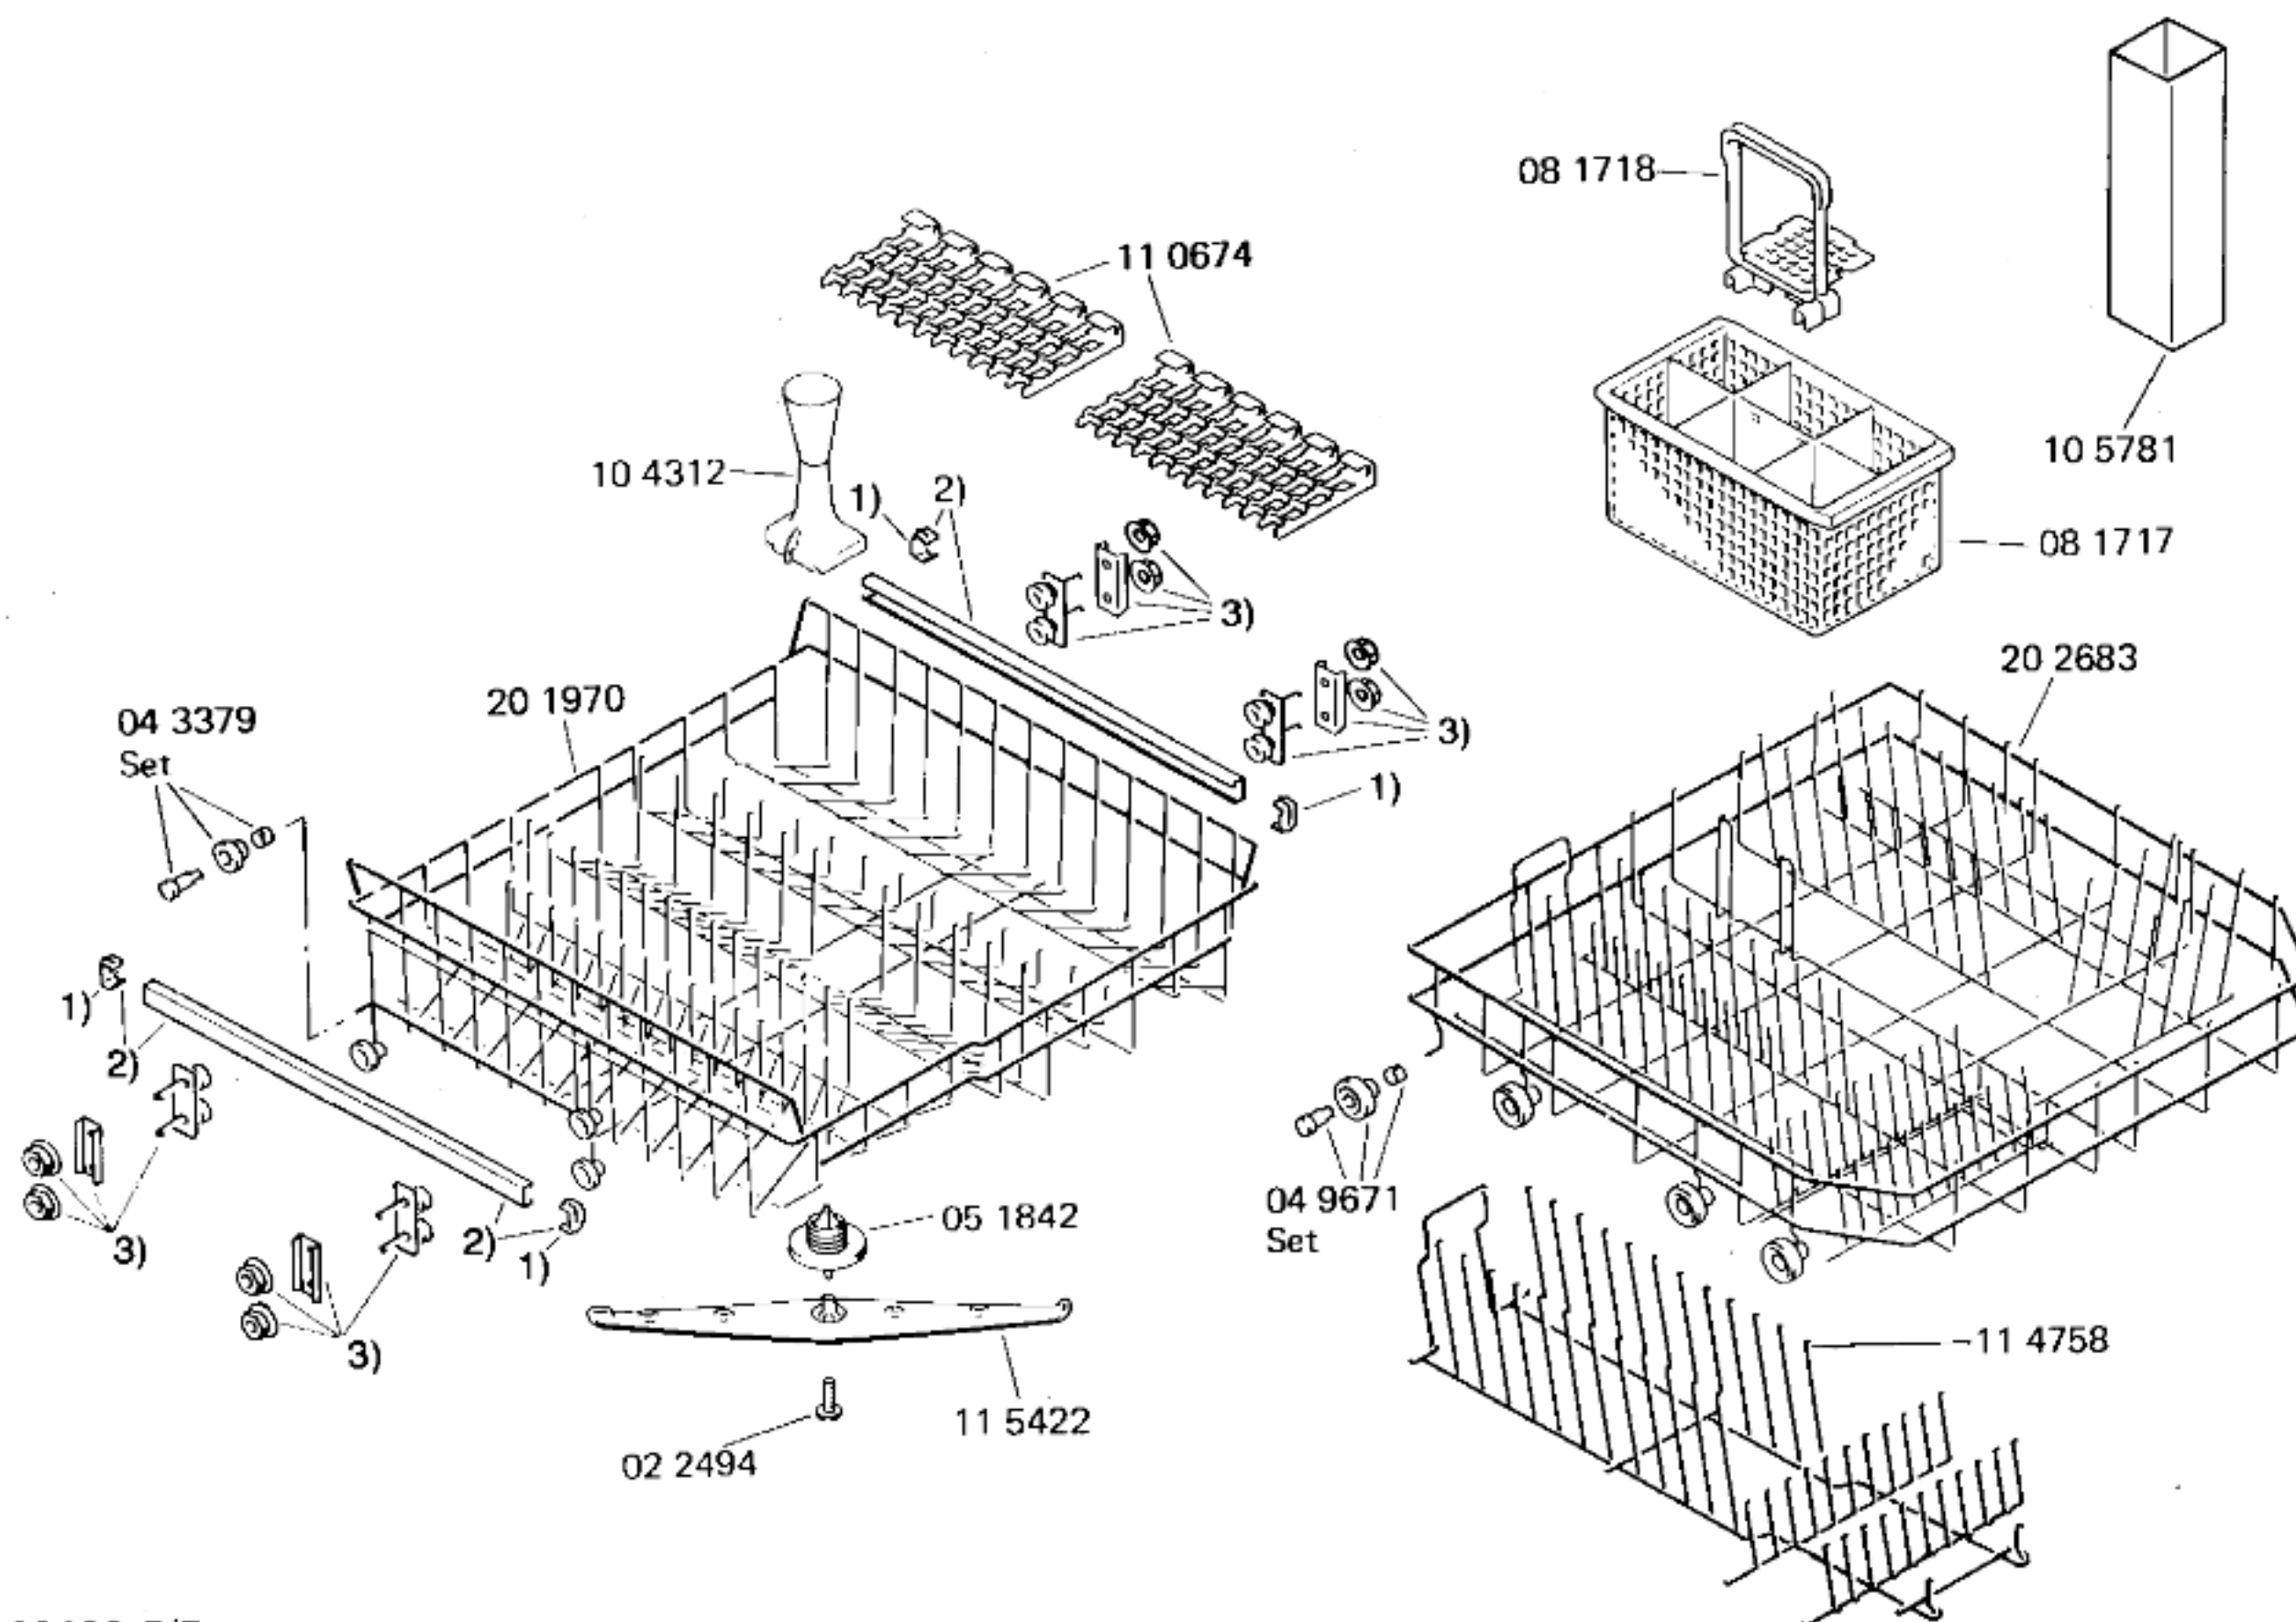GESCHIRRSPÜLGERÄTE
StandgeräteIdent-Nummern-Konstante
3740

1) 01 9202

2) 11 0668
Set3) 05 1287
Set