



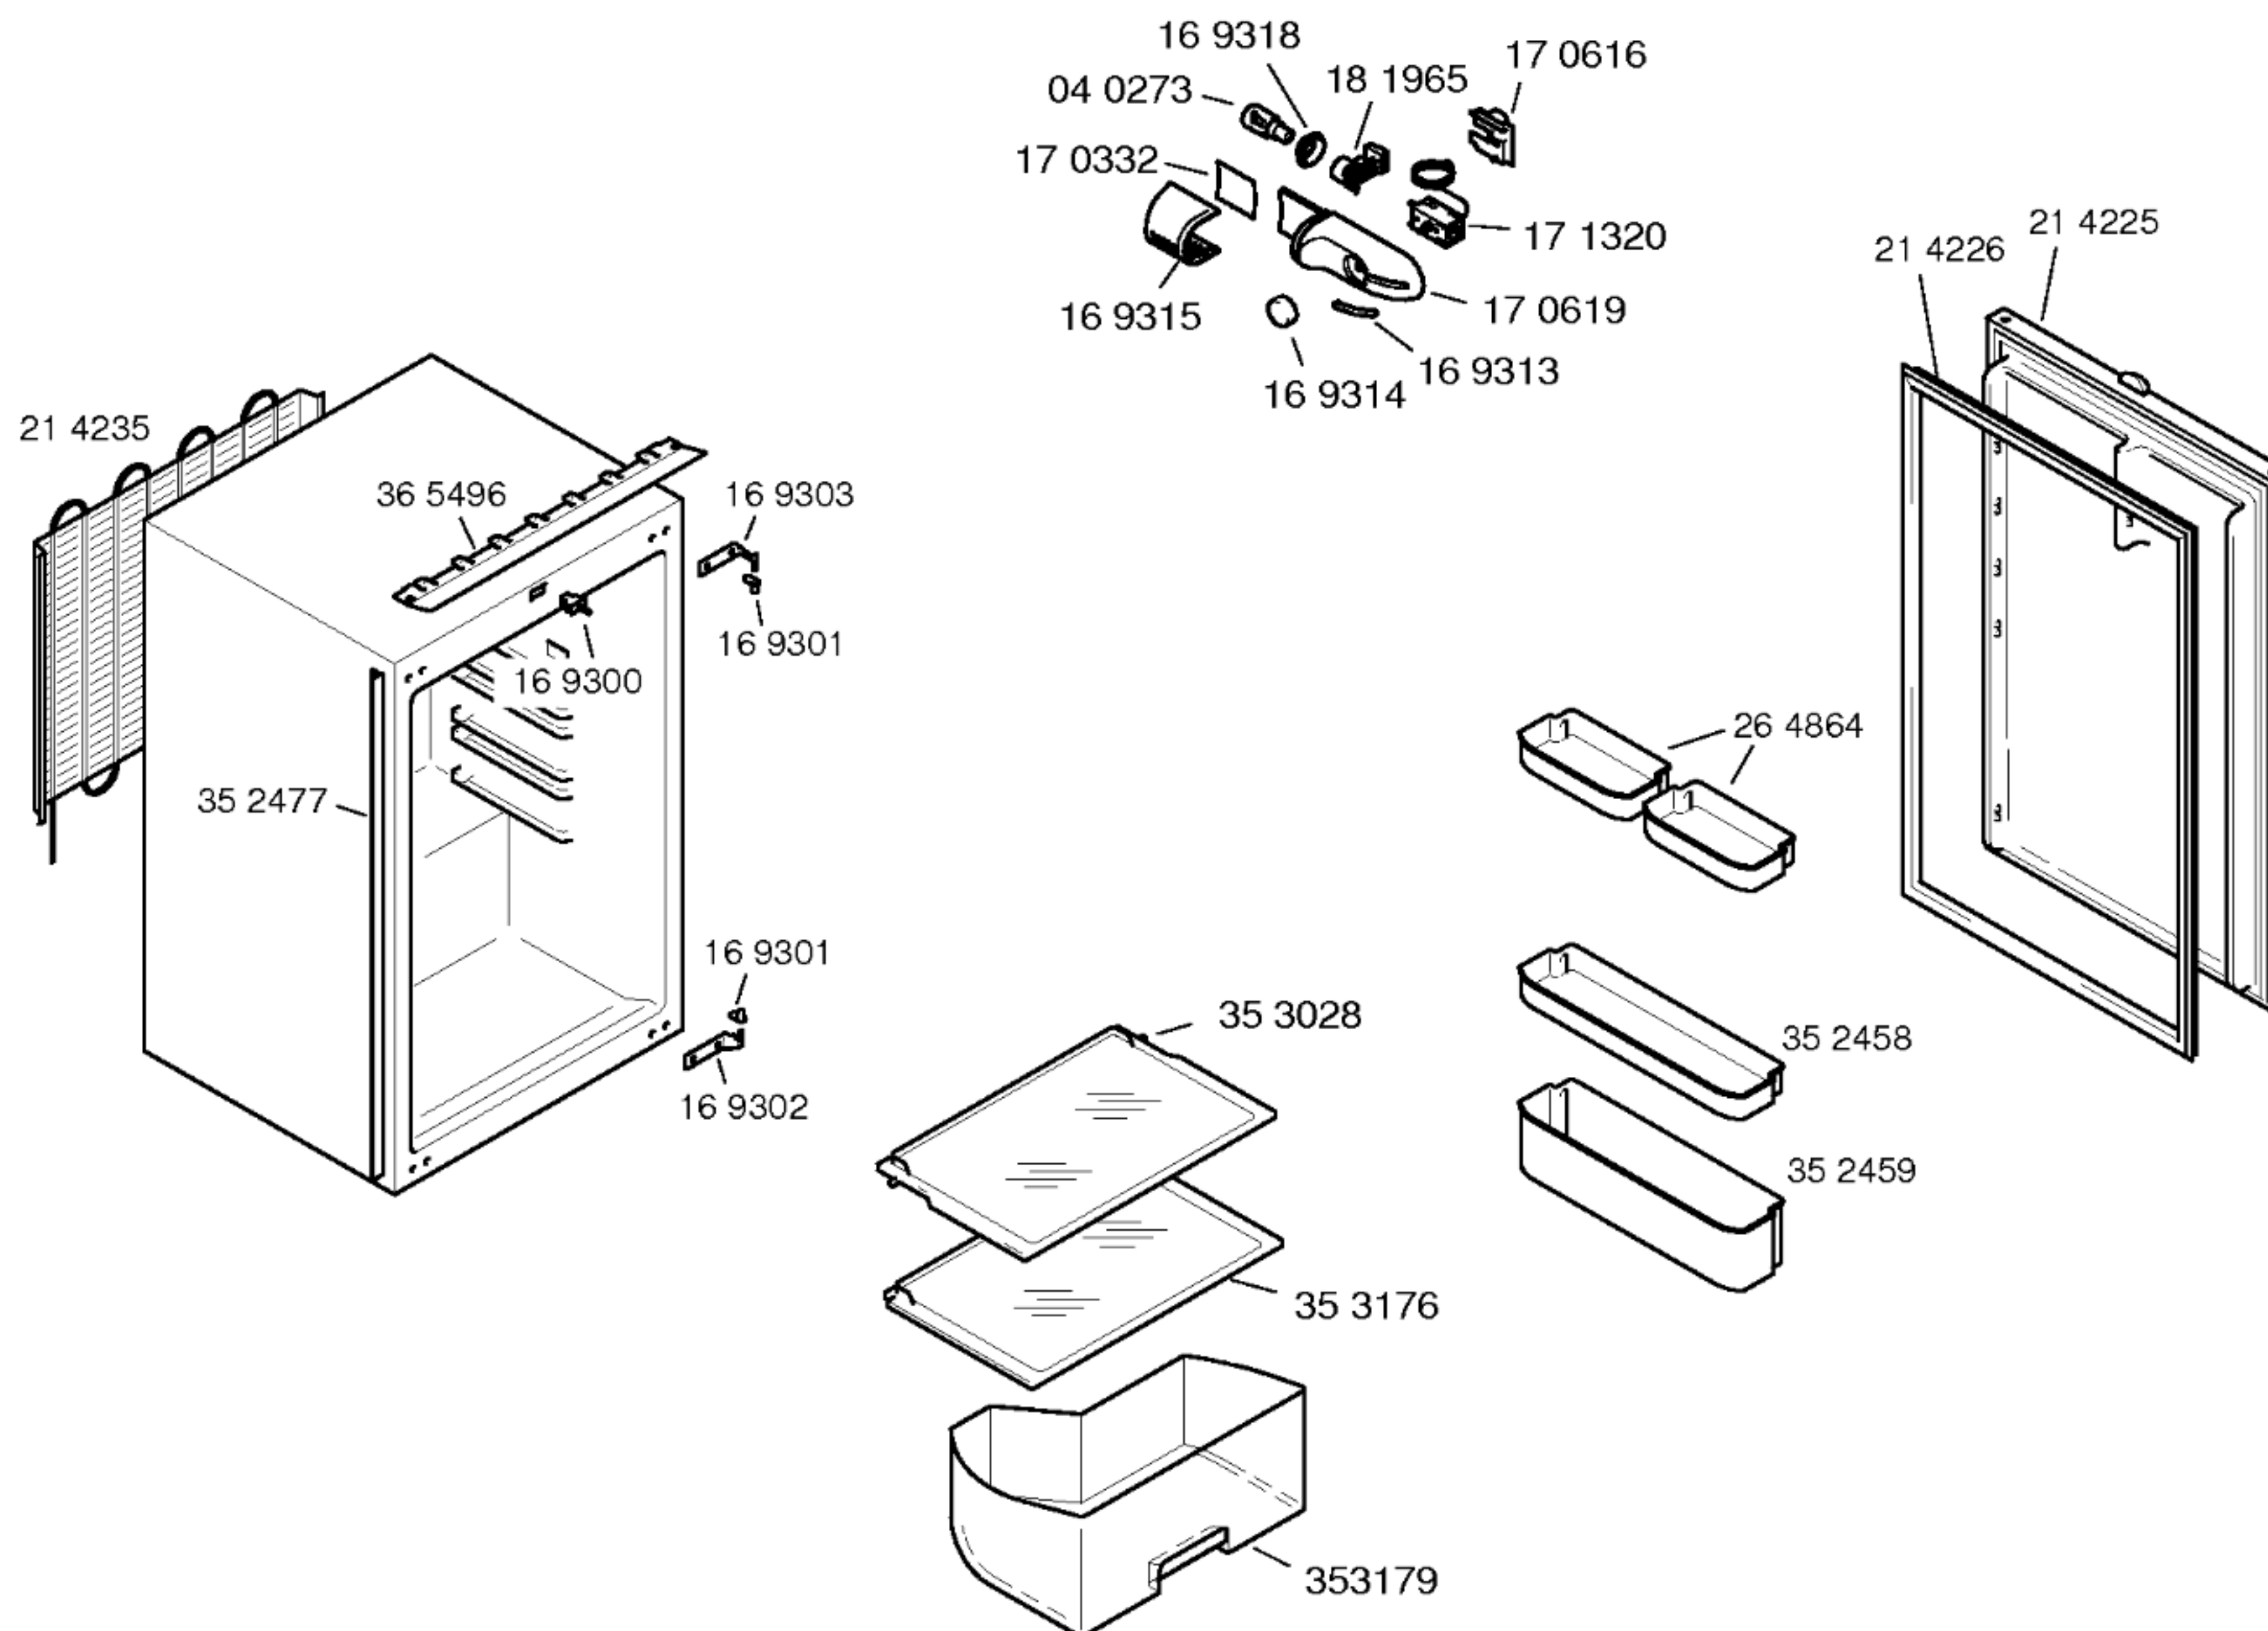

Gebrauchsanweisung
52 1930

Montageanleitung
52 1893

Befestigungssatz
26 4862

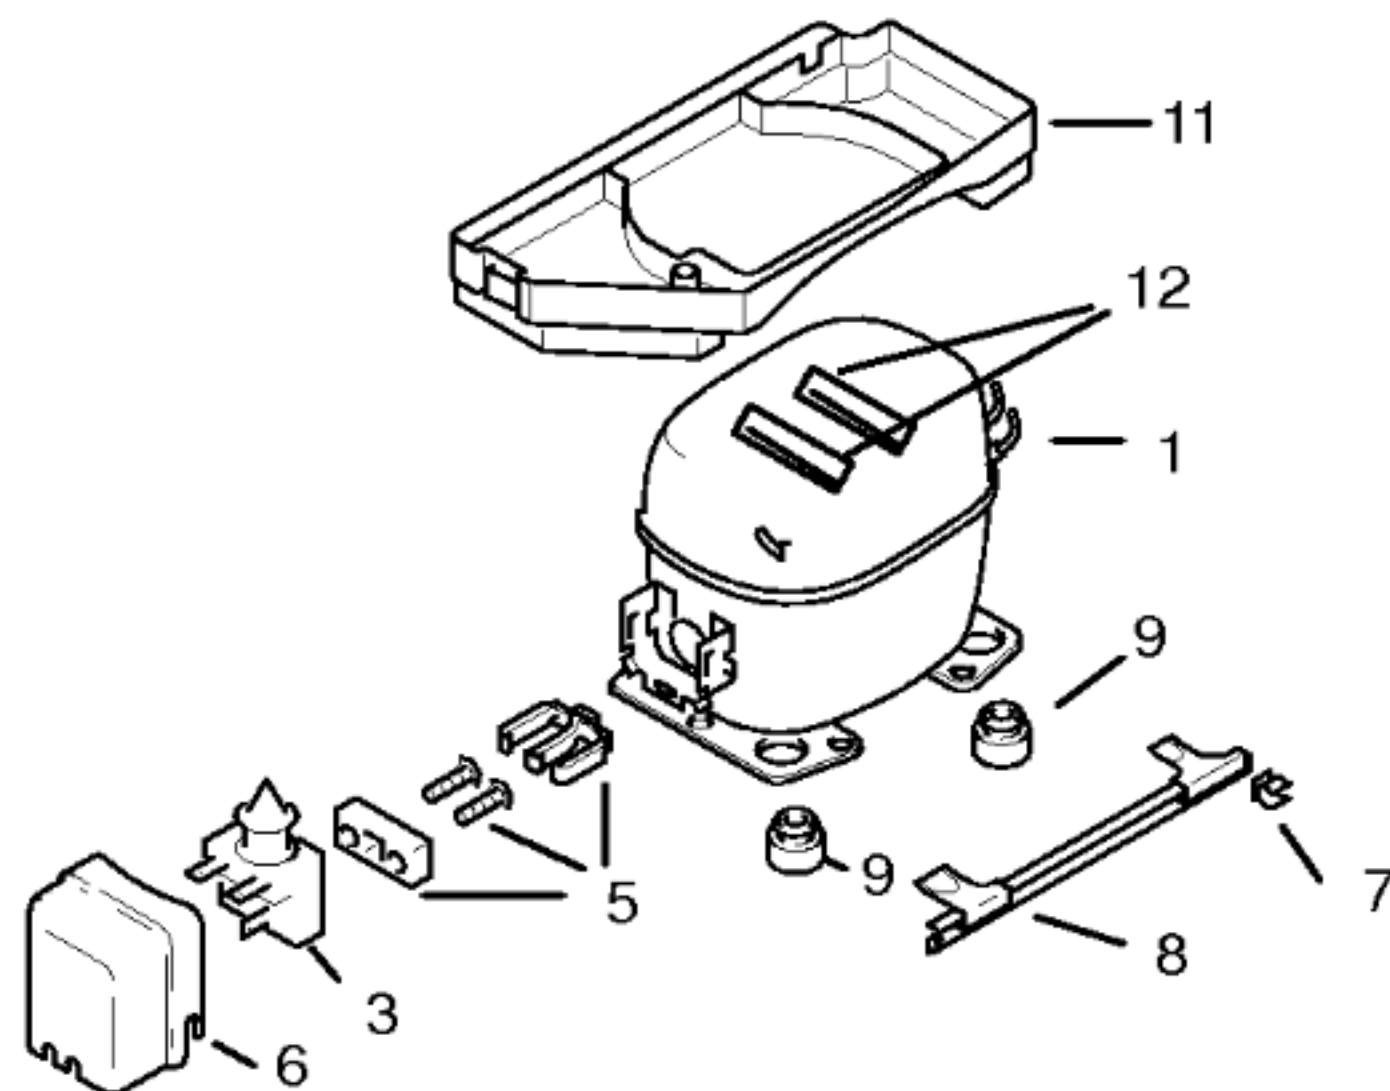

	V01	V02	V03,V04	V05
Pos.	Goldstar	Aspera	Goldstar	Goldstar
	NDA62NAEM	BPK1046Y	NDA52NAEM	
1	14 2037	14 2099	14 2206	14 2057
2				
3	17 0743	18 0752	18 4685	15 1055
4				
5	17 0745	17 0882	17 0745	15 0760
6	17 0744	17 0881	17 0744	15 1072
7	16 9319	16 9319	16 9319	16 9319
8	26 4879	26 4879	26 4879	26 4879
9	05 0166	050166	050166	050166
10				
11	36 5099	36 5099	36 5099	36 5099
12	05 6008	05 6008	05 6008	05 6008

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES				
Verdichter/Compressor/Compresseur	Goldstar	Aspera	Goldstar	
Typ/Type	NDA62NAEM	BPK1046Y	NDA52NAEM	
Förderleistung/Delivery/Débit	l/h	612	612	1121
Anlaufstrom/Starting current/Cour de démarrage	A	3,2	3,2	
Widerstand/Resistance/Résistance Ha/main/prin	Ω	24,6	60,9	31,5
Hi/aux	Ω	23,0	44,9	8,0
Temp.-Regler/Thermostat	Ranco			
Typ/Type	K59			
Regelstellung/Position	kalt	warm		
Schaltwerte/Switching values	"warm"	+5,2	+5,2	
Valeurs de commutation	"kalt"	-32,0	-15,0	
	"alarm"			
Füllmenge/Fill.quantity/Charge	R600a	+		
Anschlußwert/Conn.load/Puiss. connectée	W	66	64	59
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance	Ω			
Leistung/Power/Puissance	W			
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance	Ω			
Temp.-Regler/Thermostat				
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance	Ω			
Spannung/Voltage/Tension	V			