



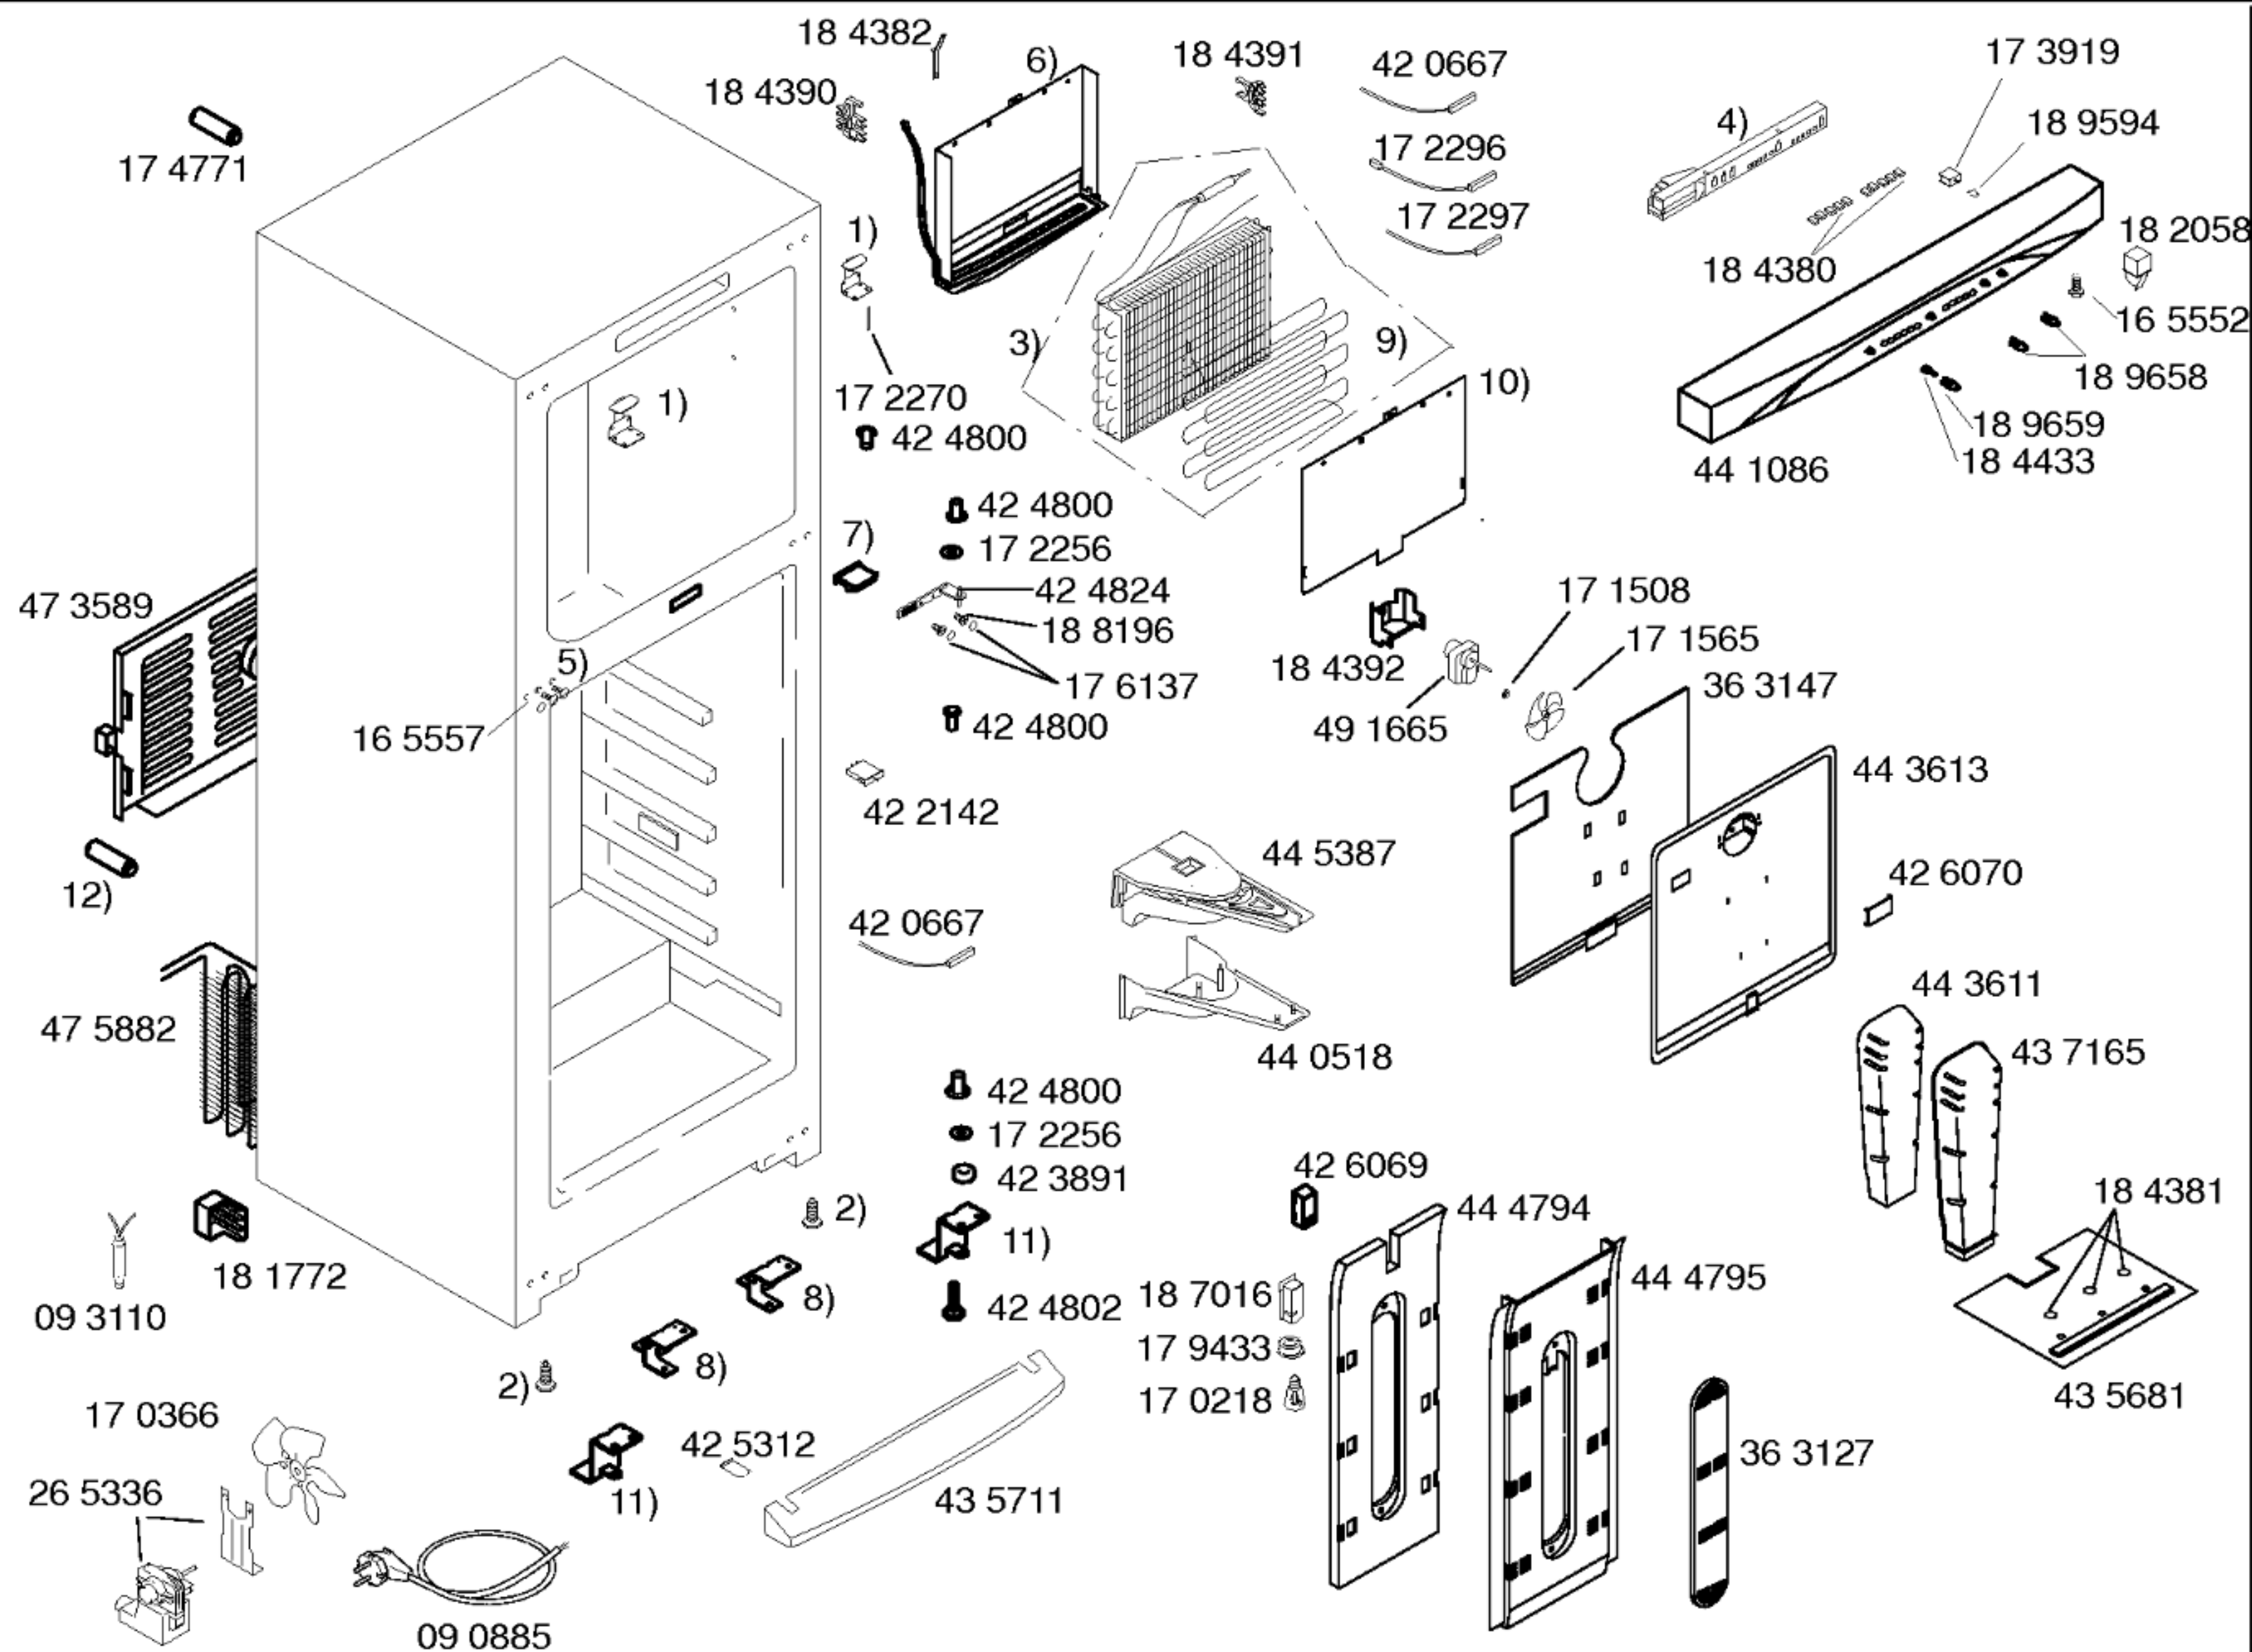


Gebrauchsanweisung
59 1459
(GB)

- 1) 17 1312
- 2) 42 4340
- 3) 43 8728
- 4) 49 7503
- 5) 16 5552
- 6) 43 5739
- 7) 41 8128
- 8) 49 1346
- 9) 43 5707
- 10) 44 6179
- 11) 42 8184
- 12) 60 5353

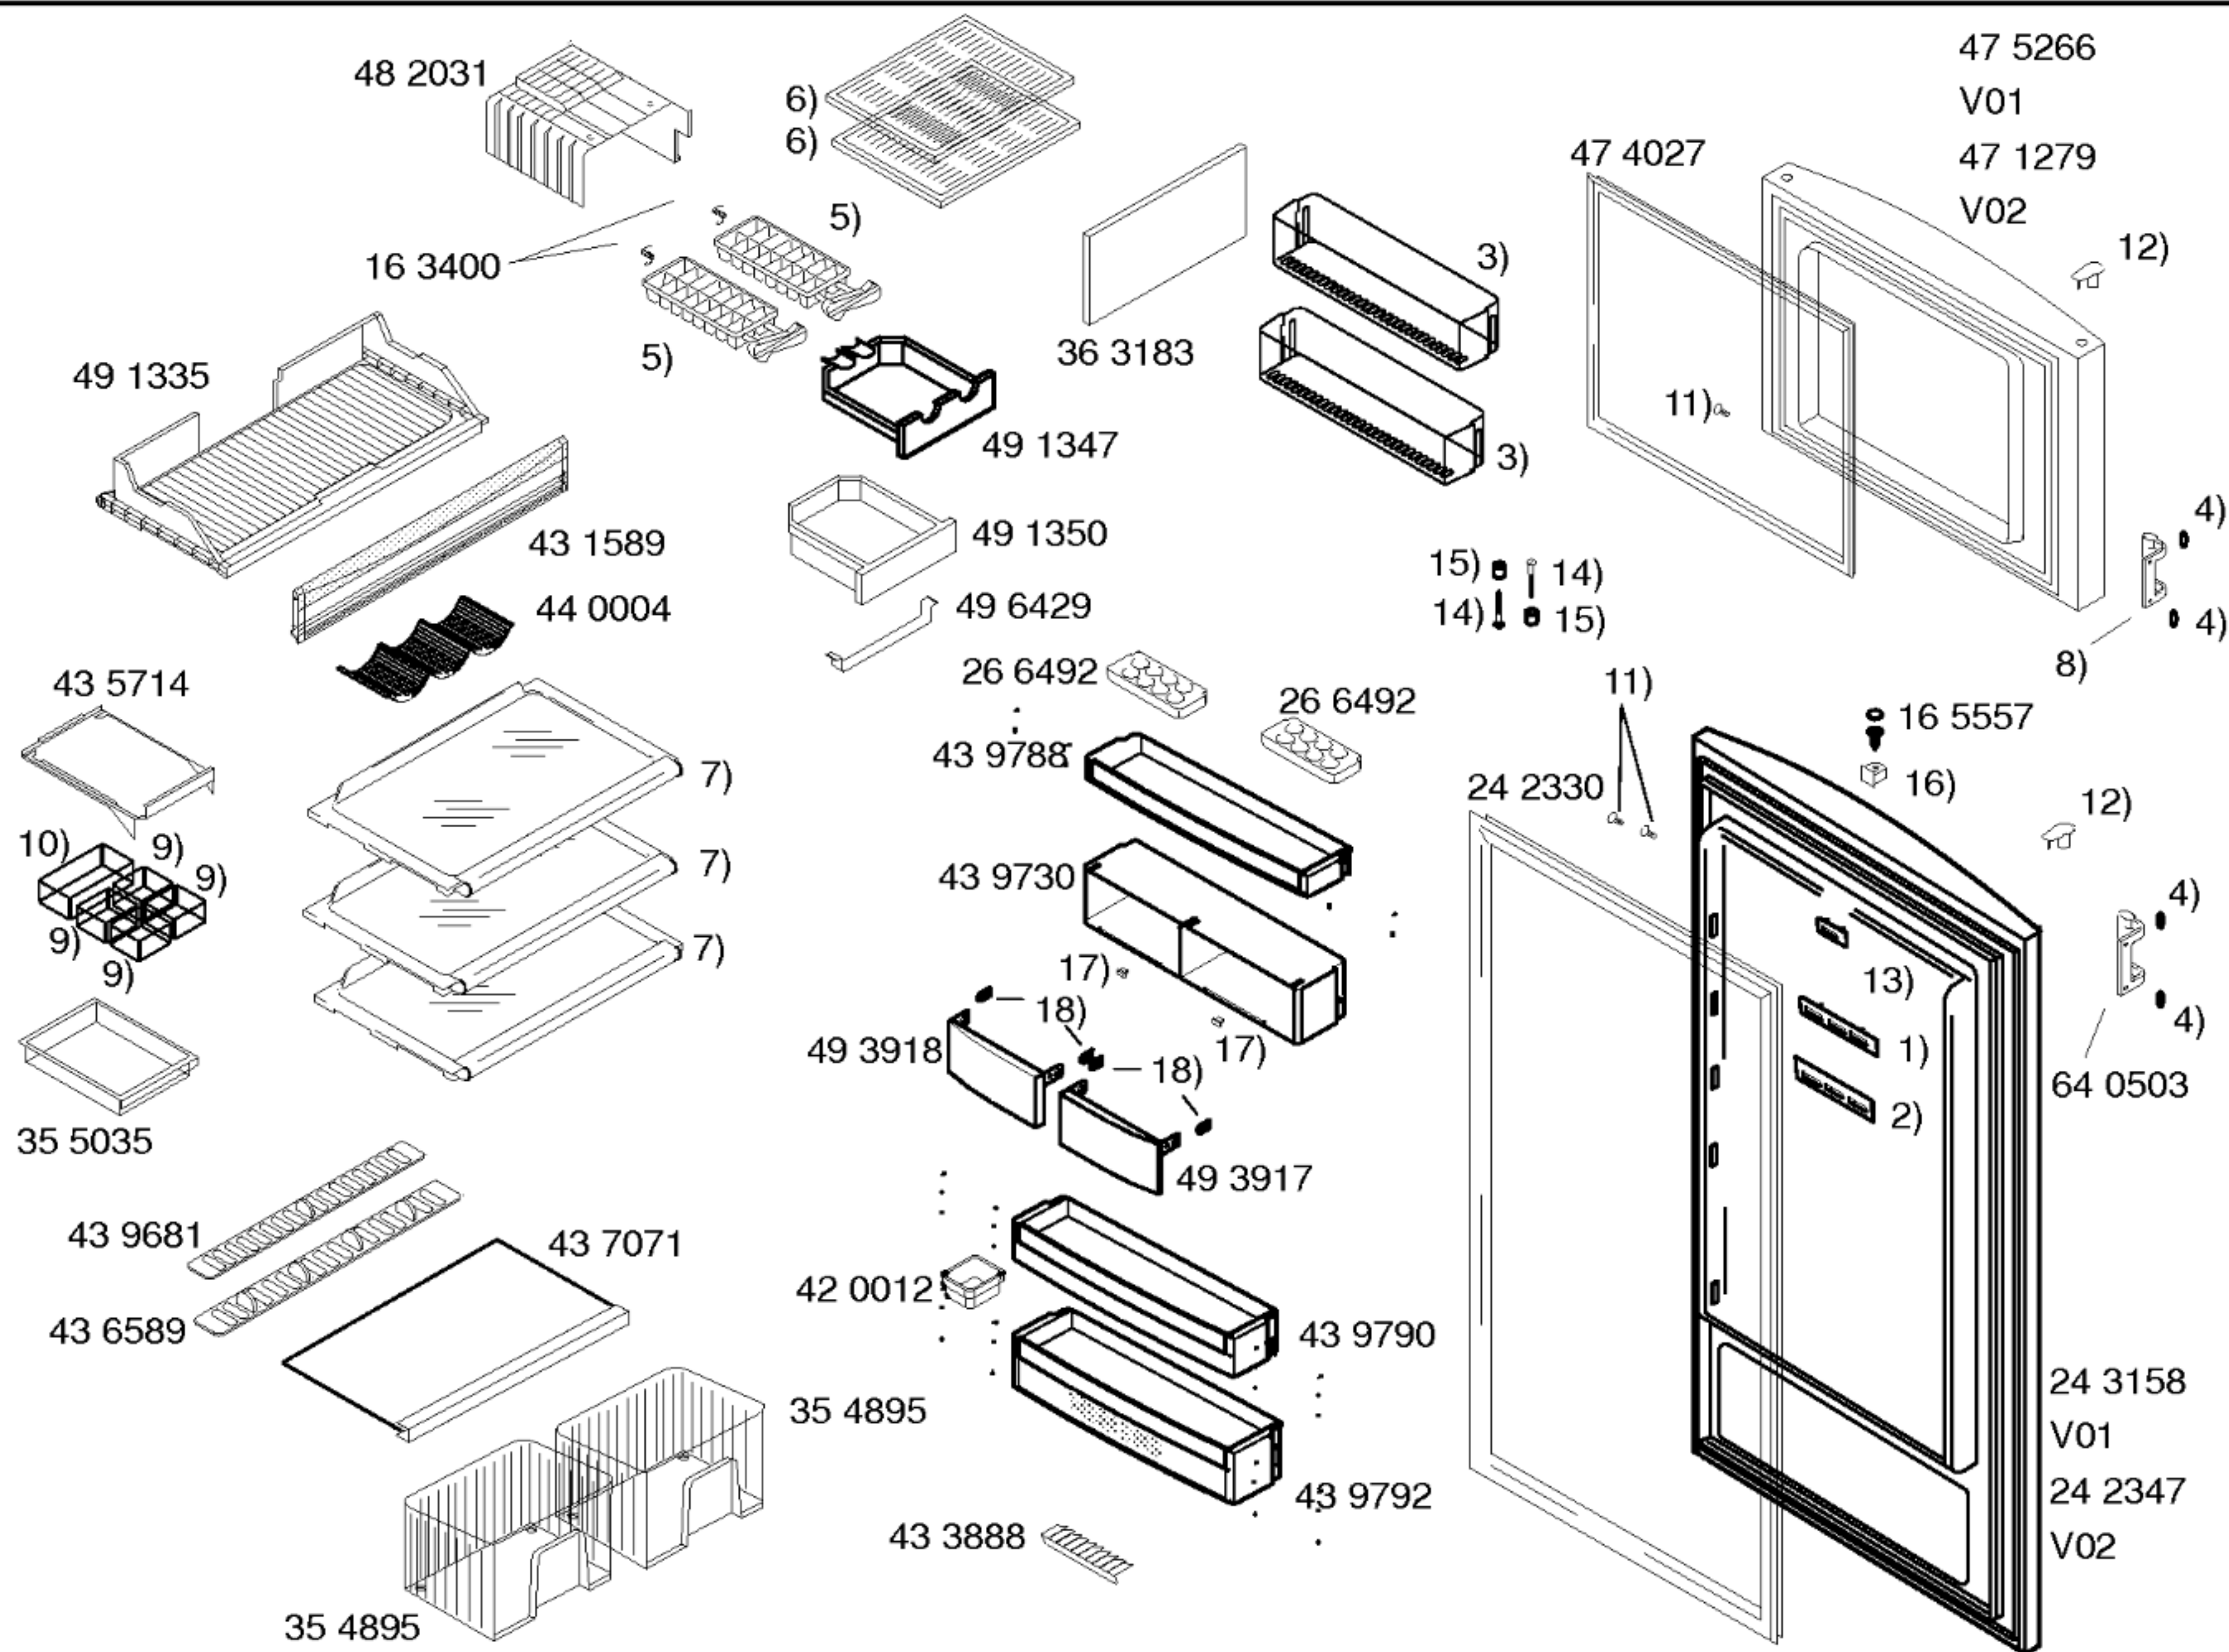

- 1) 49 4865
- 2) 49 4864
- 3) 43 4621
- 4) 42 4814
- 5) 49 1361
- 6) 49 1336
- 7) 43 6568
- 8) 64 0504
- 9) 18 1771
- 10) 18 1945
- 11) 60 4835
- 12) 17 1321
- 13) 49 4459
- 14) 18 8194
- 15) 18 8188
- 16) 60 2197
- 17) 42 0752
- 18) 42 0591

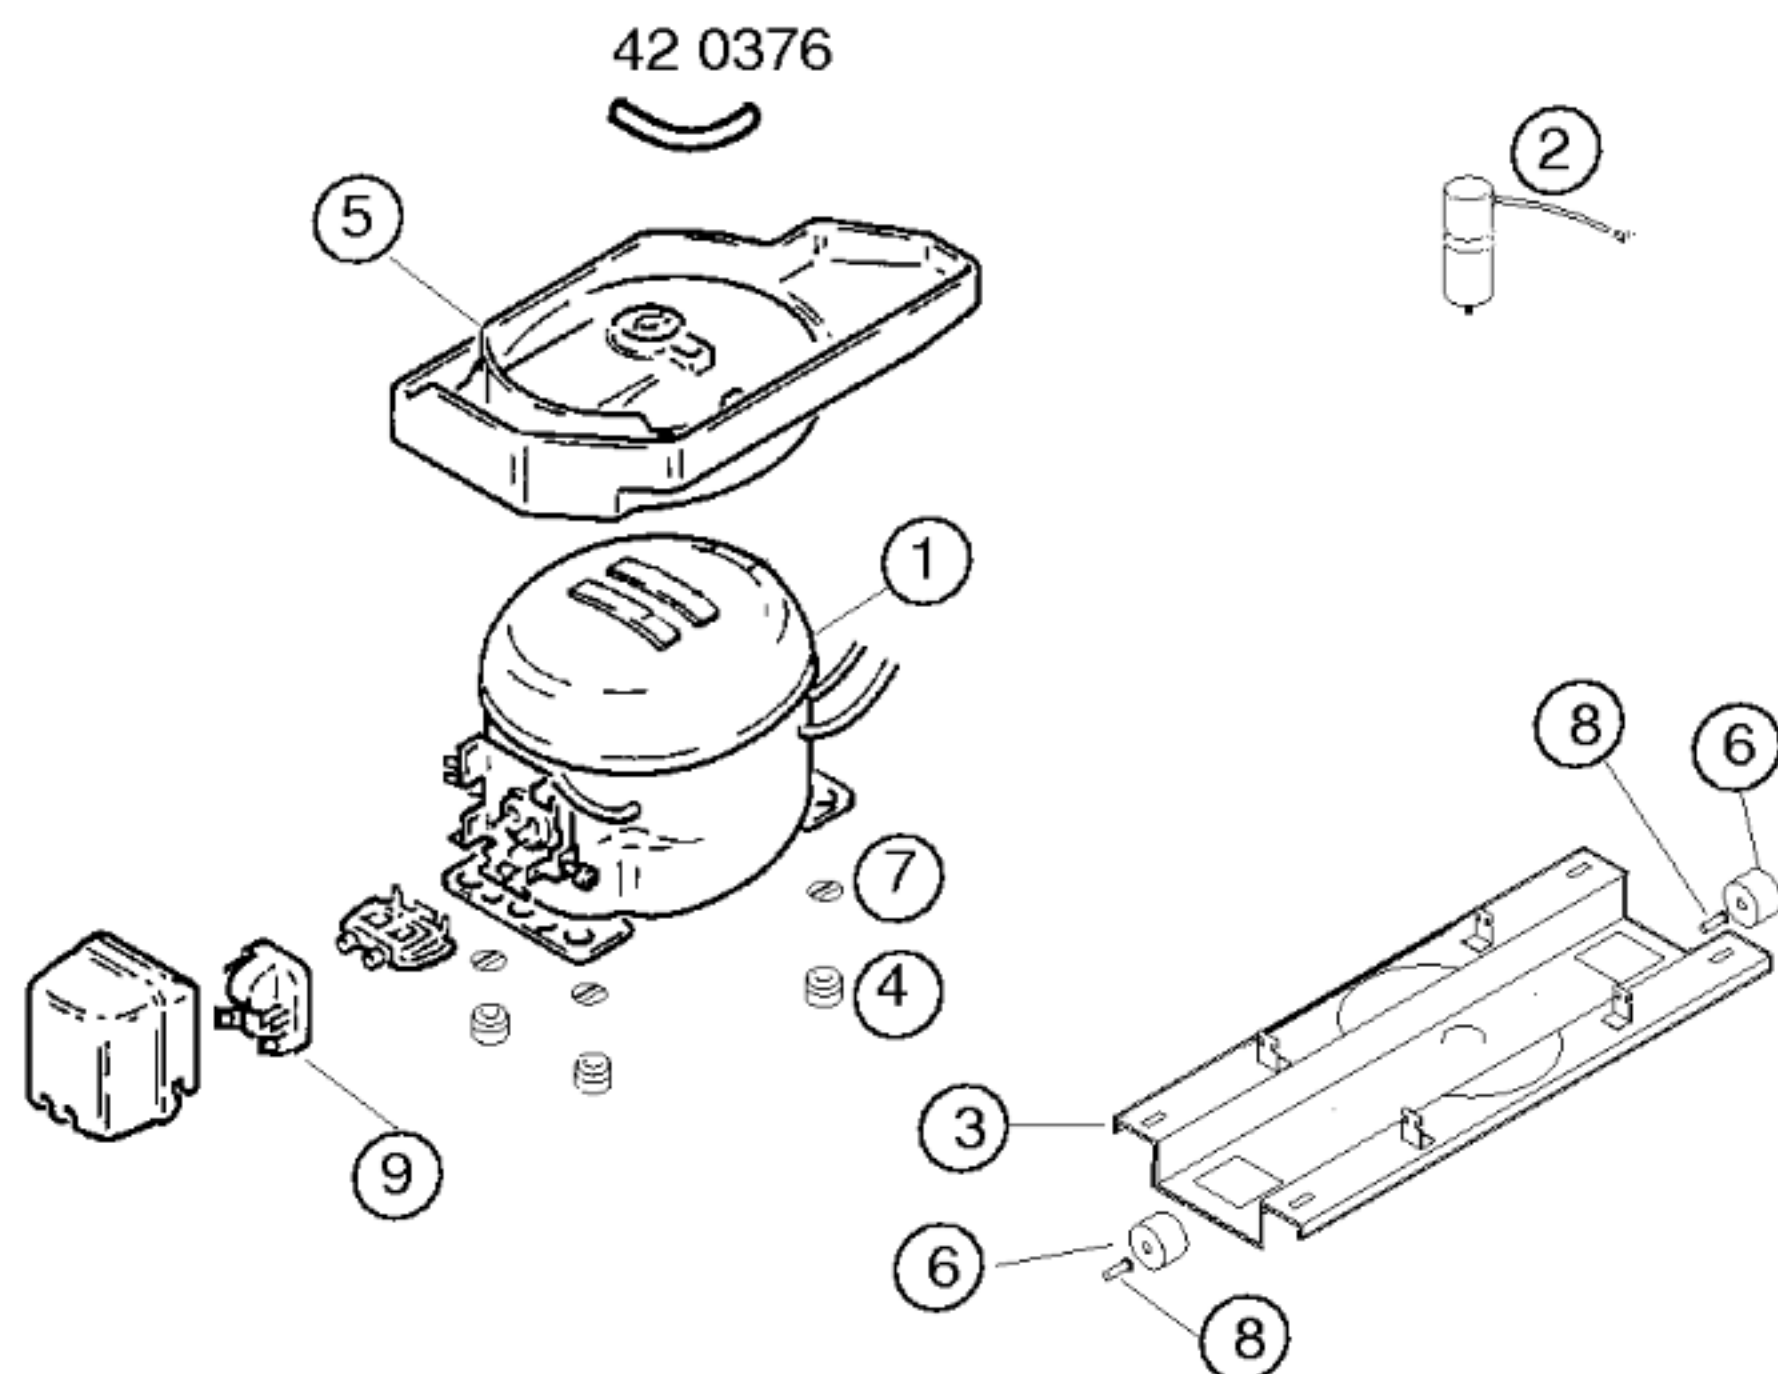

Pos.	Danfoss		
	NL10FT		
1	14 2196		
2	42 0653		
3	35 4583		
4	16 3427		
5	49 1201		
6	17 1318		
7	17 1519		
8	18 1014		
9	16 5570		
10	—		
11			
12			

TECHNISCHE DATEN/TECHNICAL DATA/TEKNIK BİLGİLER				
Verdichter/Compressor/Kompresör		Danfoss		
Typ/Type/Tip		NL10FT		
Förderleistung/Delivery/Verim/h				
Anlaufstrom/Starting current/Giris akimi		A	9,2/10,4	
Widerstand/Resistance/Rezistans Ha/		Ω	8,2	
Hi/aux.			14,7	
Temp.Reyler/Thermostat/Termostat		Elektronisch		
Typ/Type/Tip				
Reglerstellung/Position/Termostat pozisyonu				
Schaltwerte/Actua kapama degerleri		..ein/acma °C		
Valeurs de commutation/Termostat degeri		..aus"/kapama		
(..abtaven' od)		..alarm'		
Füllmenge/Fill. quantily/ Dolum miktari		R134a	g	160
Anschlusswert/Comm. load/Giris gucu		W		
Heizung/Heater/Rezistans		Ω	Verdampfer	Ablaufrinne
Widerstand/Resistance/Direnc		W	267	81
Leistung/Power/Guc				Klappe
				4
Ventilador/Blower/Vantilatör				
Widerstand/Resistance/Rezistans		Ω		
Magnetventil/Magnetic valve/Manyetik valf				
Widerstand/Resistance/Rezistans		Ω		
Spannung/Voltage/Gerilim		V		
Temp.Reyler/Thermostat/Termostat				

* Siehe Typenschild/Mamul etiketine bakiniz