


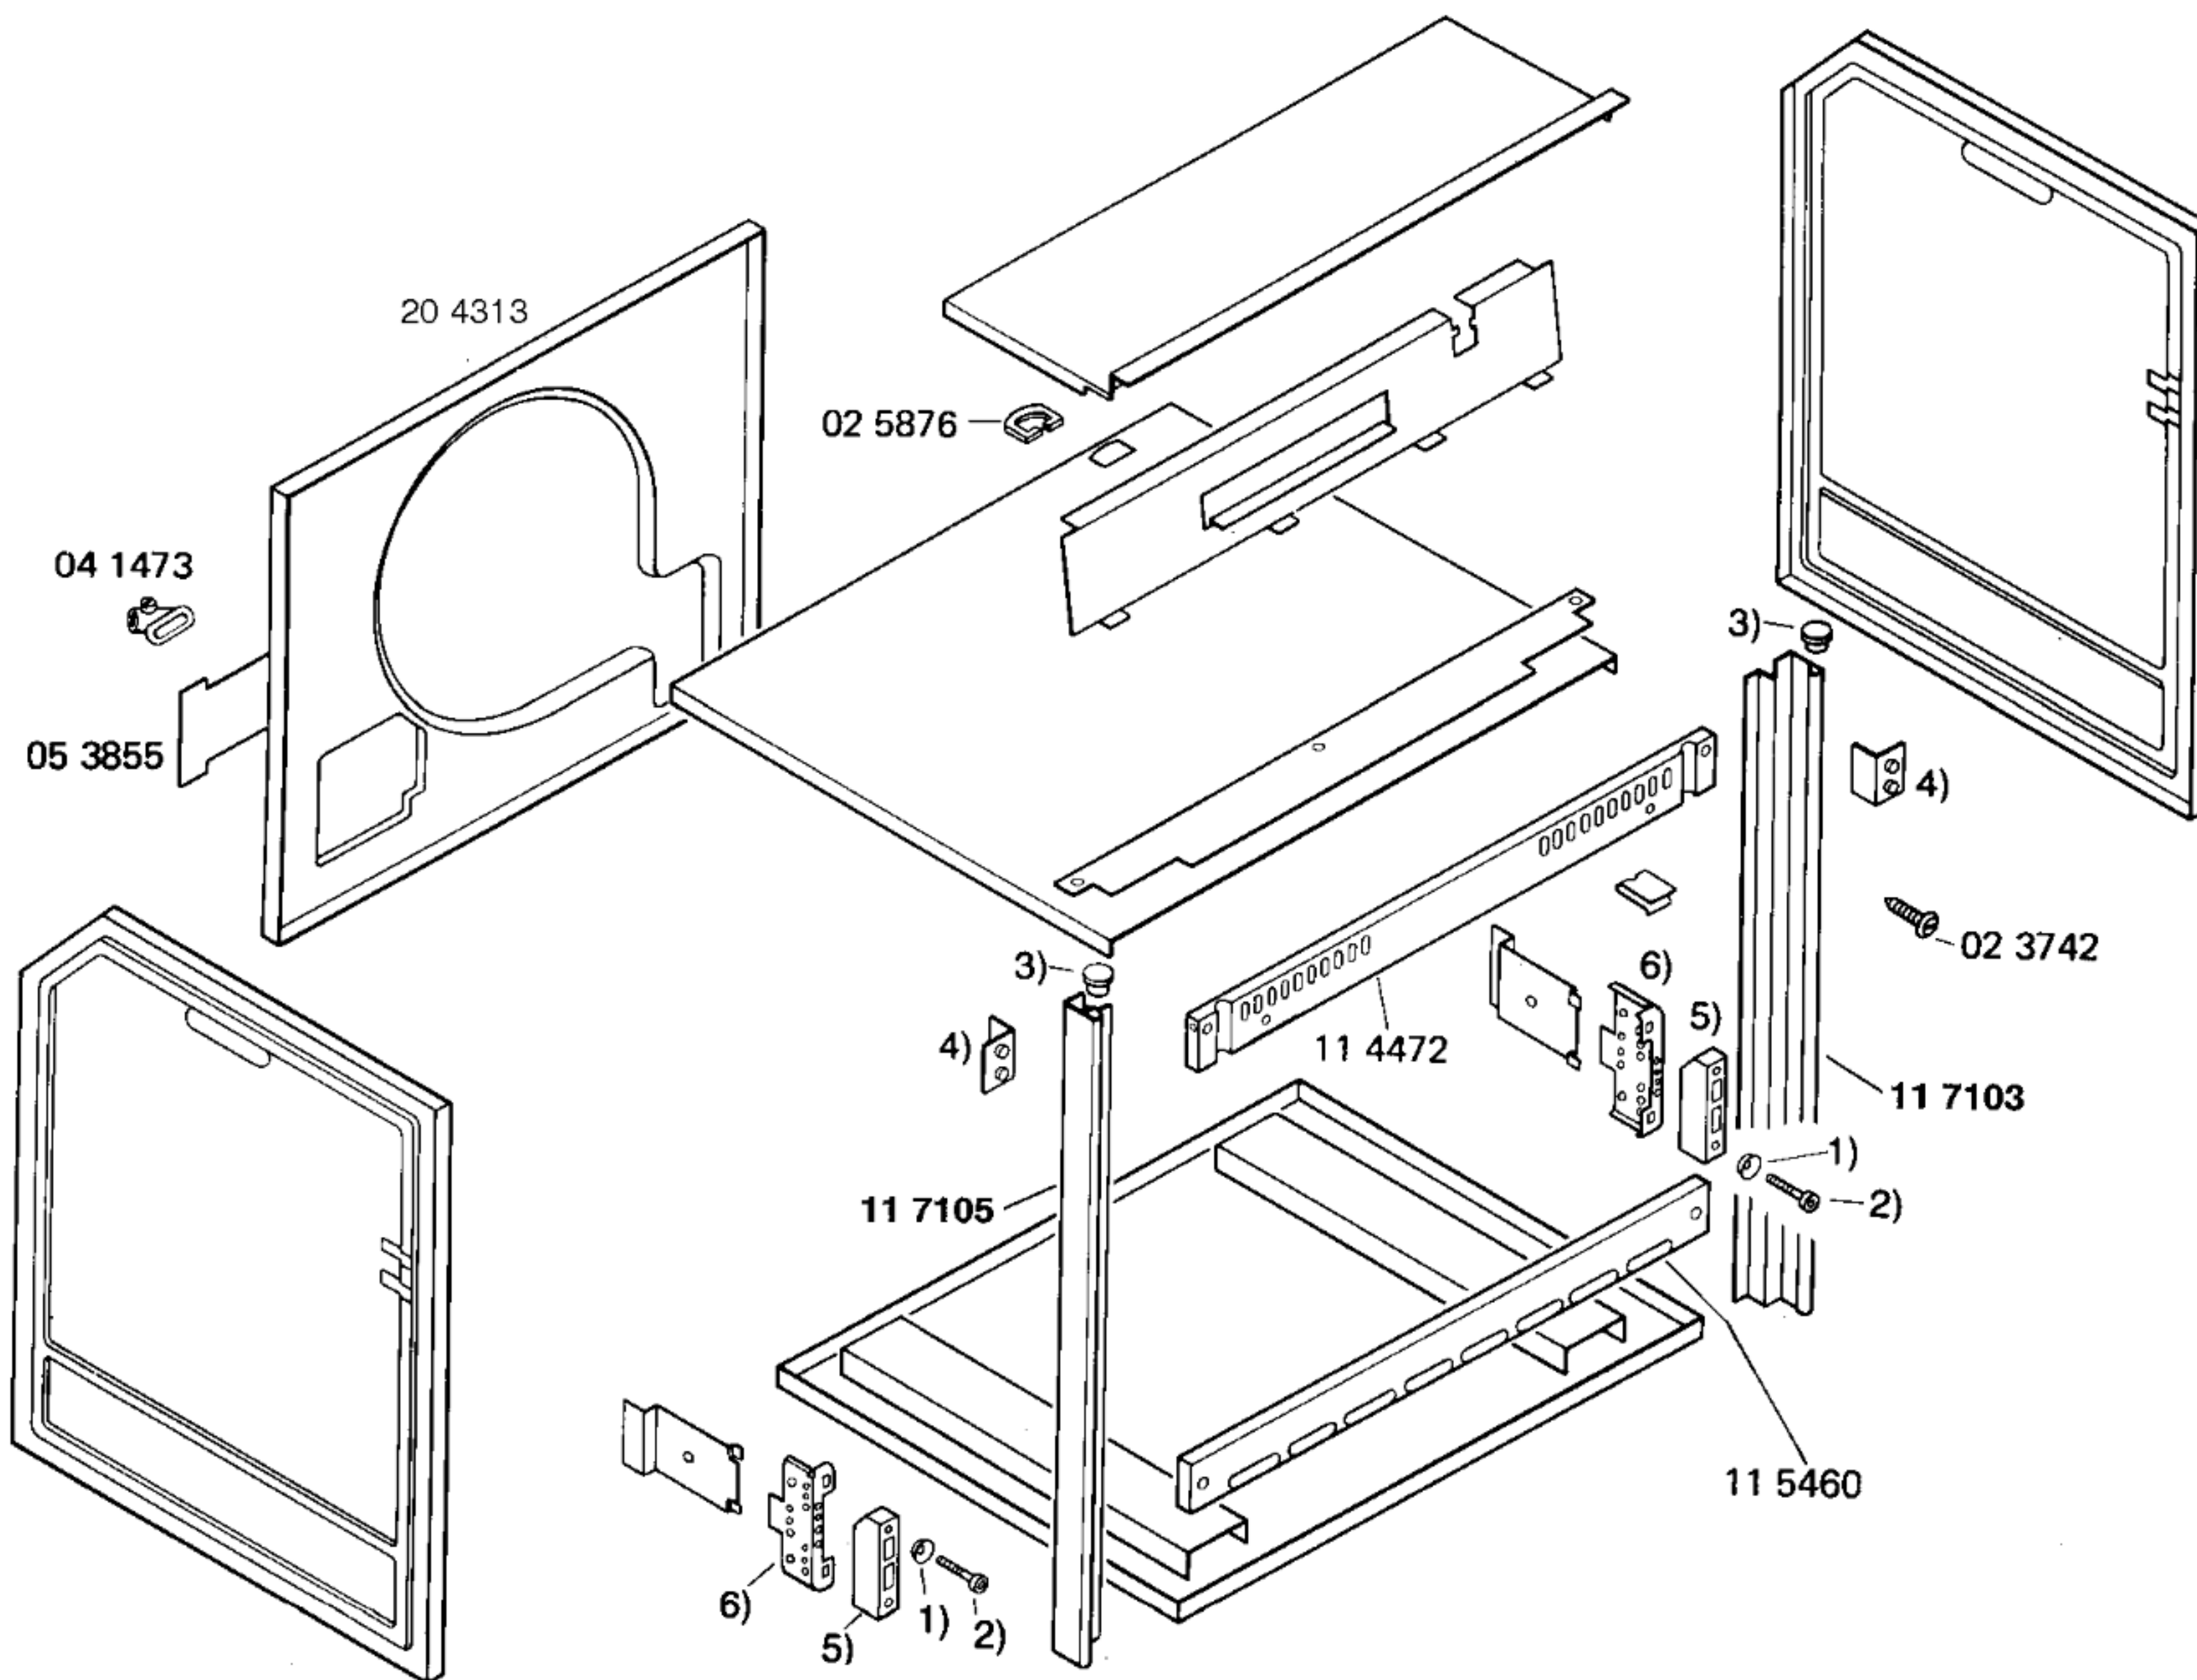


51 4896
Gebrauchsanweisung
(D)
514971
Tipps und Rezepte
(D)

- 1) 05 3176
- 2) 02 1947
- 3) 02 5992
- 4) 01 8981
- 5) 05 1477
- 6) 08 3566

Zubehör:


Bratpfanne
CZ 2010Backblech–Alu
CZ 2012


Backblech emailliert
CZ 2016

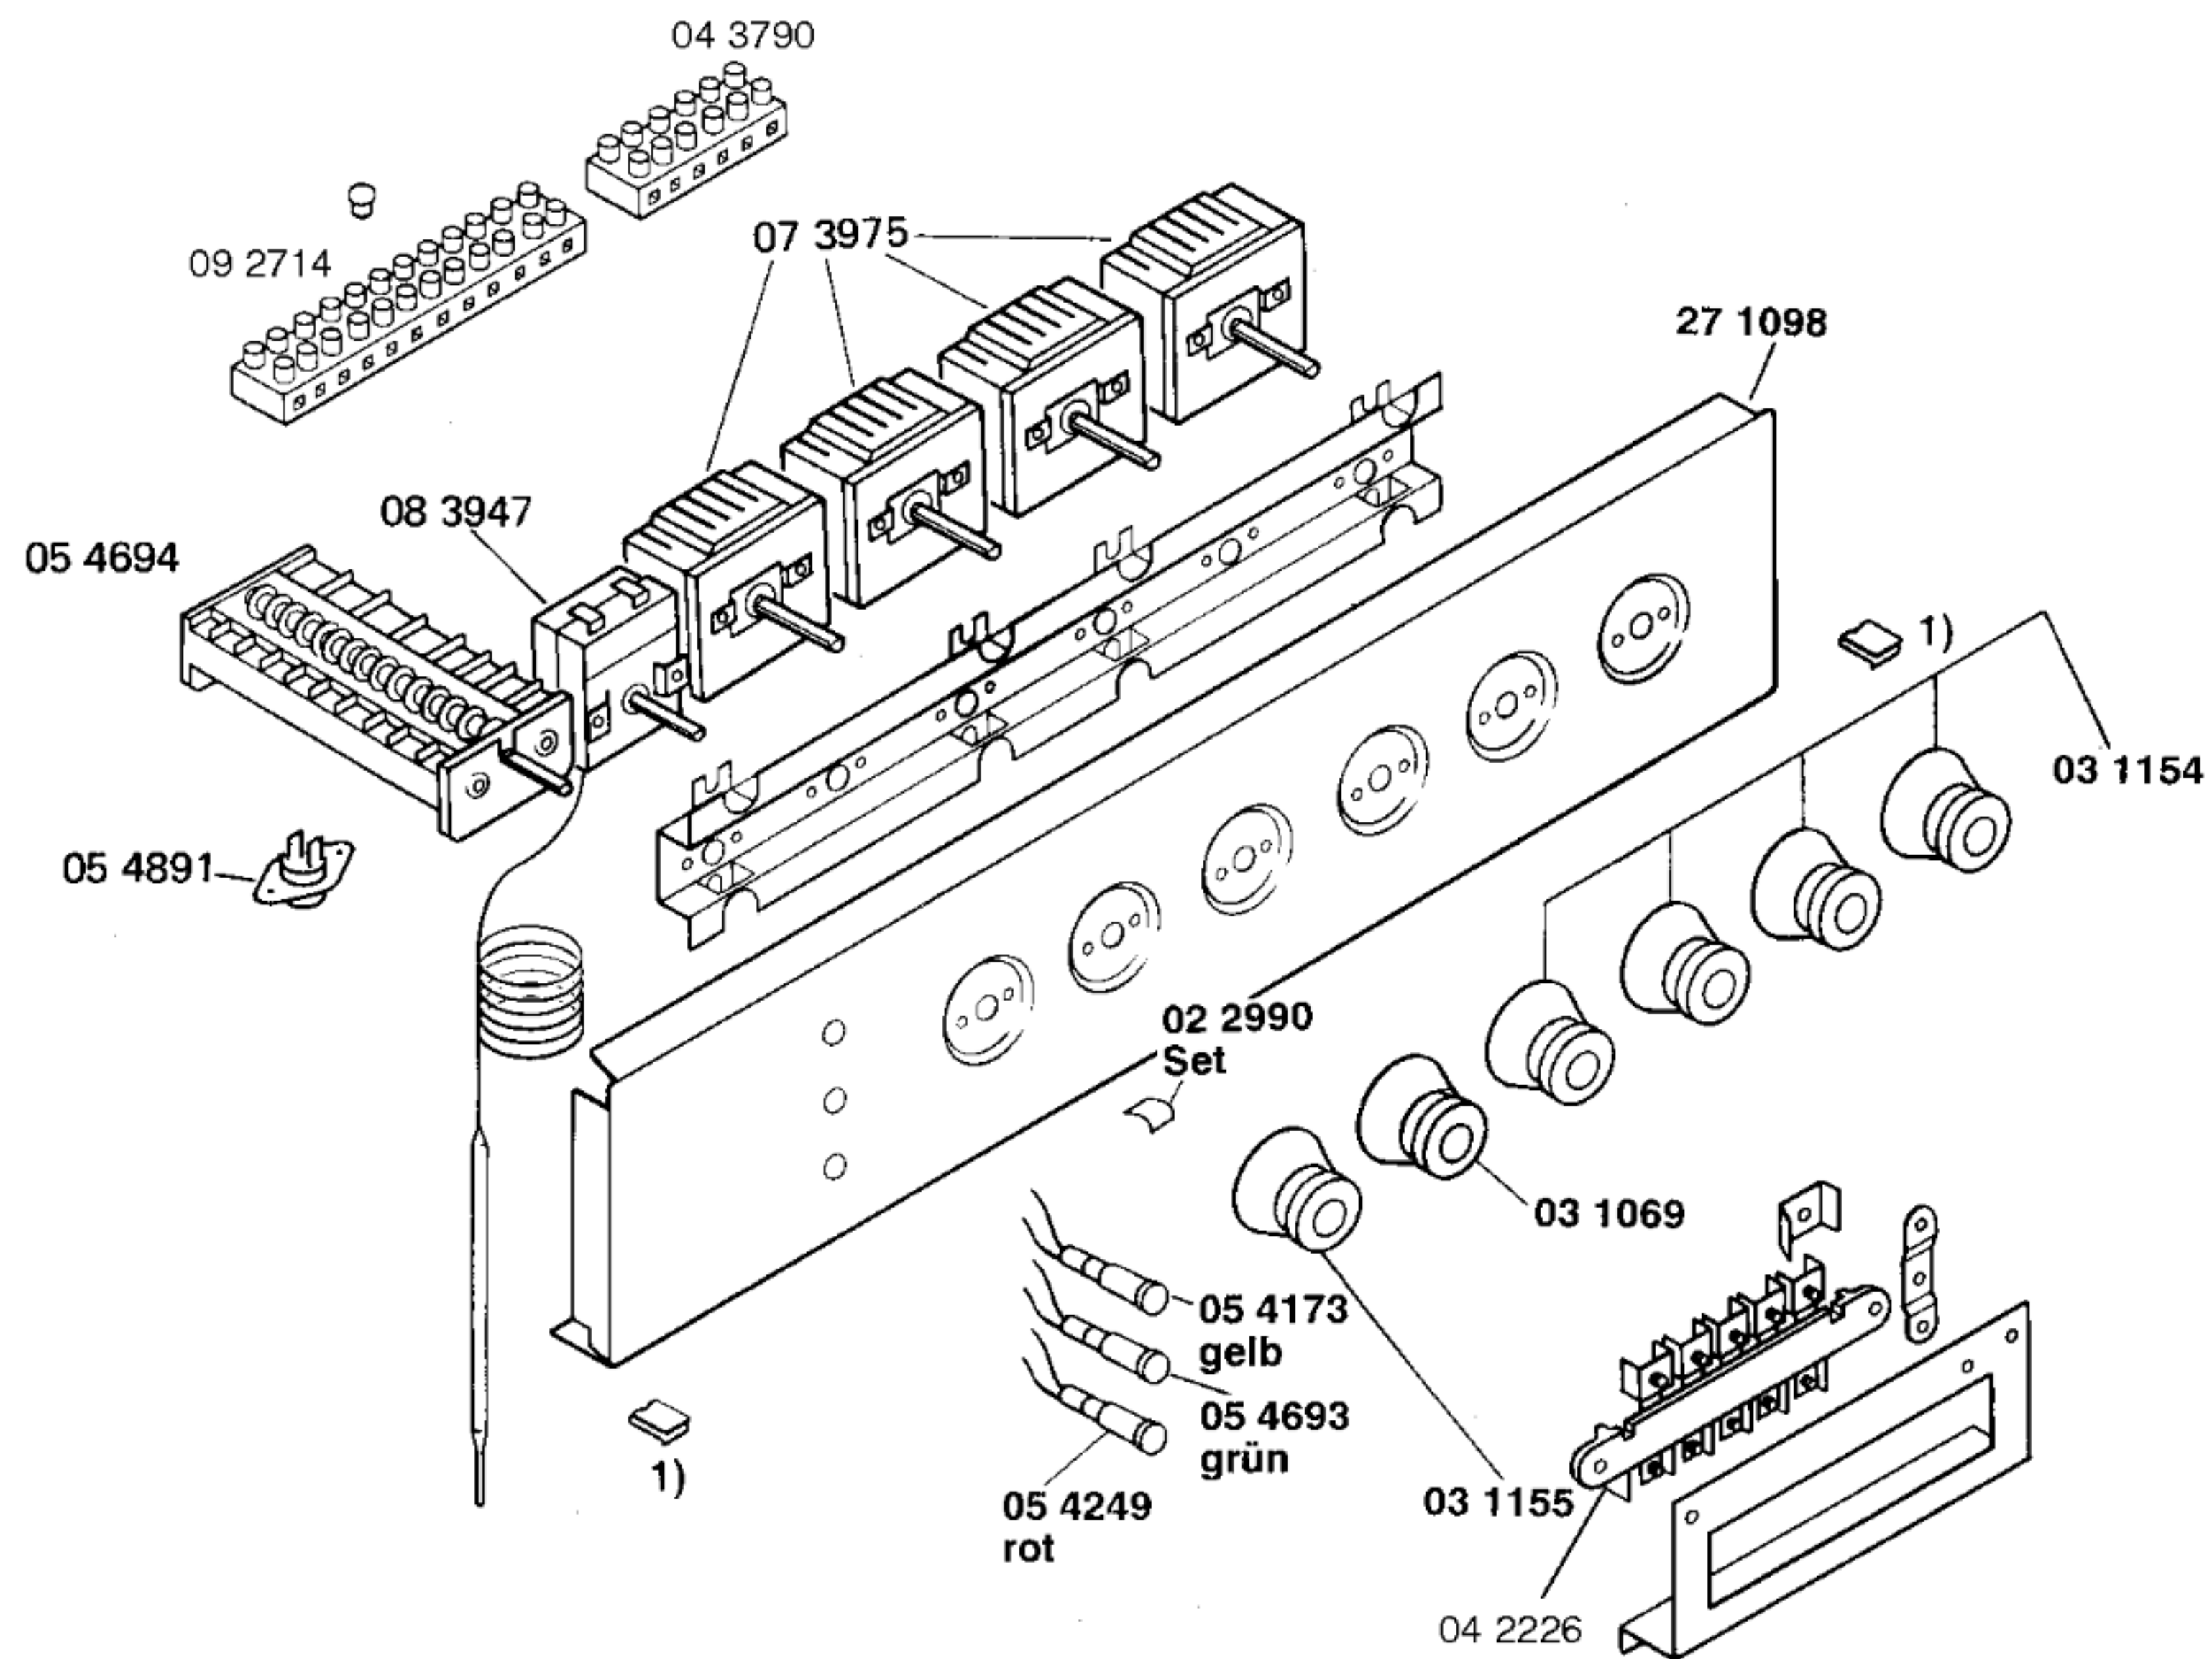


1) 02 3799

1) 02 2695

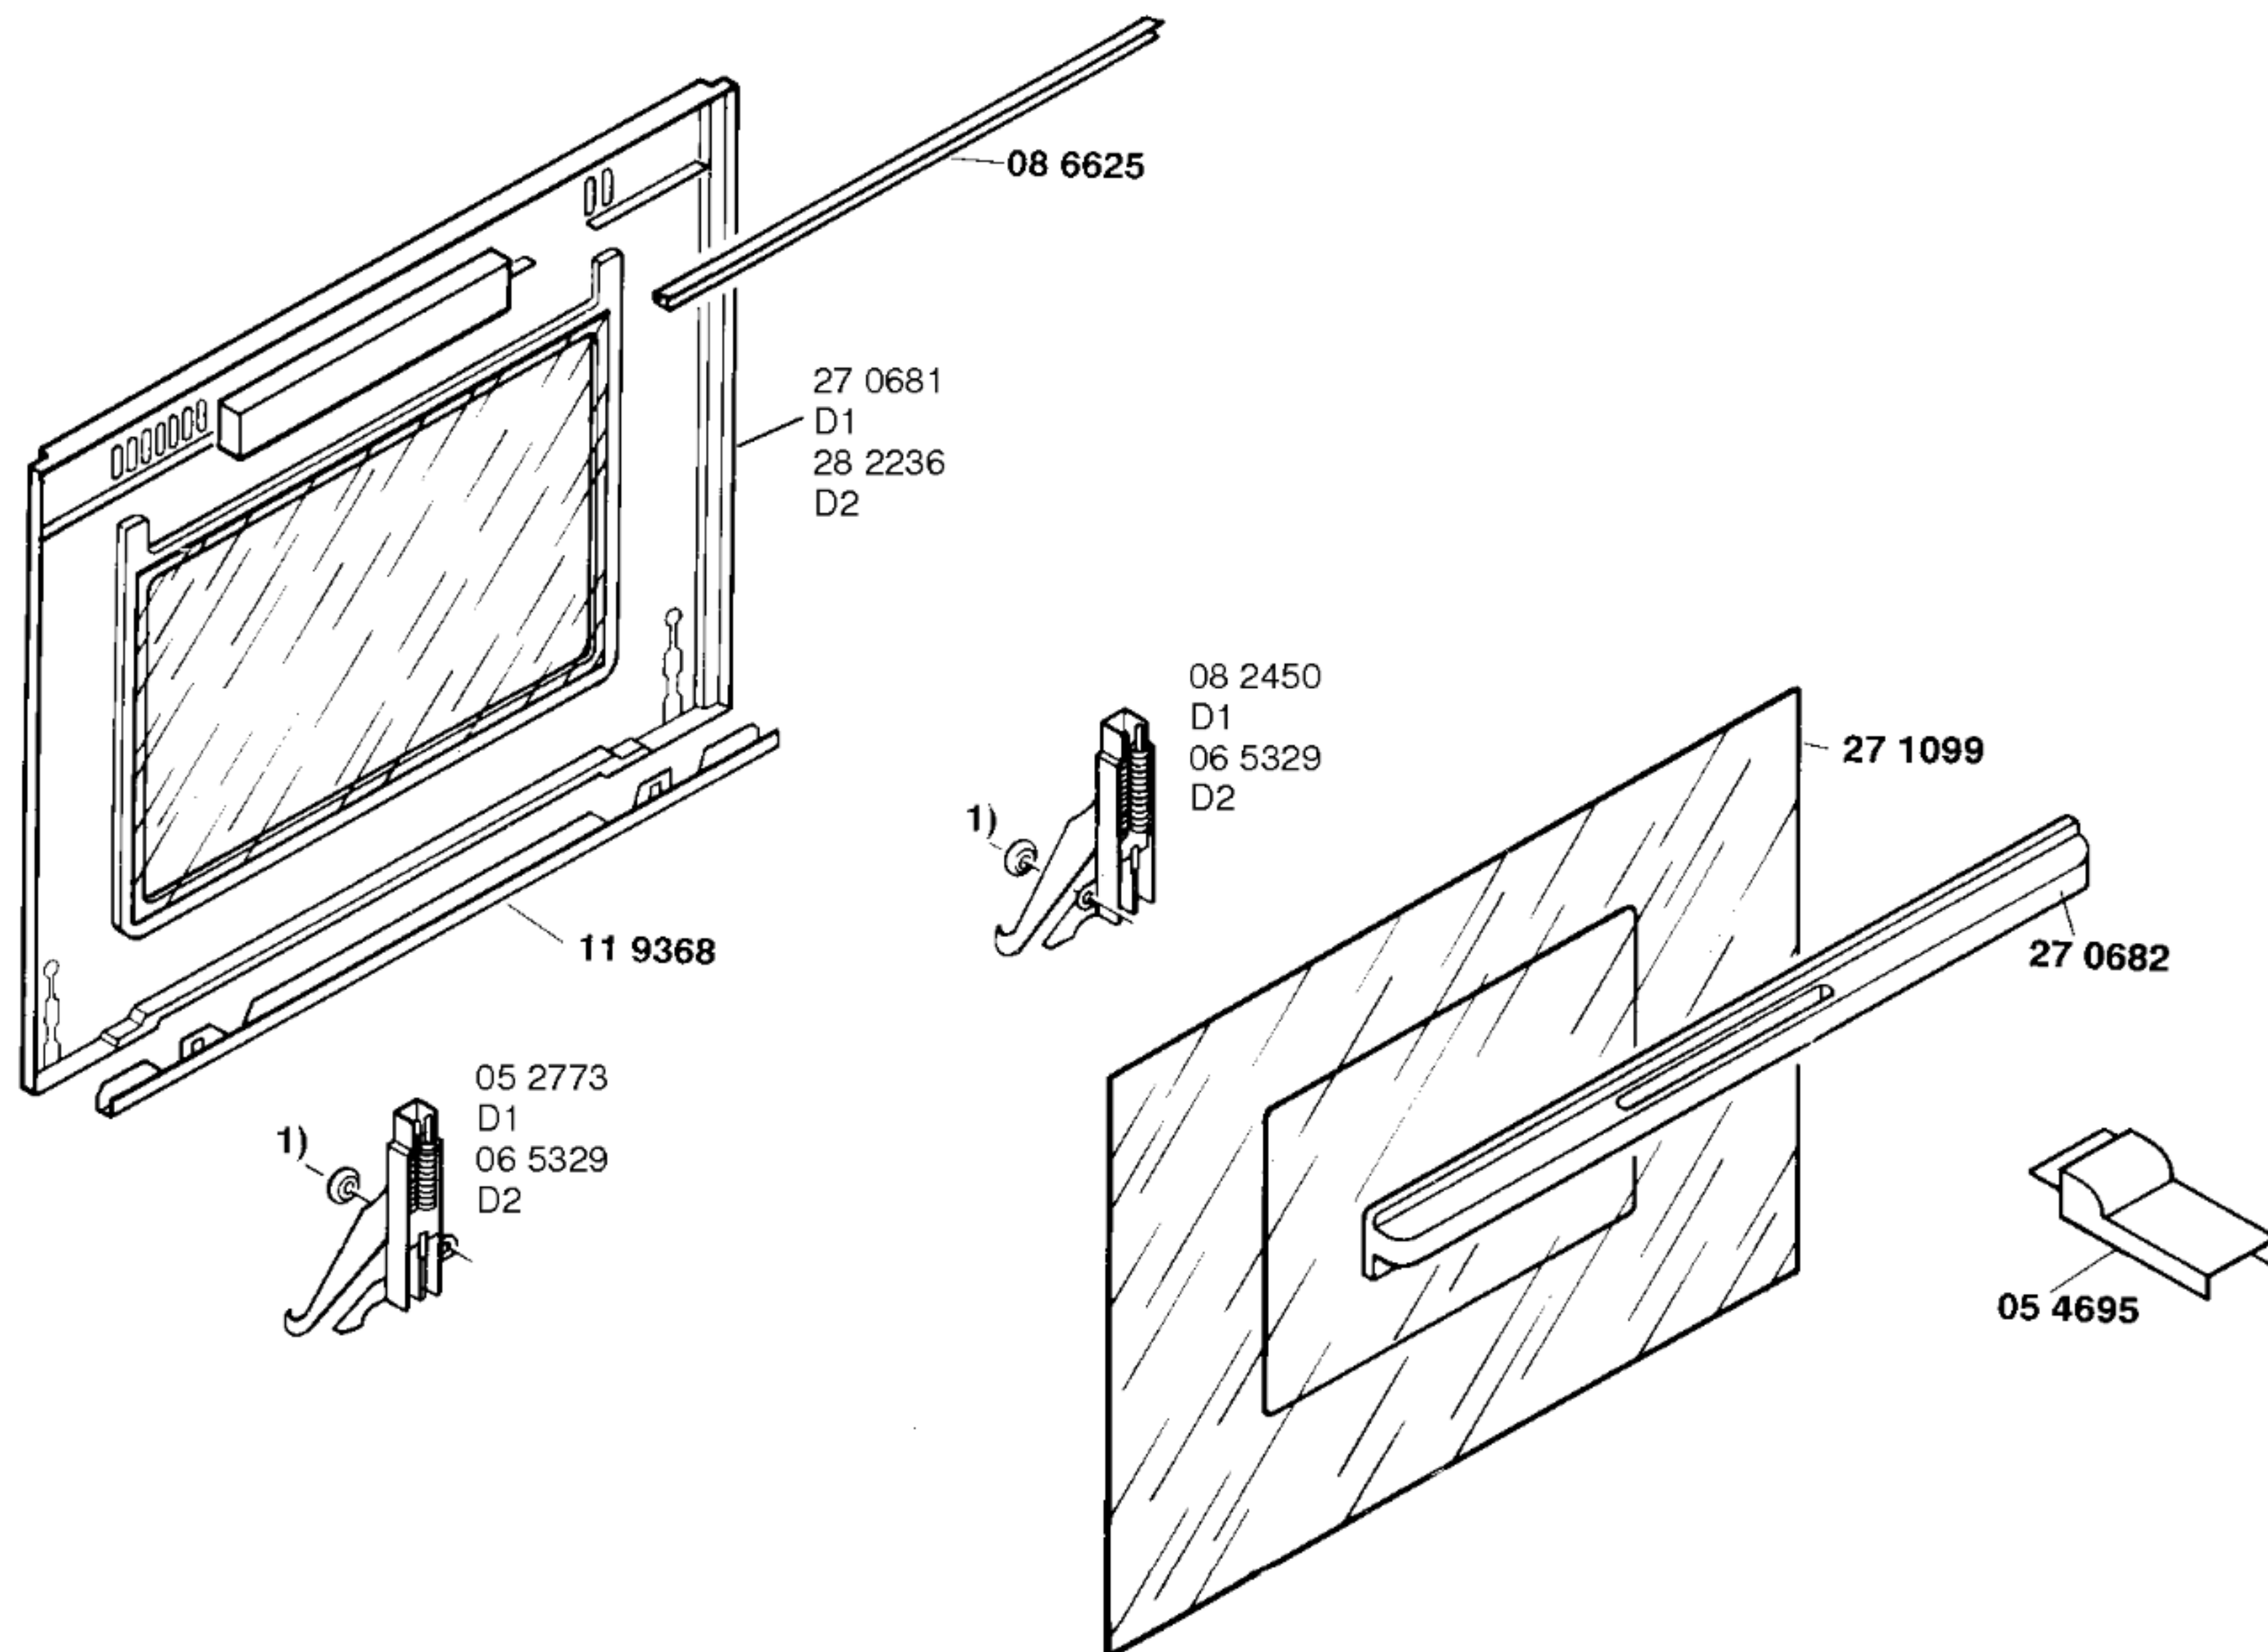

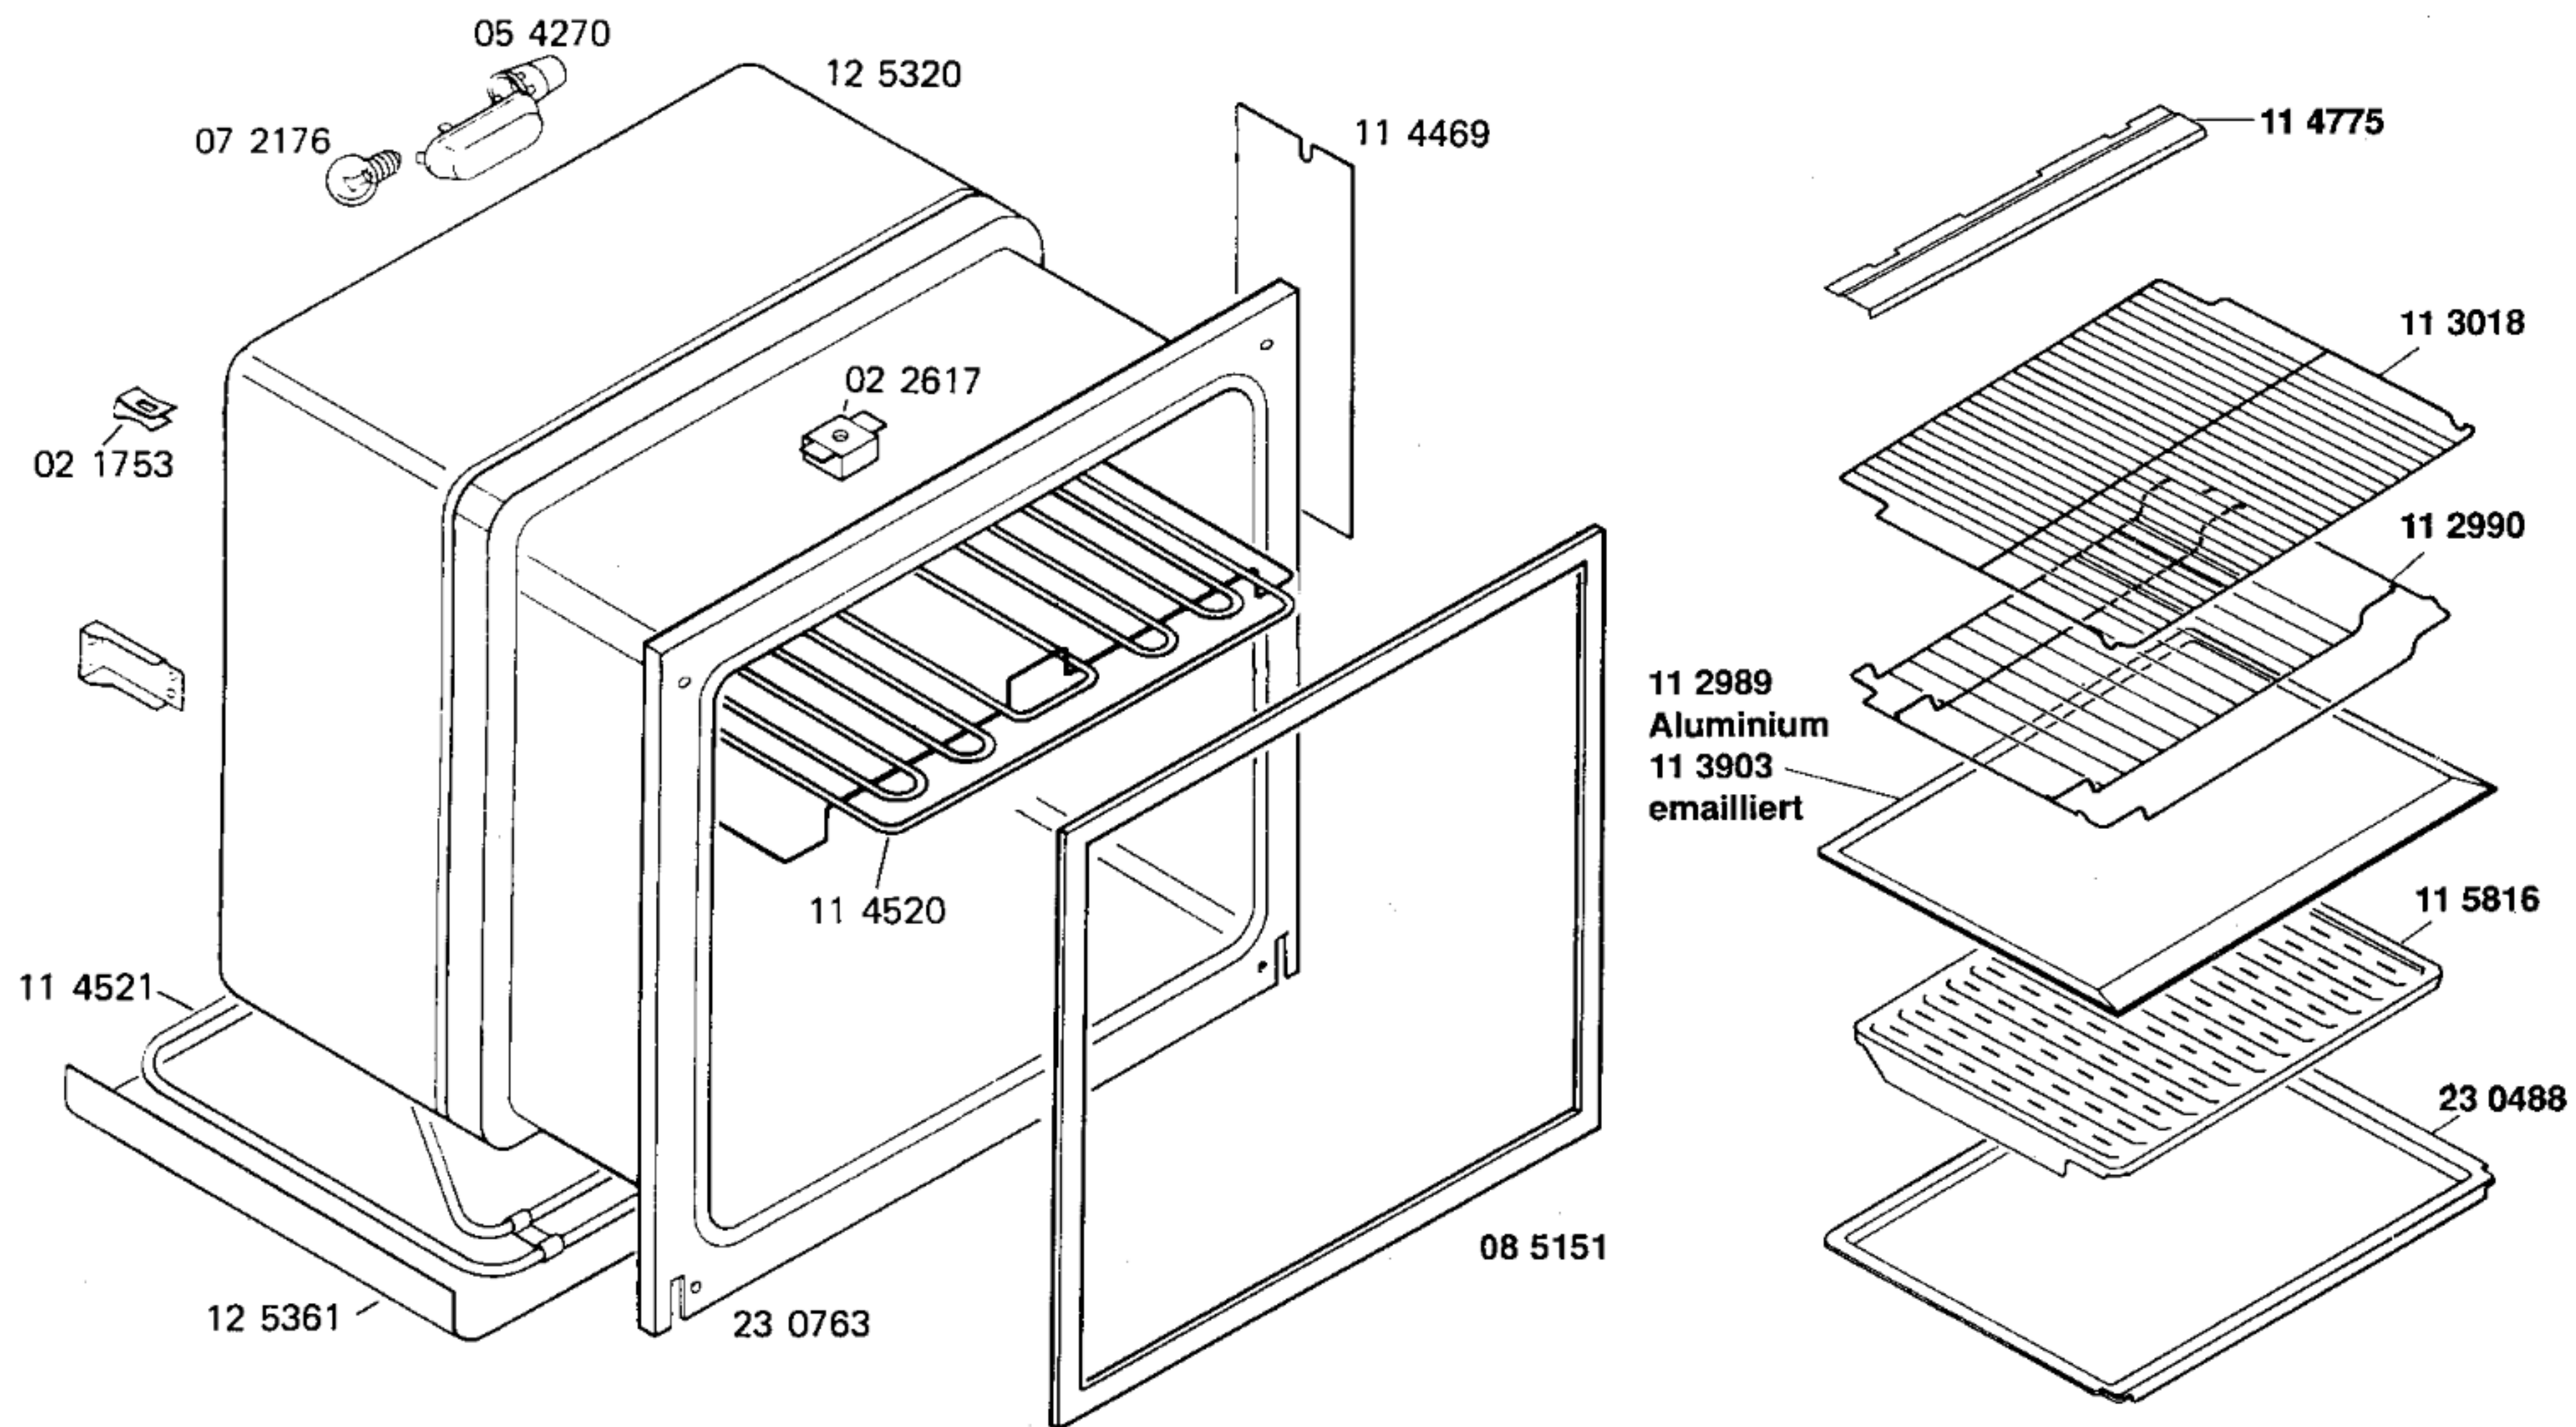

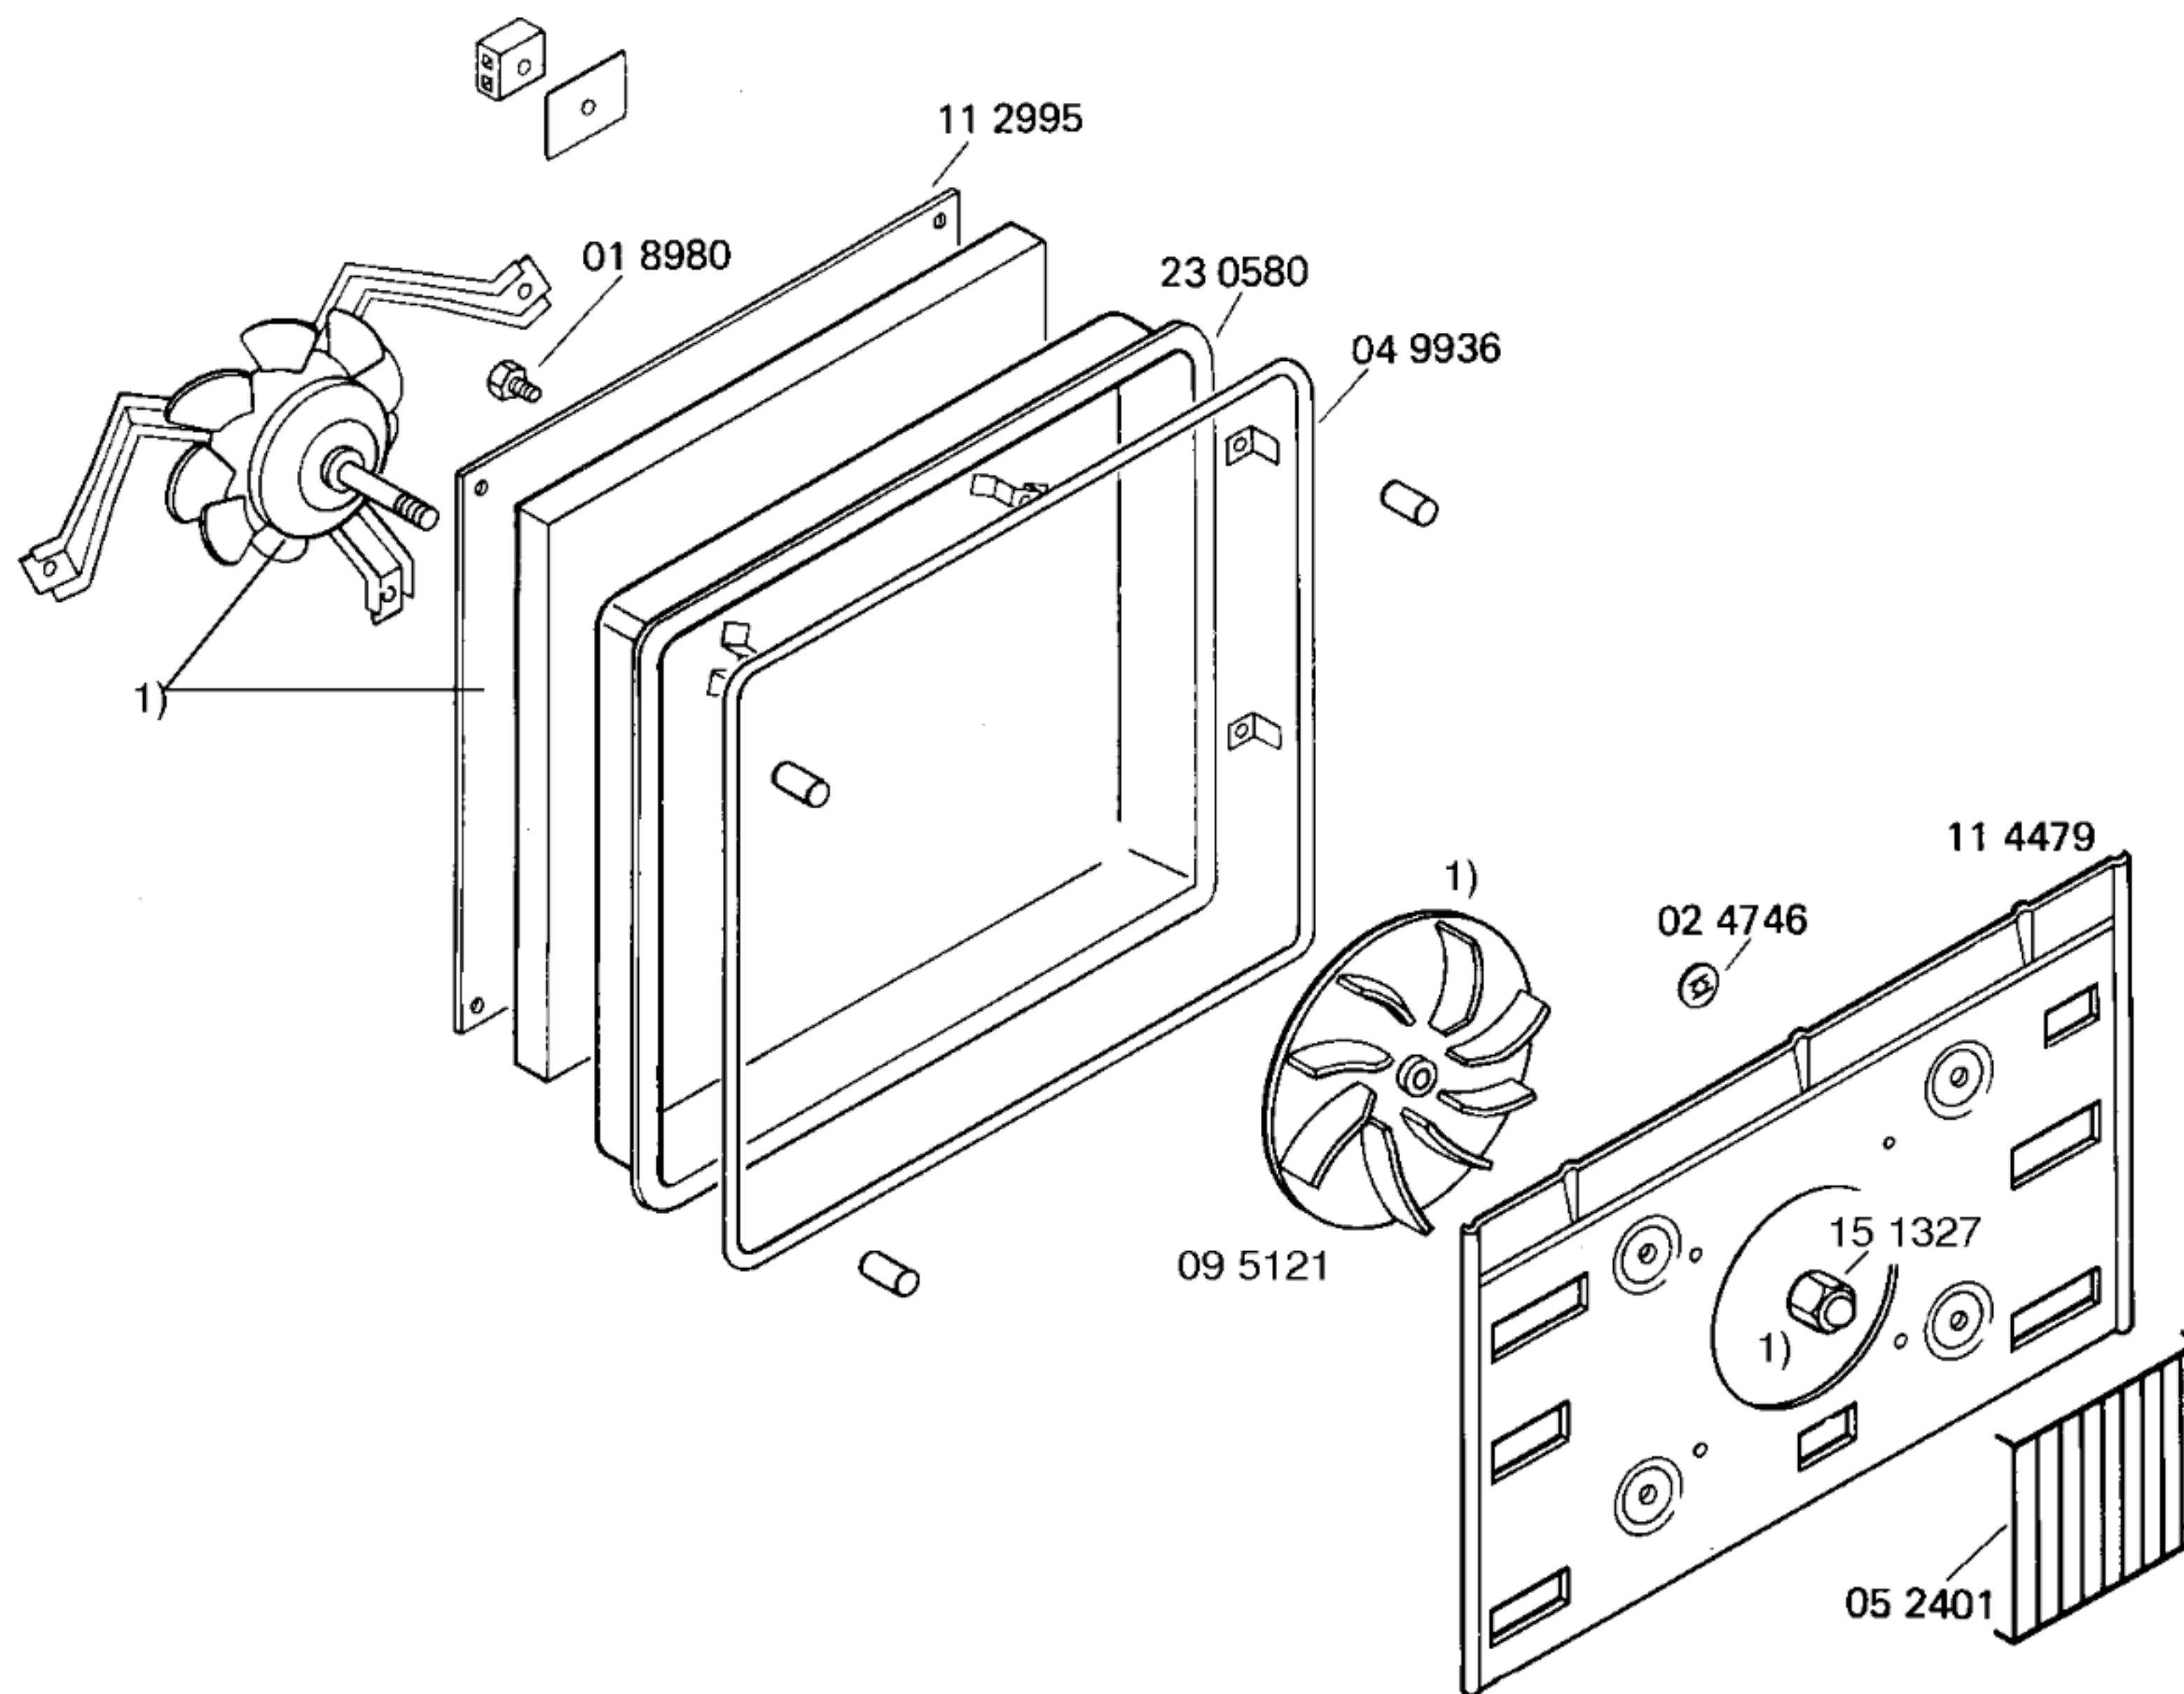

1) 09 5120
Set