 


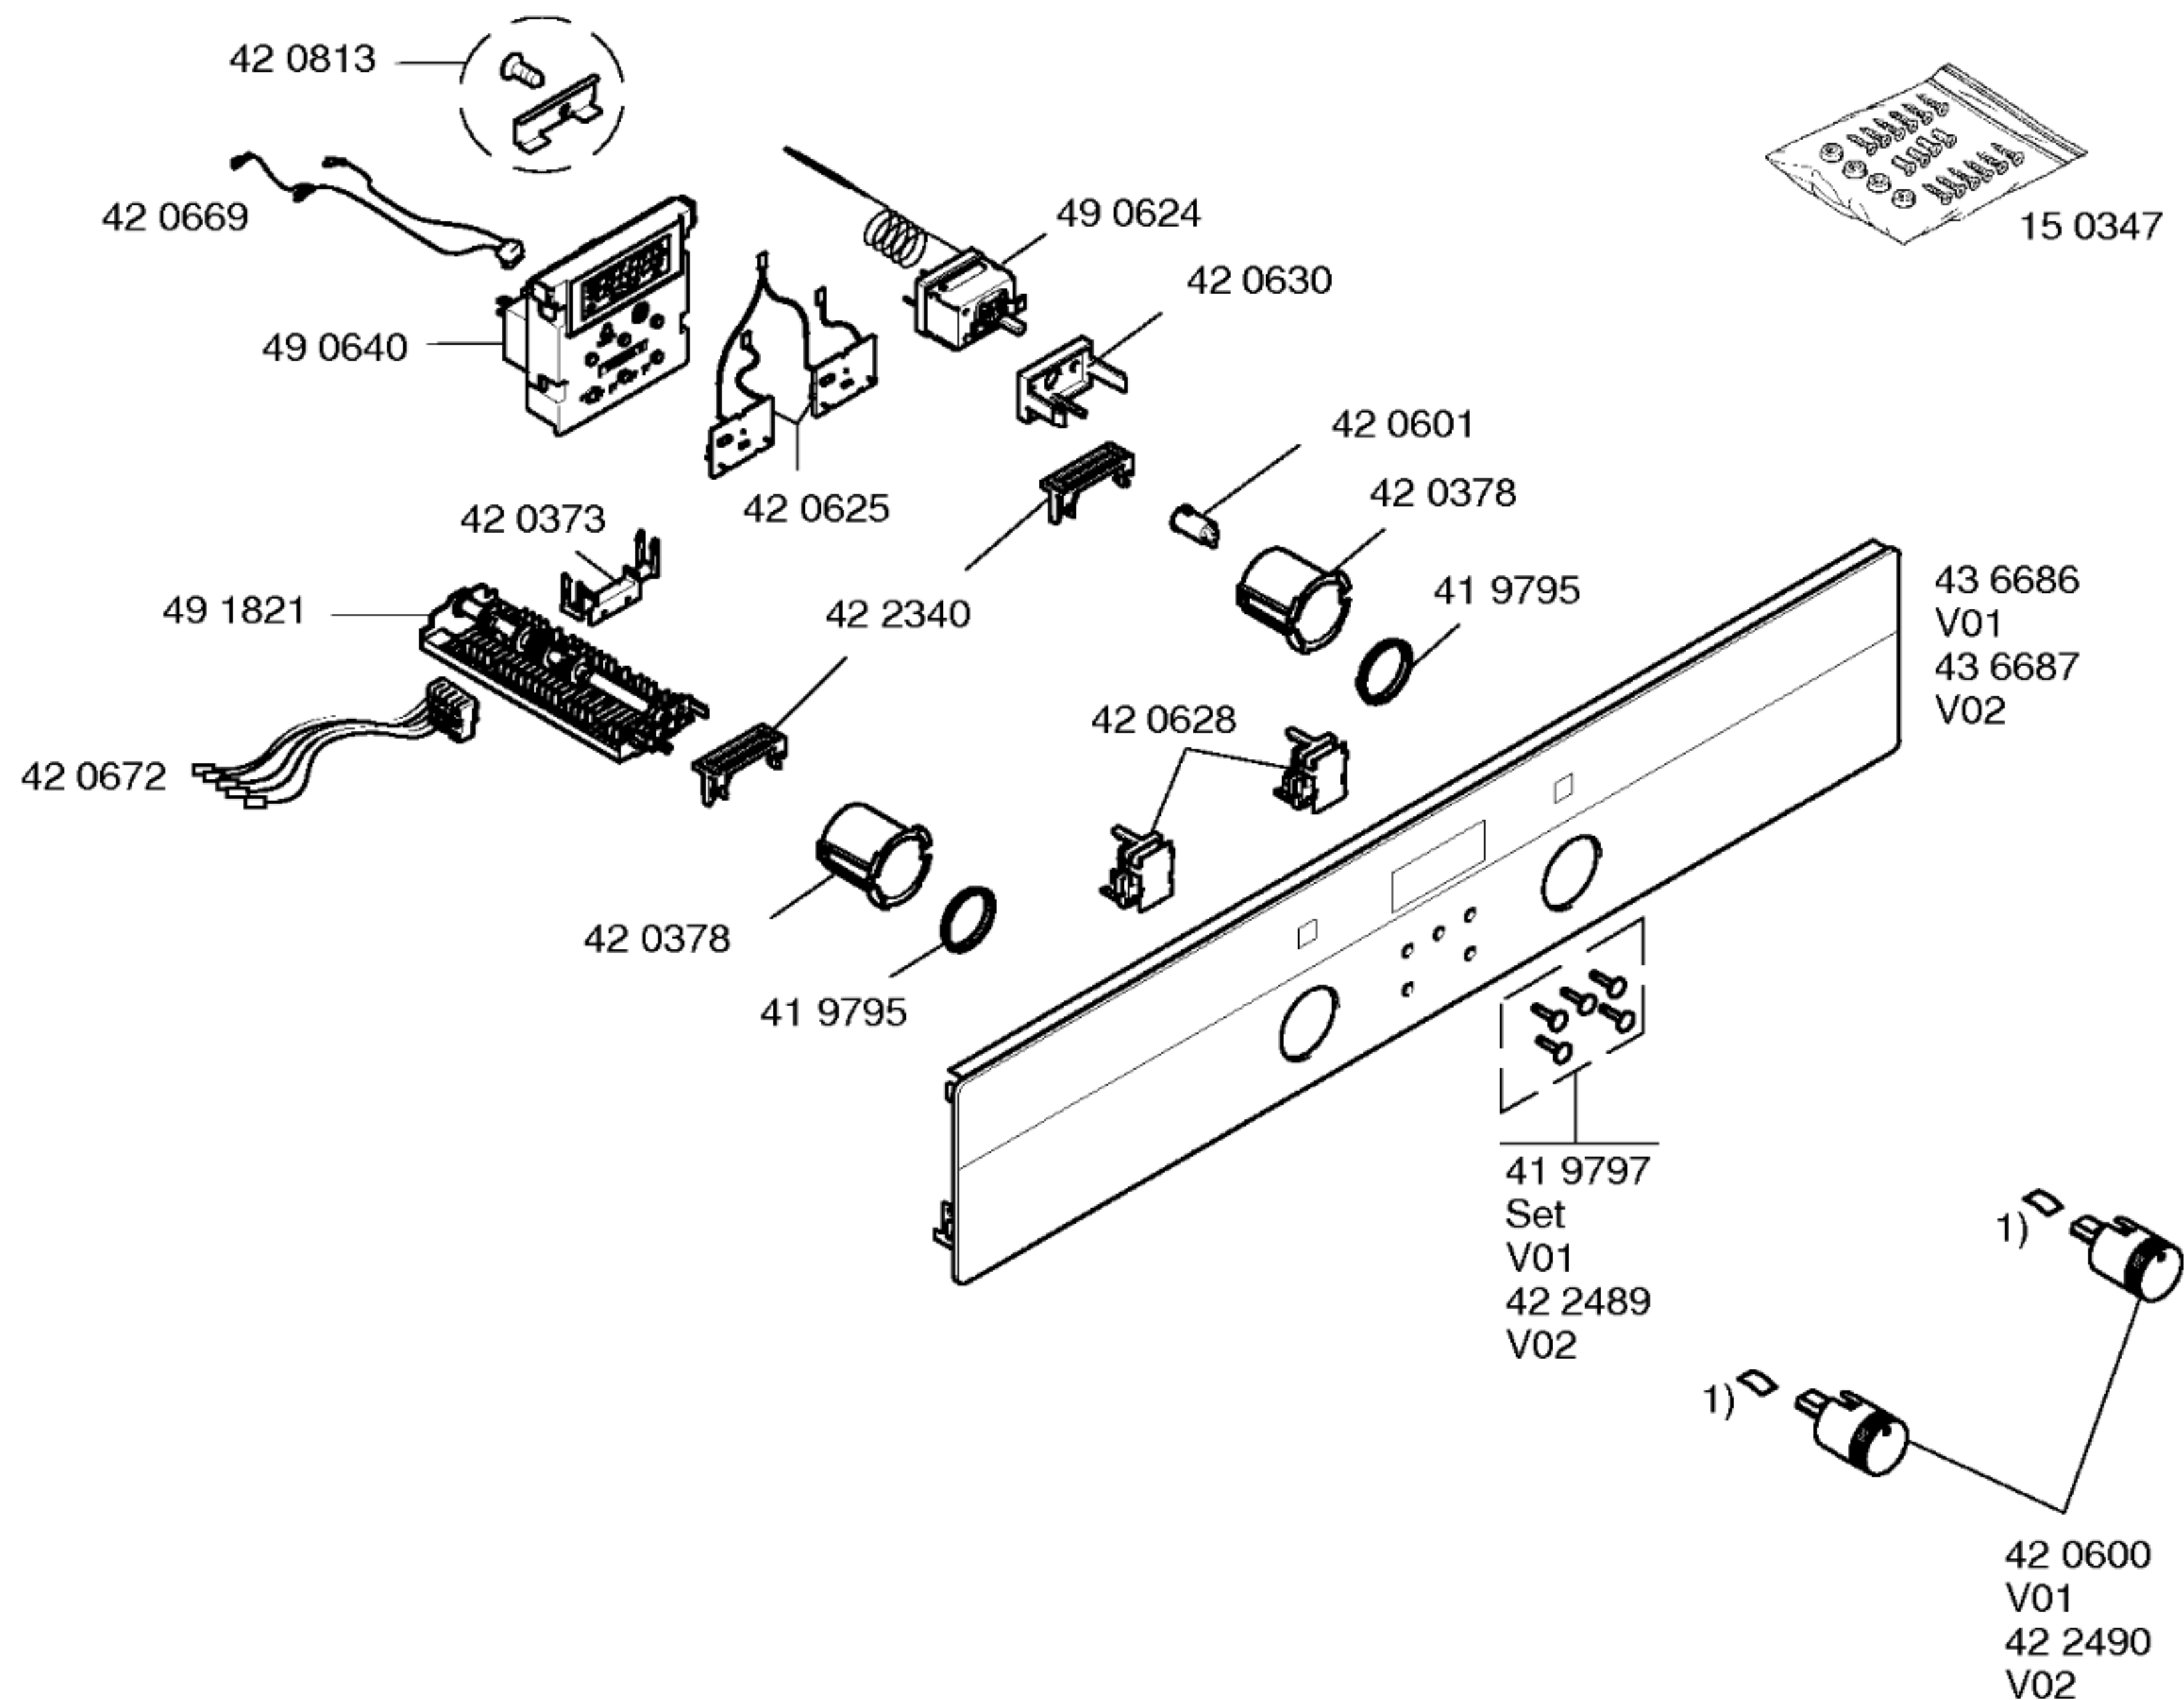


Gebrauchsanweisung
58 7561 (en)

Montageanweisung
58 6500
(de,en,fr,it,nl,da,sv,no
fi,es,pt,el,cs,pl,tr,ru)


Zubehoer:
HZ331000
Backblech emailliert
HZ331010
Backblech Antihft
HZ332000
Universalpfanne
HZ332010
Universalpfanne
Antihft
HZ333000
Profipfanne
HZ333001
Deckel f. Profipfanne
HZ334000
Kombirost
HZ324000
Einlegerost
HZ325000
Grillblech 2-teilig
HZ336000
Glaspfanne
HZ26001
Backform
Auslaufsicher
HZ317000
Pizzaform

 
1) 01 4254



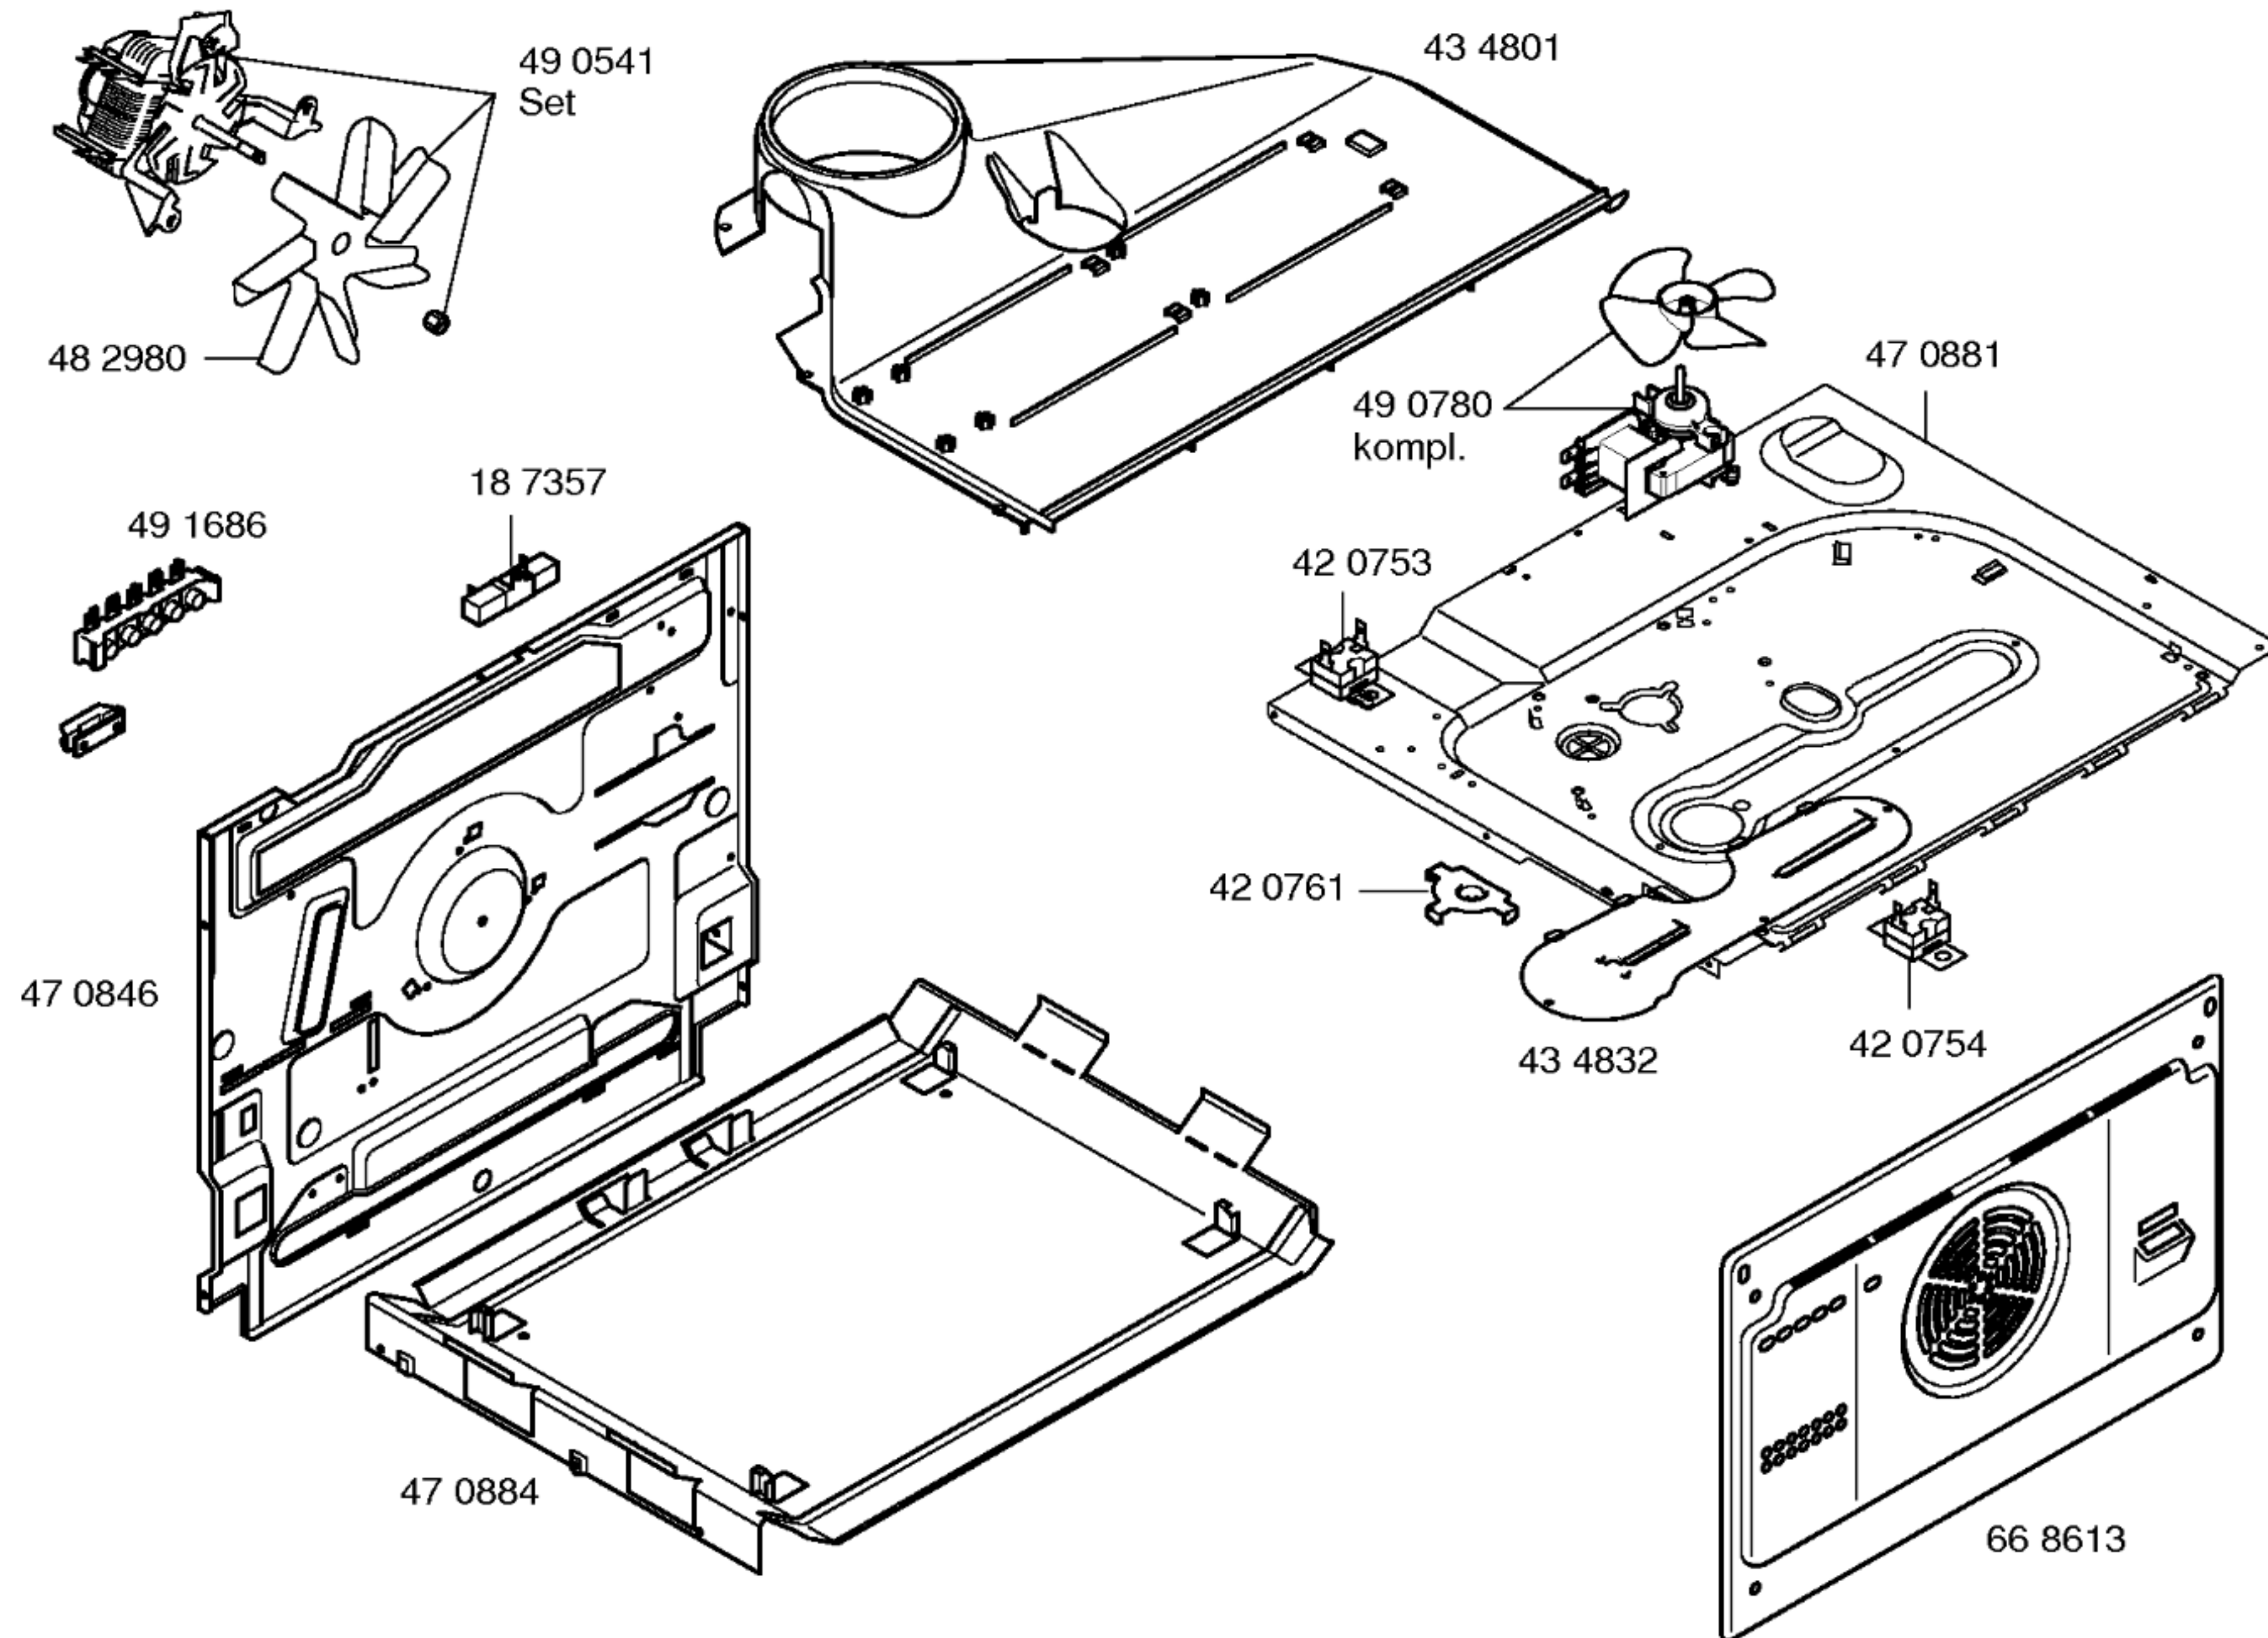

  Zubehoer:
HZ9150
Glasbraeter
HZ26000
Metallbraeter
HZ338200
Teleskopauszug
2-fach
HZ338300
Teleskopauszug
3-fach
HZ338305
Teleskop-Vollauszug
3-fach
HZ390800
breiter Braeter

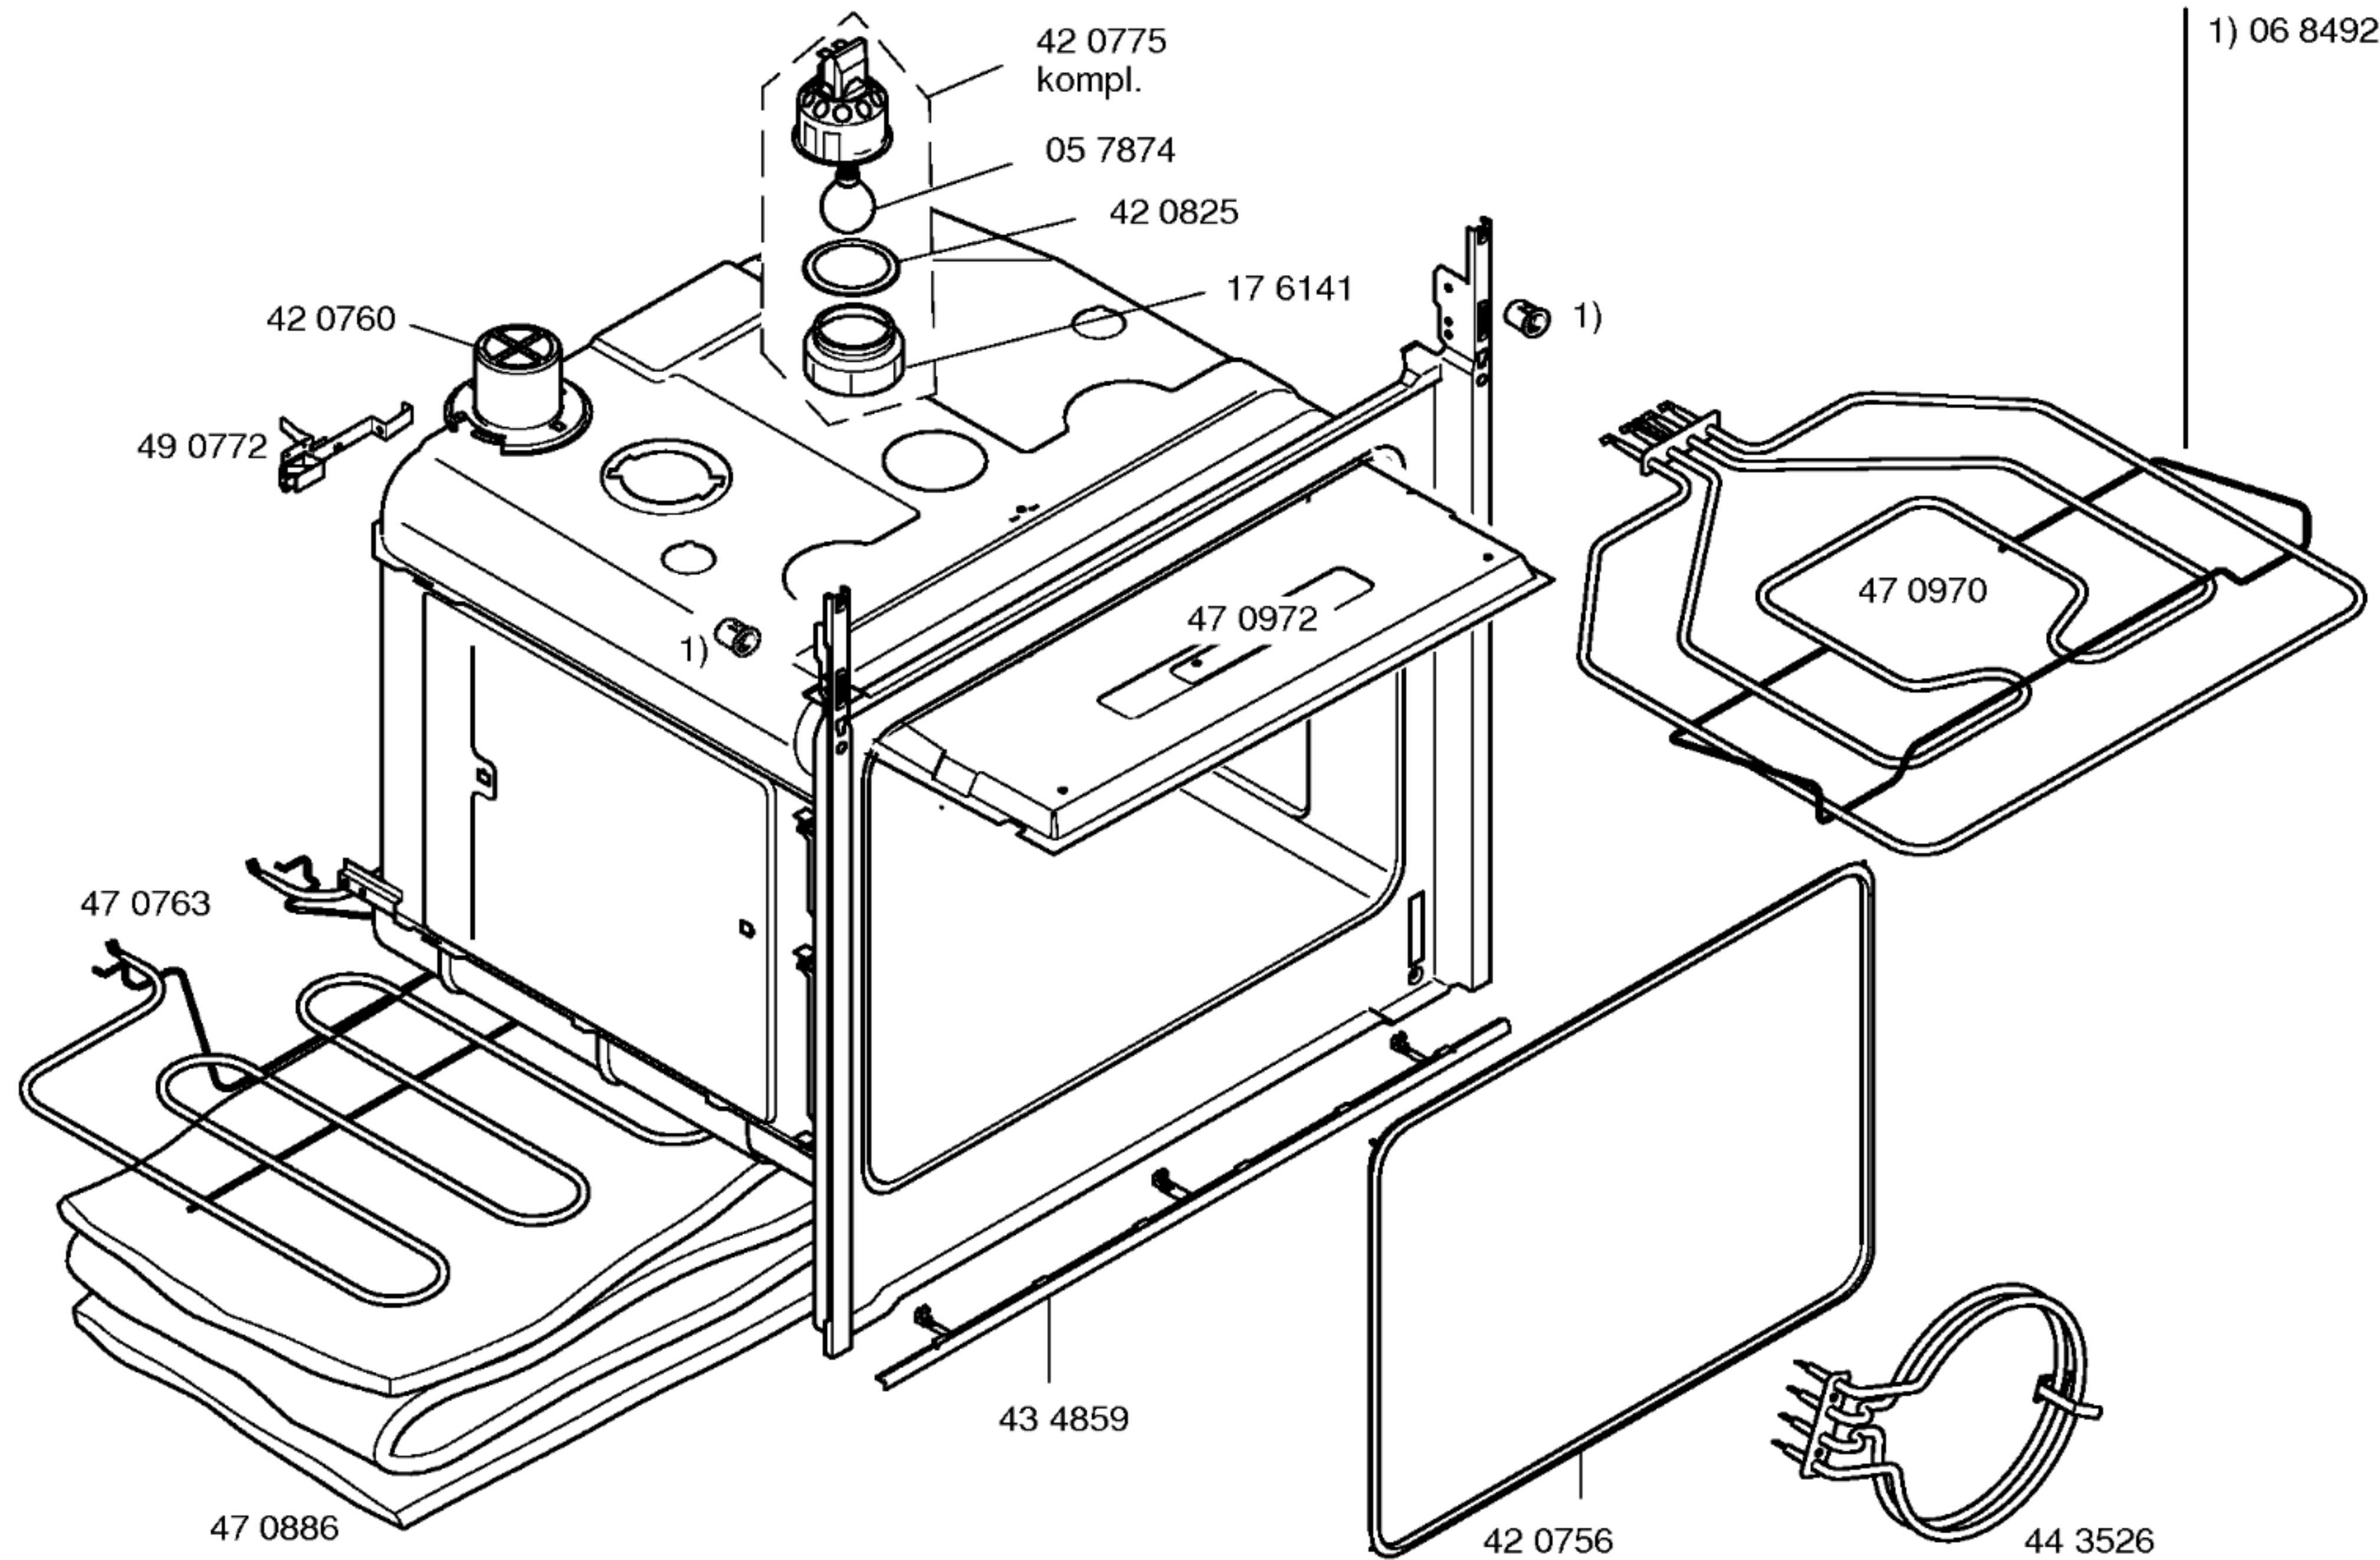

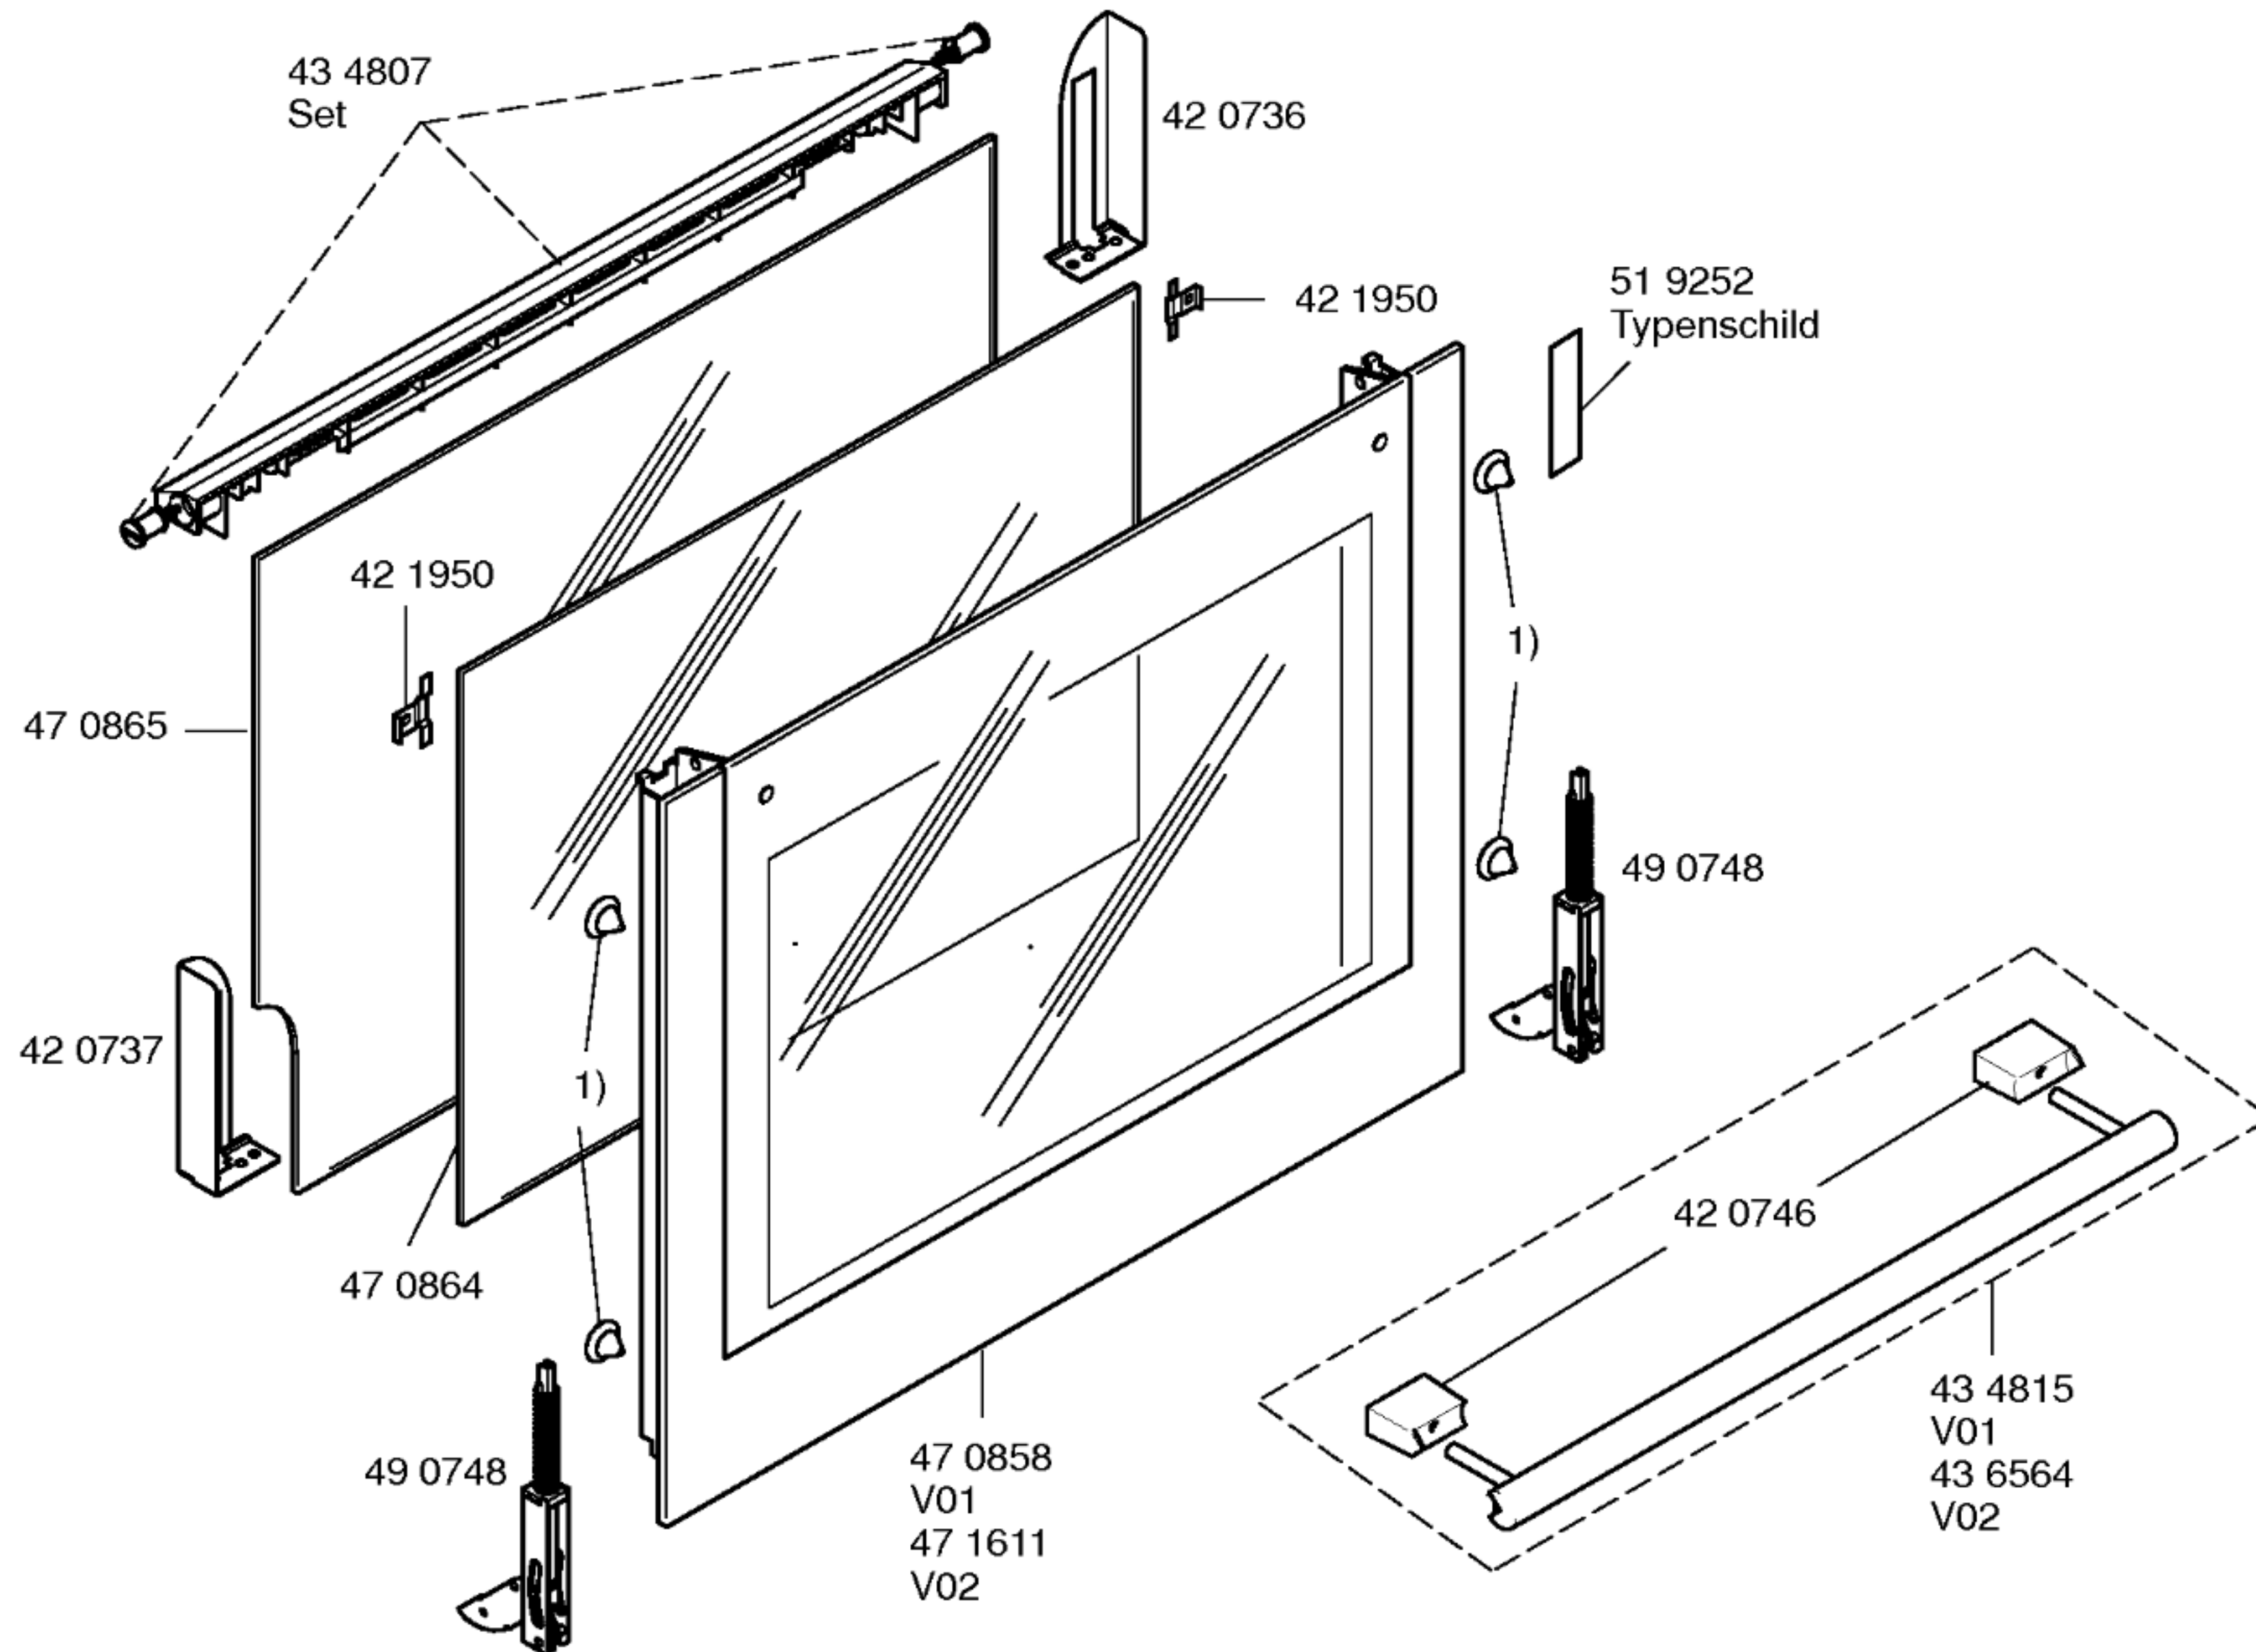

1) 42 0735

