




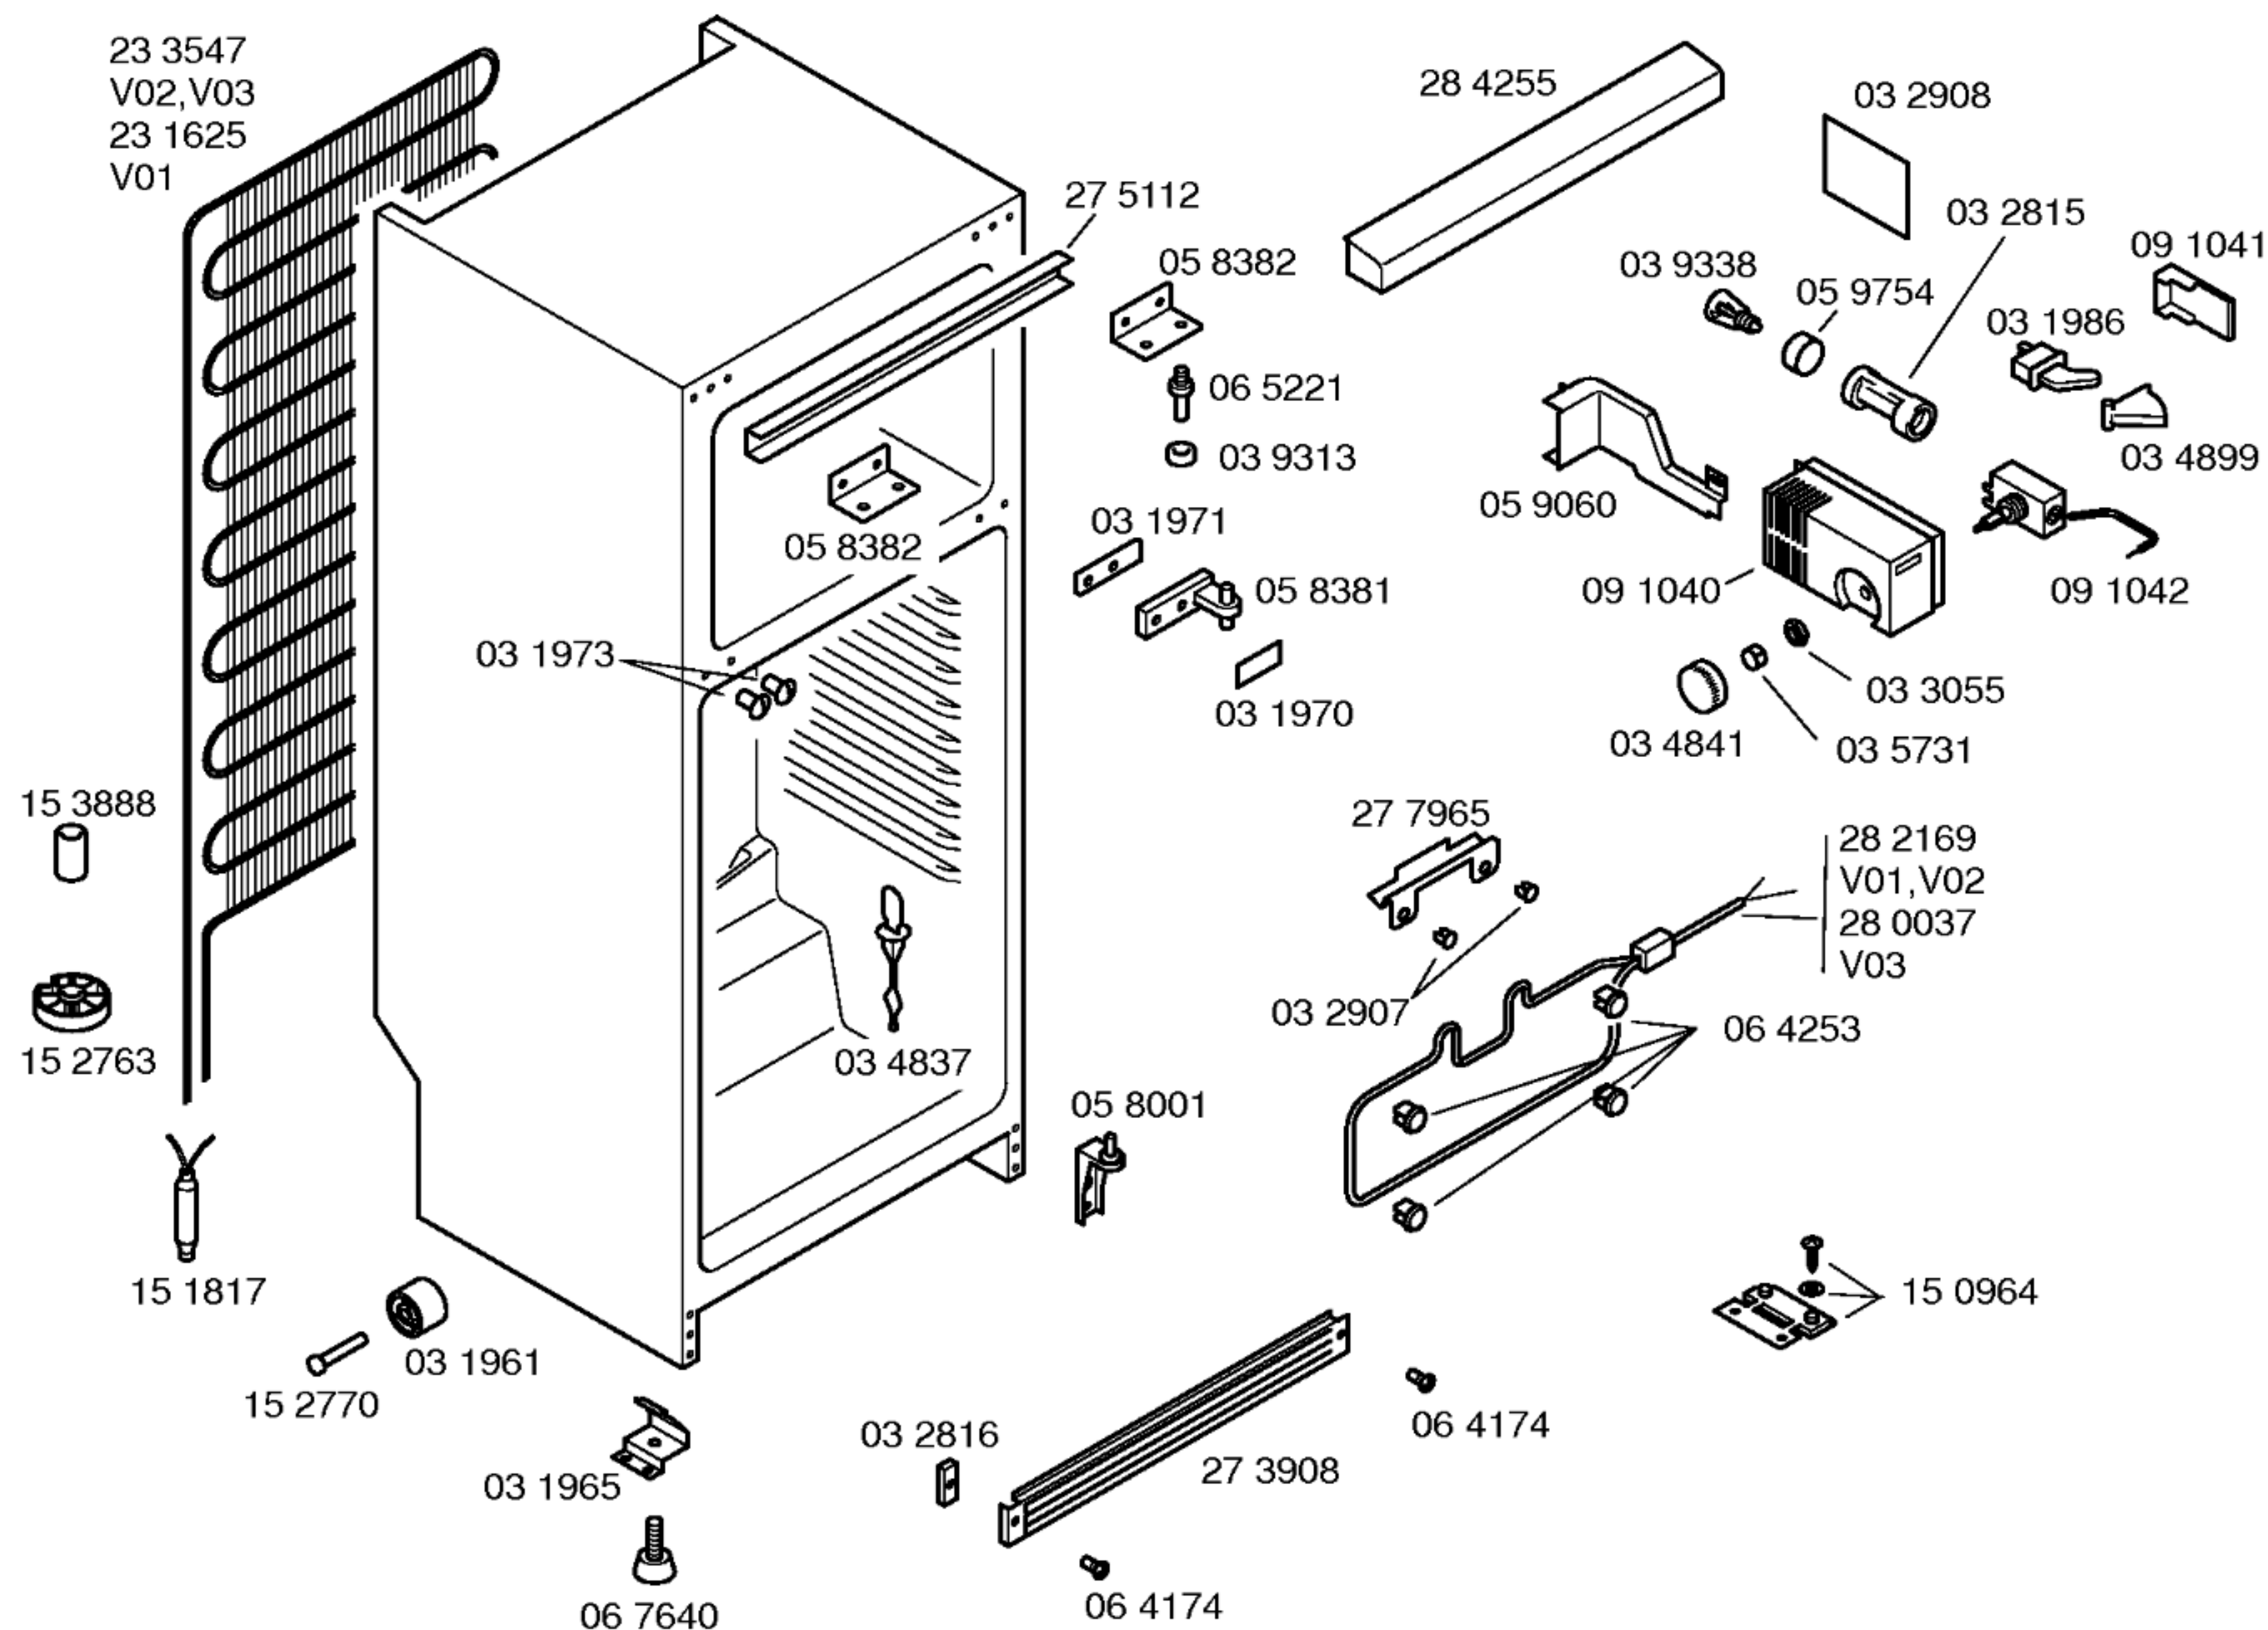

Libro de instrucciones
51 6294
(E, P, GB, F, NL, GR)

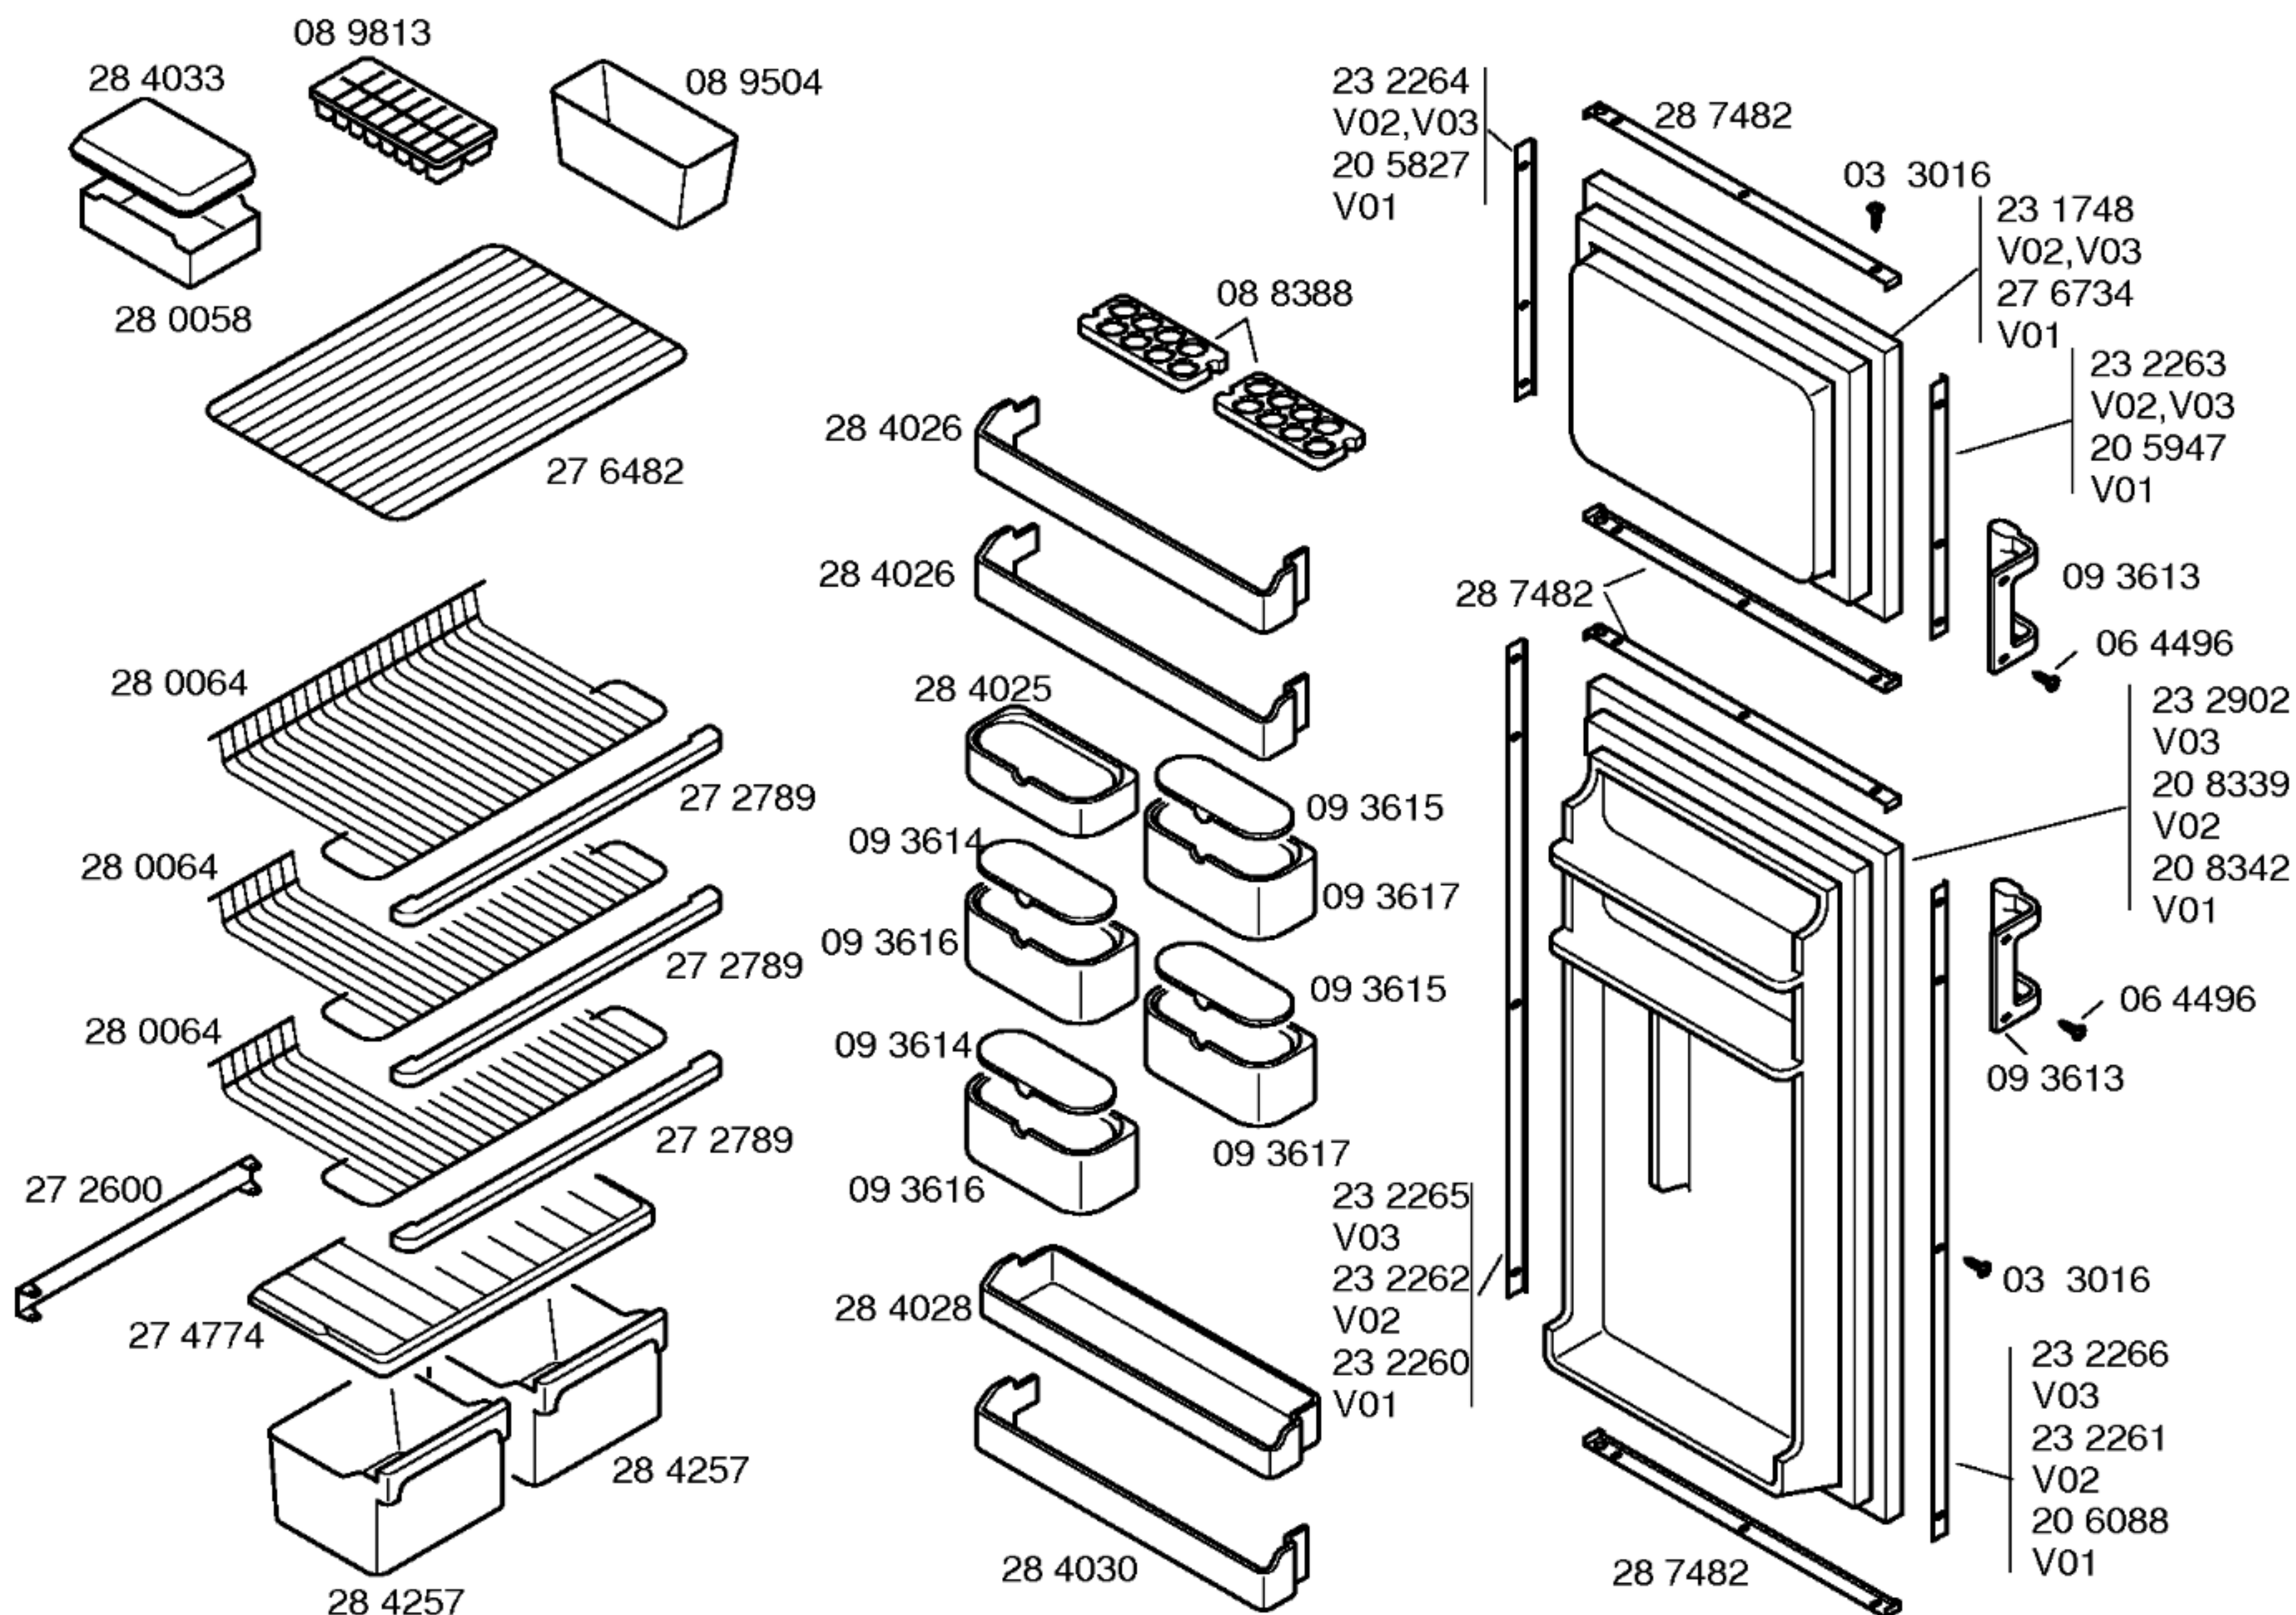

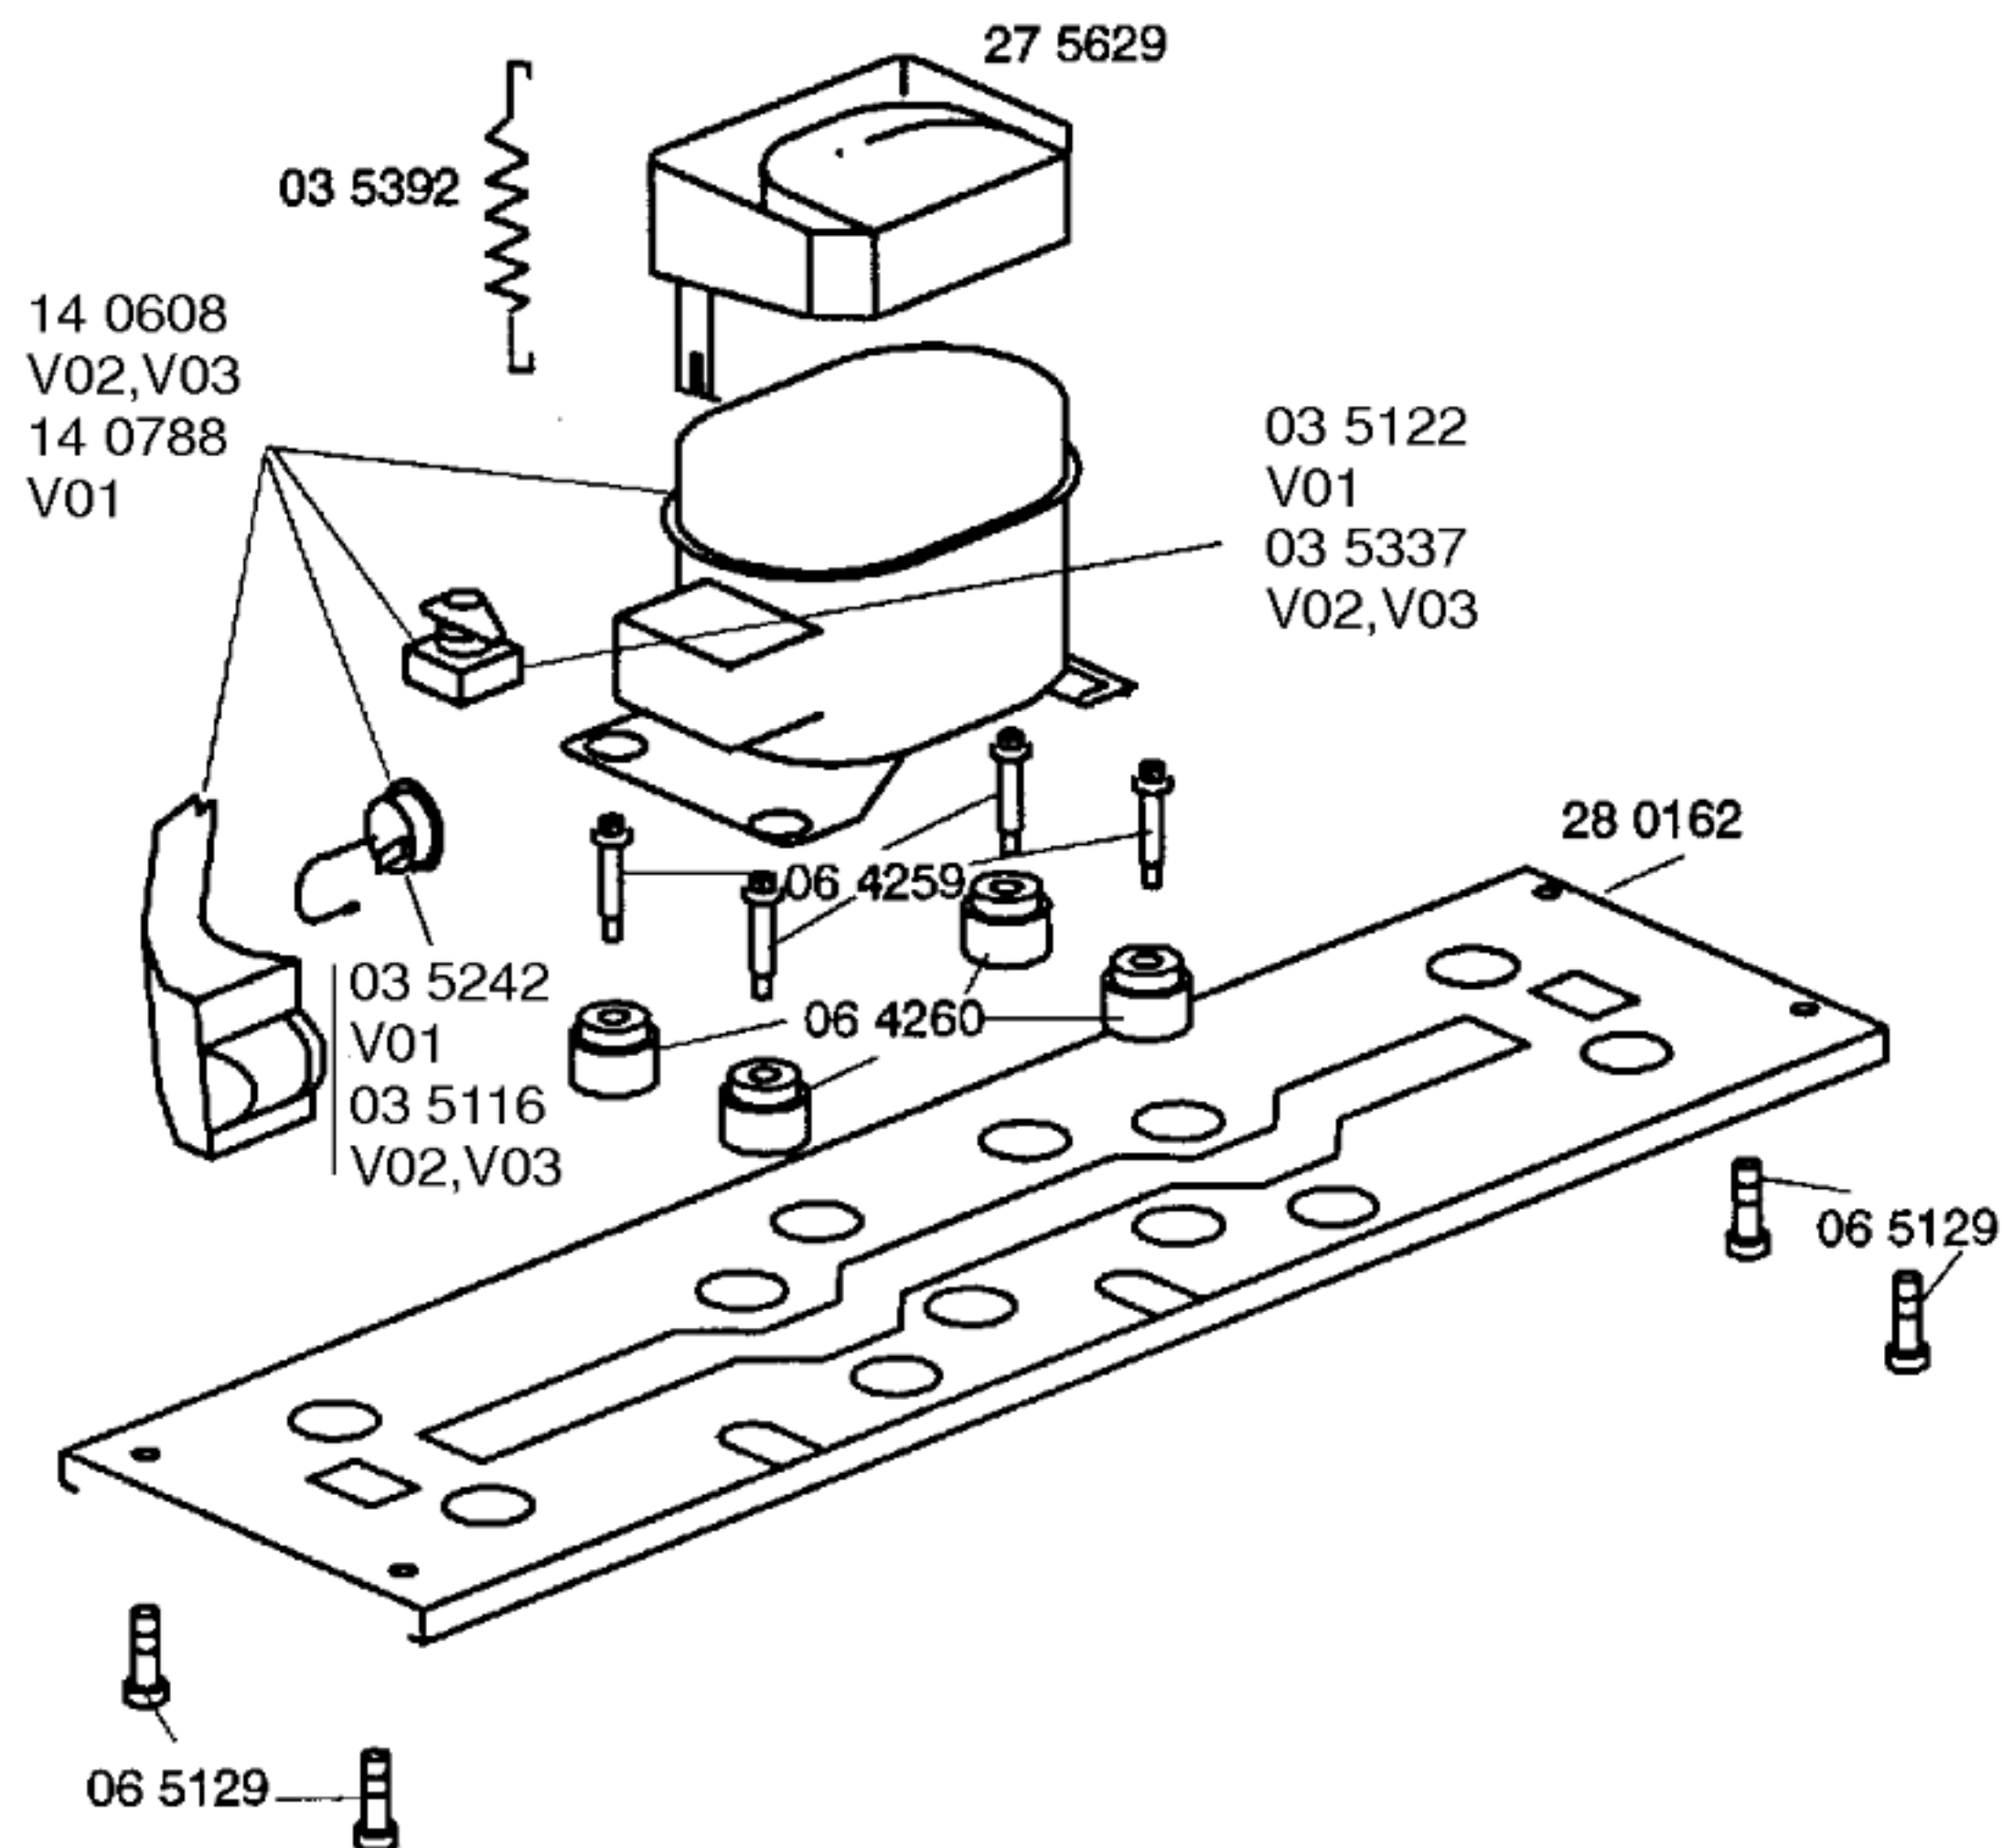

TECHNISCHE DATEN/ TECHNICAL DATA/ DONNE ES TECHNIQUES/ DATOS TECNICOS

Verdichter/ Compressor/ Compresseur/ Compresor	U. HERMETIC. L-76 AT	U. HERMETIC. L-88 AV
Typ/ Type/ Tipo		
Förderleistung/ Delivery/ Debit/ Aspiración	l/h	
Anlaufstrom/ Starting current/ Cour. démarrage/ Int. arranque	A	
Widerstand/ Resistance/ Resistencia. Hi/main/prin.	Ohm.	
Hi/aux.	Ohm.	

Temp. Reyler/ Thermostat/ Termostato	ATEA MANUAL	ATEA MANUAL
Typ/ Type/ Tipo		
Reglerstellung/ Position/ Conexión	+ 5°	+ 5°
Schaltwerte/ Switching values/ ..ein"/conex. °C	- 15,5°	- 15,5°
Valeurs de commutation/ Desconex. ..aus"/descon. ..alarm"	- 32°	- 32°

Füllmenge/ Fill. quantity/ Charge/ Carga	R12	g	215	215
--	-----	---	-----	-----

Anschlußwert/ Comm. load/ Puiss. Connect./ Potenc.	W	125	150
--	---	-----	-----

Heizung/ Heater/Chaufrage/ Resistenc. descongel.		
Widerstand/ Resistance/ Resistencia	Ohm.	
Leistung/ Power/ Puissance/ Potencia	W	

Ventilator/ Blower/ Ventilateur/ Ventilador		
Widerstand/ Resistance/ Resistencia. del ventilador	Ohm.	

Magnetventil/ Magnetic valve/ Electrovanne/ Electrovalvula		
Widerstand/ Resistance/ Resistencia	Ohm.	
Spannung/ Voltage/ Tension/ Tensión	V	