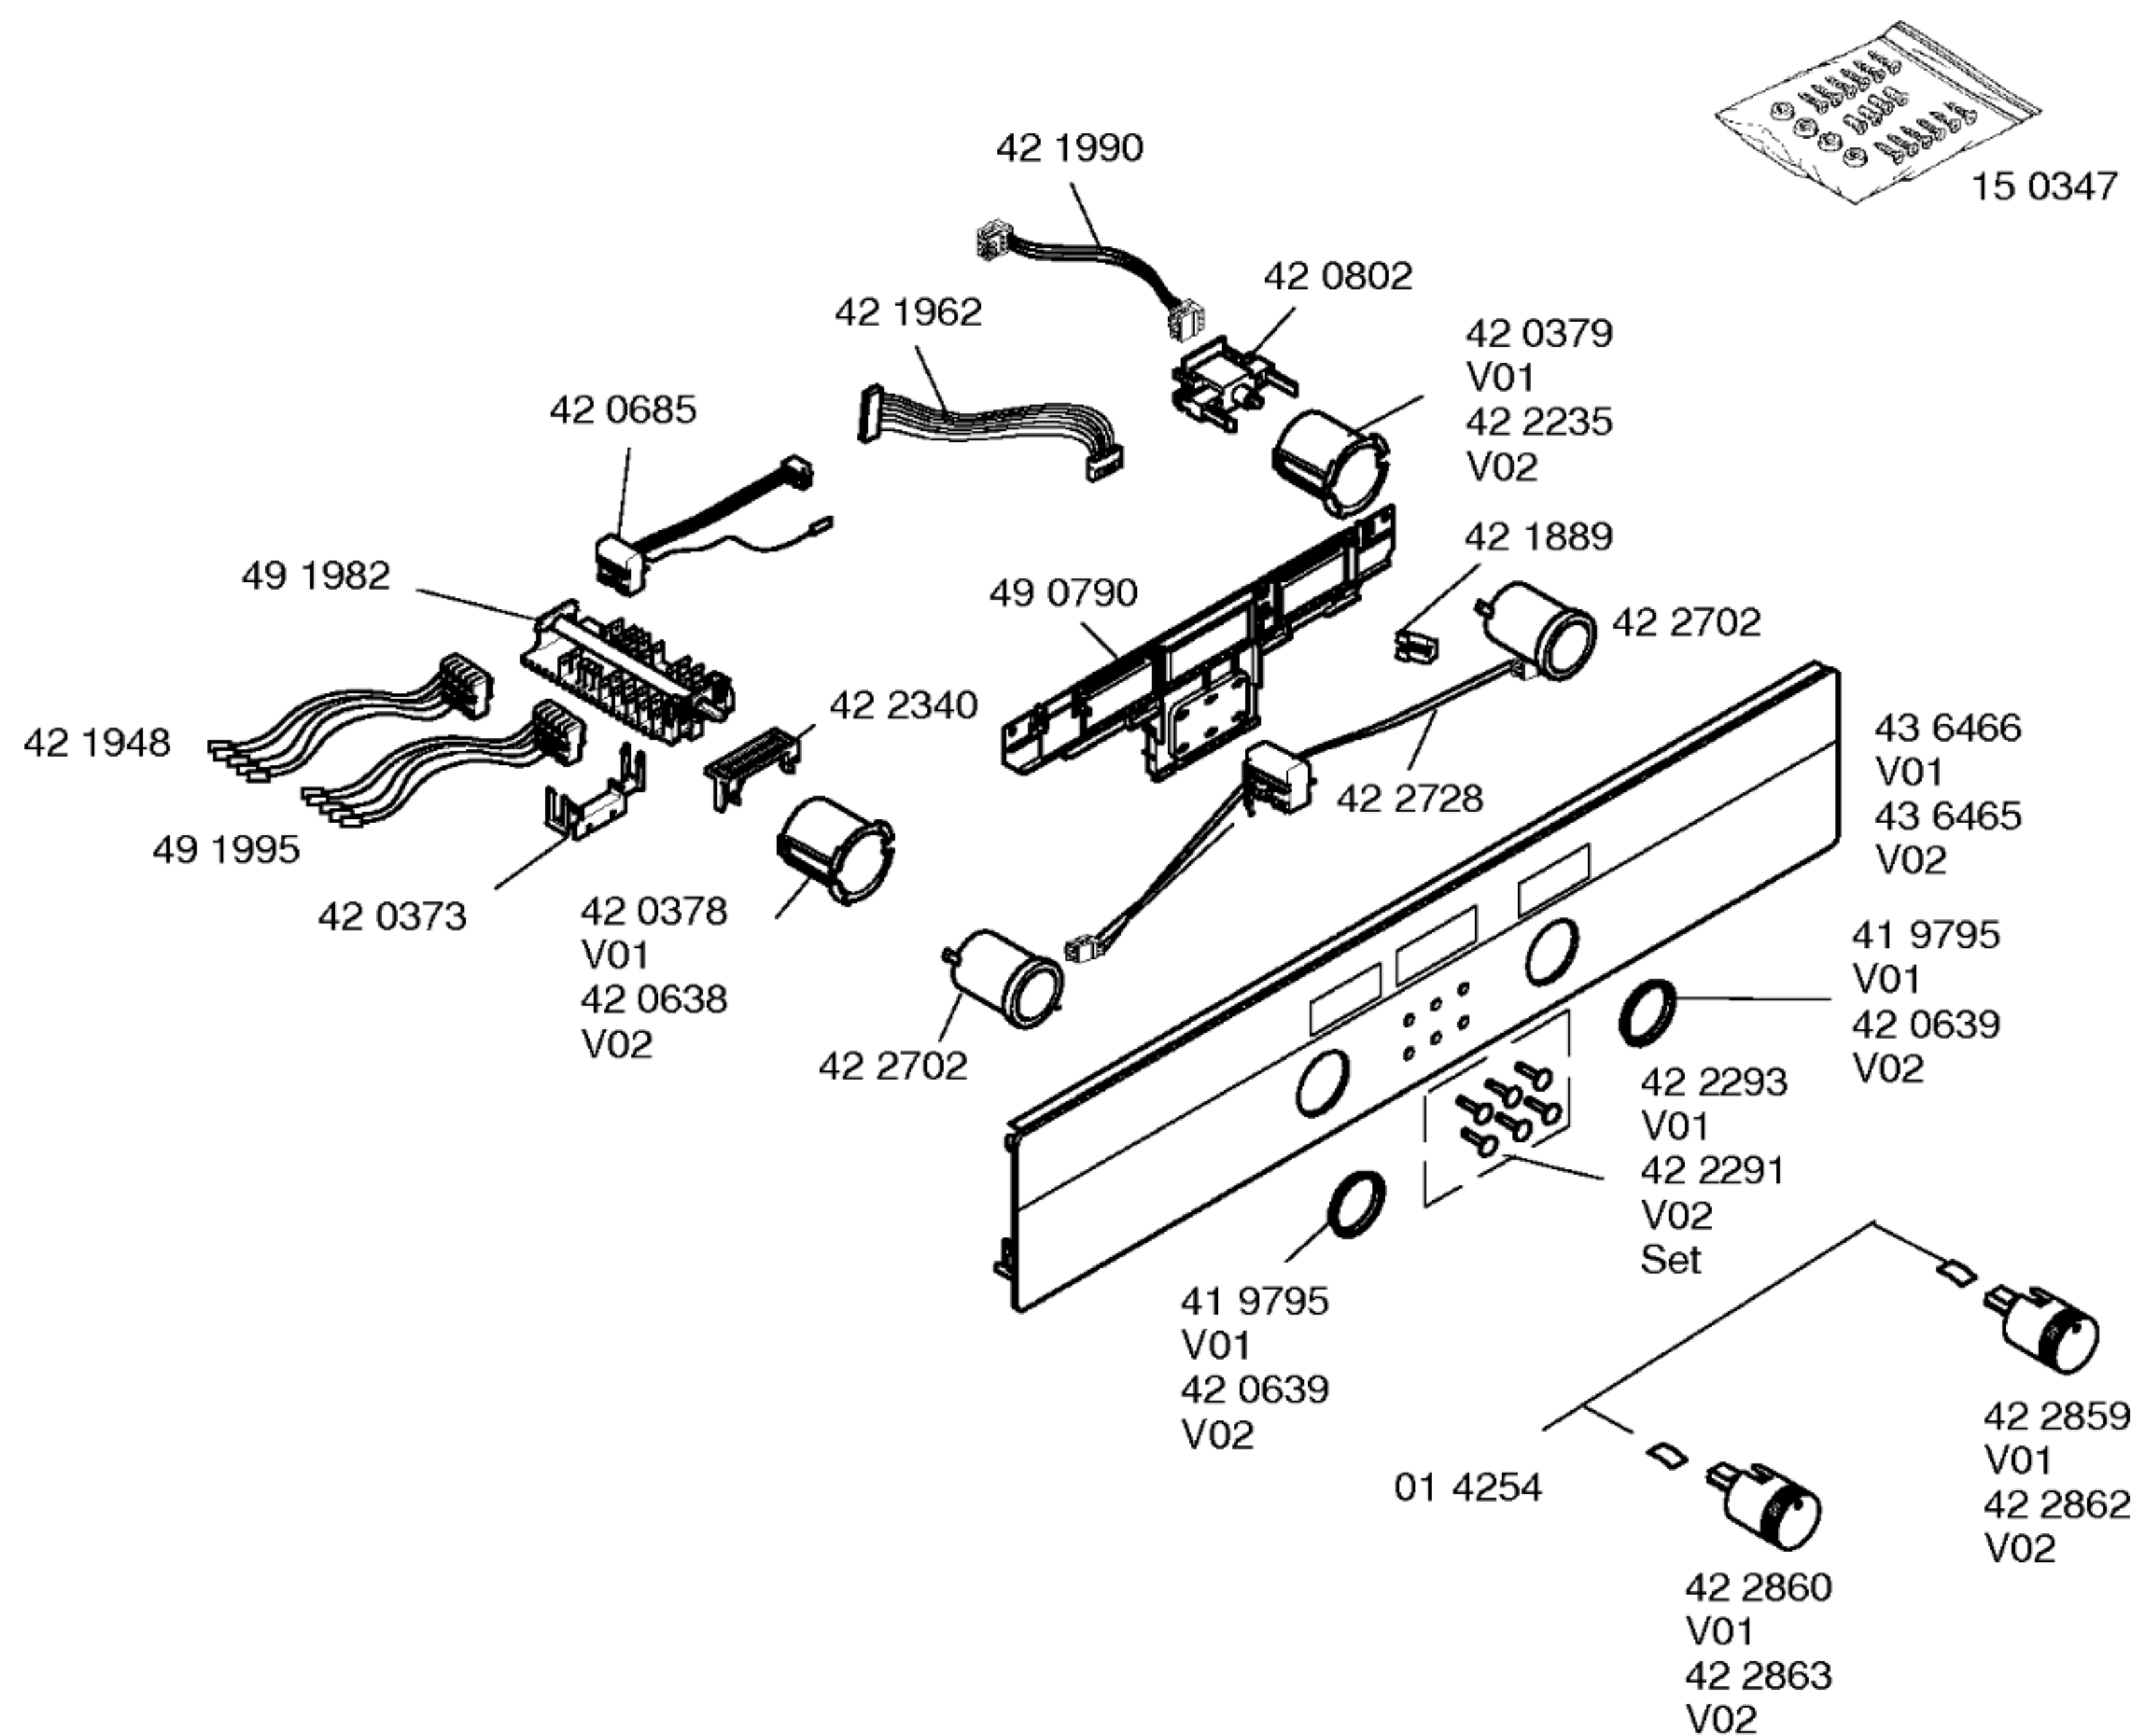 


Mat. – Nr. – Konstante
3740

 
Gebrauchsanweisung
58 7714 (de)
59 0336 (es)

 
Kochbuch
58 8196 (de)

Montageanweisung
58 6500
(de,en,fr,it,nl,da,sv,no
fi,es,pt,el,cs,pl,tr,ru)


Zubehoer:
HZ331070
Backblech emailliert
HZ331010
Backblech Antihaft
HZ332070
Universalpfanne
HZ332010
Universalpfanne
Antihaft



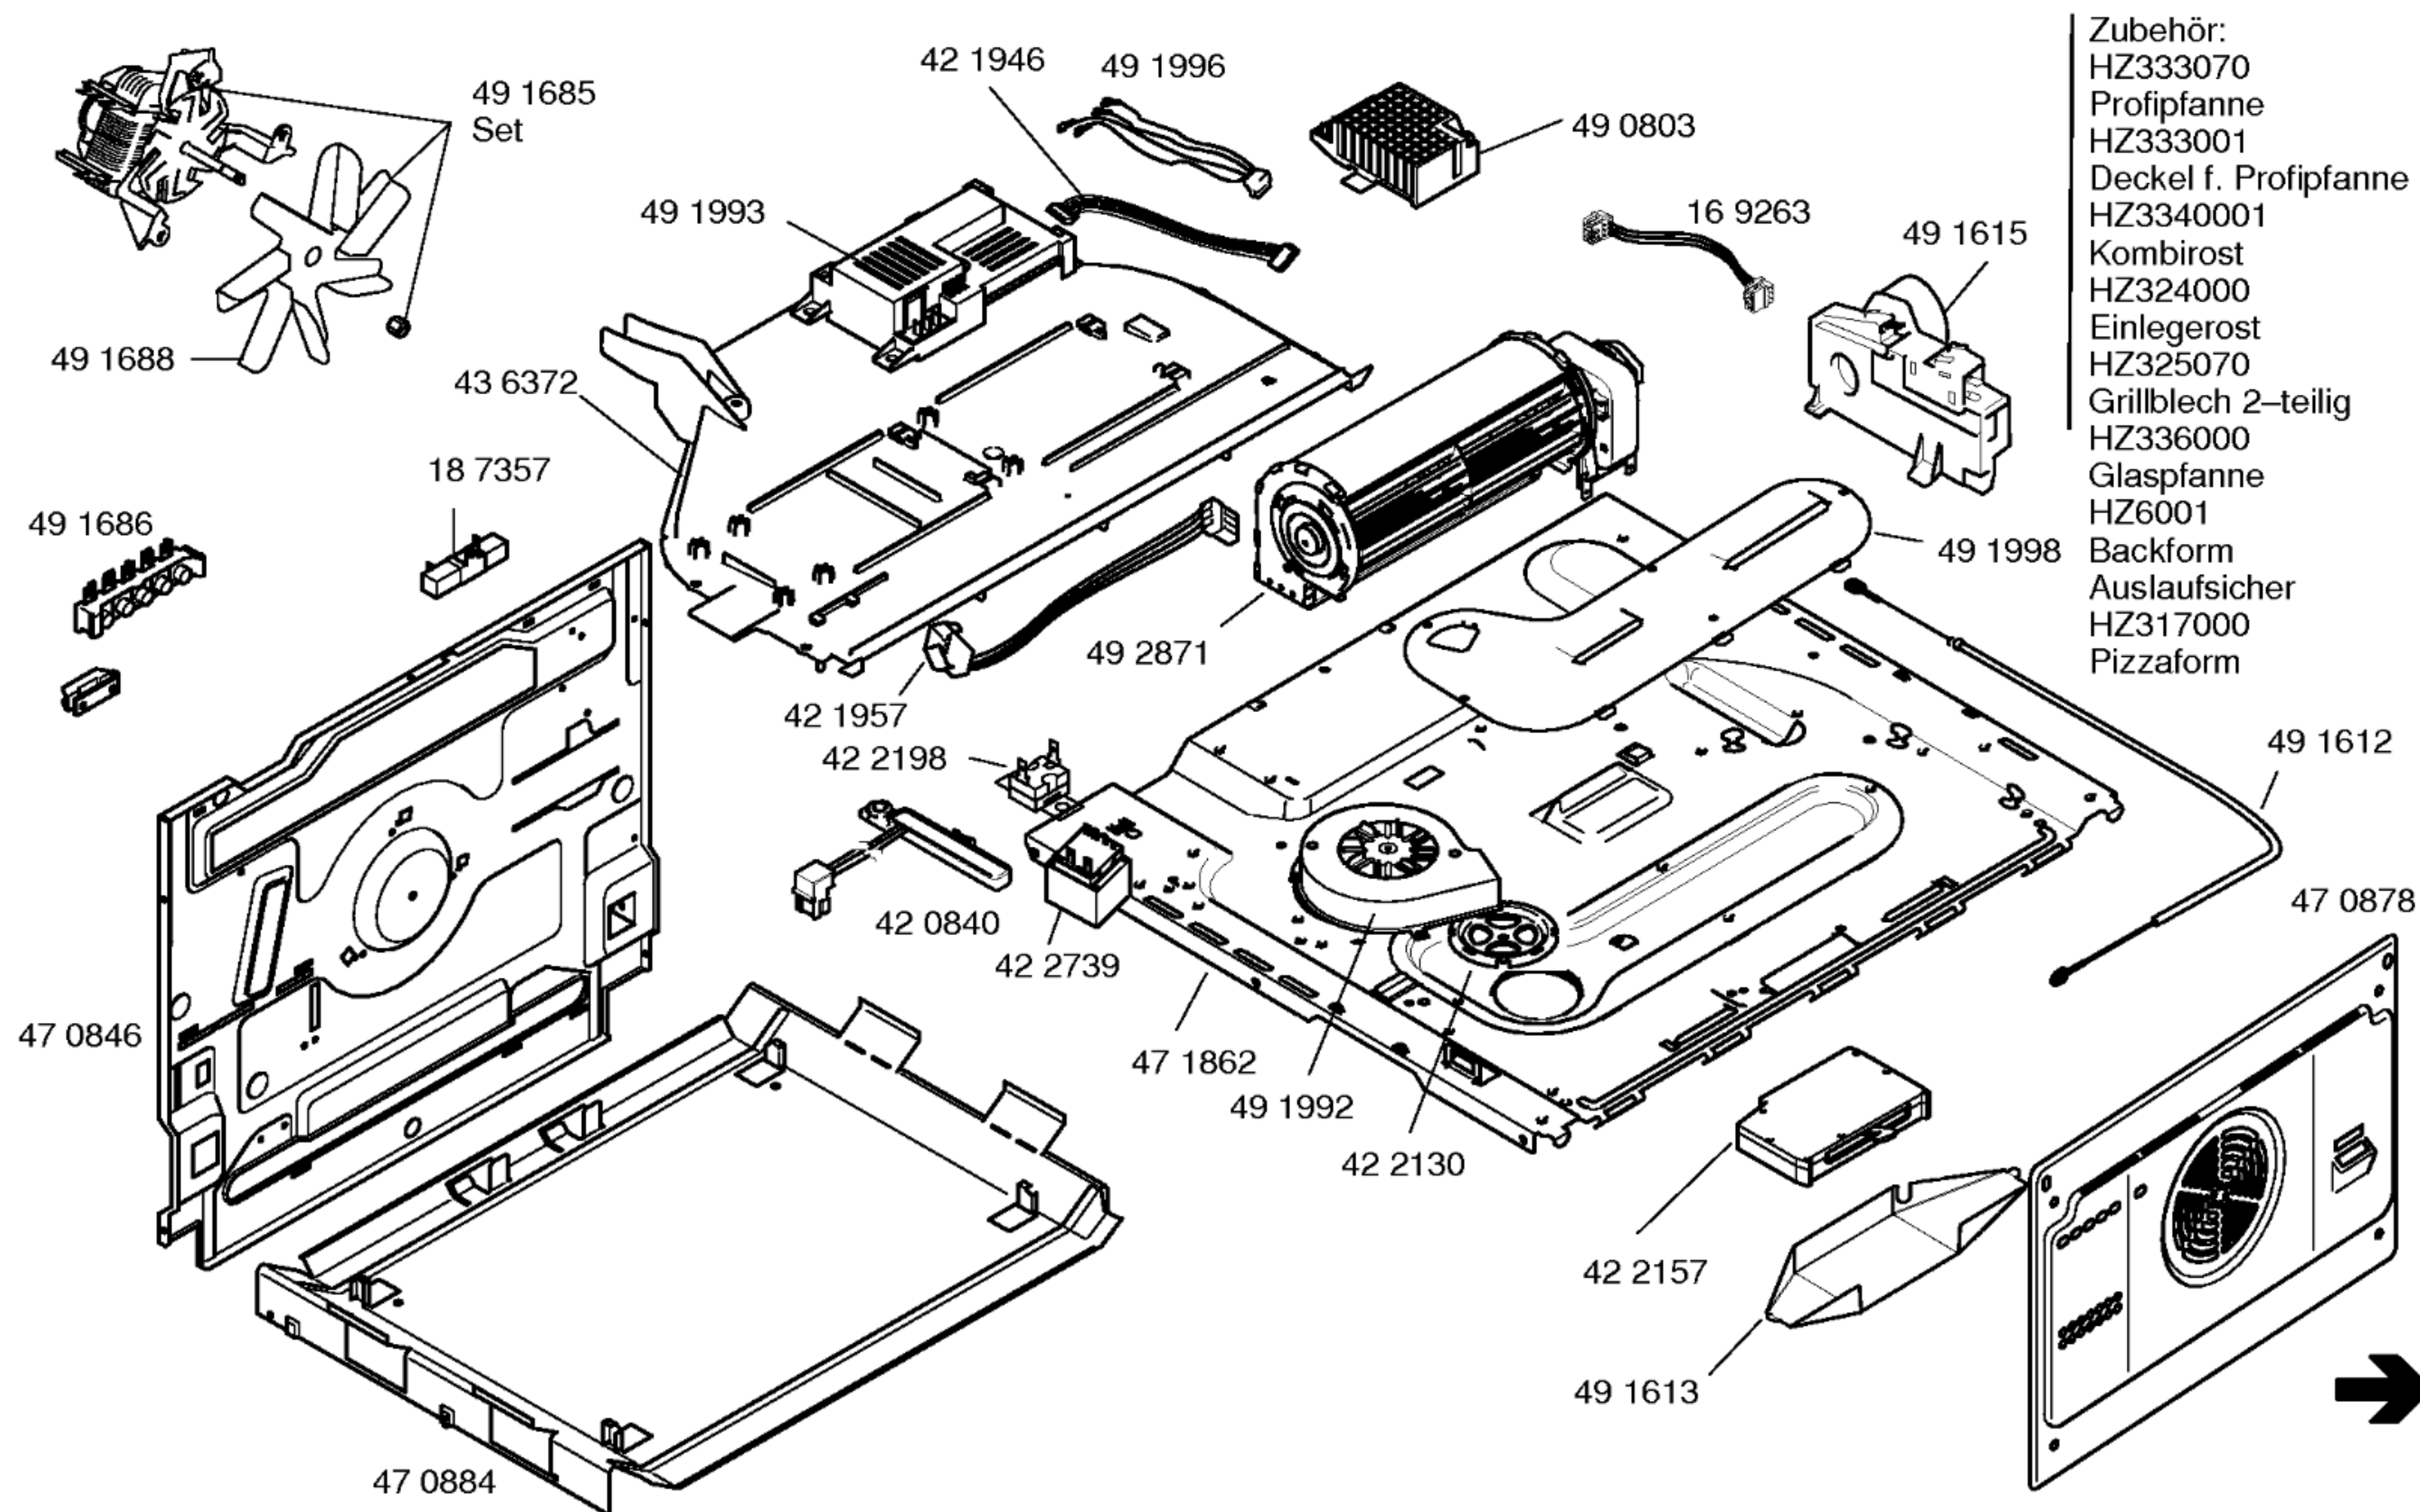

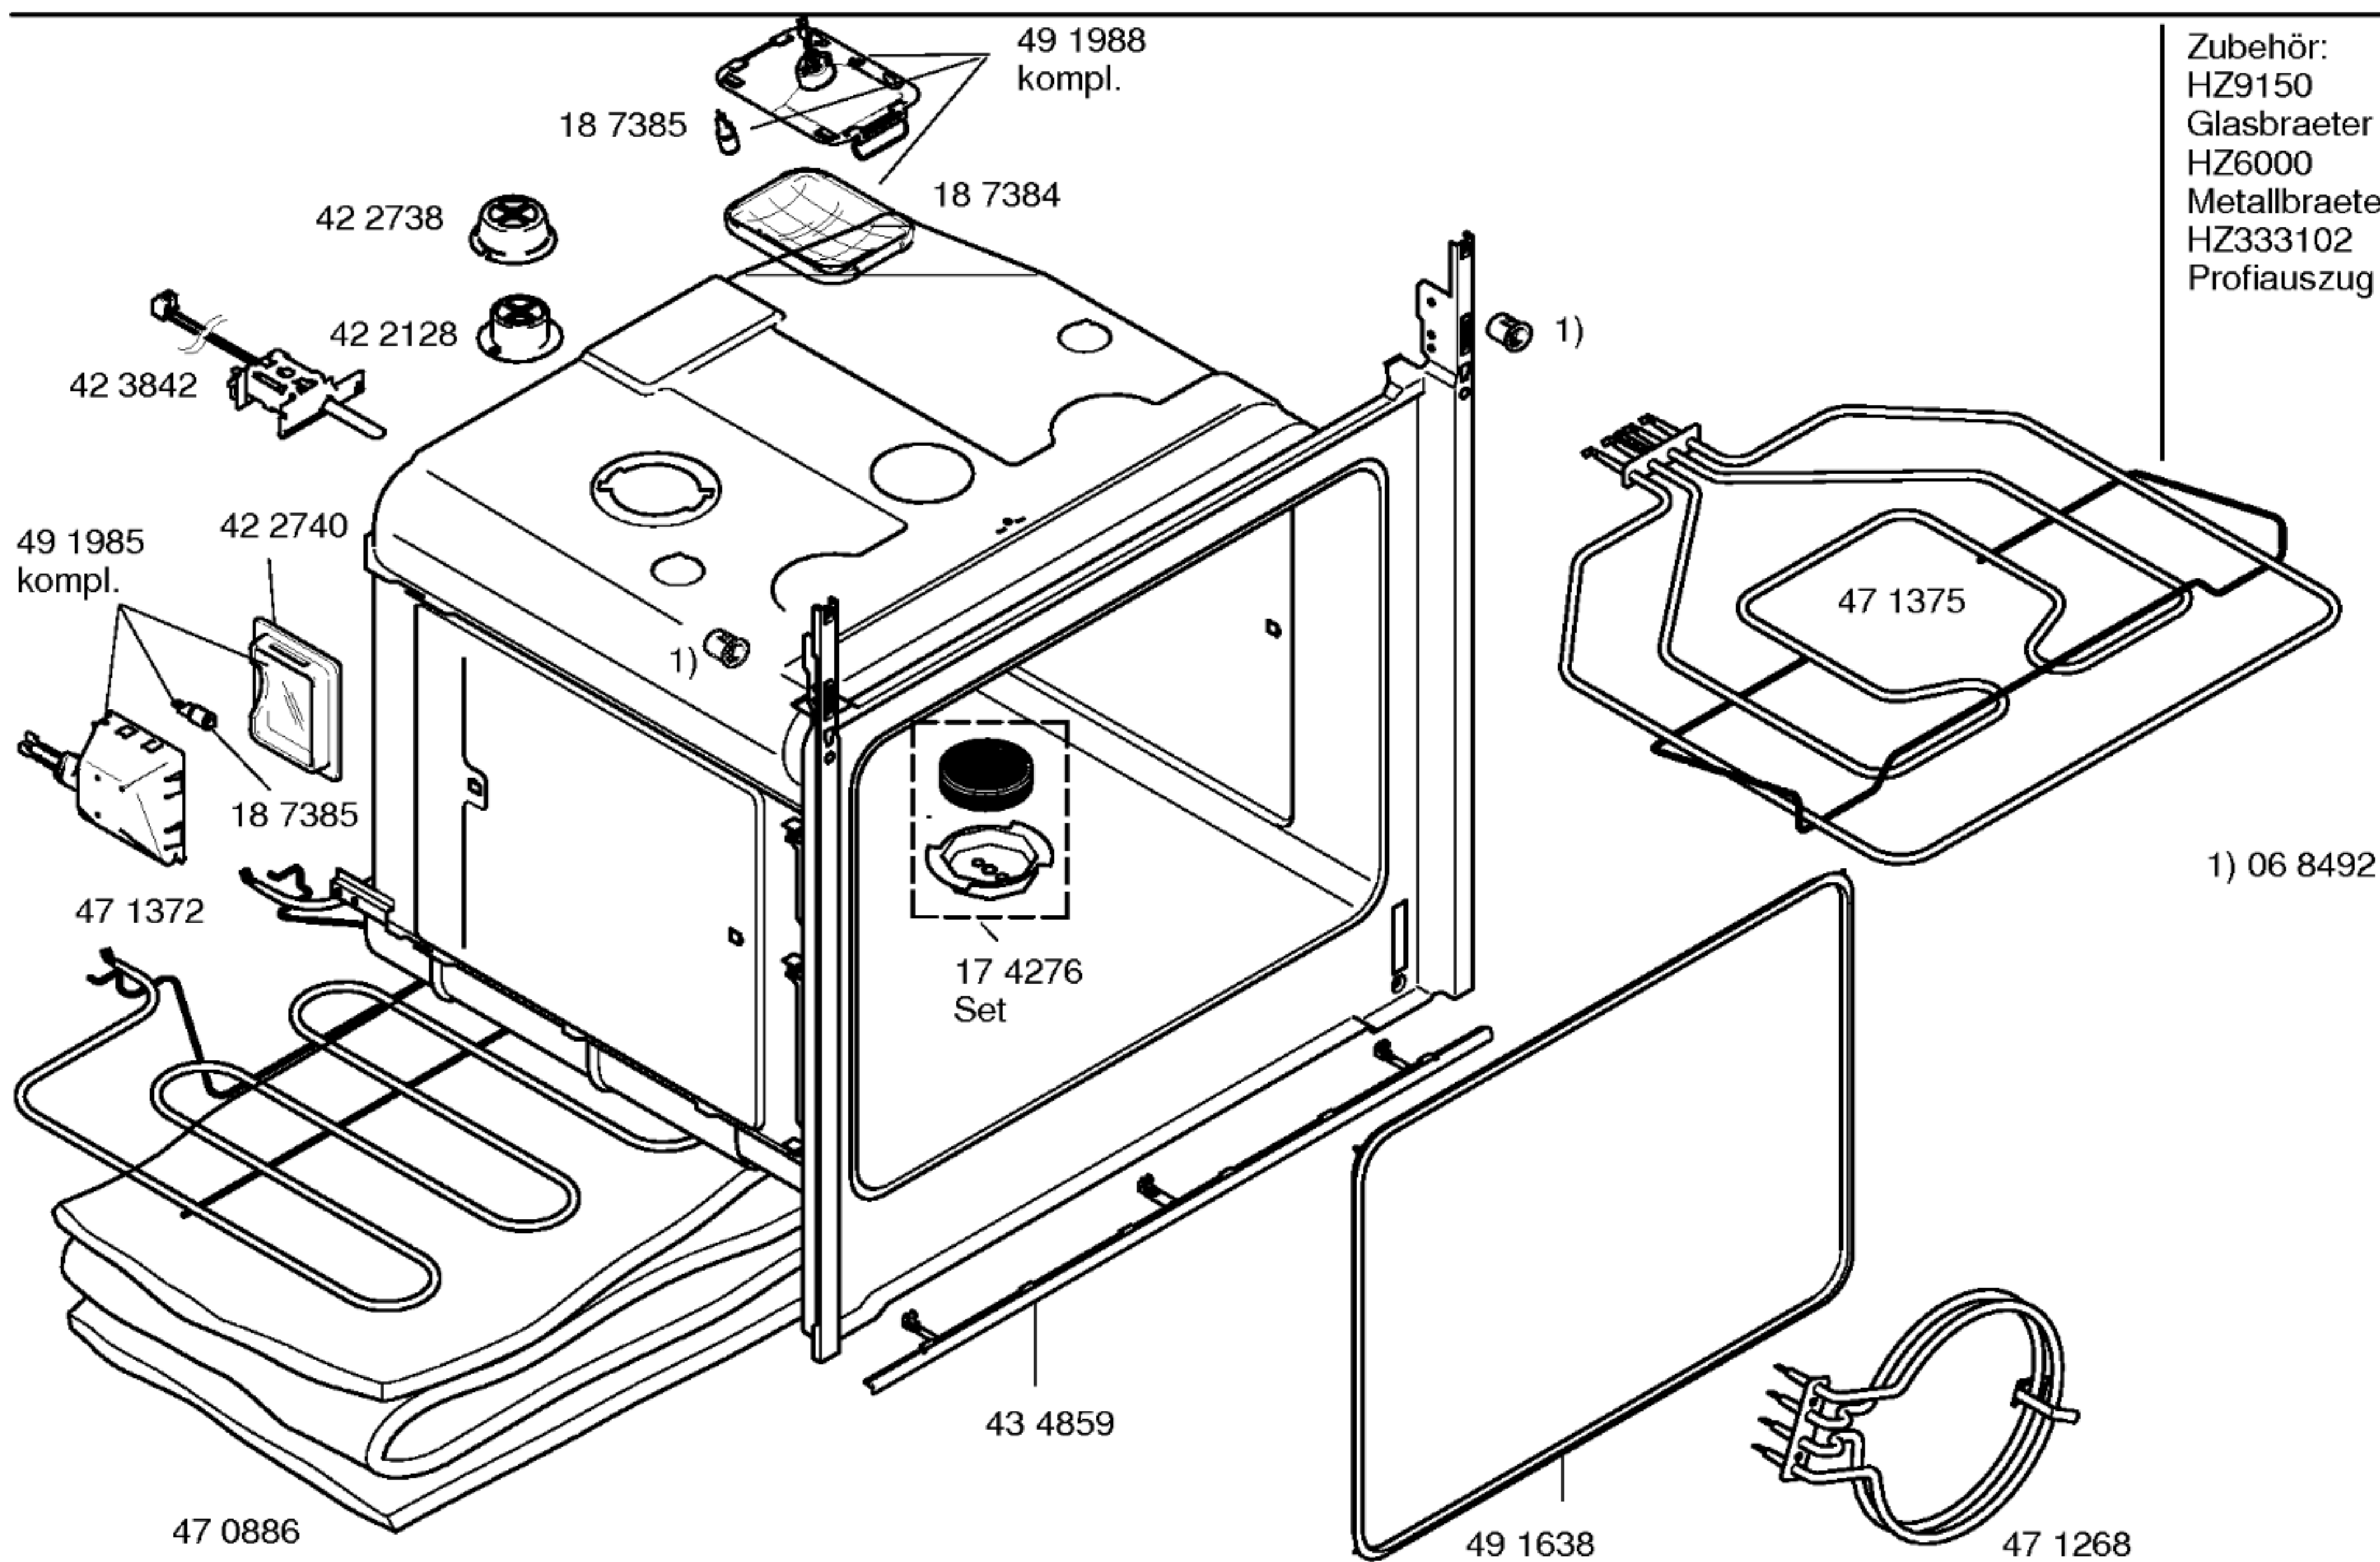

 Zubehör:
HZ9150
Glasbraeter
HZ6000
Metallbraeter
HZ333102
Profiauszug

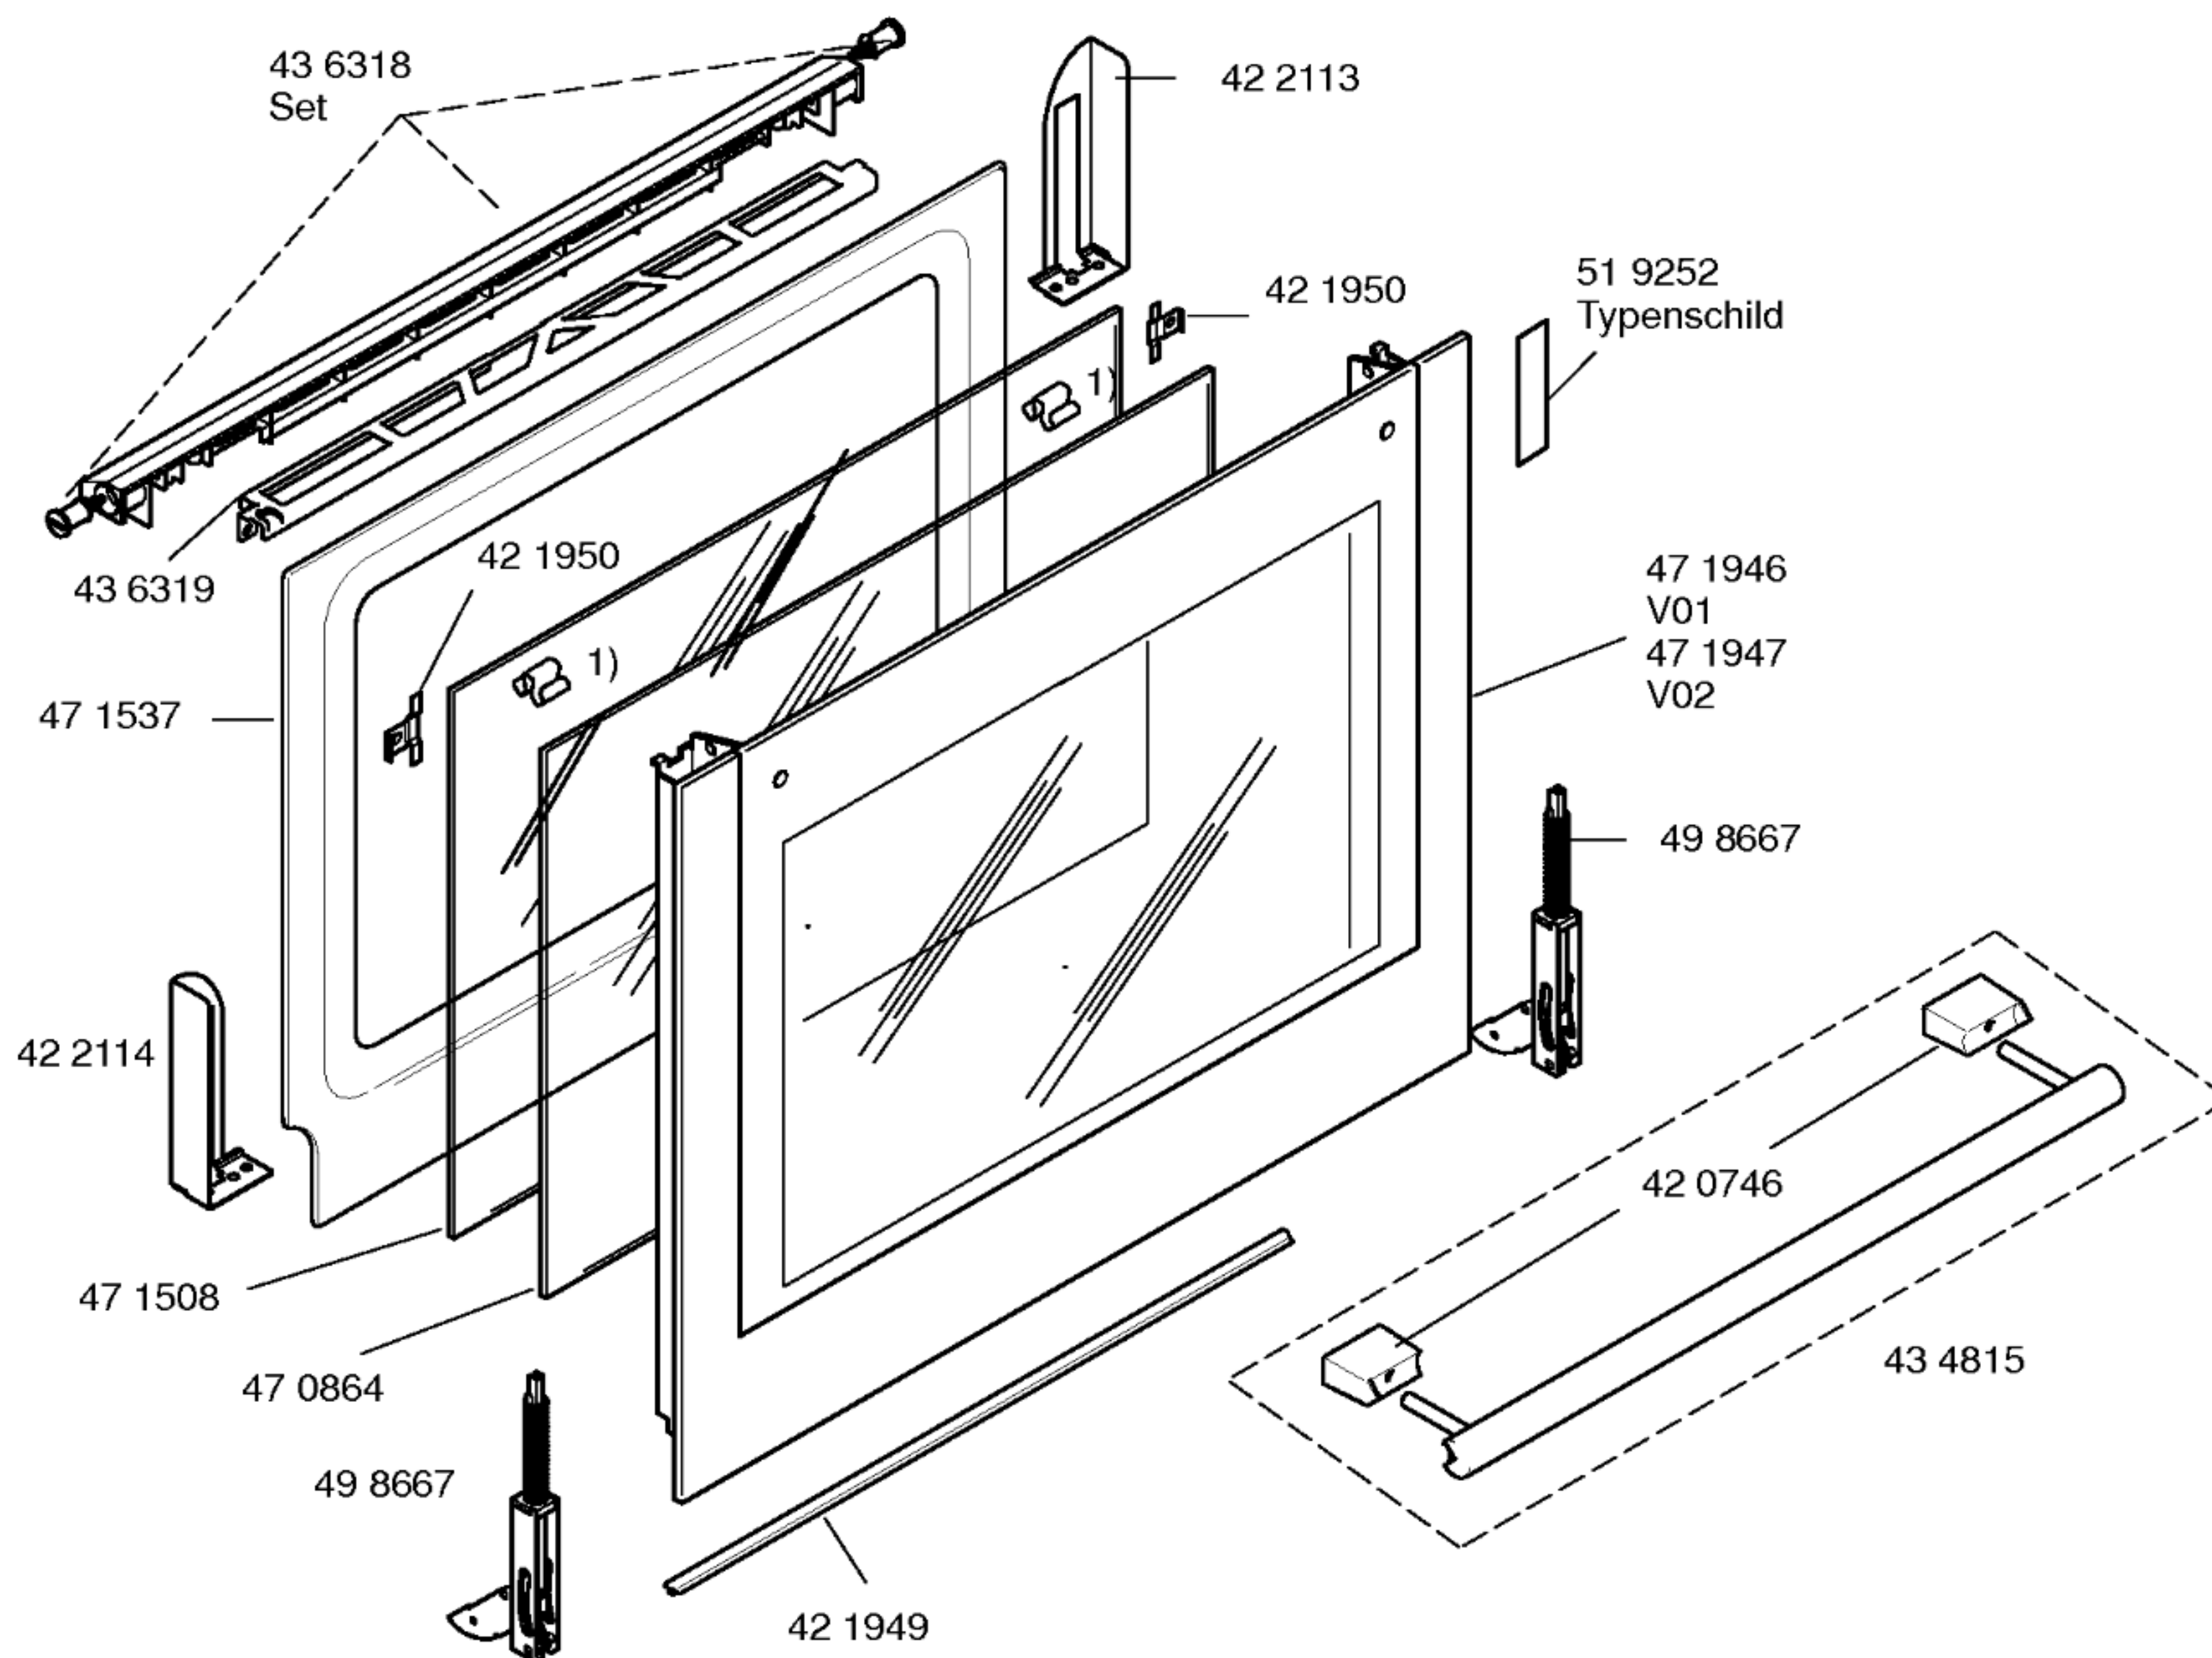

1) 42 2707

