


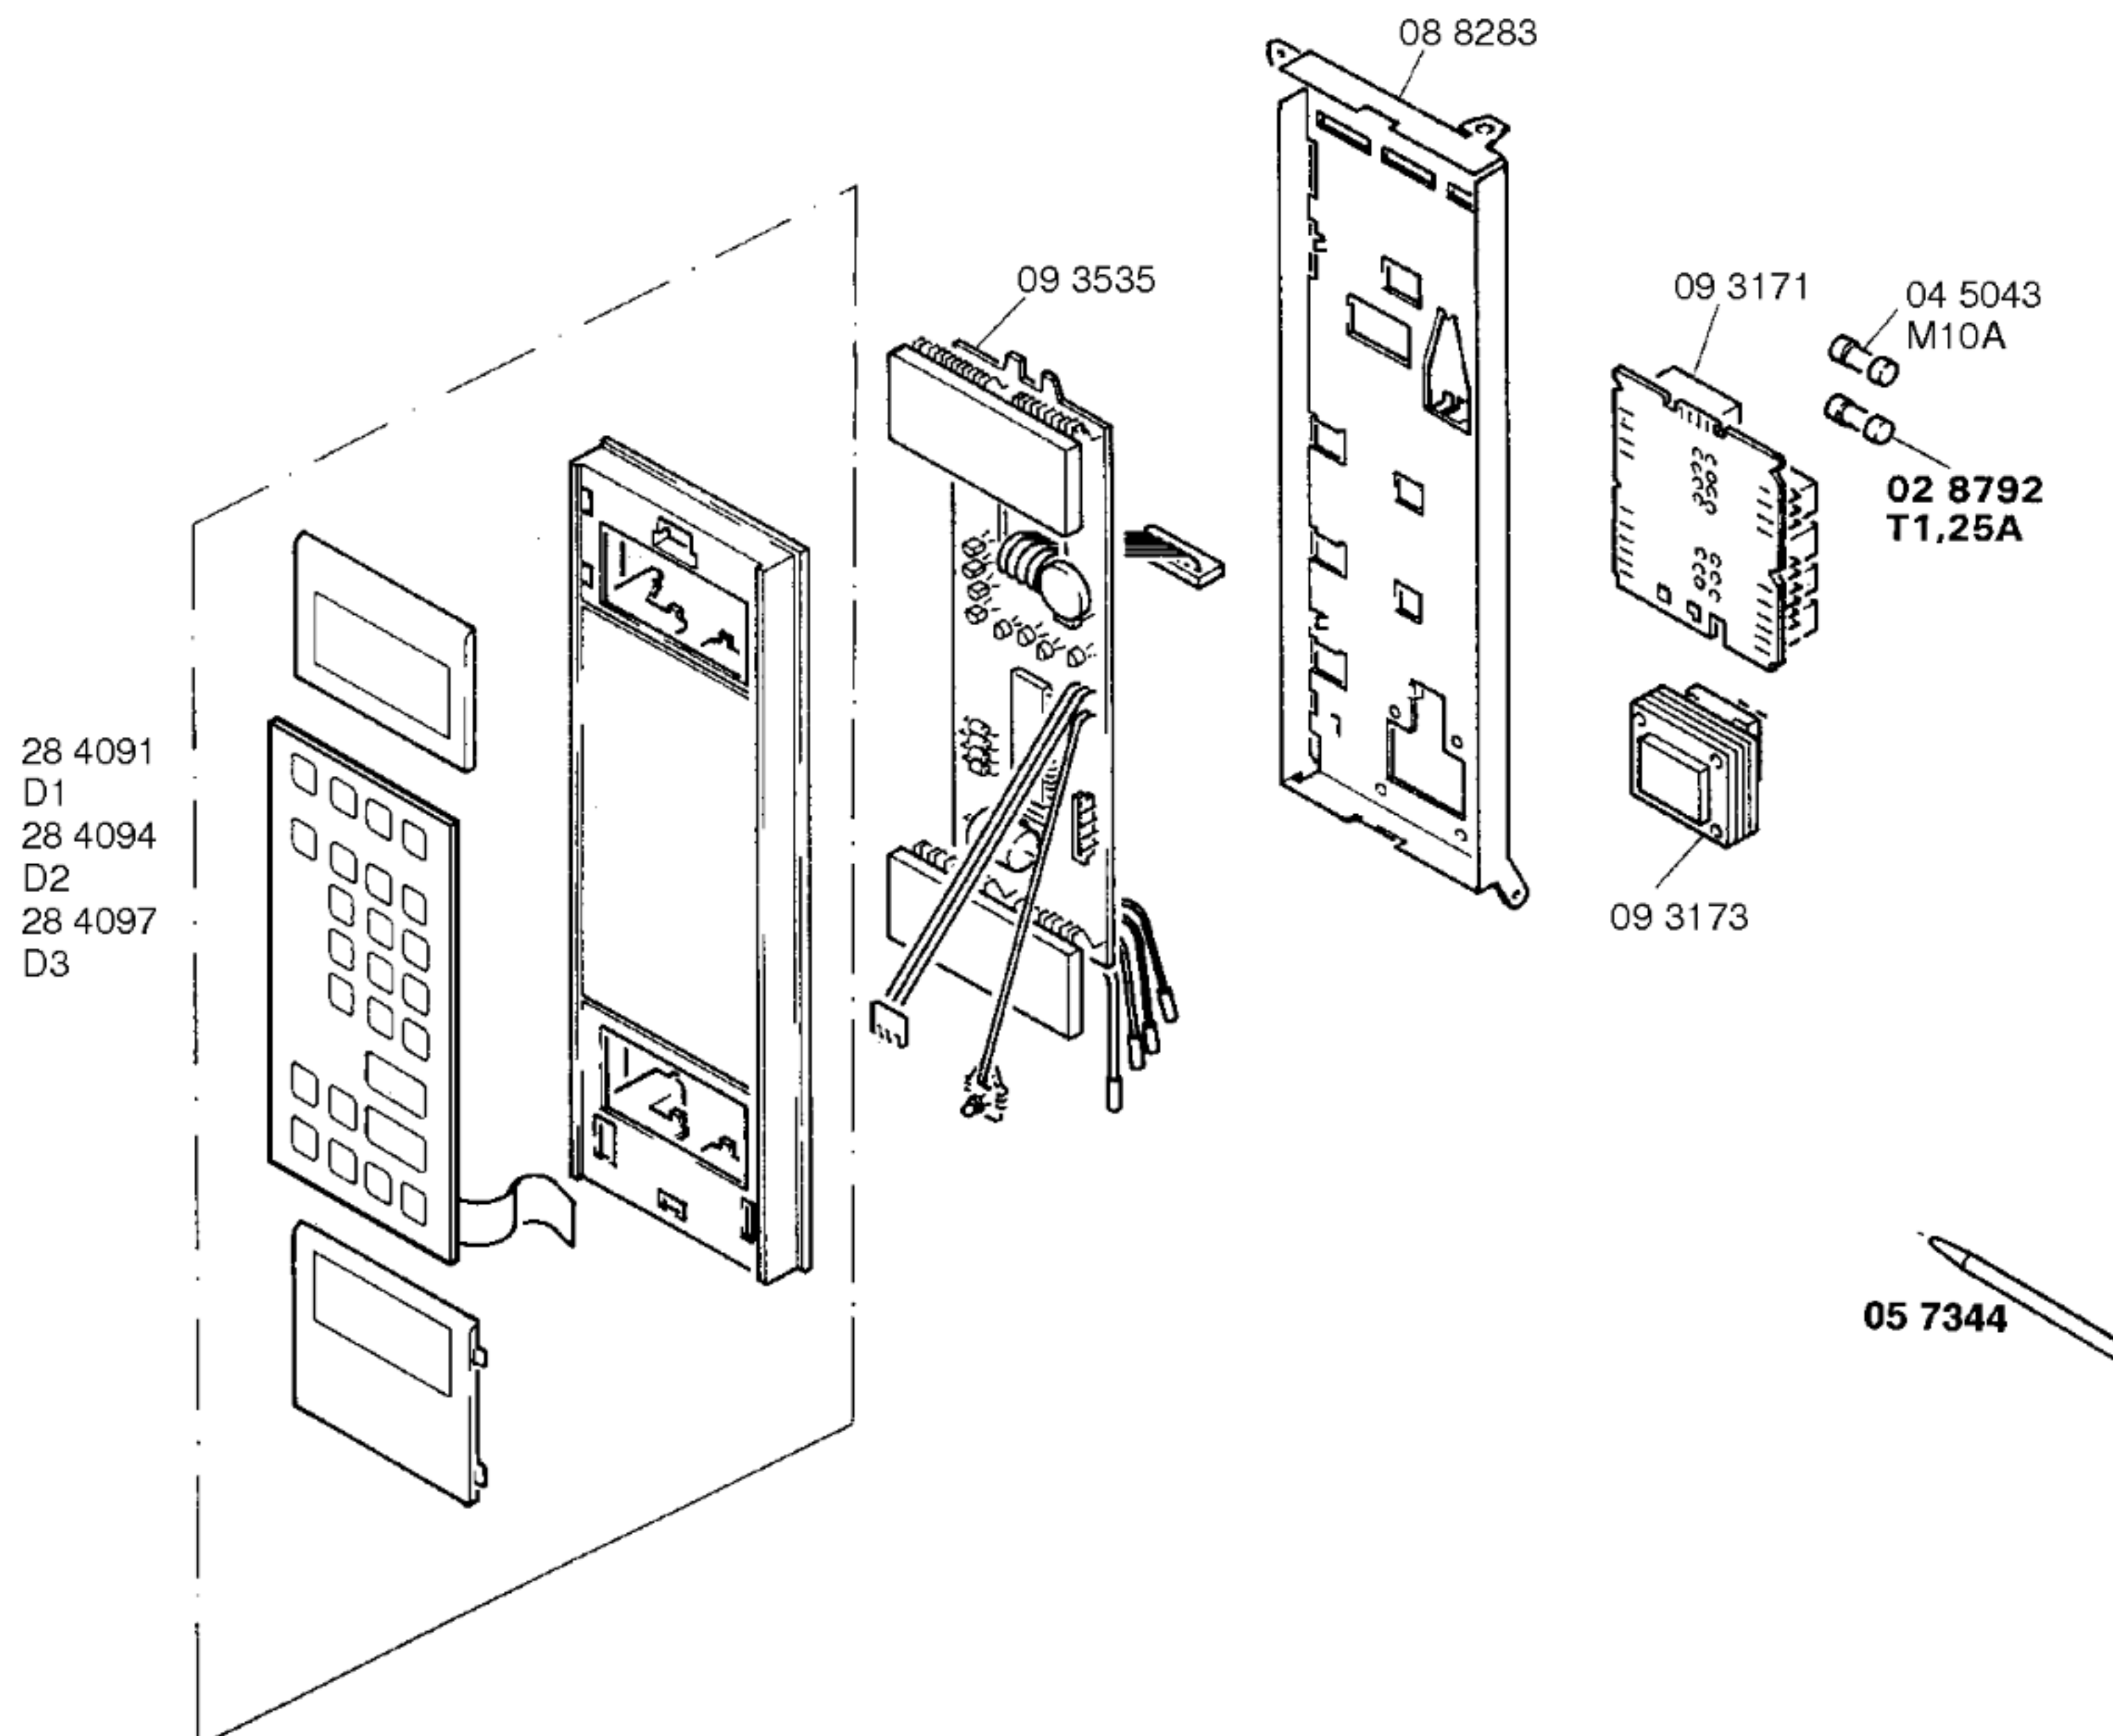

Gebrauchsanweisung
51 6259
(D,GB,F,I,NL,E)


Montageanleitung
51 6089
(D,GB,F,I,NL)

Kochbuch
51 6059
(D)


Aufkleber Programm-
tabelle
51 6344
(D,GB,F,I,E,N)

Zubehör:


Alu-Backblech
Z6380X0
Glaspfanne
Z6290X0

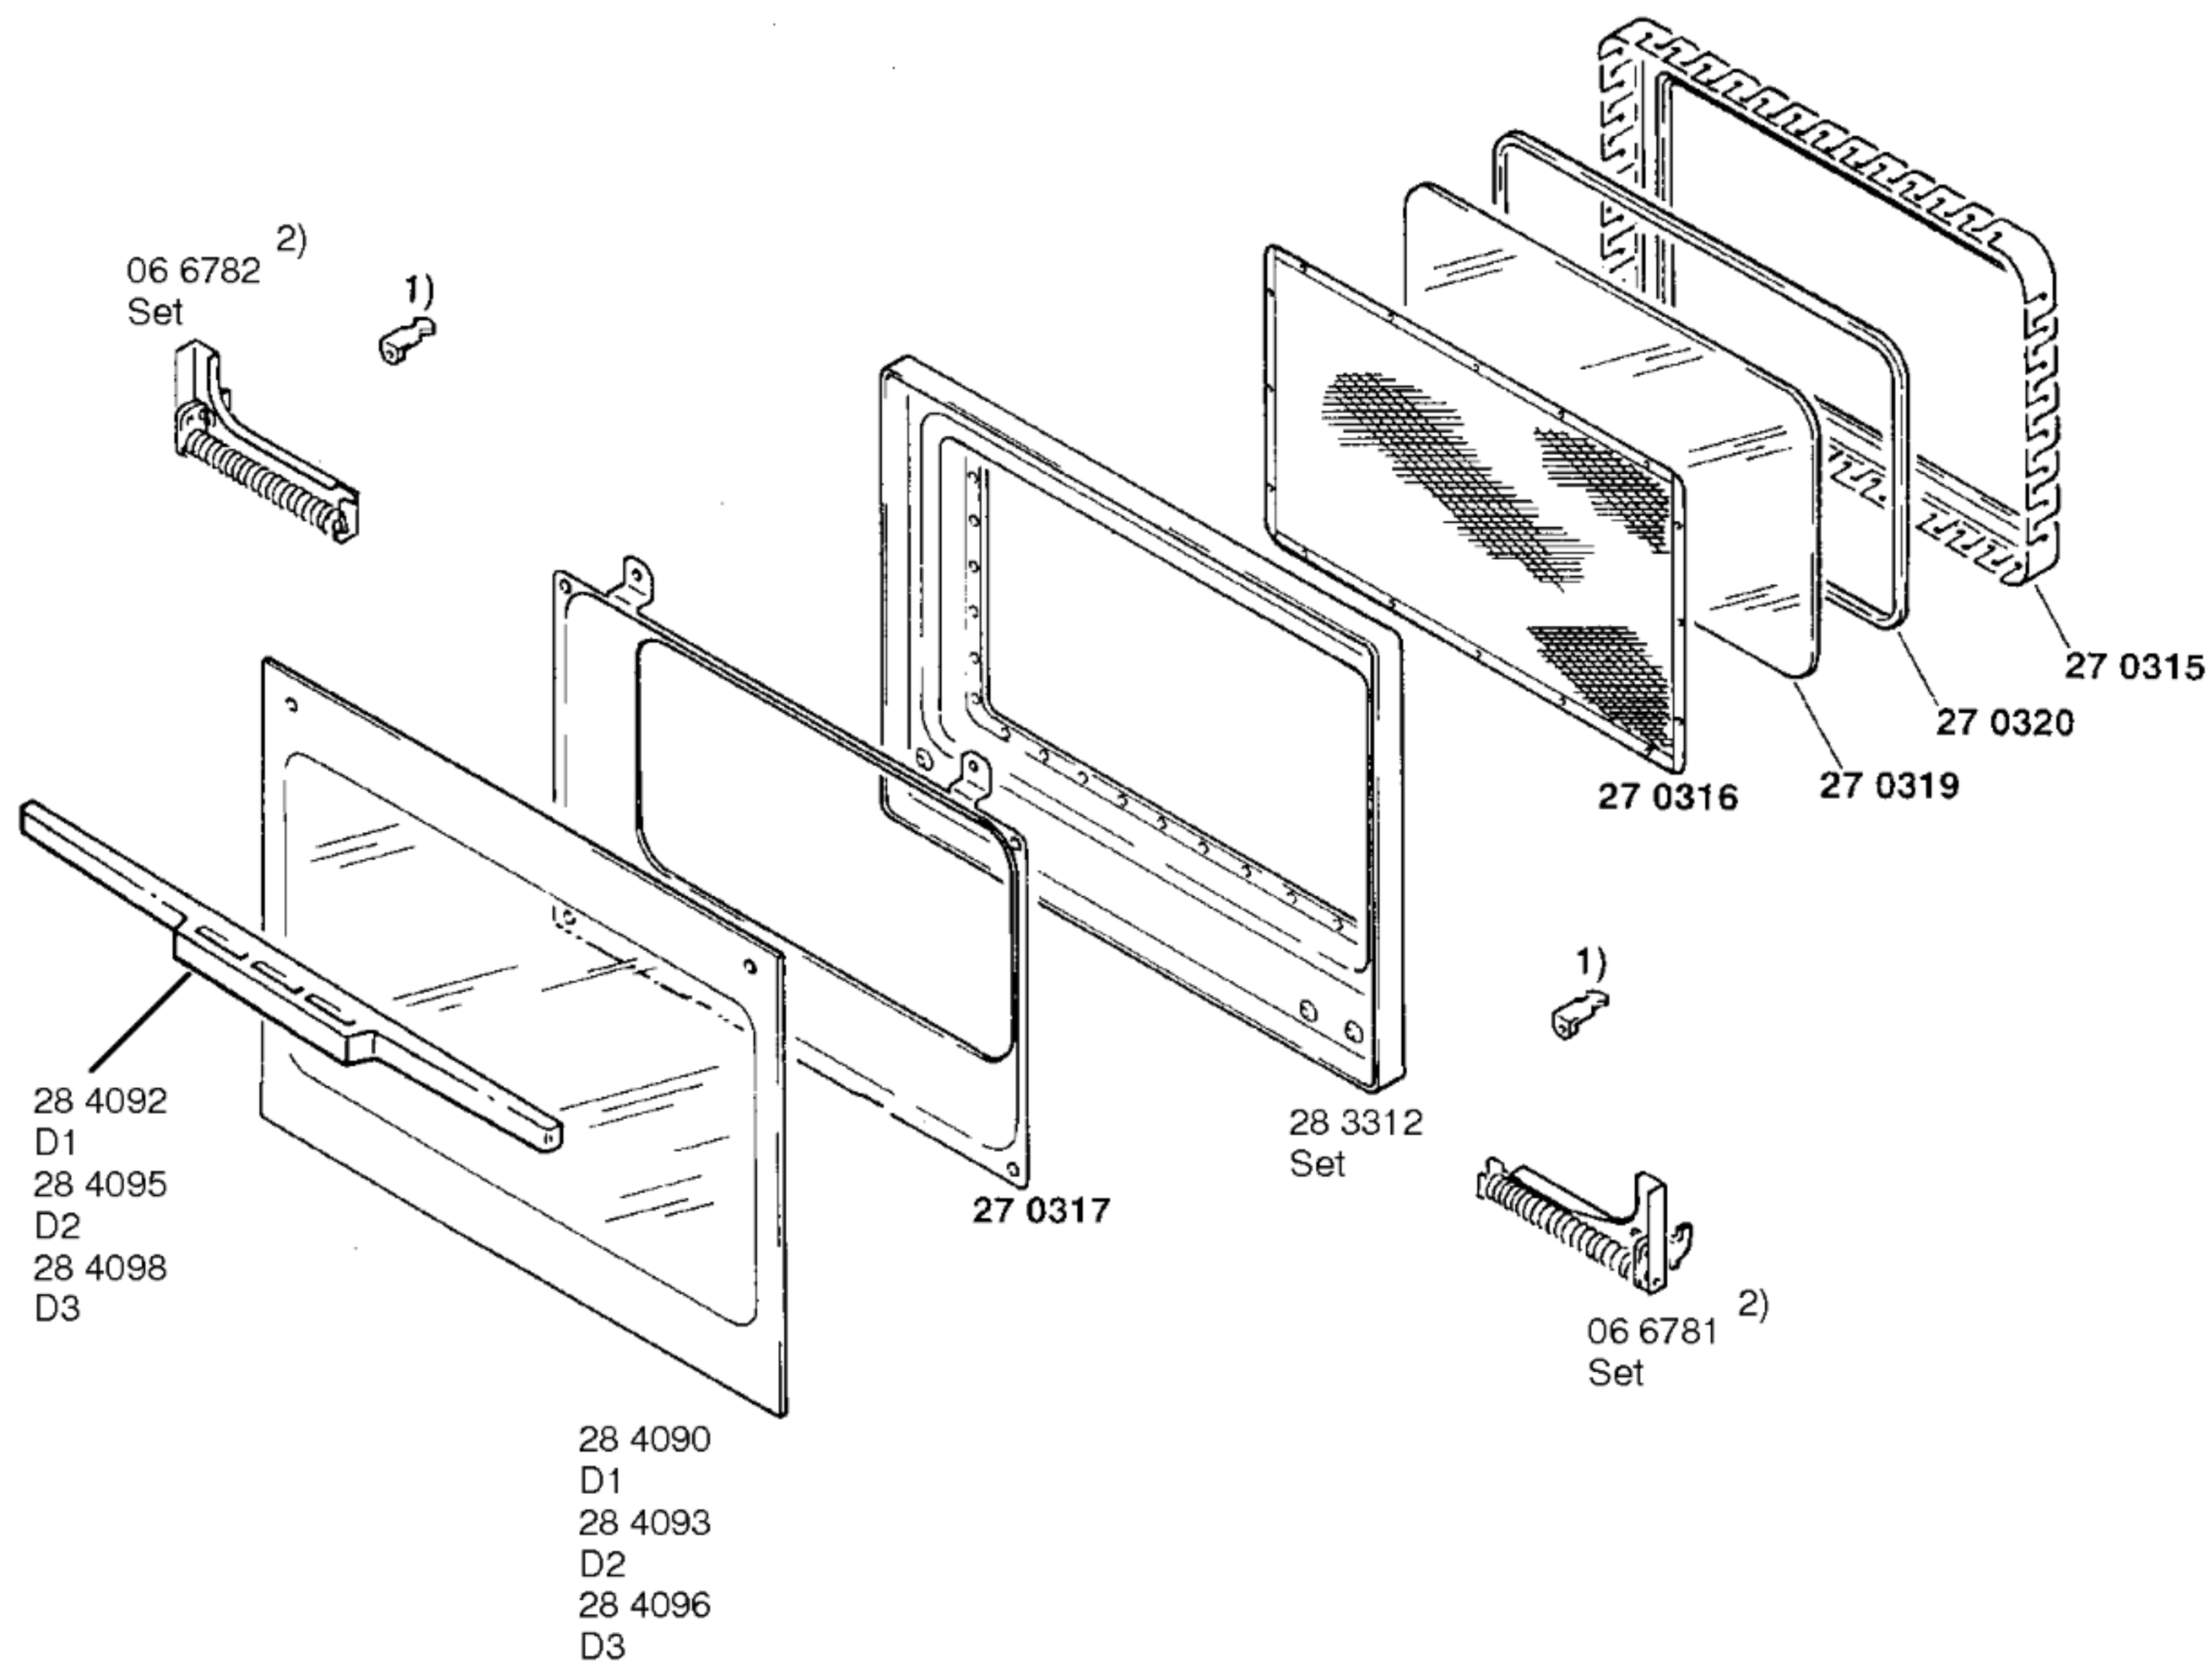

- 1) 03 0671
2) 03 0813
Arretierstift

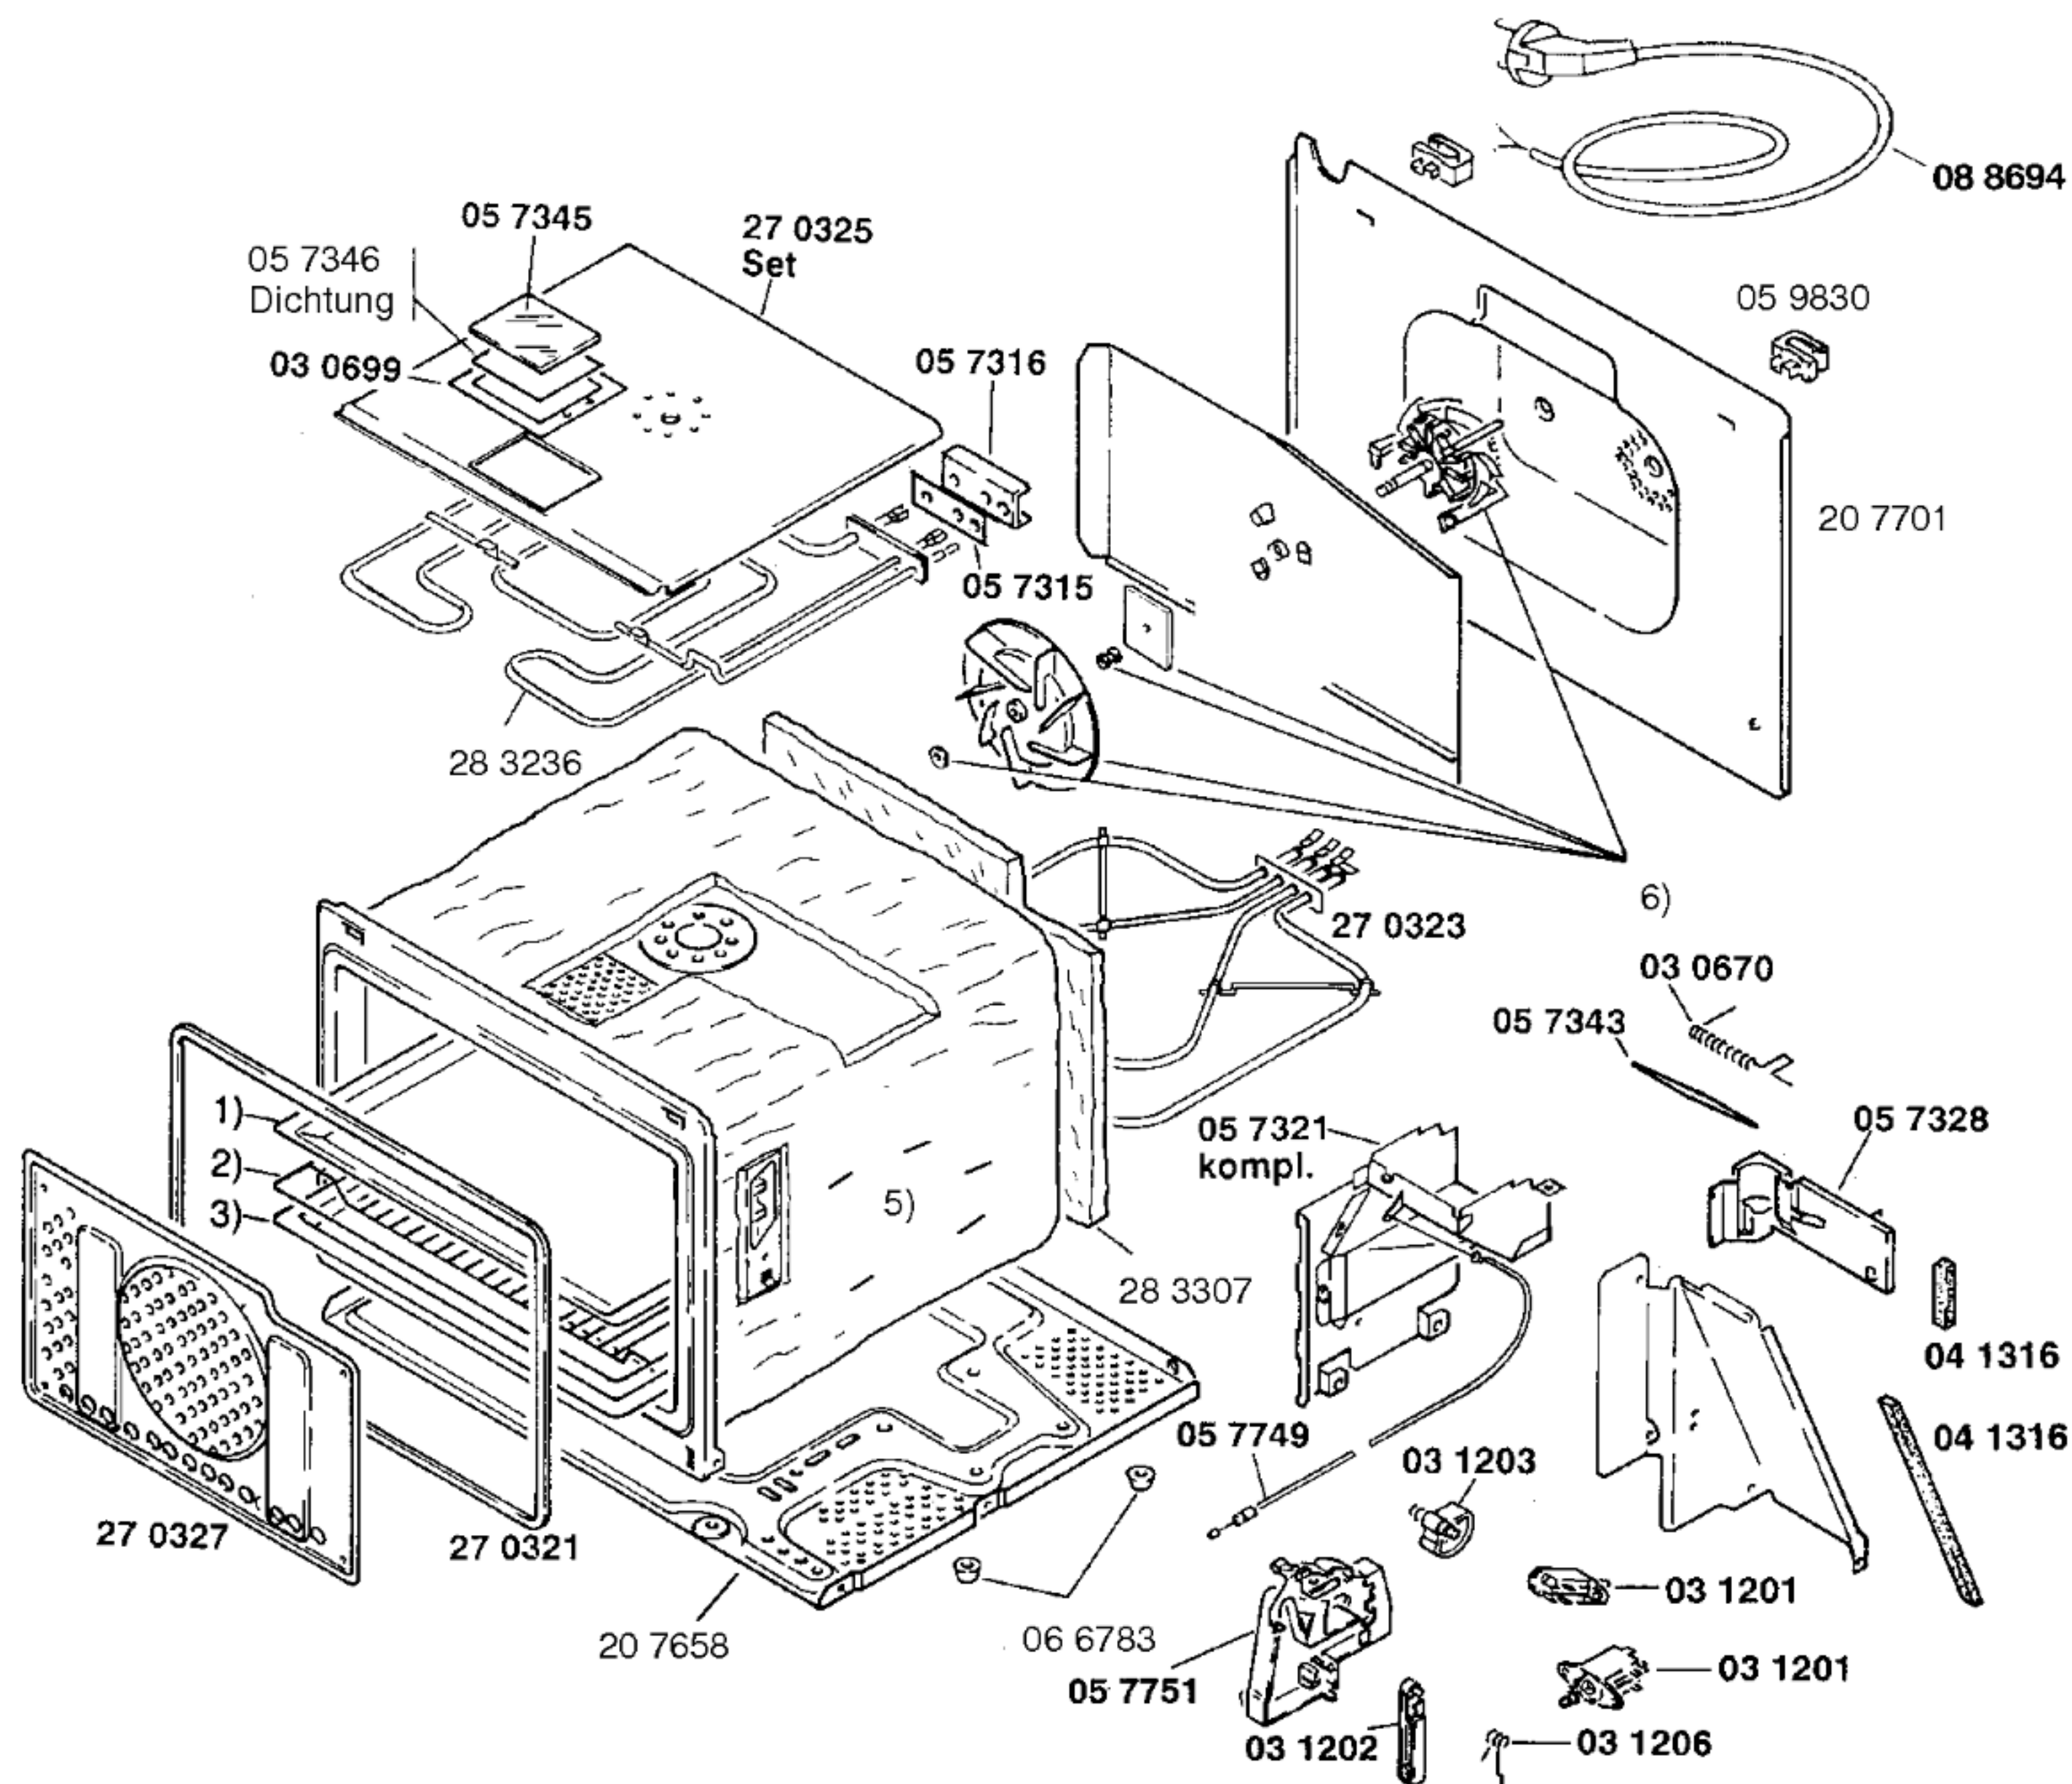

- 1) 11 4538
Backblech
 - 2) 11 4539
 - 3) 11 4537
Glasschale
 - 5) 23 2269
Set
 - 6) 09 2677
- 02 8732
Anschlag-Backblech

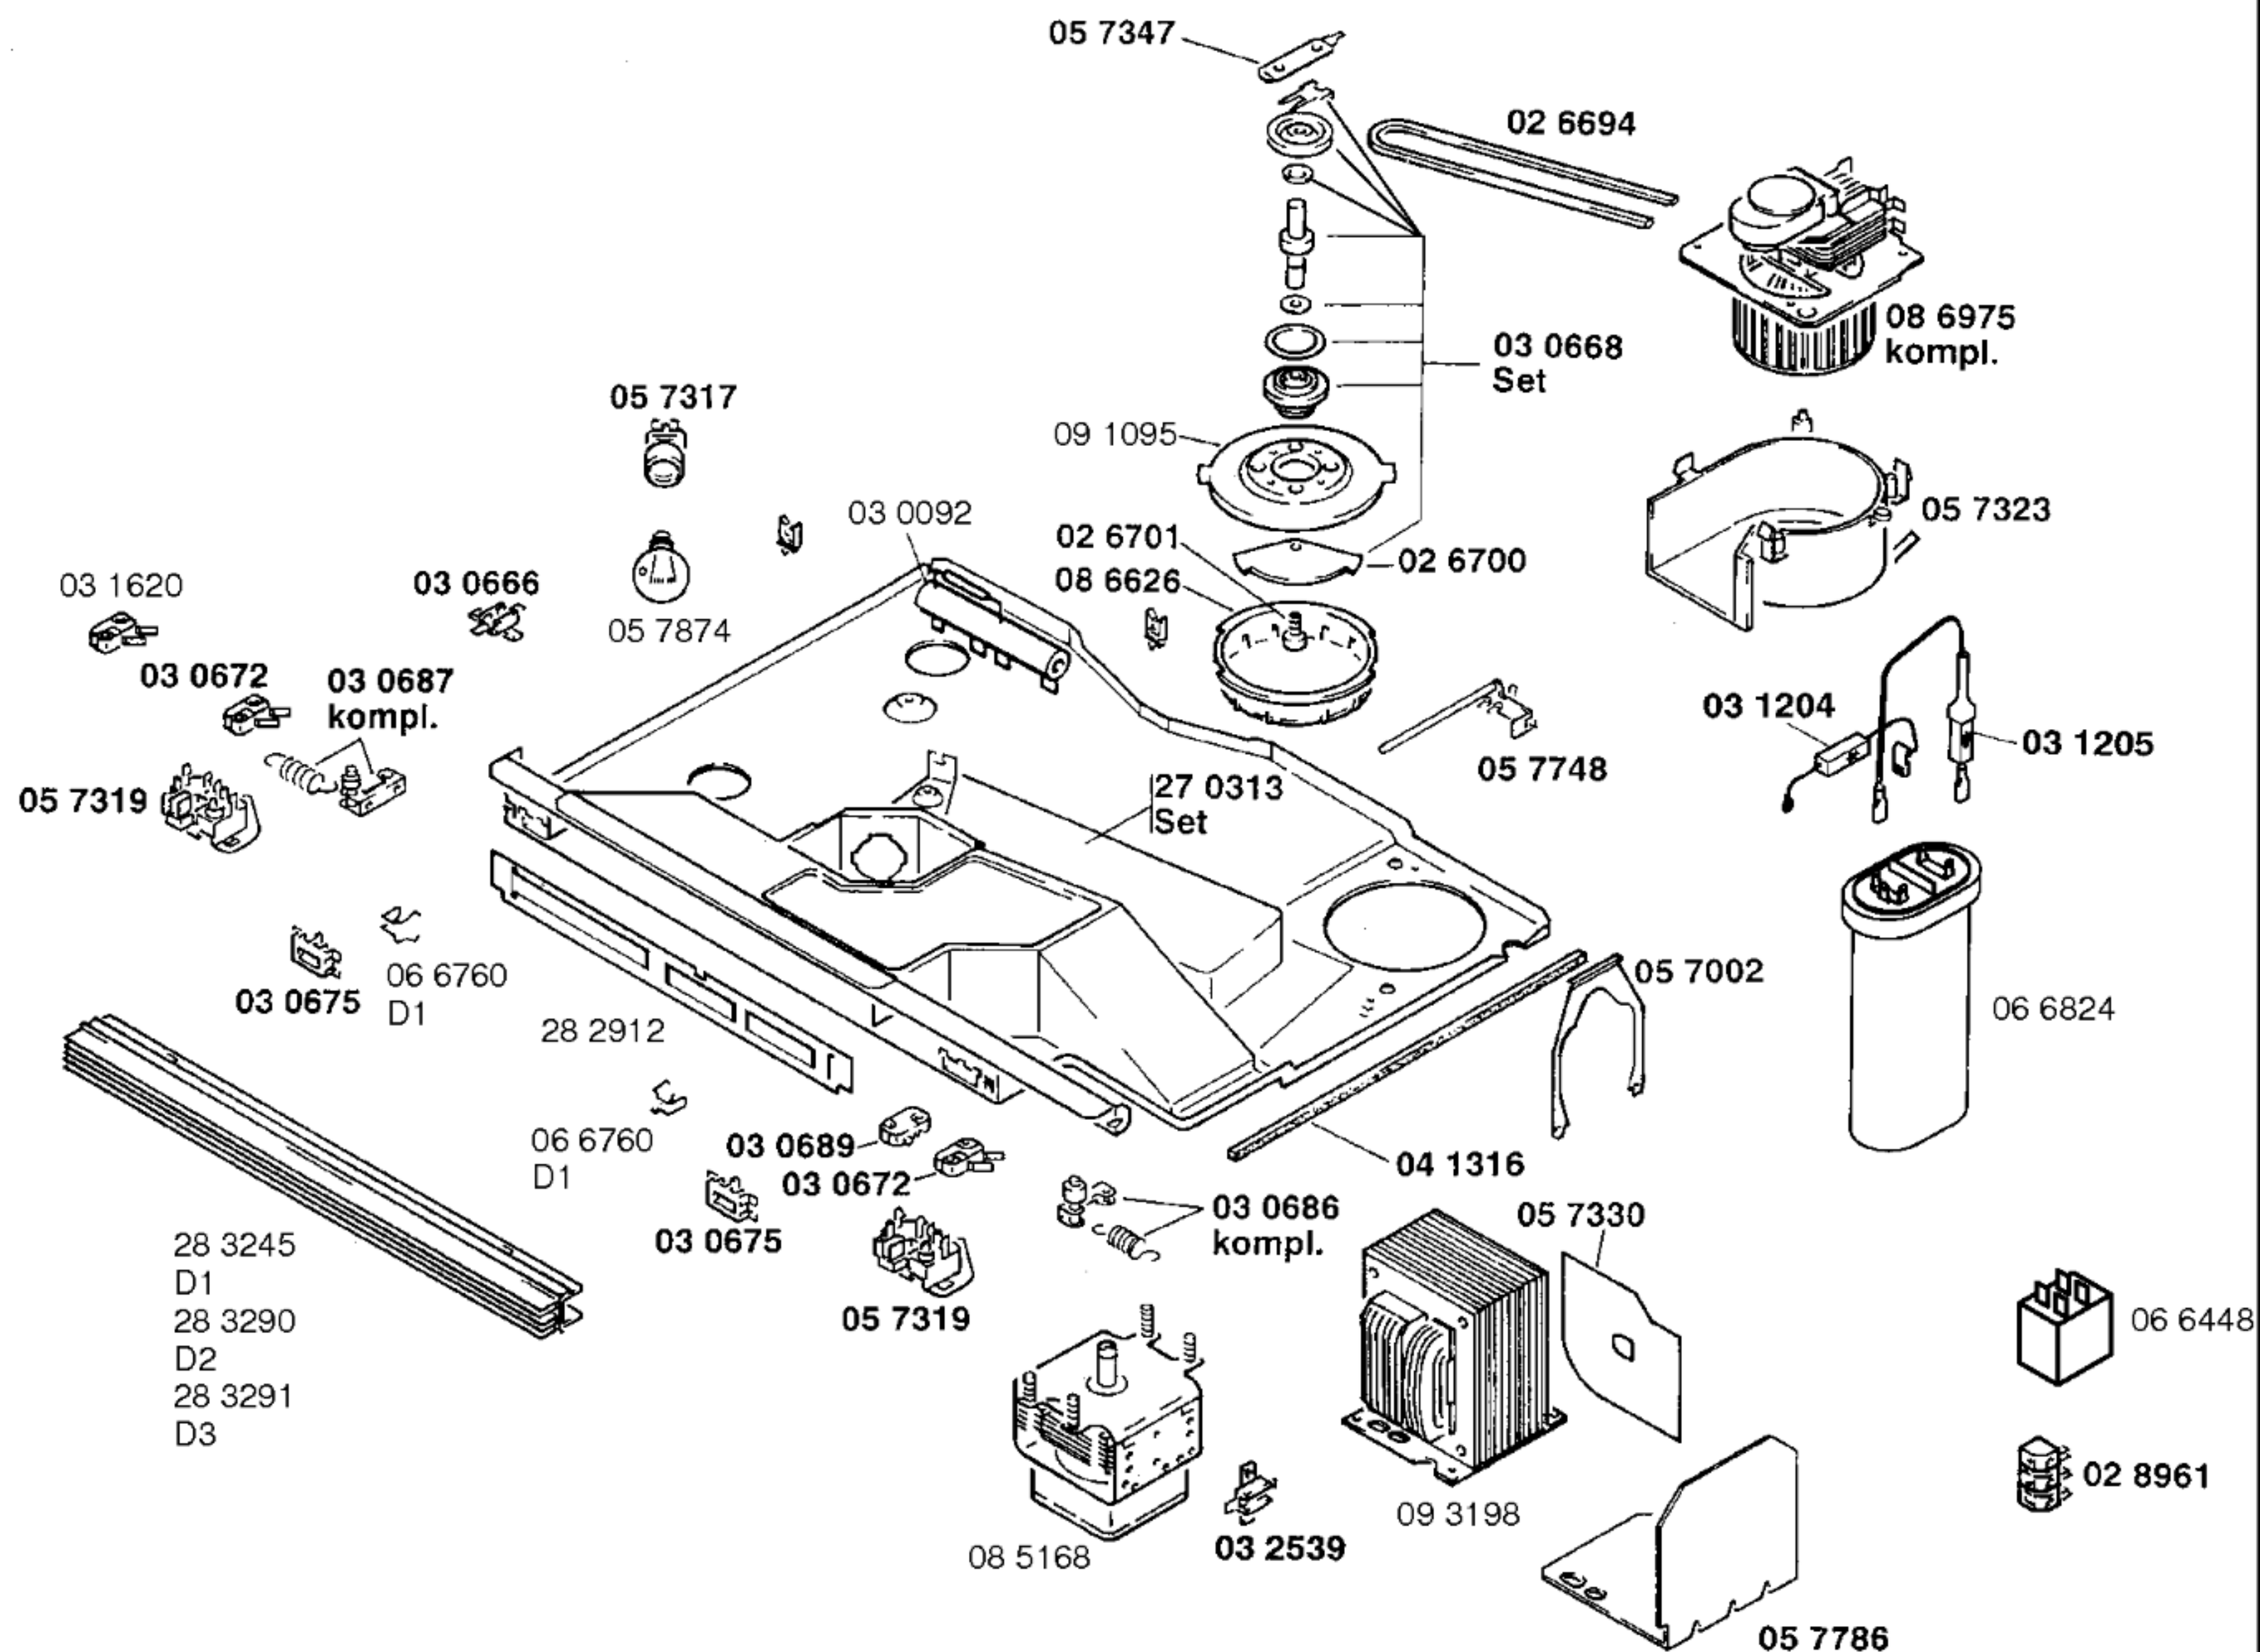

1) 06 6979

