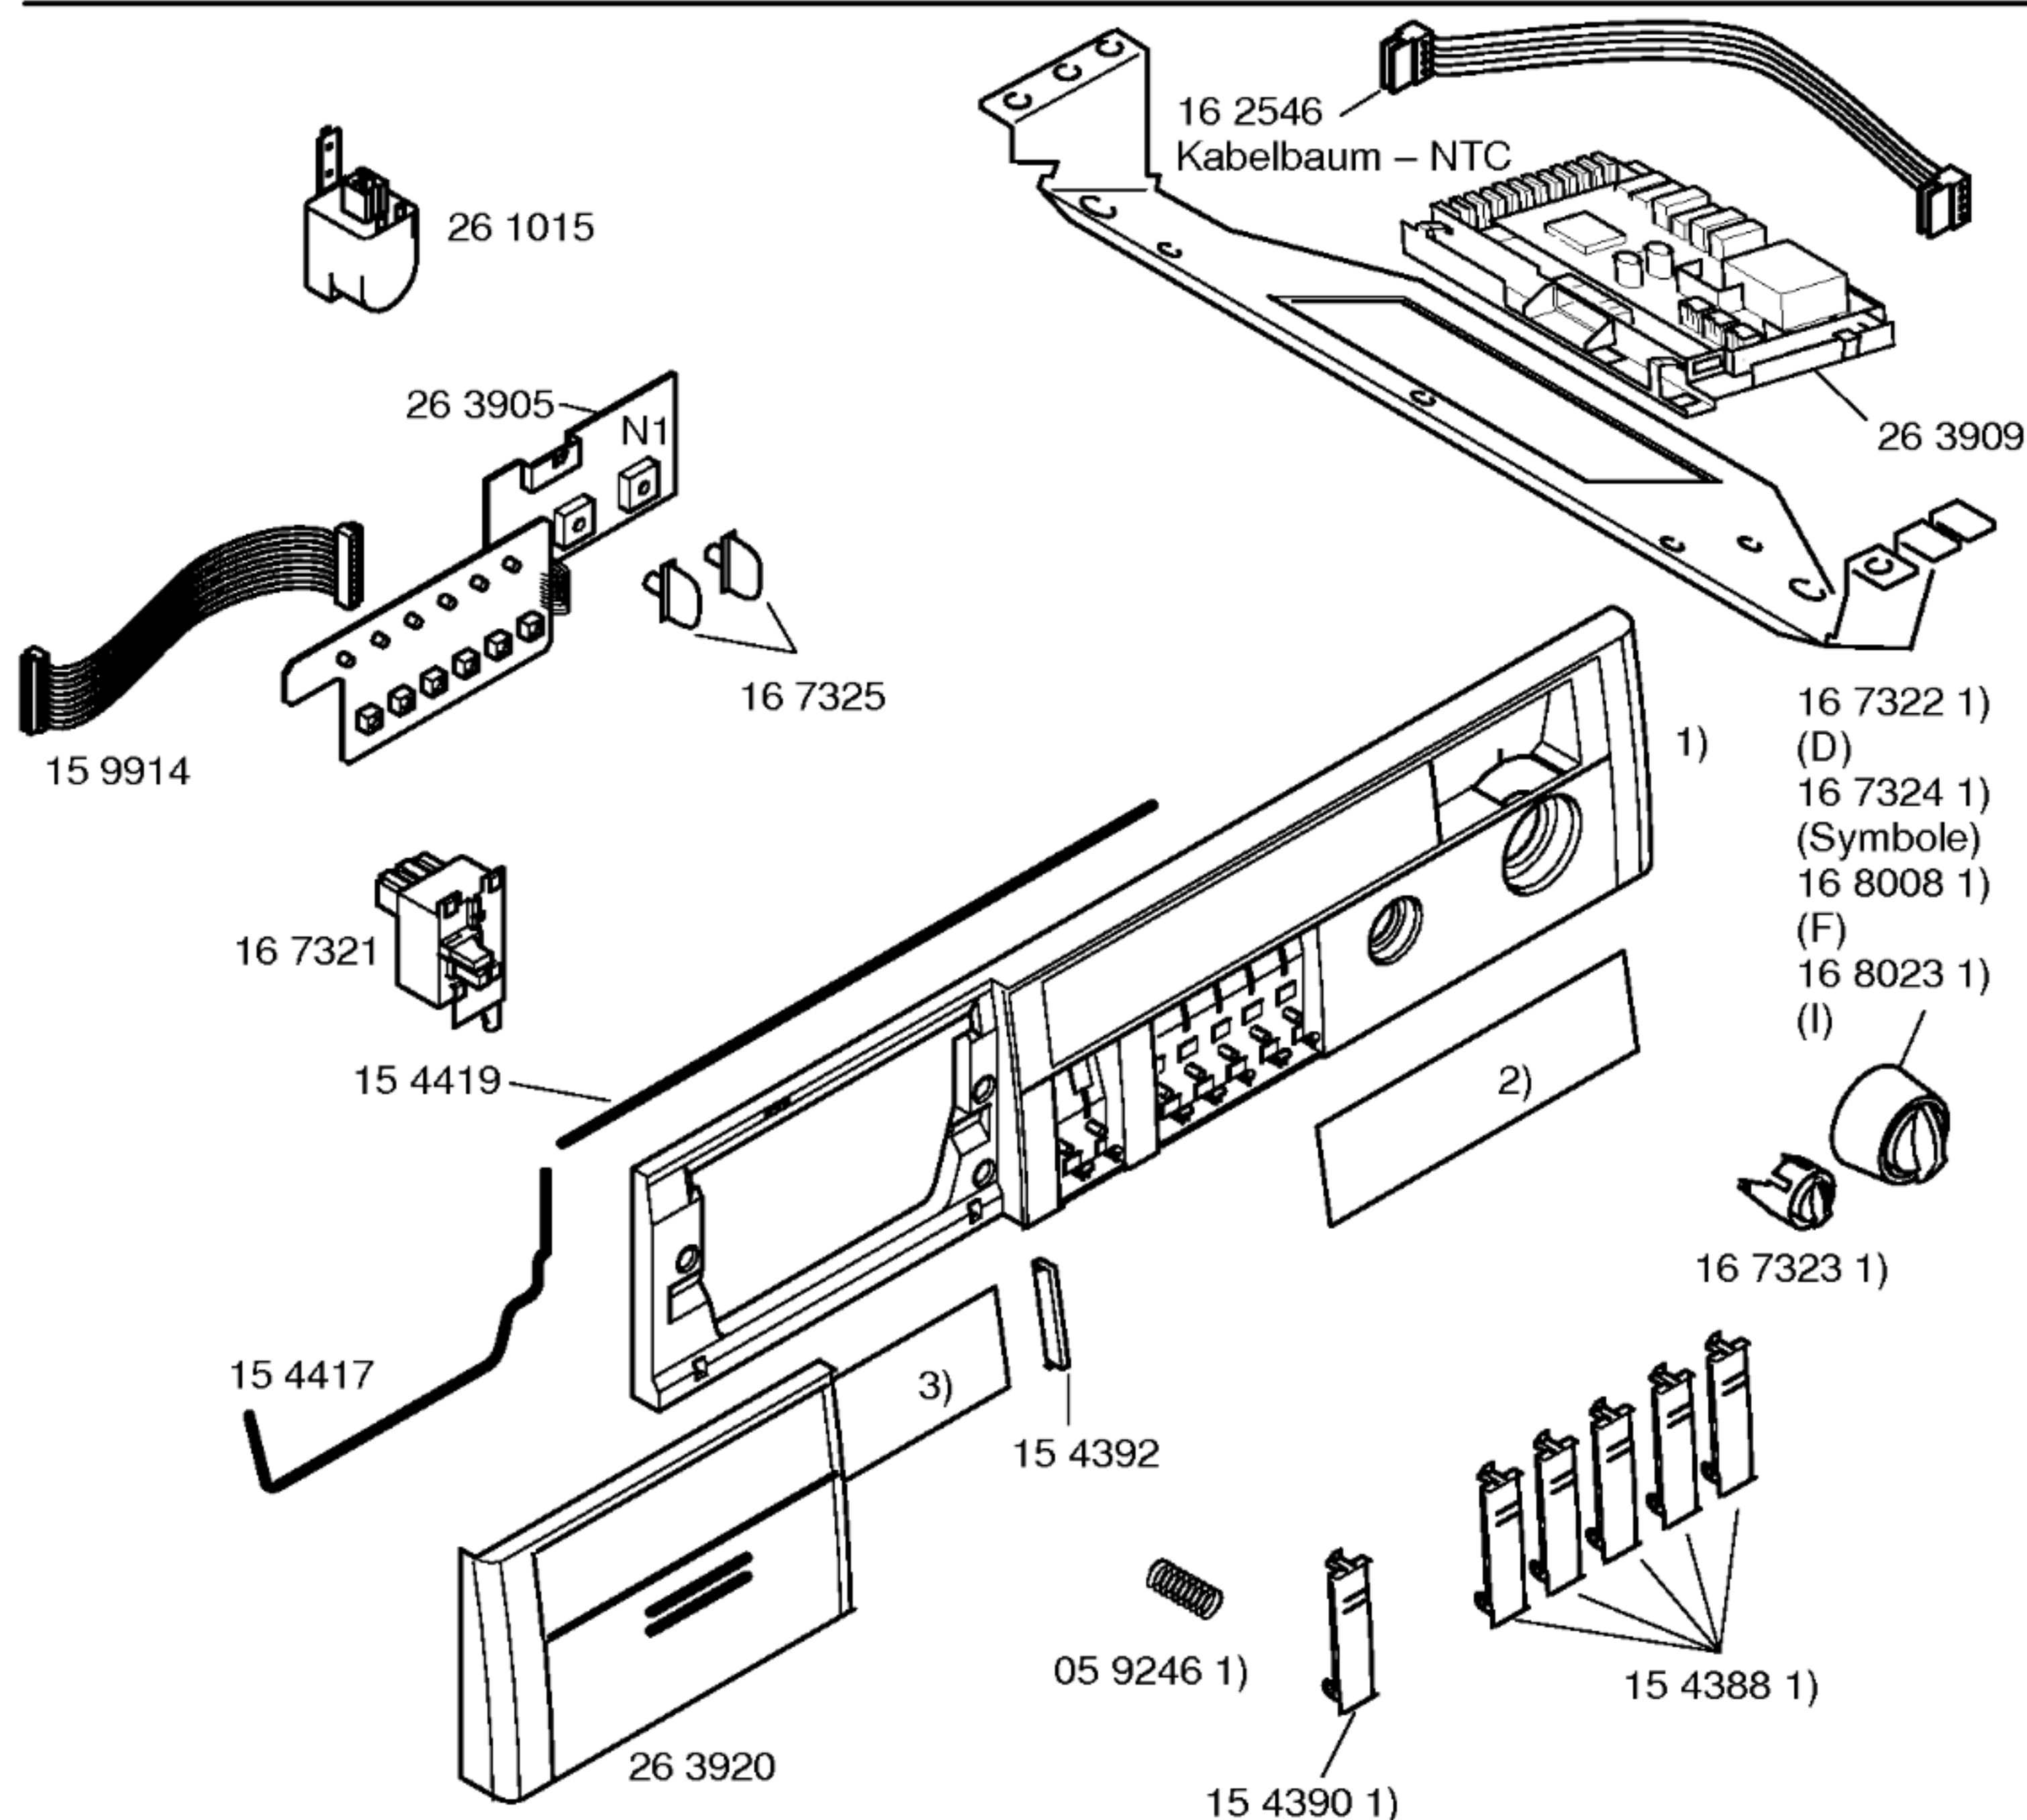


Mat. – Nr. – Konstante
3740

Gebrauchsanweisung	
52 0807	52 1125
(D)	(E)
520808	52 1126
(NL)	(P)
52 0809	52 1123
(F)	(F)
V02	V03
52 0810	52 1127
(GB)	(GR)
51 1141	
(I)	

Aufstellanweisung
52 0462
(D)
52 0460
(NL,F,GB)
52 0459
(I,P,E)
52 0463
(GR)

Programmtabelle	
52 0811	52 1128
(D)	(E)
52 0812	52 1129
(NL)	(P)
52 0813	52 1124
(F)	(F)
V02	V03
52 0814	52 1130
(GB)	(GR)
51 1142	
(I)	


1) Blende komplett
35 0572
Blendeneinlage 2) u.
Drehgriff-Programm
mitbestellen

**BOSCH**

WFK 2001 – WFK2001/01–V01
 WFK 2001 – WFK2001FG/01–V02
 WFK 2001 – WFK2001FF/01–V03
 WFK 2001 – WFK2001IE/01–V04

WFK 2001 – WFK2001II/01–V05

WASCHGERÄTE
 Waschvollautomaten

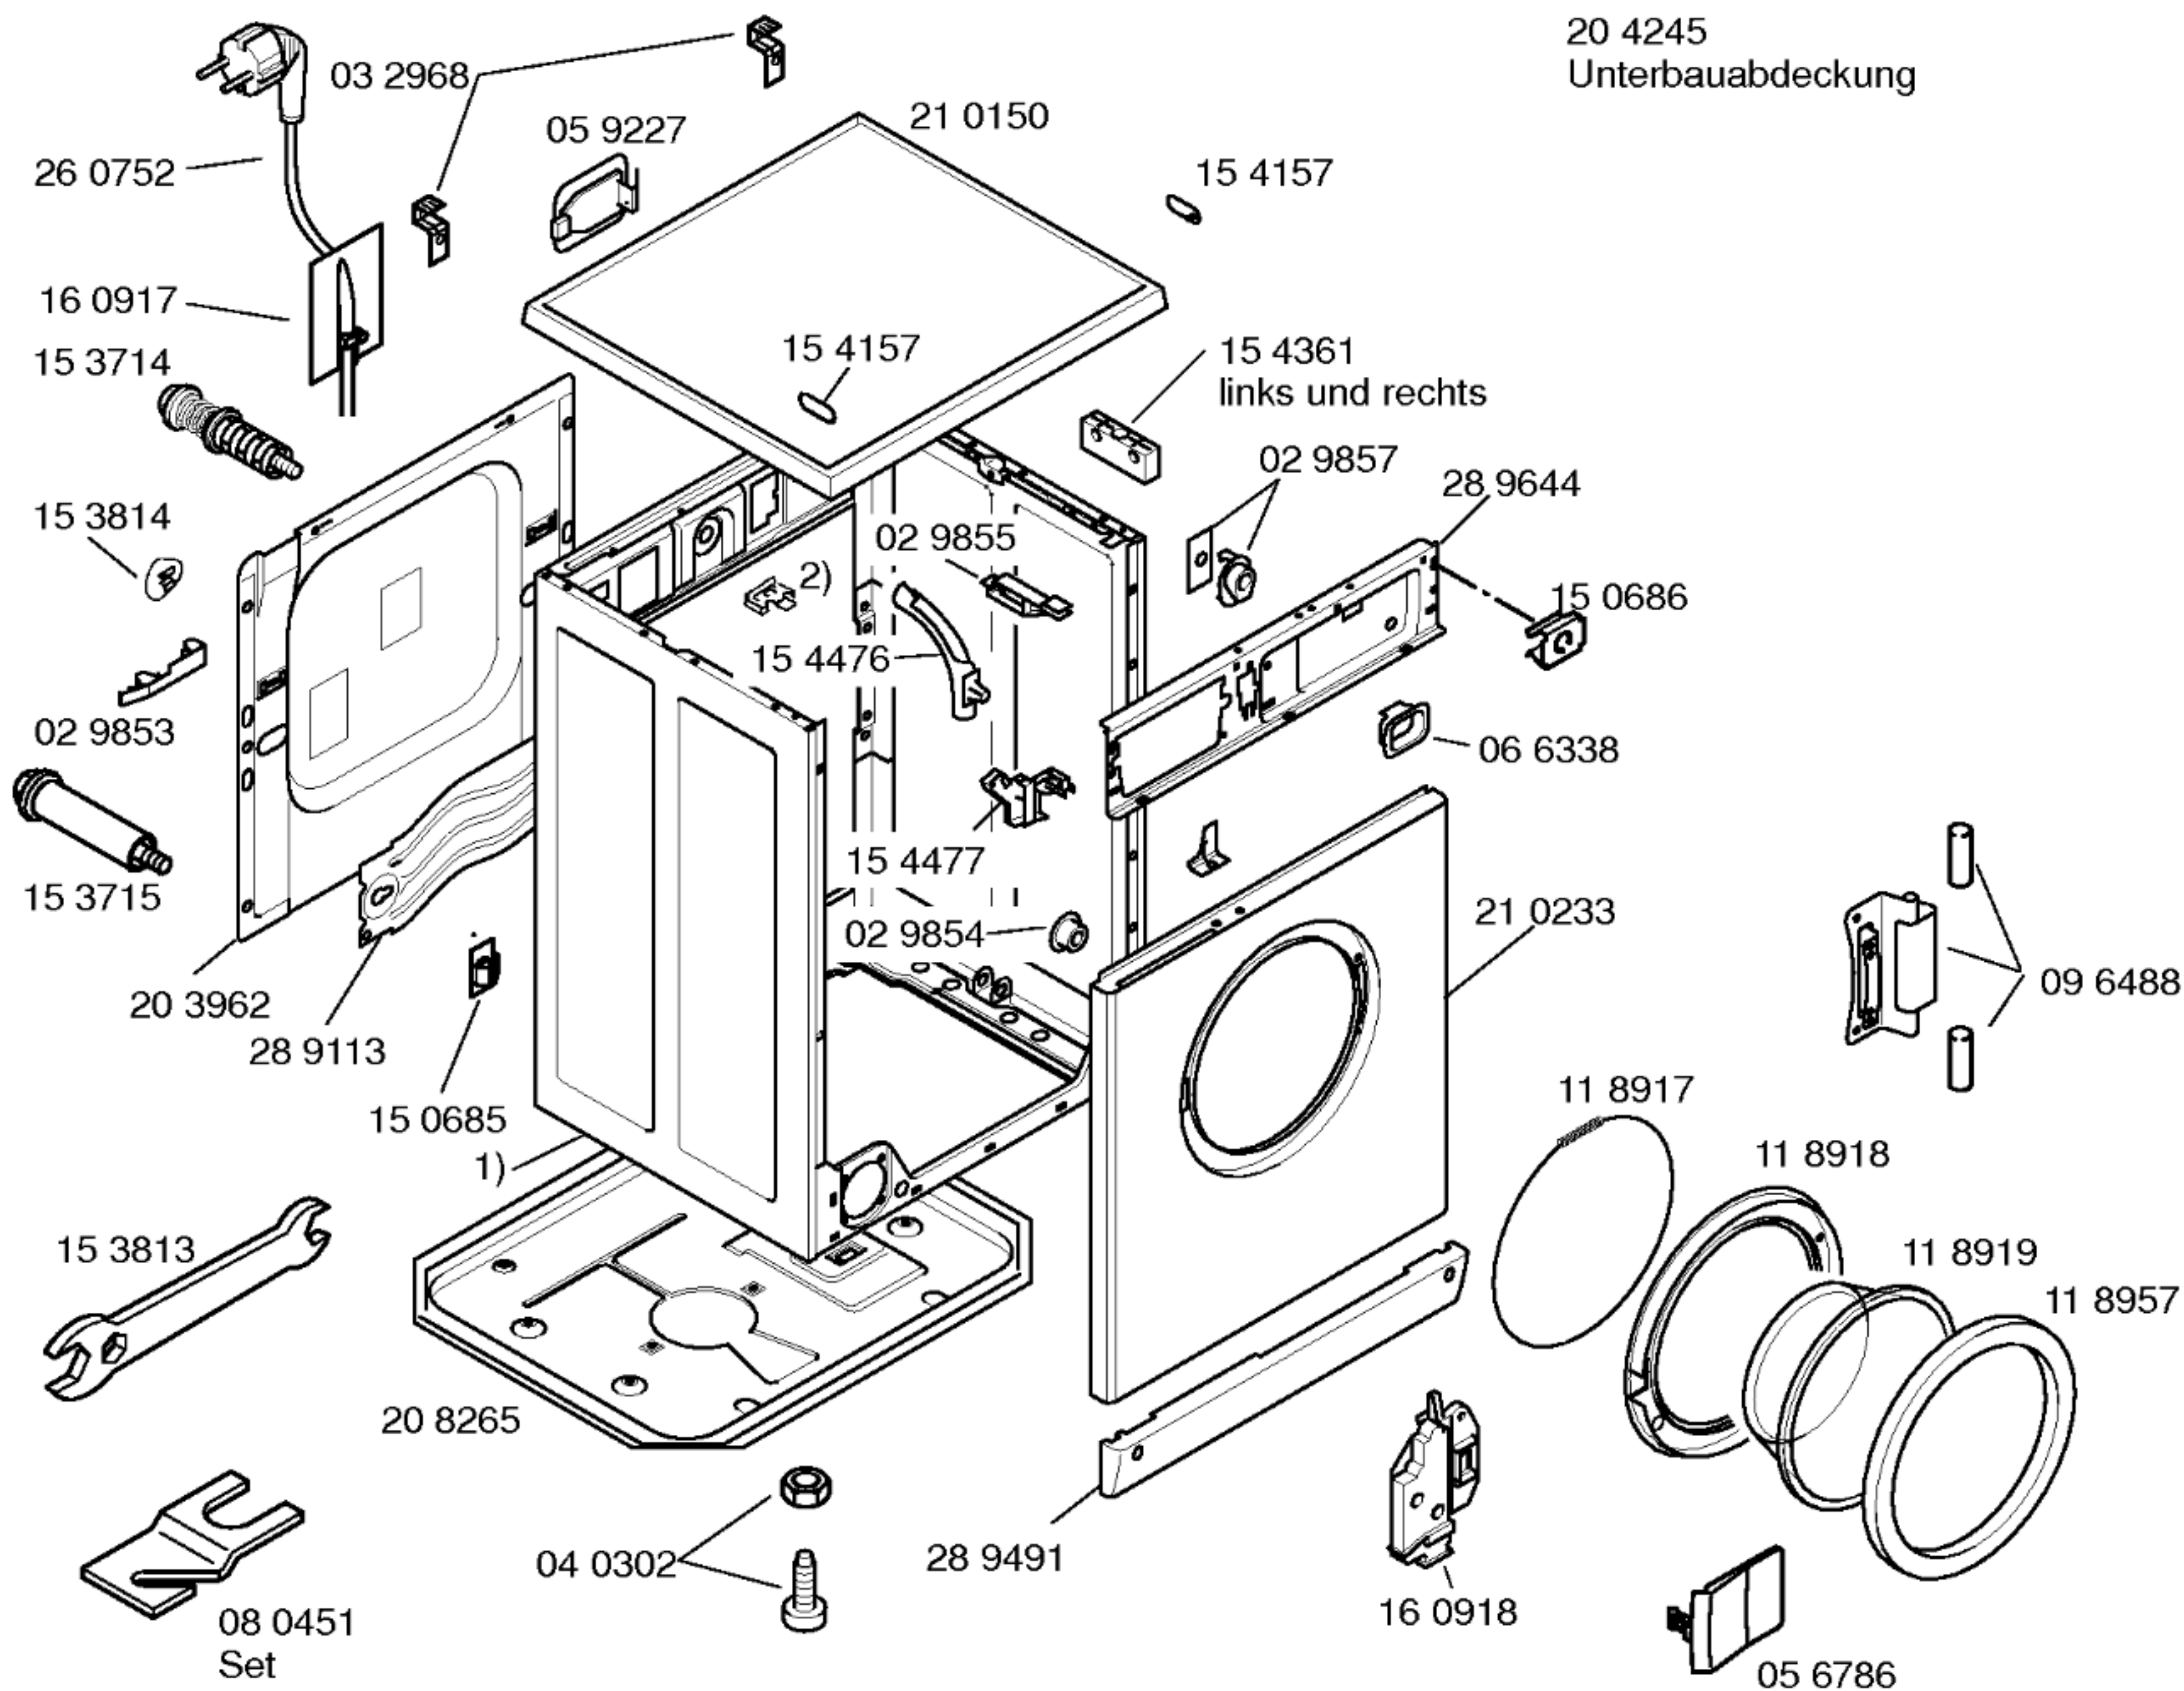

Mat. – Nr. – Konstante
 3740

- 1) 23 3134
- 2) 02 9856

Zubehör:

Verbindungssatz für
 Wasch/Trockensäulen
 WTZ1120

Verlängerung
 Arbeitsplatte
 WMZ2320

Unterbaubehör
 WMZ2340/01

Bodenbefestigung
 WMZ2200


**BOSCH**

WFK 2001 – WFK2001/01–V01
 WFK 2001 – WFK2001FG/01–V02
 WFK 2001 – WFK2001FF/01–V03
 WFK 2001 – WFK2001IE/01–V04

WFK 2001 – WFK2001II/01–V05

WASCHGERÄTE
 Waschvollautomaten

Mat. – Nr. – Konstante
 3740

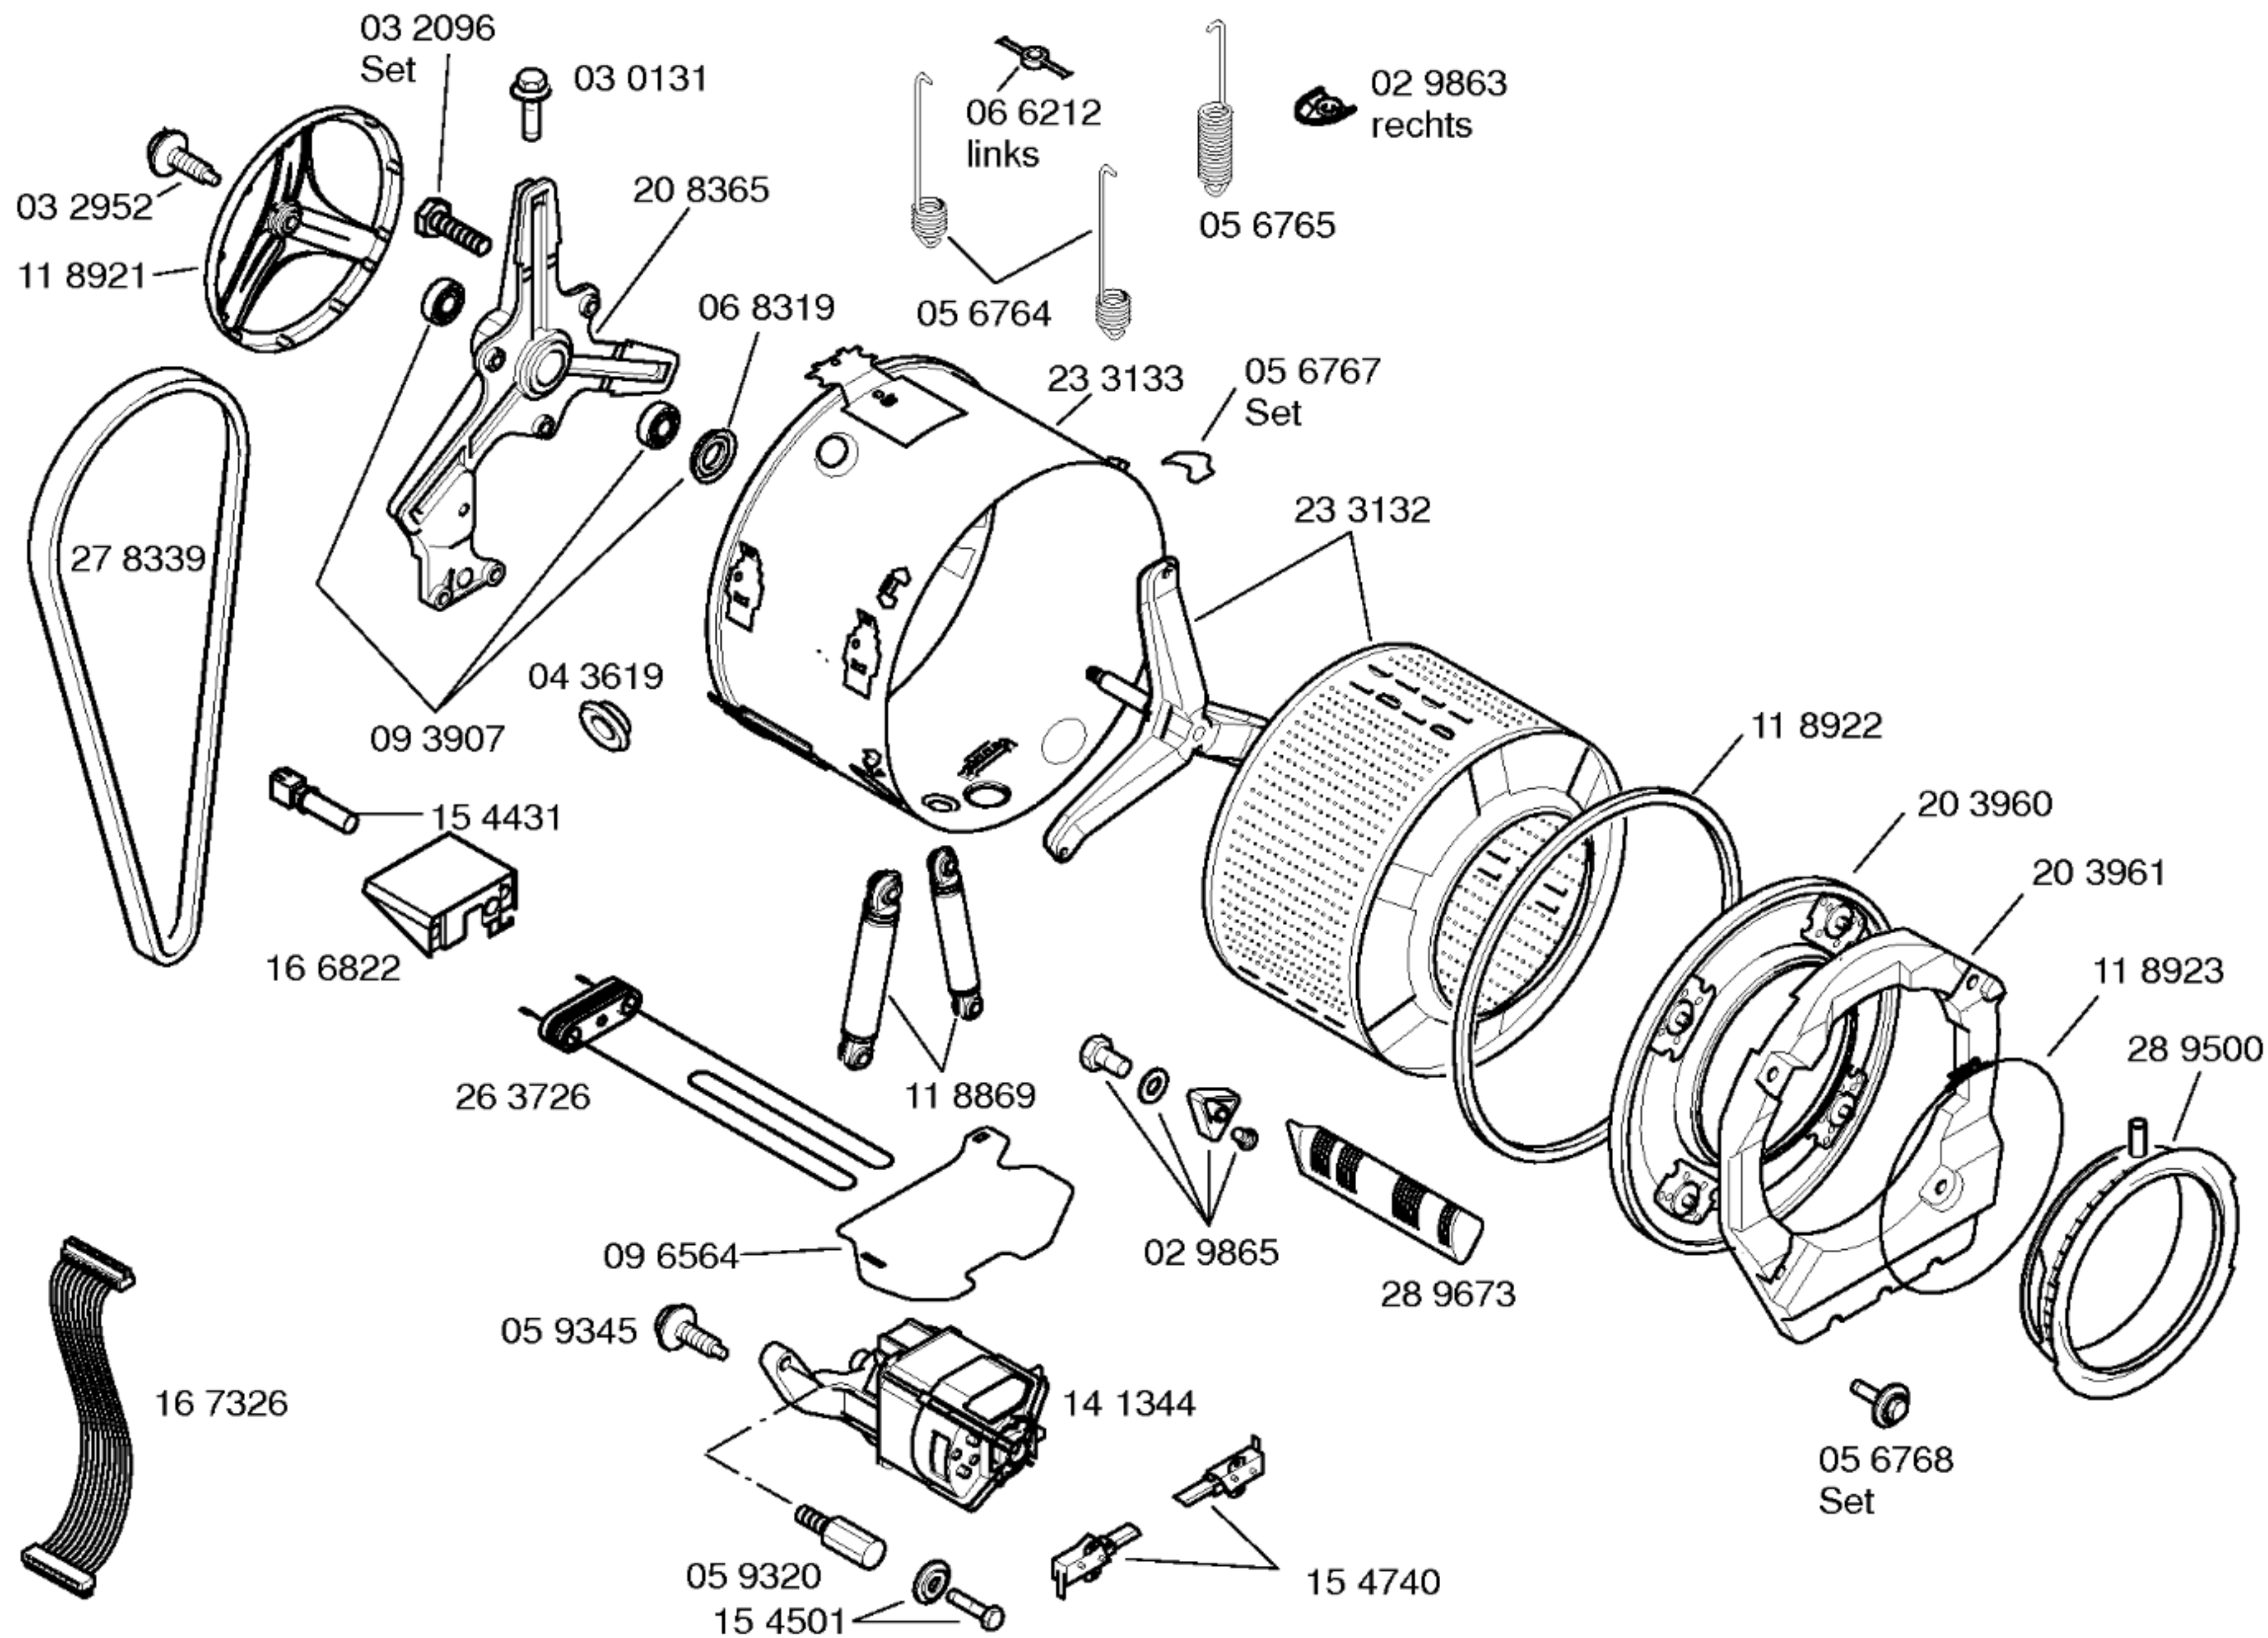

**BOSCH**

WFK 2001 – WFK2001/01–V01
 WFK 2001 – WFK2001FG/01–V02
 WFK 2001 – WFK2001FF/01–V03
 WFK 2001 – WFK2001IE/01–V04

WFK 2001 – WFK2001II/01–V05

WASCHGERÄTE
 Waschvollautomaten

Mat. – Nr. – Konstante
 3740

