


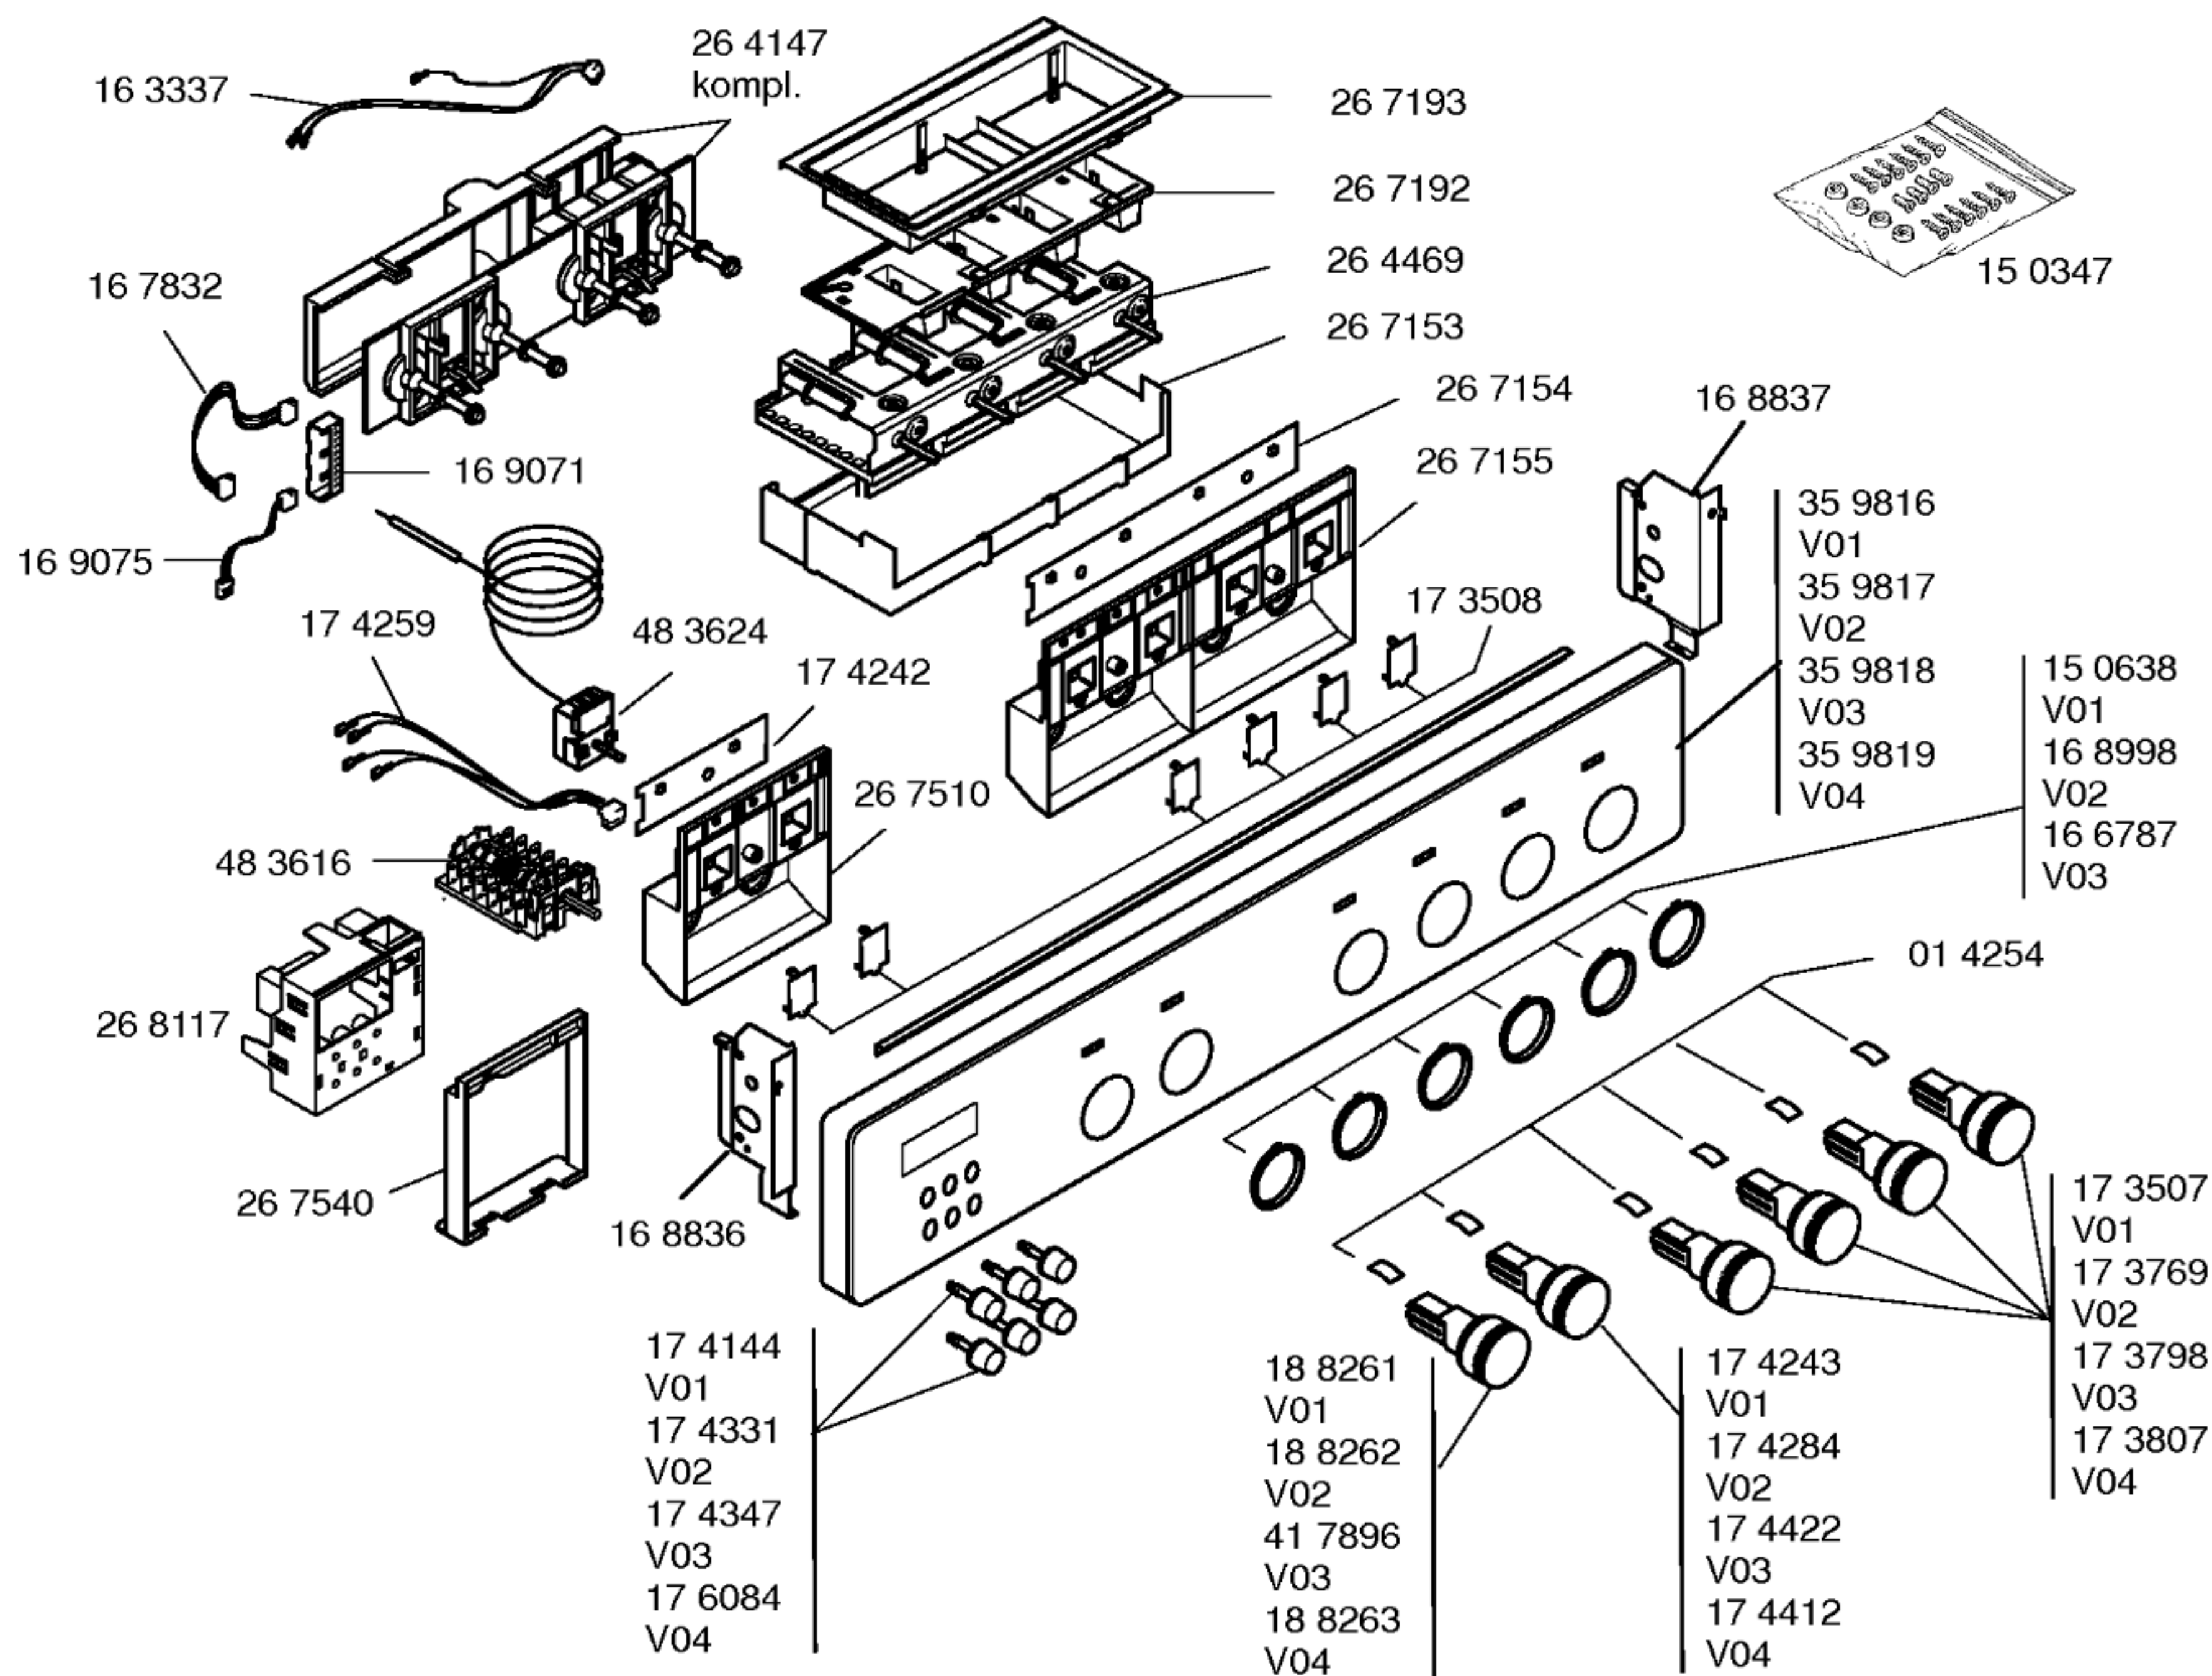

Gebrauchsanweisung

58 3727 (de)
58 3728 (nl)
58 2429 (el)
58 5042 (fr)*
58 5043 (it)*
58 5044 (ru)*
58 5045 (es)*
58 5046 (pl)*
58 5047 (hu)*


* nicht im
Lieferumfang

Montageanweisung:

52 4061
(de,en,fr,it,nl,da,sv,no
fi,es,pt,el,cs,pl,tr,ru)

Zubehoer:

HZ21004
Backblech Alu
HZ21101
Backblech emailliert
HZ21301
Universalpfanne
HZ21401
Kombirost
HZ22400
Einlegerost
HZ22500
Grillblech
HZ9150
Glasbraeter
HZ26000
Metallbraeter
HZ26001
Backform
Auslaufsicher

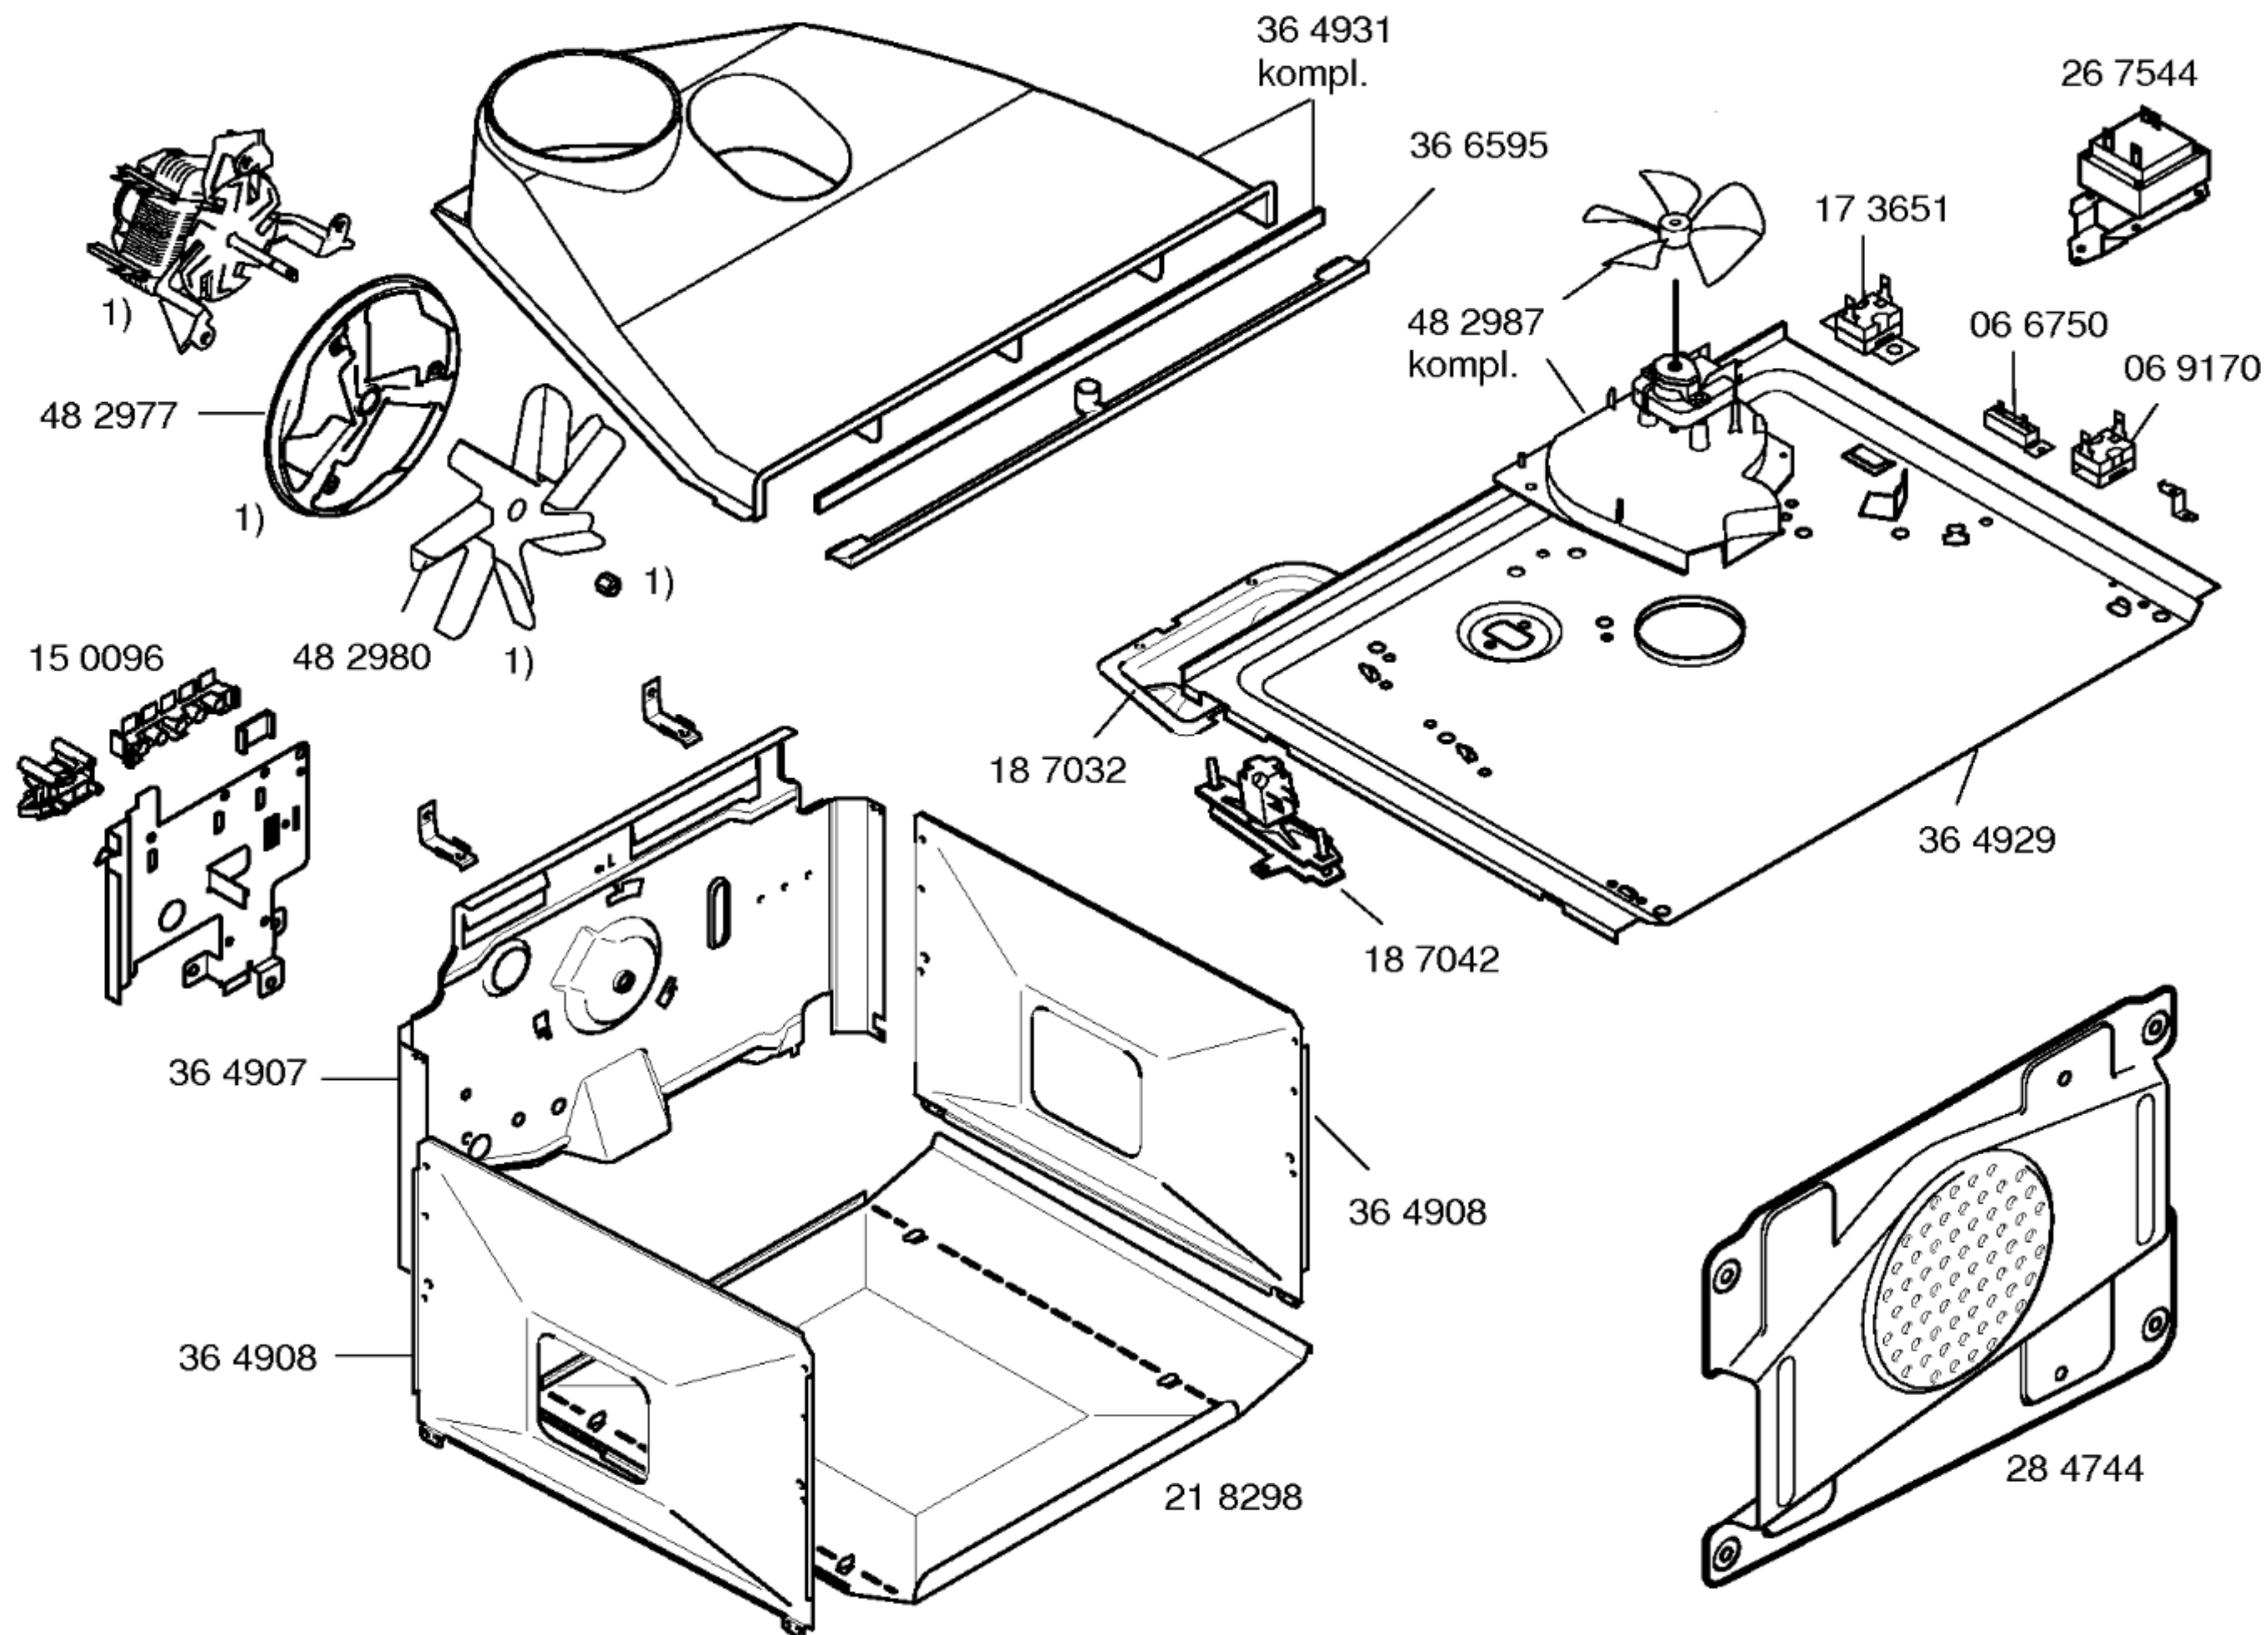

1) 48 2981
Set

