


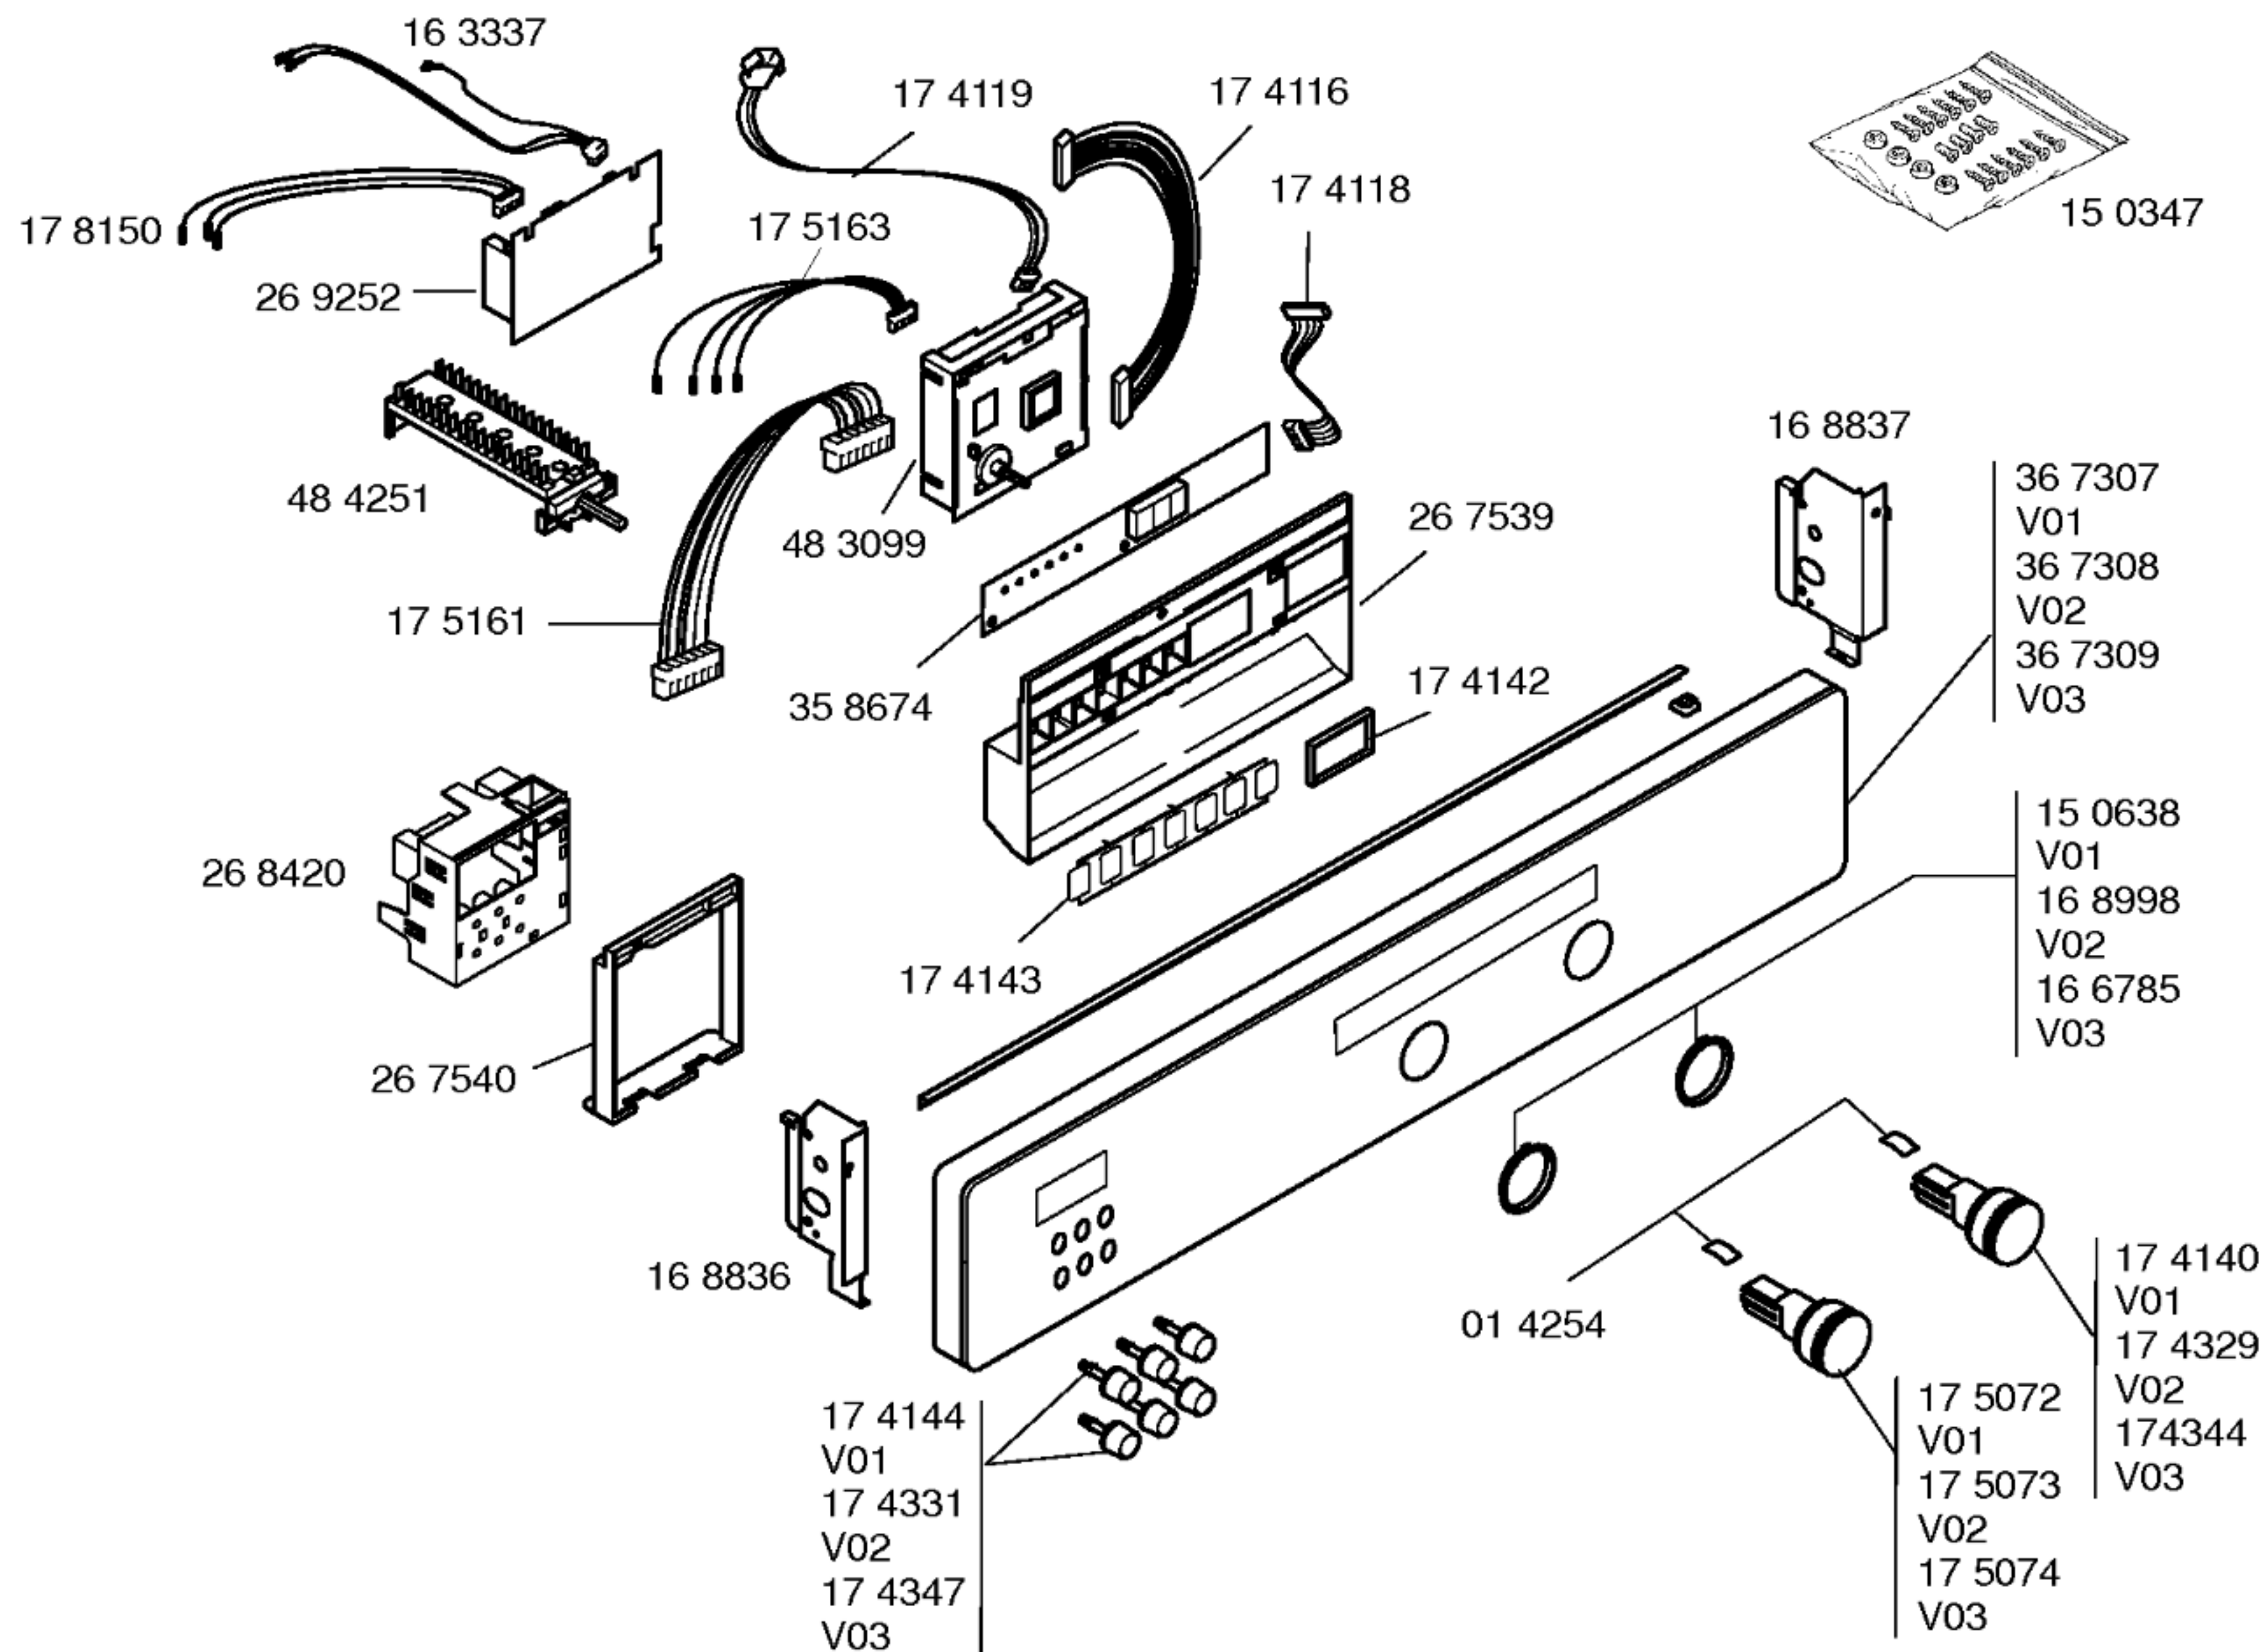

Gebrauchsanweisung

58 1587 (de)
58 1588 (nl)
58 1589 (it)
58 1590 (pl)
58 1591 (es)
58 1592 (pt)
58 3843 (fr)


Montageanweisung:

52 4904
(de,en,fr,it,nl,da,sv,no
fi,es,pt,el,cs,pl,tr,ru)

Zubehoer:


HZ24000
Backblech Alu
HZ24100
Backblech emailliert
HZ24200
Backblech (Auszug)
HZ24300
Universalpfanne
HZ24400
Kombirost
HZ22400
Einlege-Kombirost
HZ24700
Profipfanne
HZ24800
Profipfanne + Rost
HZ24701
Deckel f. Profipfanne
HZ22500
Grillblech




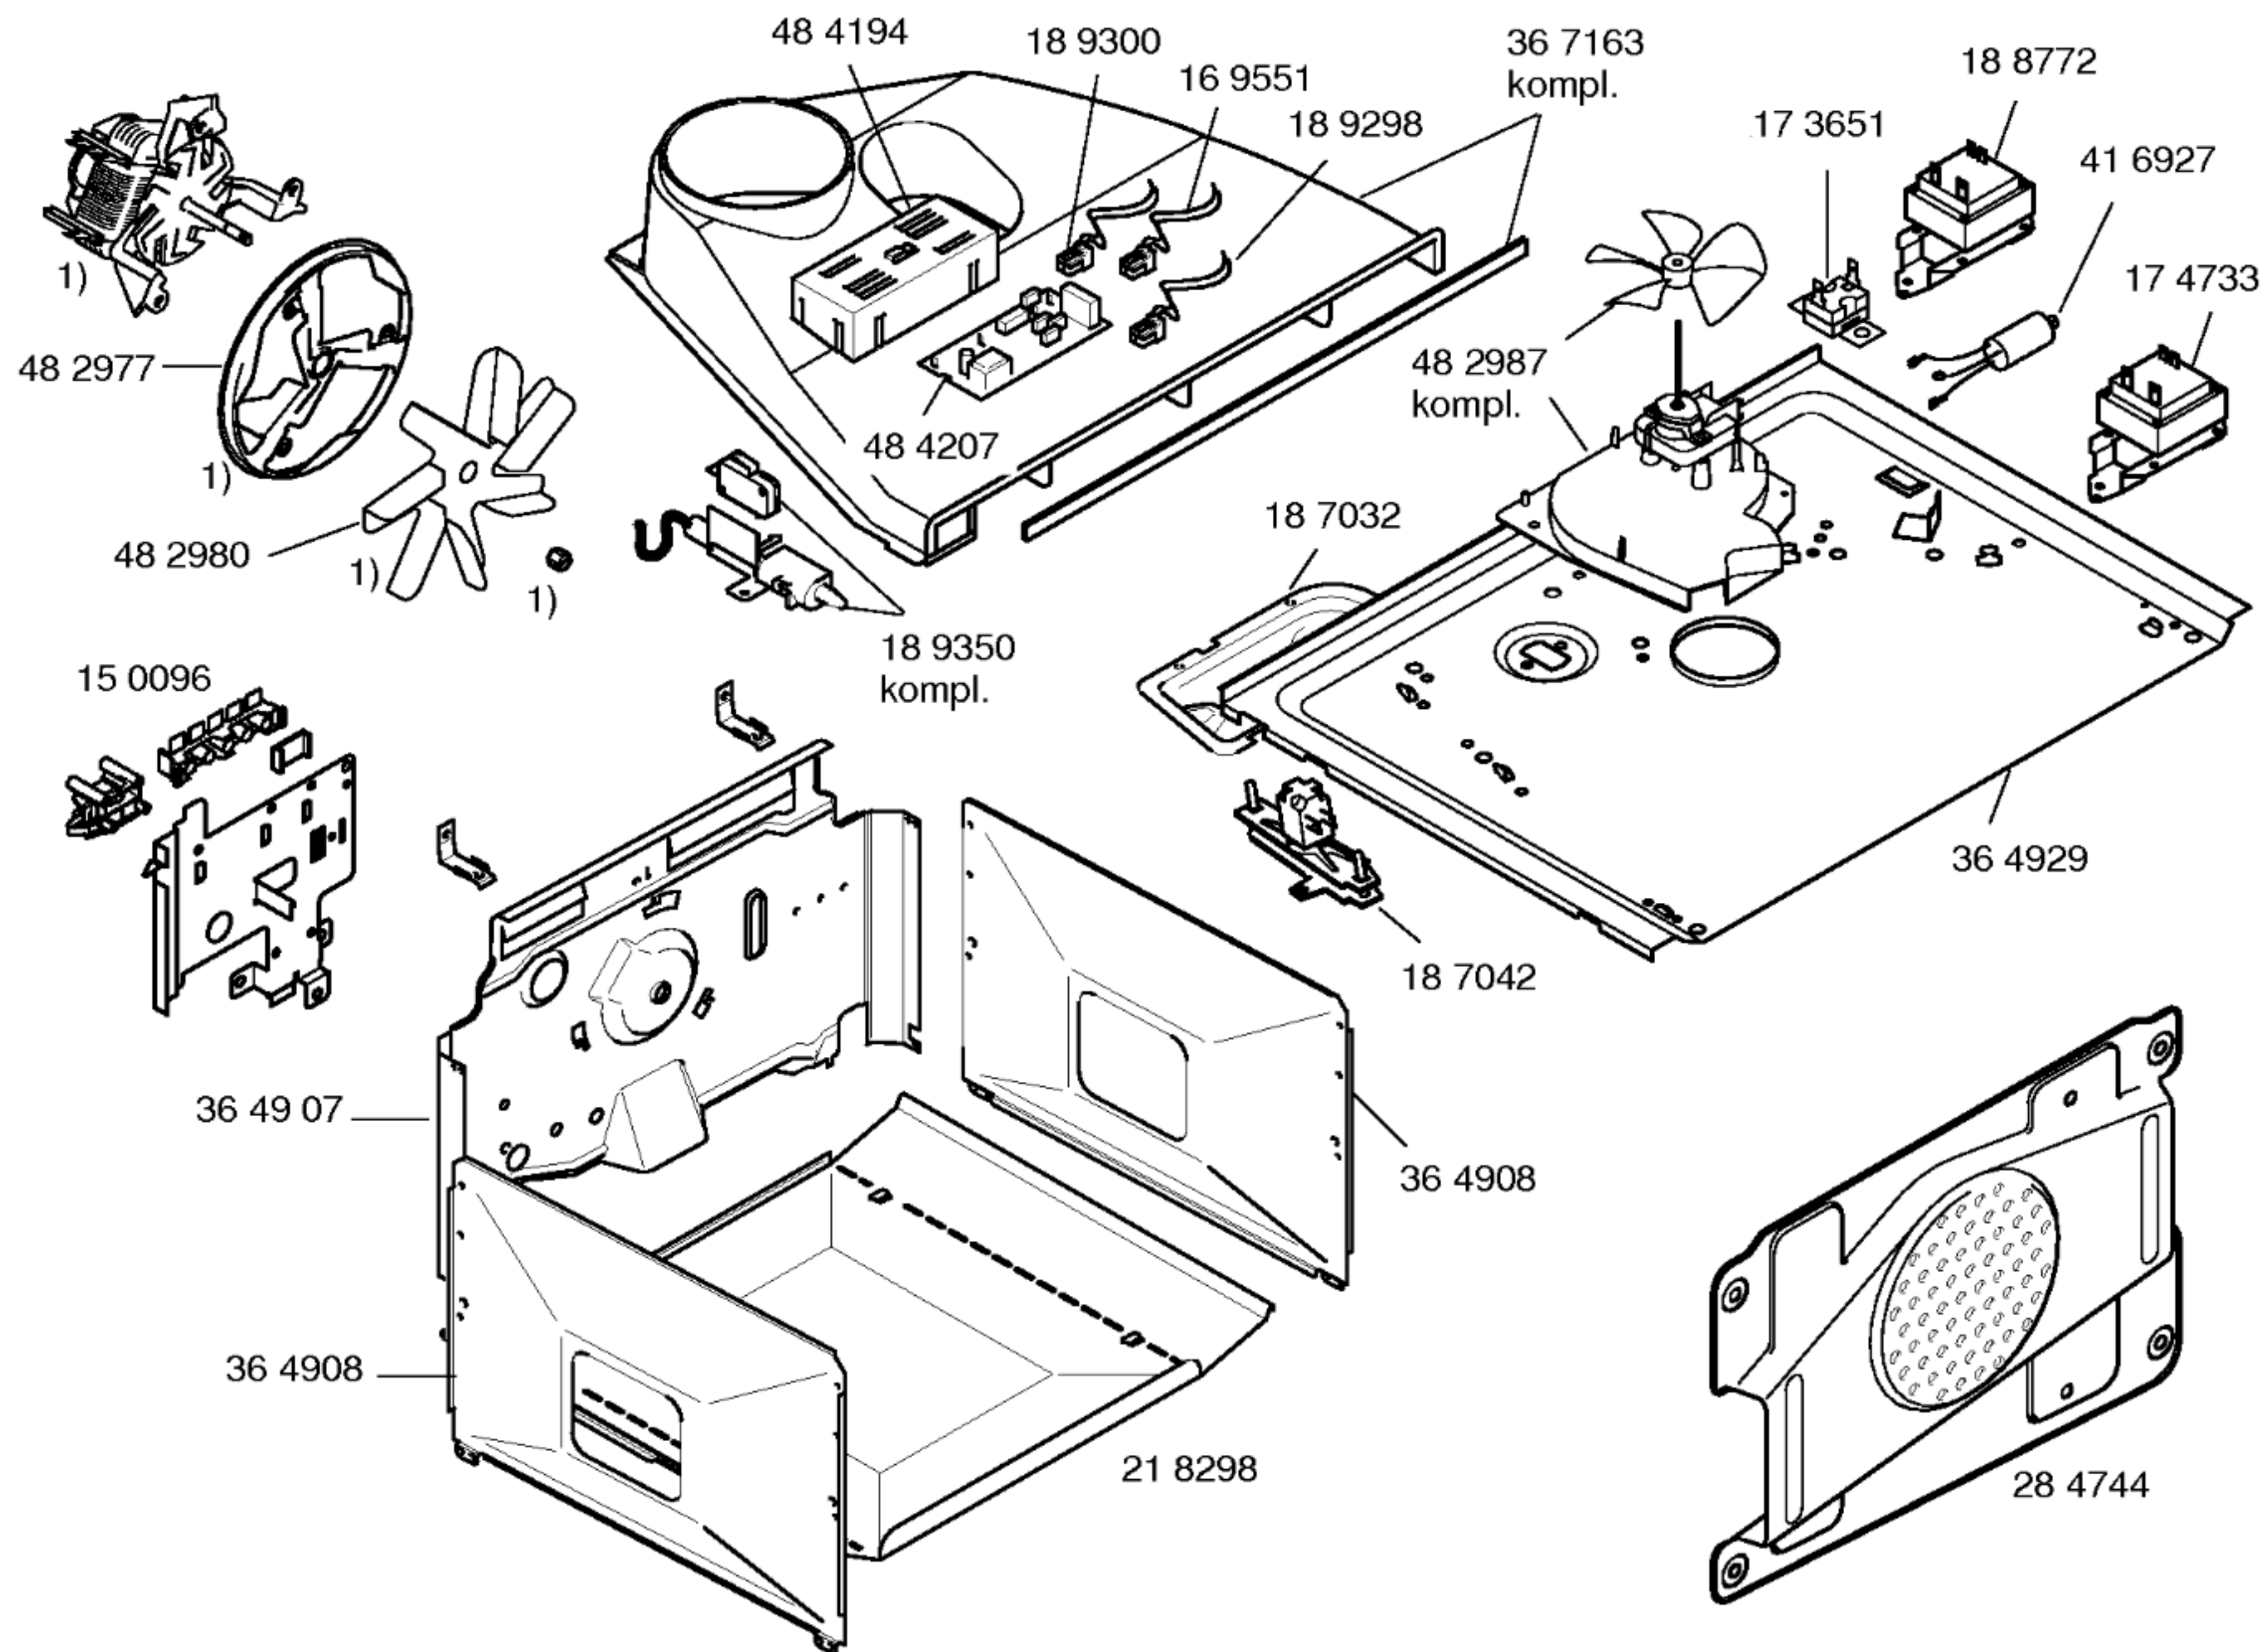

1) 48 2981
Set

Zubehoer:
HZ9150
Glasbraeter
HZ26000
Metallbraeter
HZ26001
Backform
Auslaufsicher

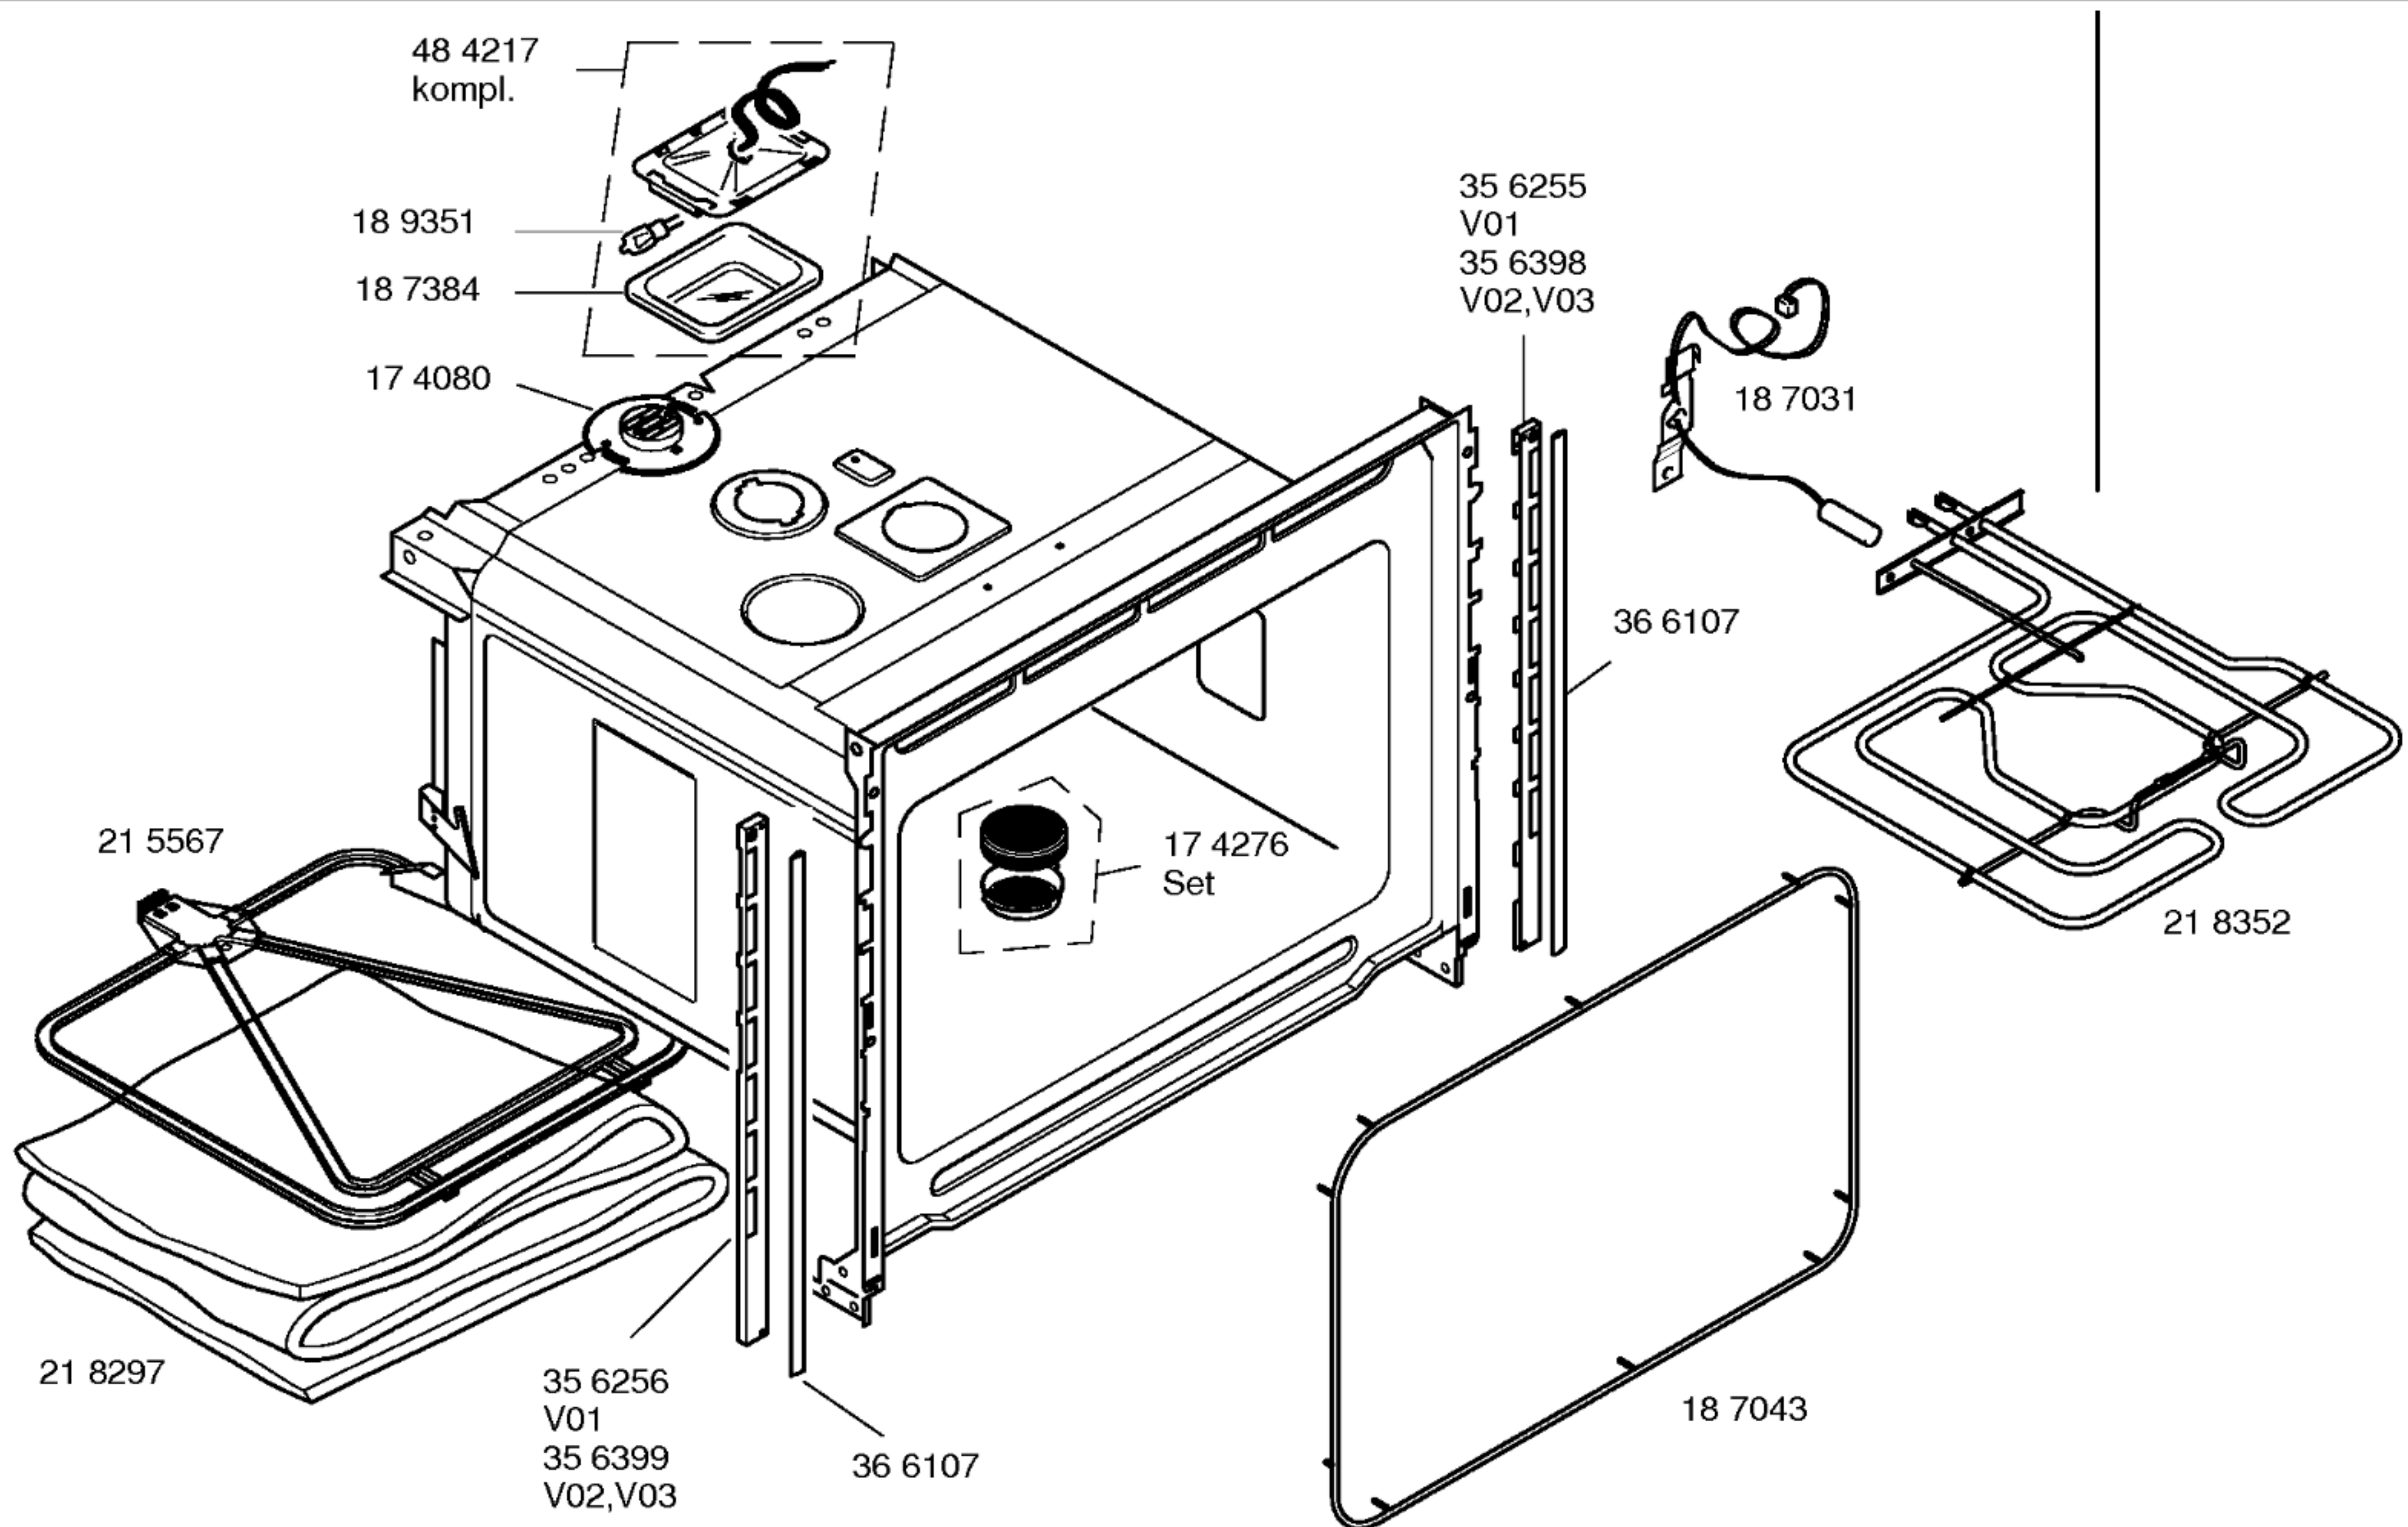

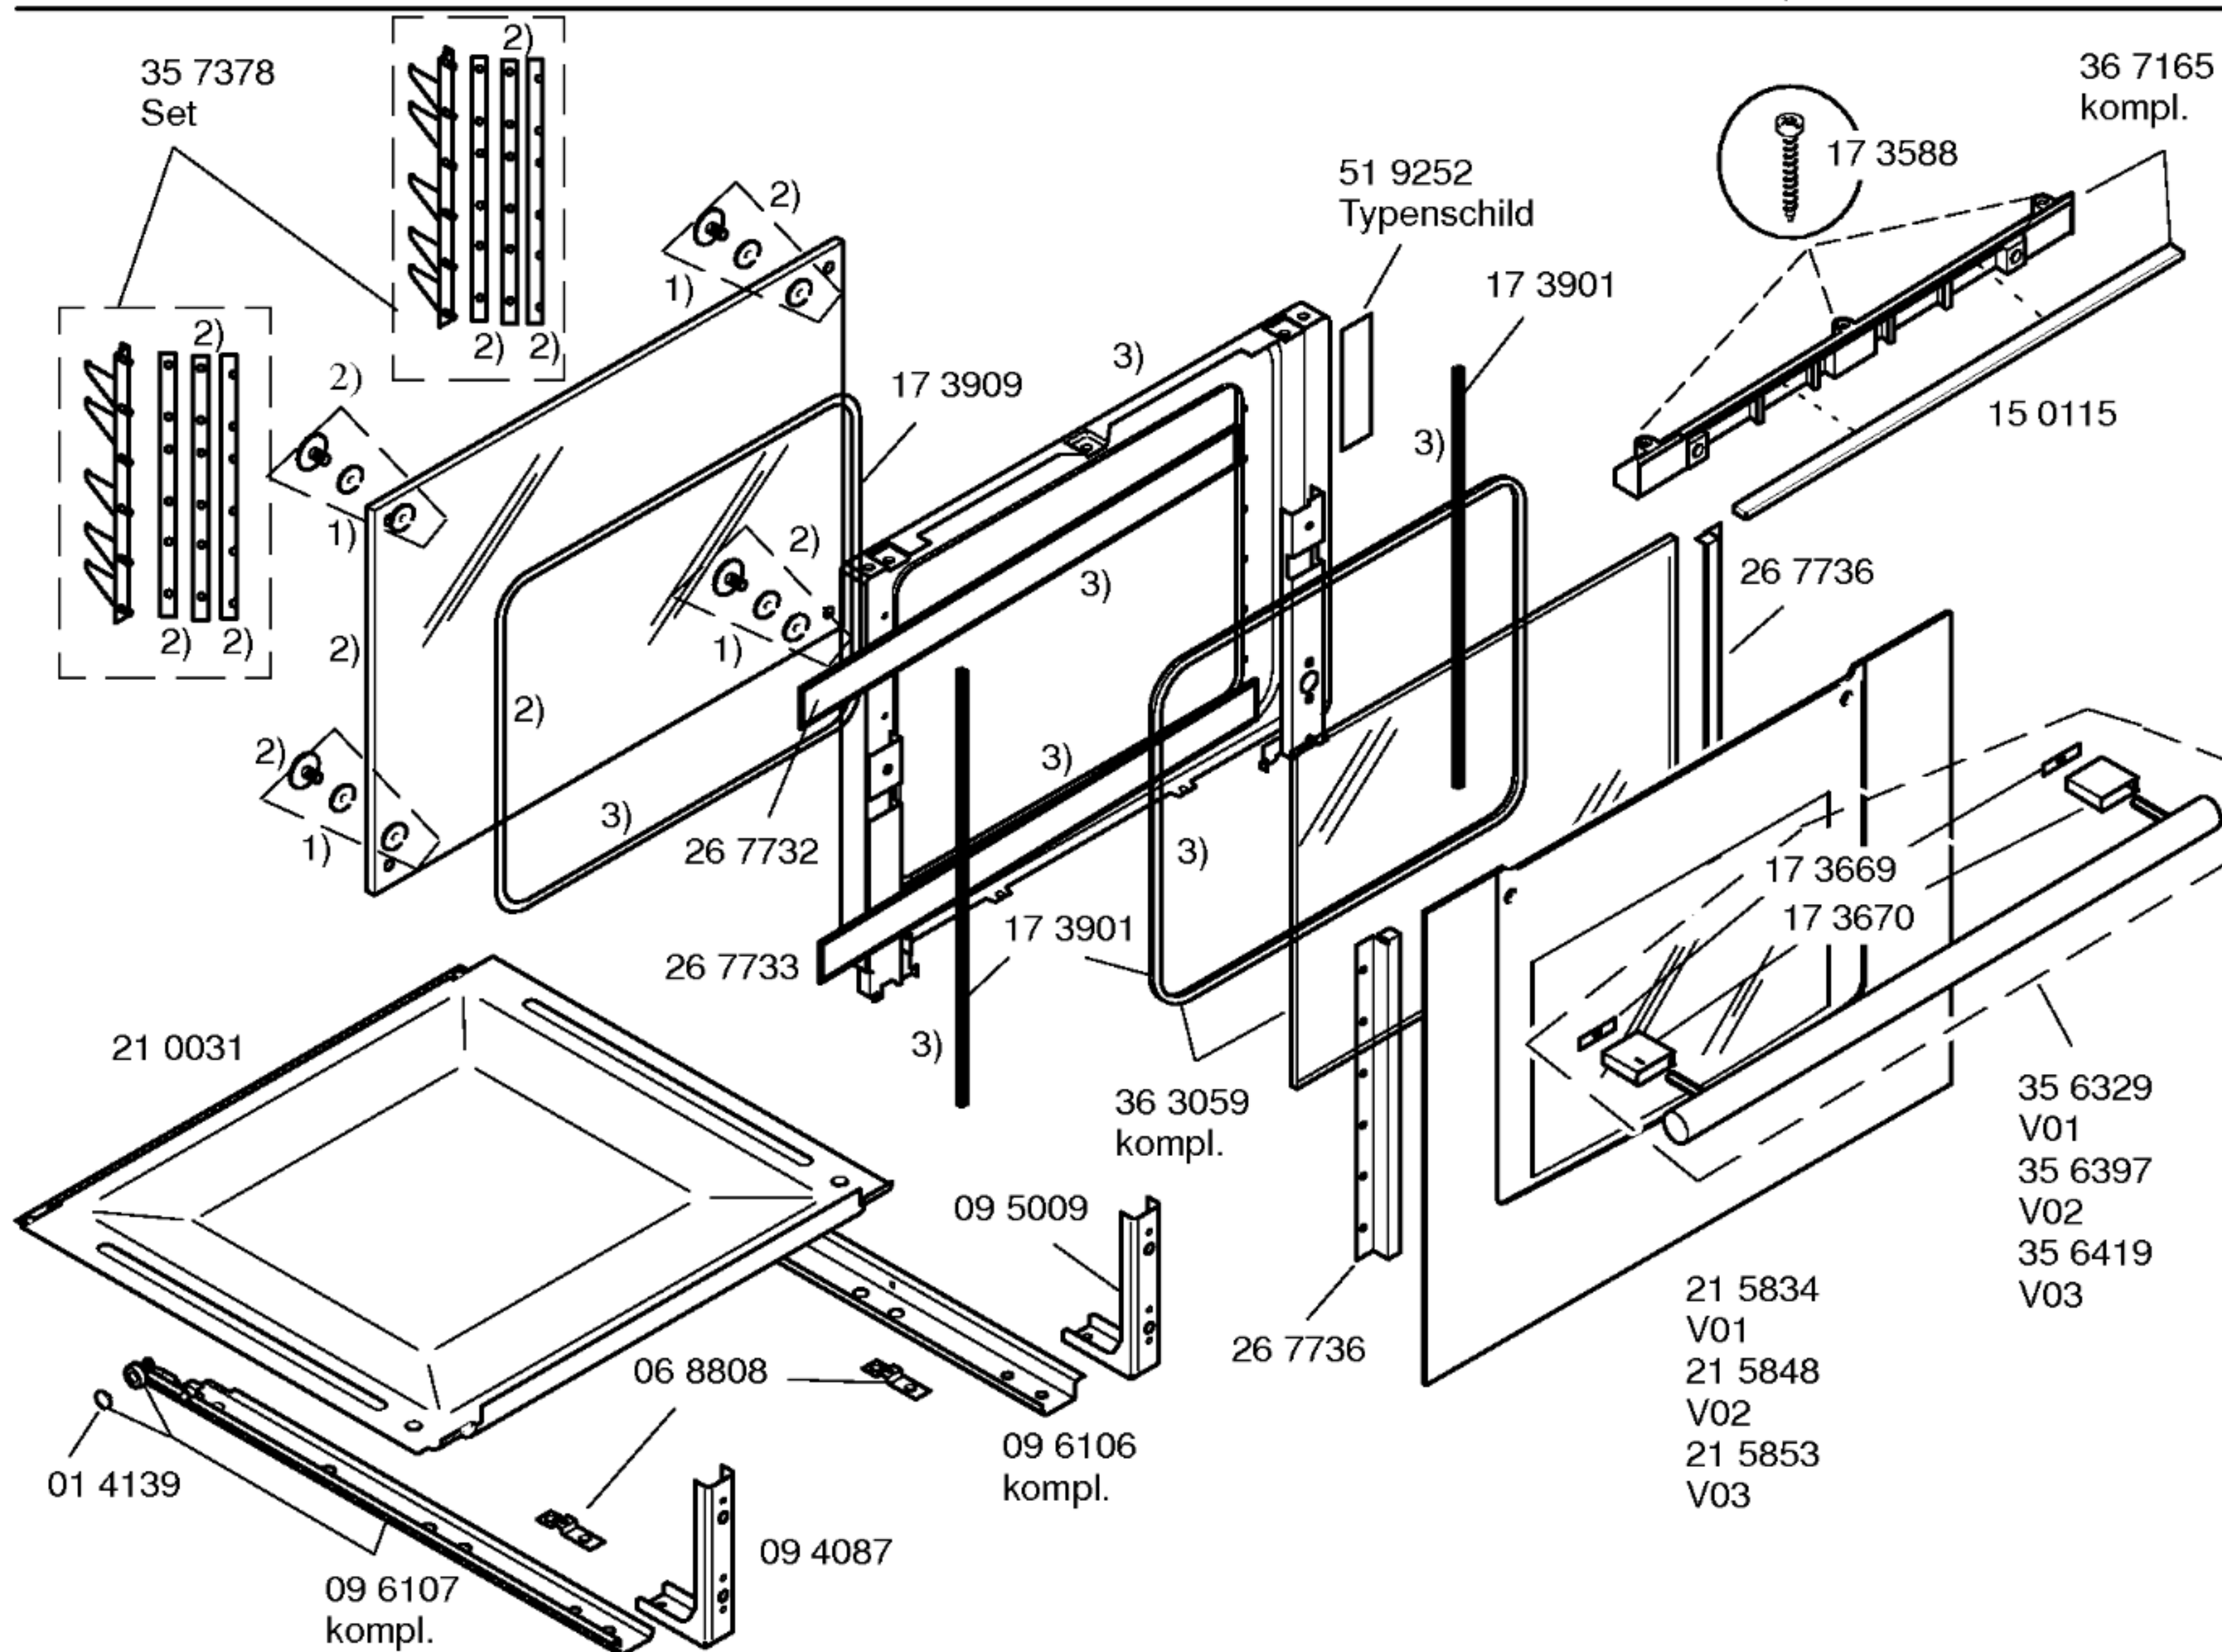

- 1) 17 4791
Set
- 2) 21 5852
Set
- 3) 21 5832
Set

