


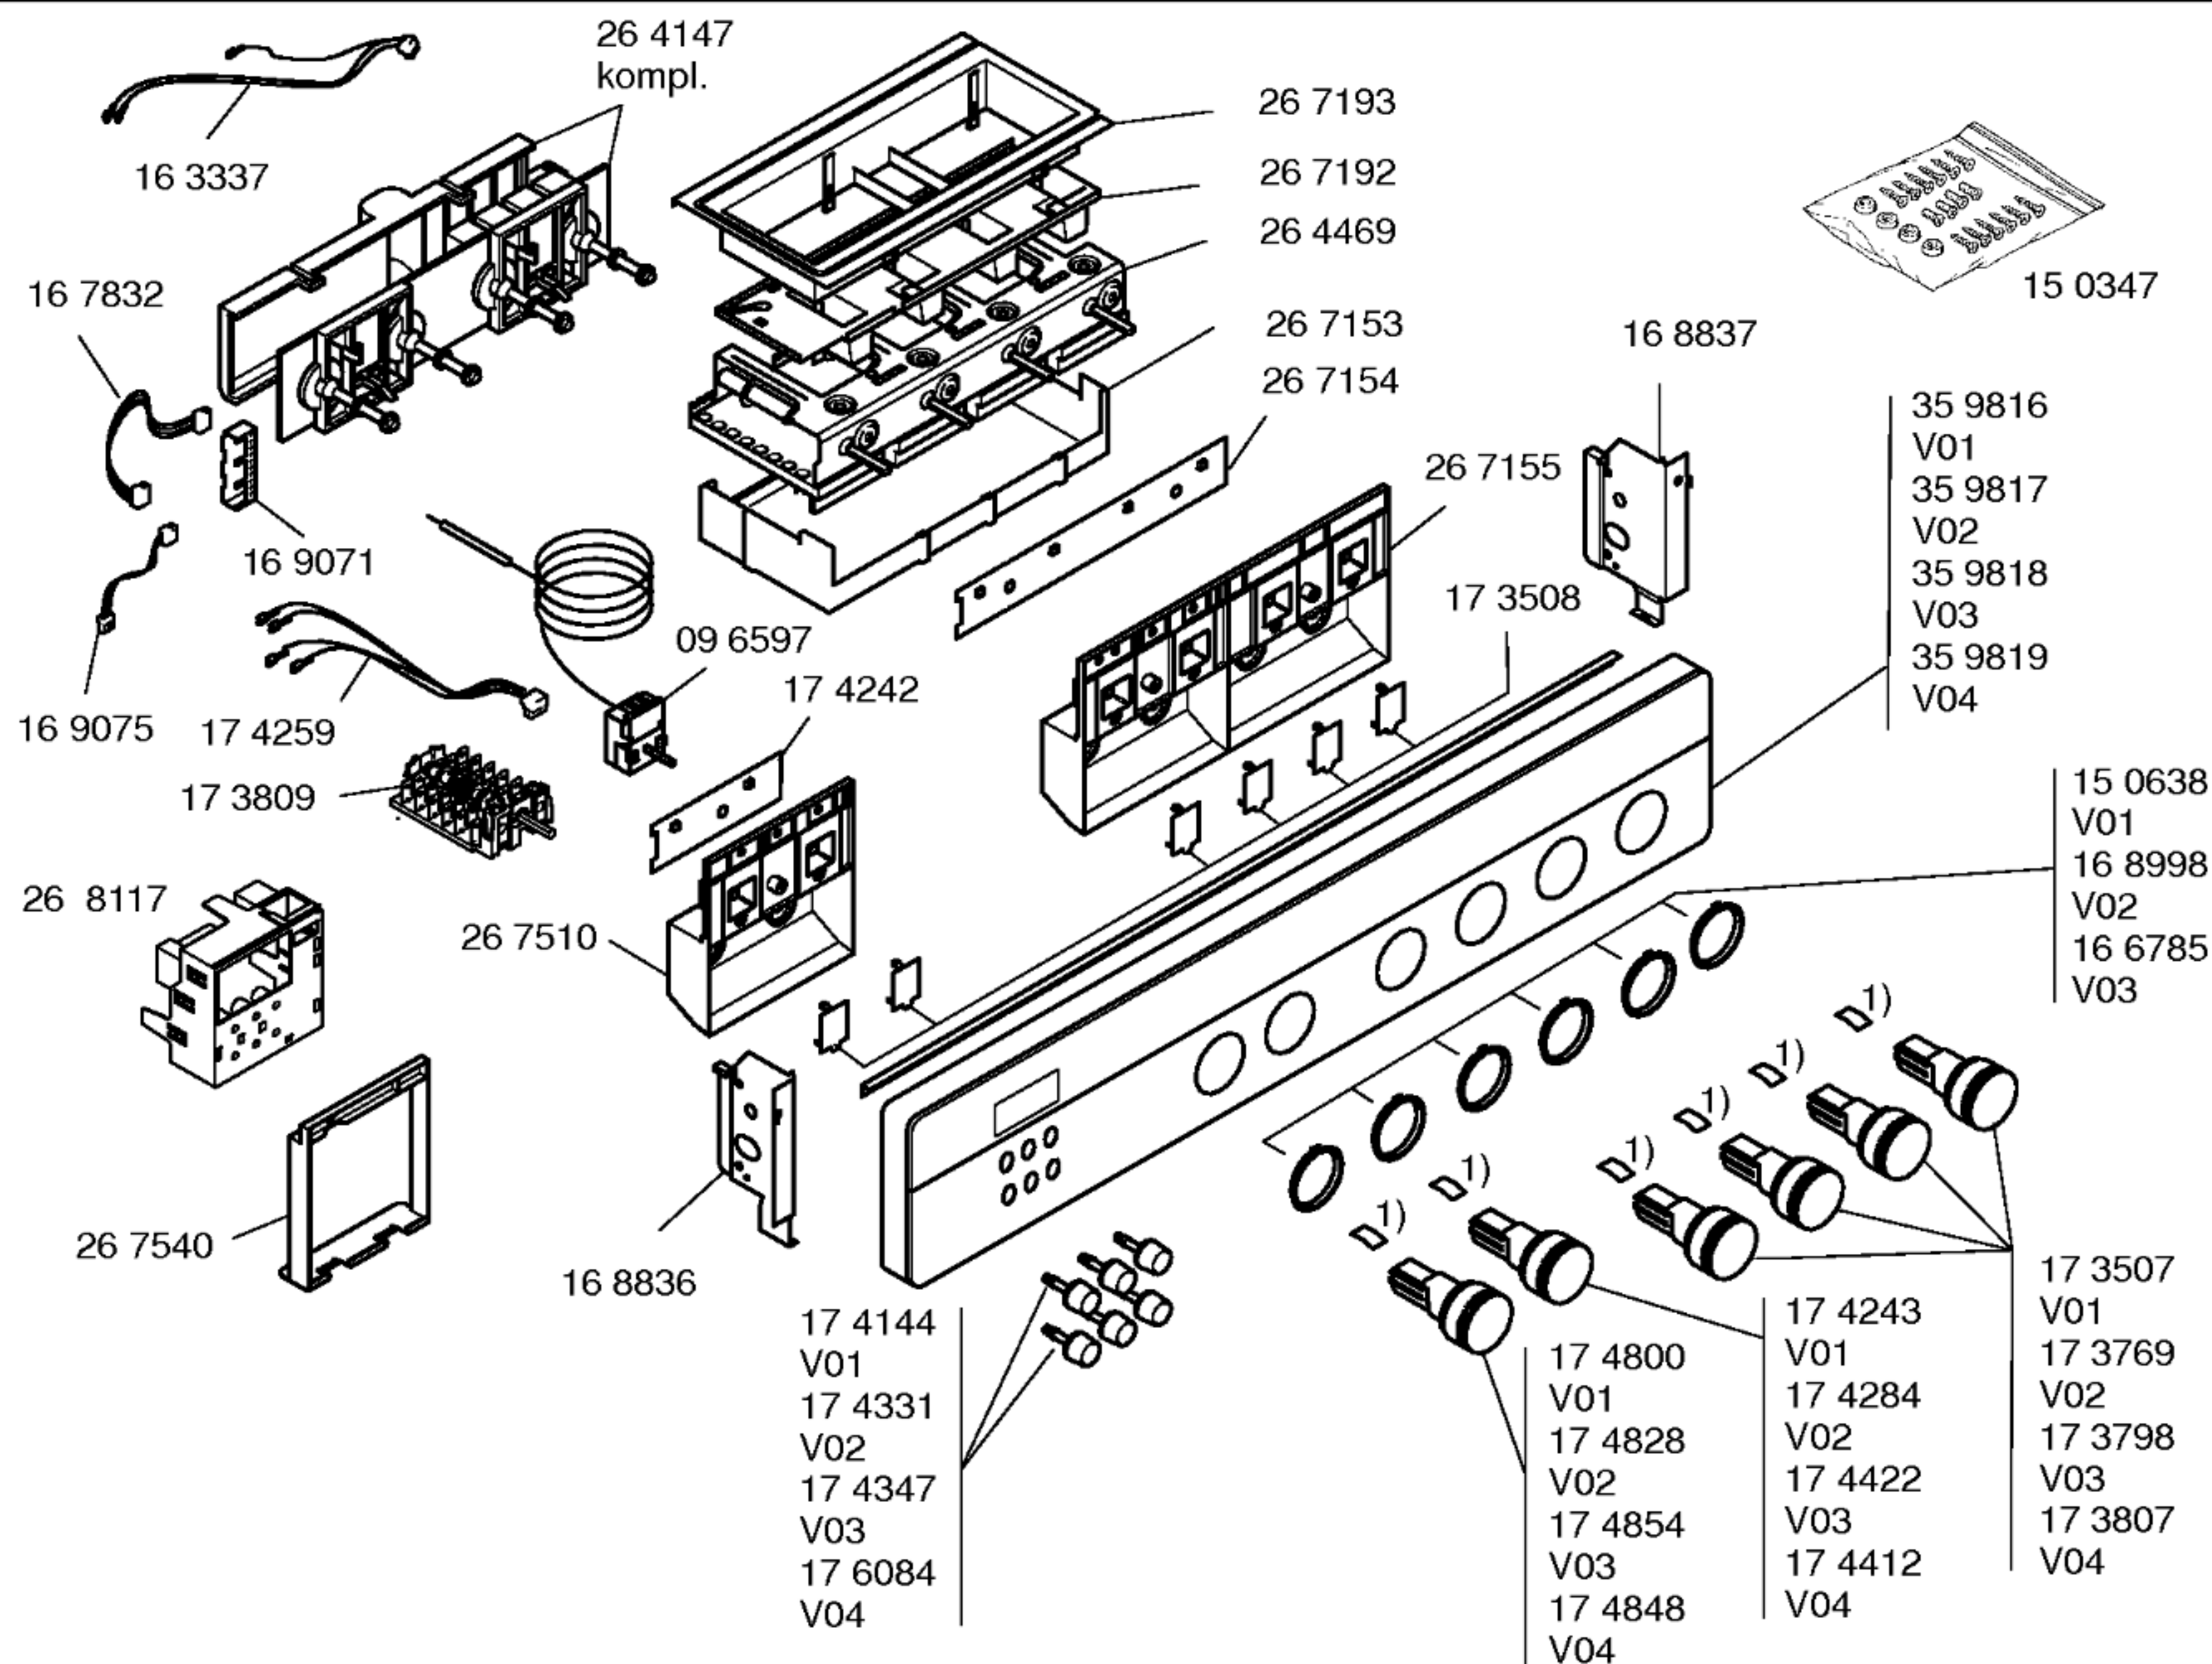

Gebrauchsanweisung

58 0920 (de)
58 0921 (nl)
58 0922 (el)
58 1309 (es)
58 1311 (pt)

Montageanweisung:

52 4061
(de,en,fr,it,nl,da,sv,no,
fi,es,pt,el,cs,pl,tr,ru)

Zubehoer:

HZ23000
Backblech Alu
HZ23100
Backblech emailliert
HZ23300
Universalpfanne
HZ23400
Kombirost
HZ22400
Einlege-Kombirost
HZ23700
Profi-Auszug
HZ24701
Deckel f. Profipfanne
HZ22500
Grillblech
HZ9150
Glasbraeter
HZ26000
Metallbraeter
HZ25001
Adapterkabel

1) 01 4254

1) 48 1284
Set

