


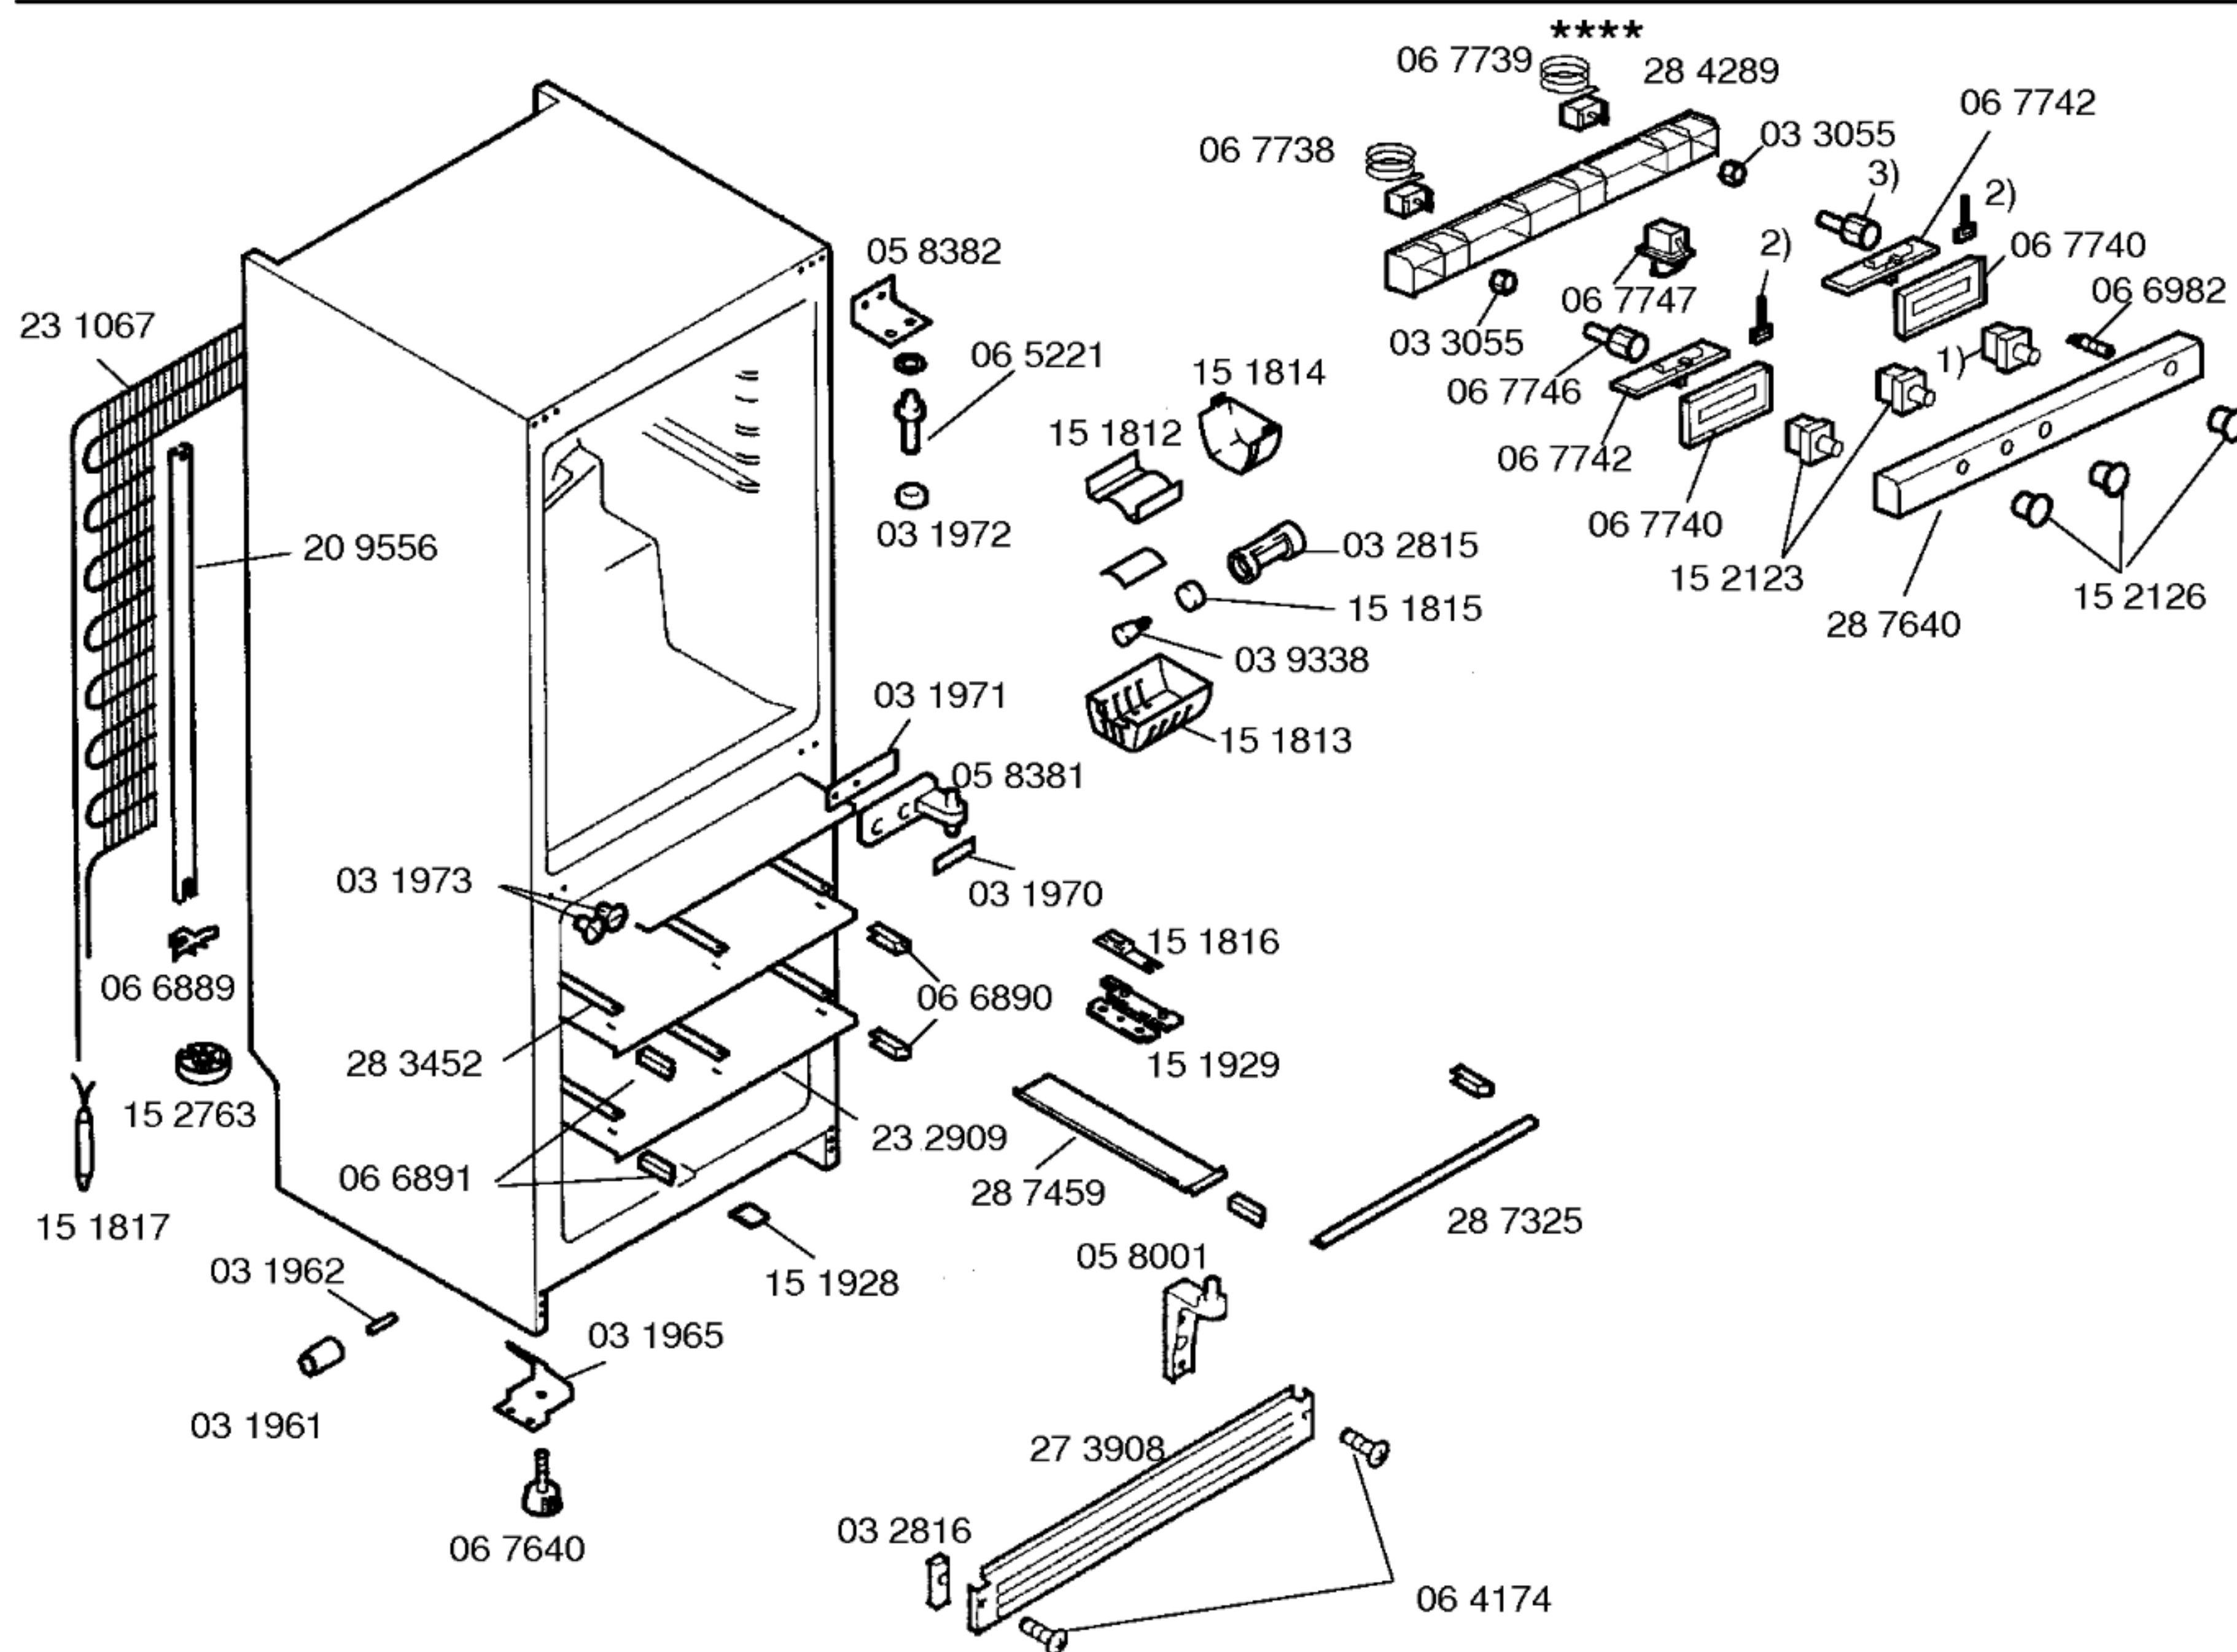


Libro de instrucciones
51 7462
(es,pt,en,fr,nl,el)

Libro de instrucciones
del dispensador
51 6722
((es,pt,en,fr,nl,el)


1) 15 2122

2) 15 2124

3) 06 7746

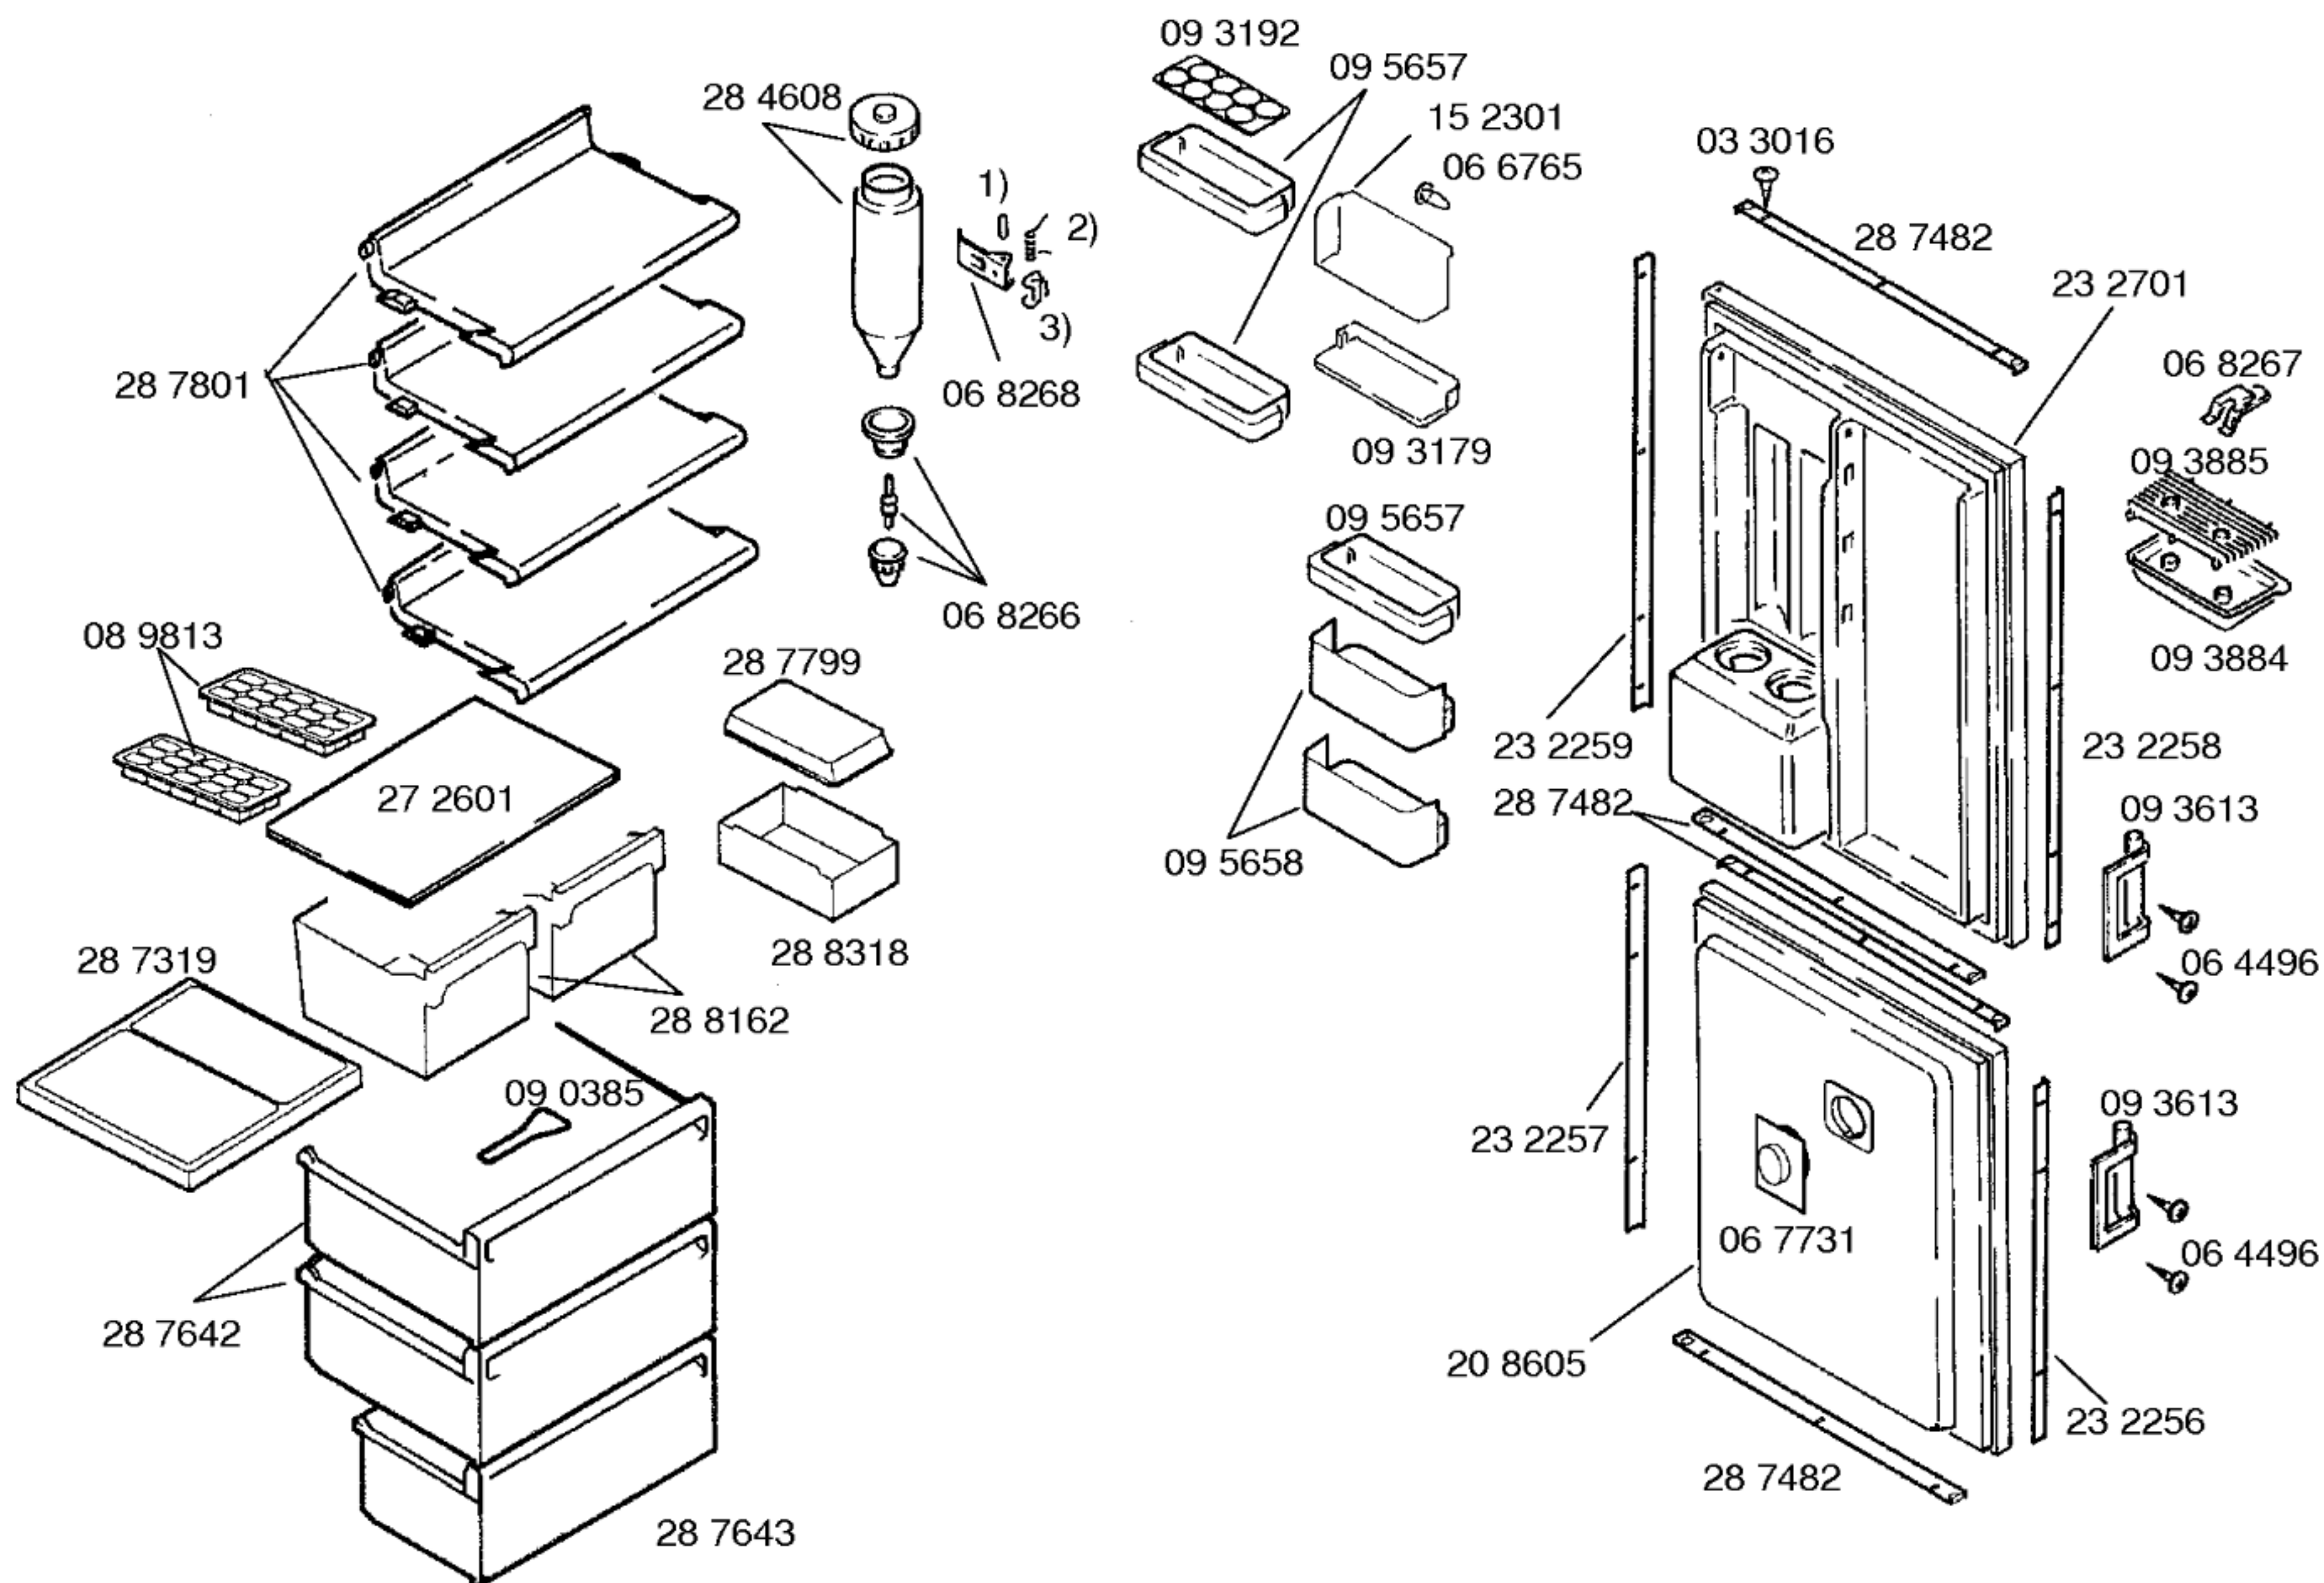

- 1) 06 8270
- 2) 06 8271
- 3) 06 8269

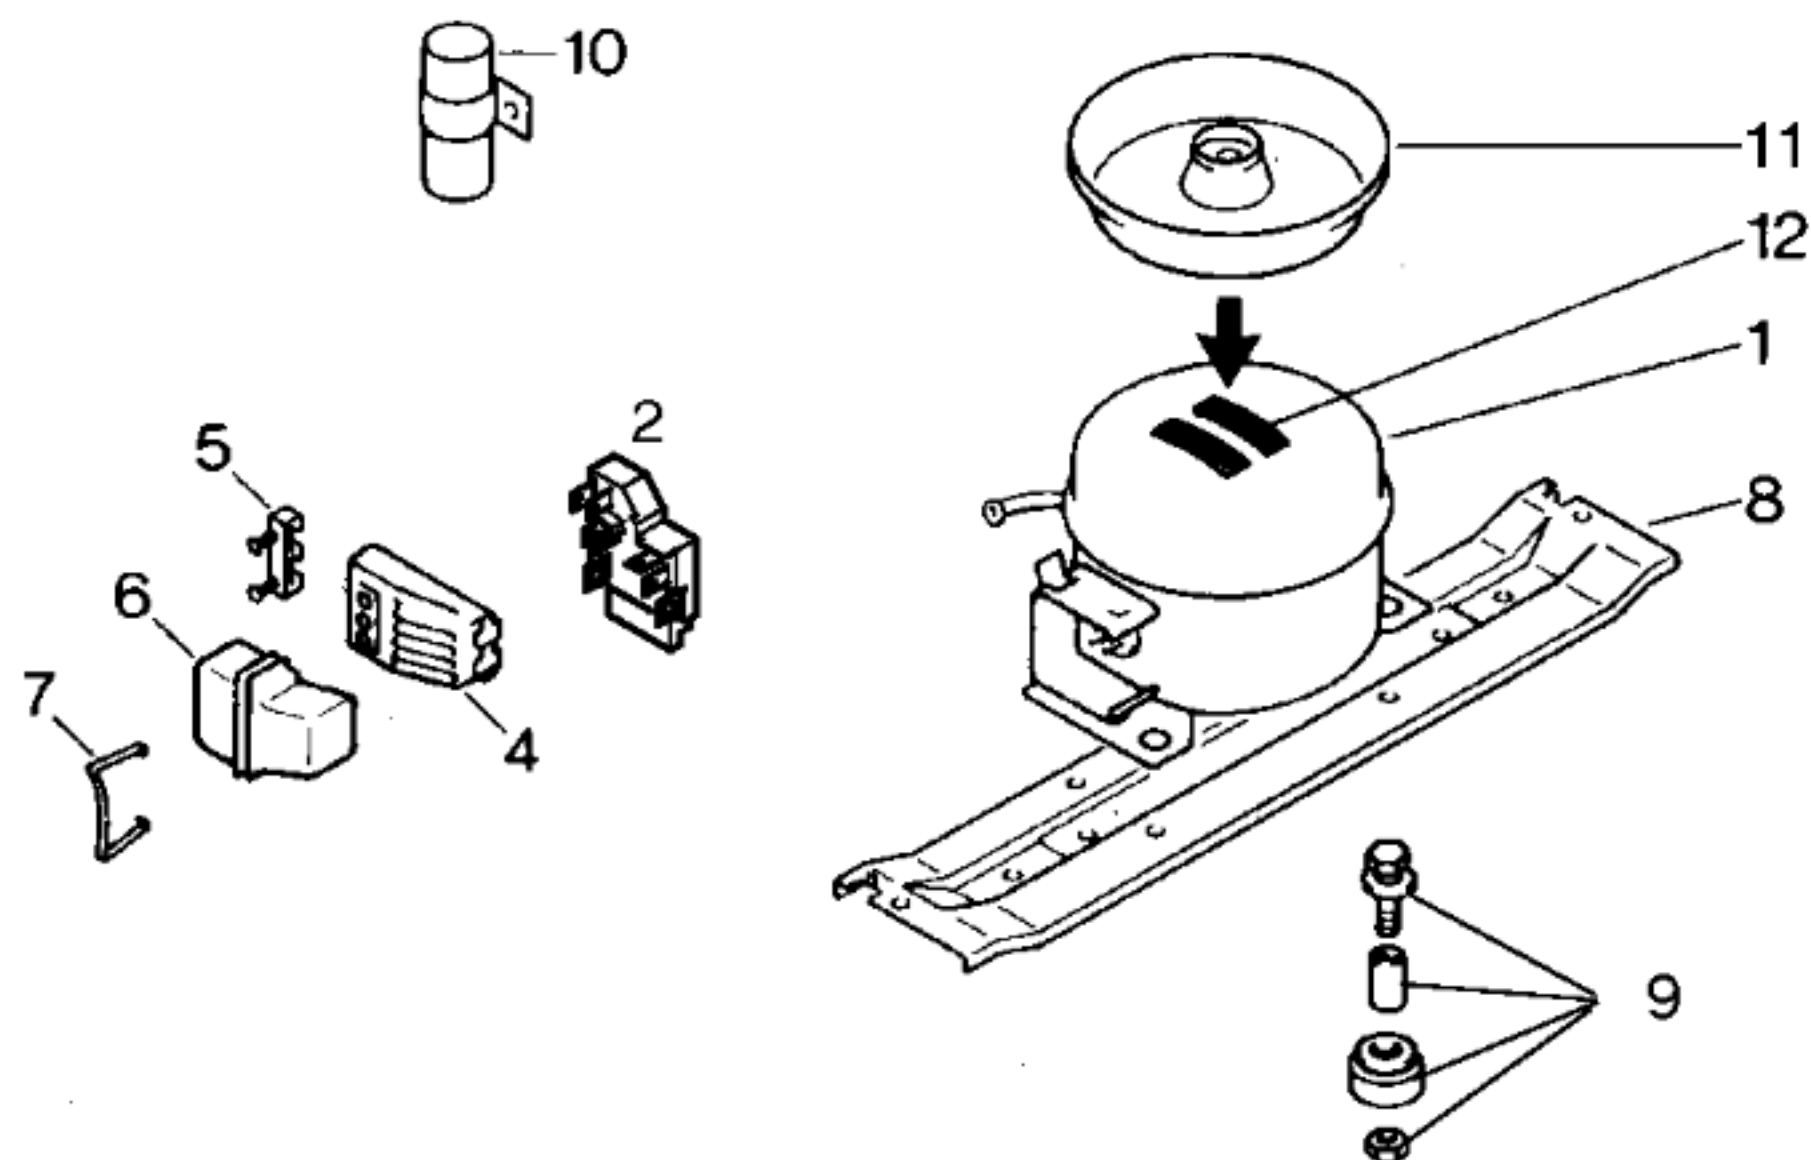

Pos.	MATSUSHITA SB43C90WA	MATSUSHITA SB48C10WA
1	14 1291	14 1290
2	15 1824	15 1824
3		
4		
5		
6		
7		
8	28 8253	
9	05 0166	05 0166
10		
11	09 5320	
12		
13		

TECHNISCHE DATEN/TECHNICAL DATA/DONNEES TECHNIQUES/DATOS TECNICOS			
Verdichter/Compressor/Compresseur/Compresor Typ/Type/Tipo Förderleistung/Delivery/Debit/Aspiración l/h Anlaufstrom/Starting current/Cour.démarrage/Int.arranque A Widerstand/Resistance/Resistencia. Ha/main/prin. Ohm Hi/aux.		Matsushita SB43C90WA	Matsushita SB48C10WA
		6,45	7,00
		18,92	16,59
		31,40	30,10
Temp.Reyler/Thermostat/Termostato Typ/Type/Tipo Reglerstellung/Position/Conexión Schaltwerte/Switching values/ ..ein/conex.°C Valeurs de commutation/Desconex. ..aus"/descon. (..abtaven' od) ..alarm'		DANFOSS 077B62 MIN.-MAX +6° -13° -28°	RANCO K54 L1924 MIN.-MAX -14° -24° -21° -31° 15°
Füllmenge/Fill. quantity/Charge/Carga 134a		g	60
			140
Anschlußwert/Comm. load/puiss. Connect./Potenc.		W	94
			108
Heizung/Heater/Chaufage/Resistenc.descong. Widerstand/Resistance/Resistencia Leistung/Power/Puissance/Potencia		Ohm W	
Ventilador/Blower/Ventilateur/Ventilador Widerstand/Resistance/Resistencia		Ohm	
Magnetventil/Magnetic valve/Electrovanne/Electrovalvula Widerstand/Resistance/Resistencia Spannung/Volare/Tension/Tensión		Ohm V	
Temp.Reyler/Thermostat/Termostato ambiente para ventilador refrigerador			