 
 


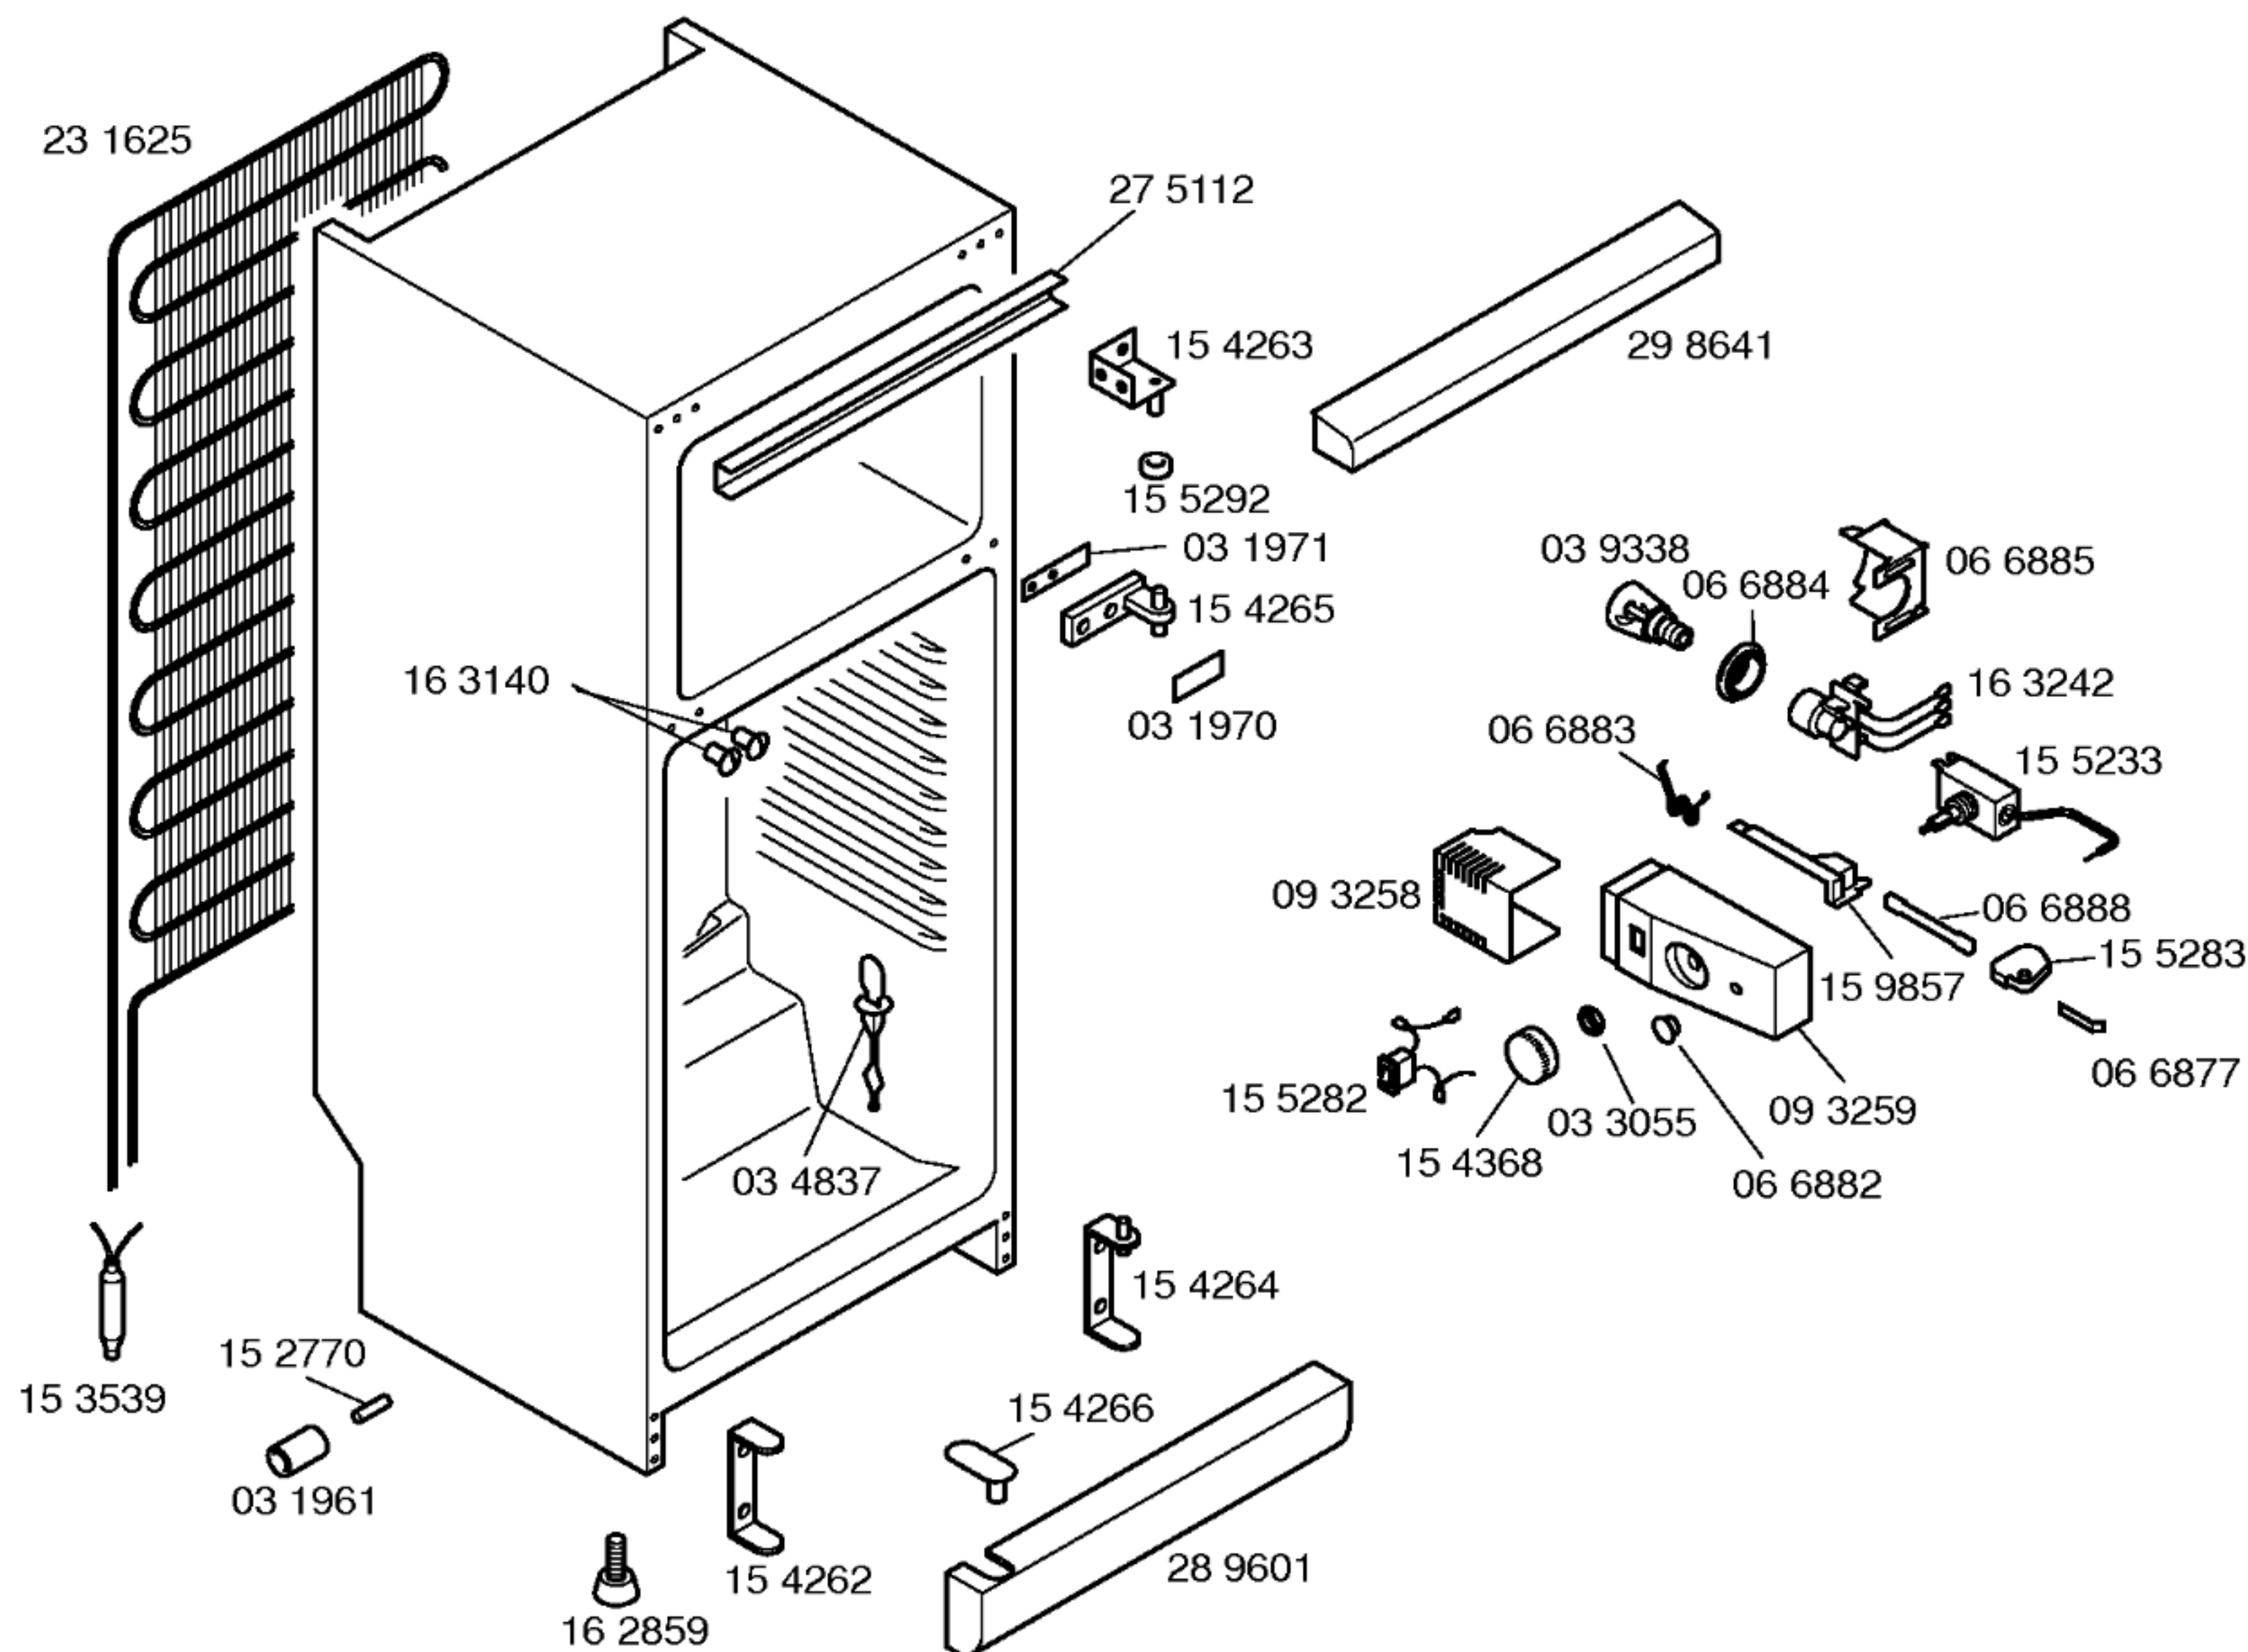 


Gebrauchsanweisung
51 9991
(E, GB, F, D, I, NL, GR)

Montageanweisung
51 9729
(E, GB, F, D, I, NL, GR)

Sicherheitsanweisung
R600
51 9240
(E, GB, F, P, D, I, NL, N,
GR, DK, S, SF, TR)

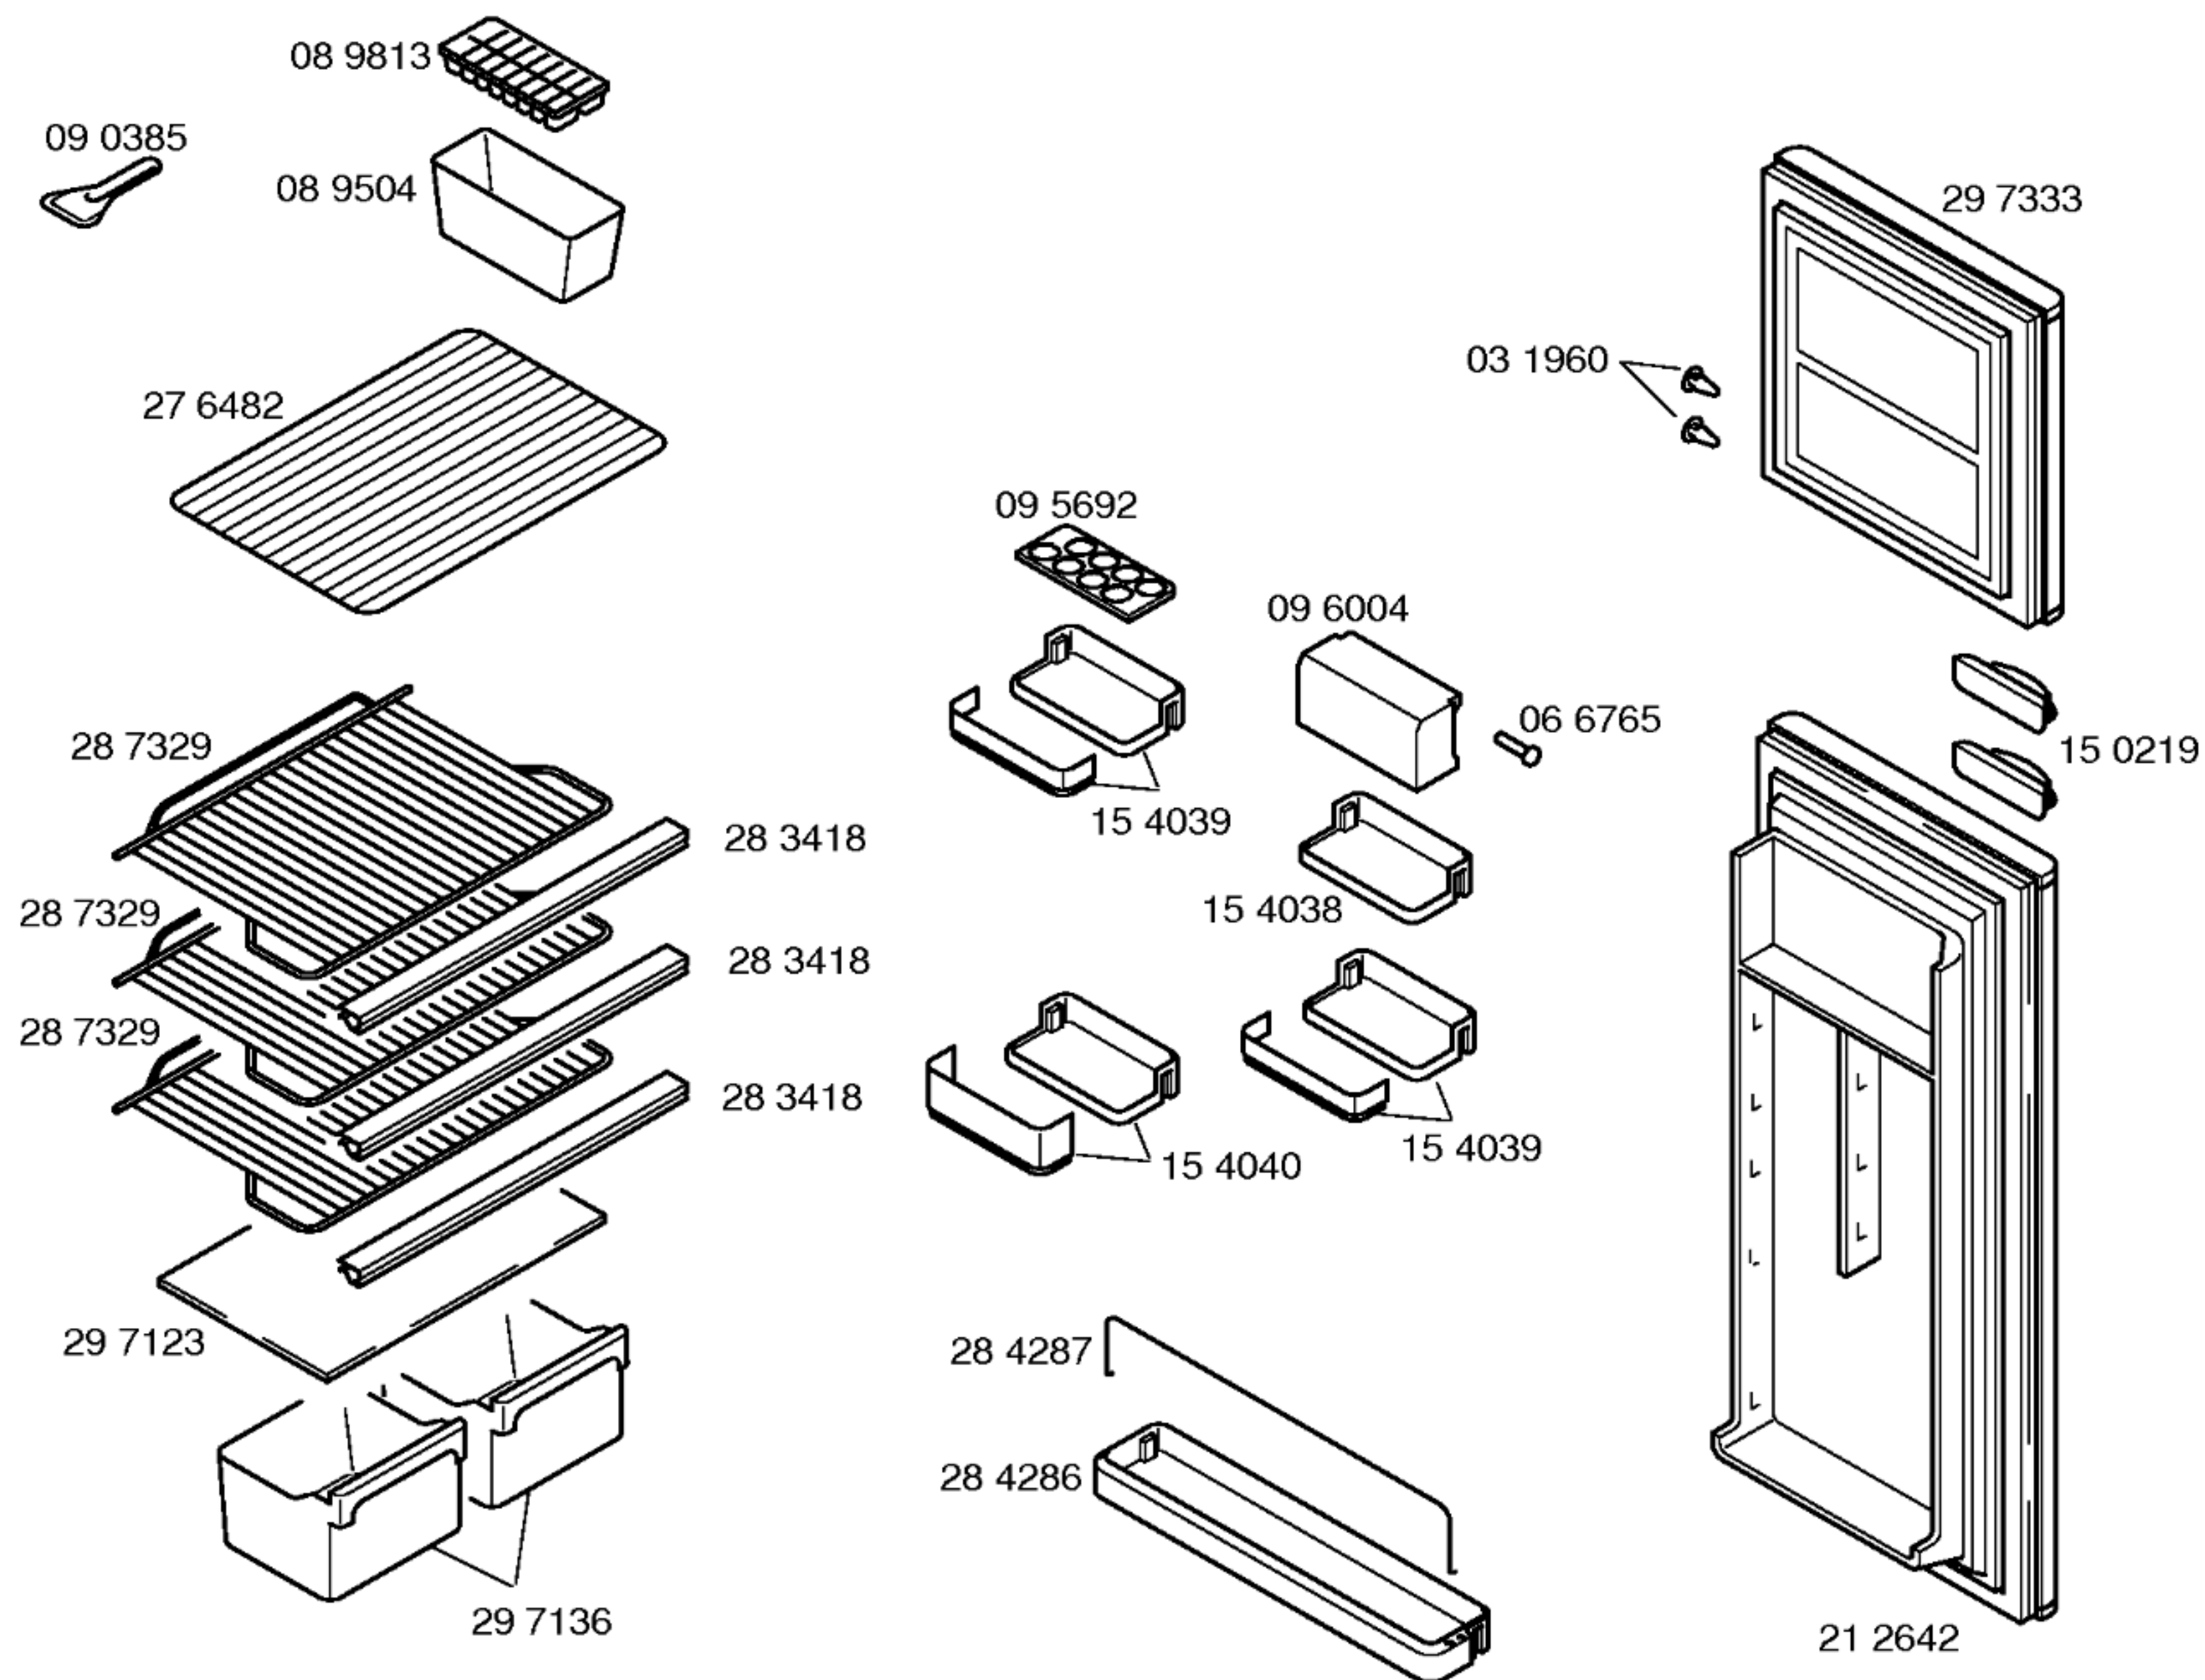

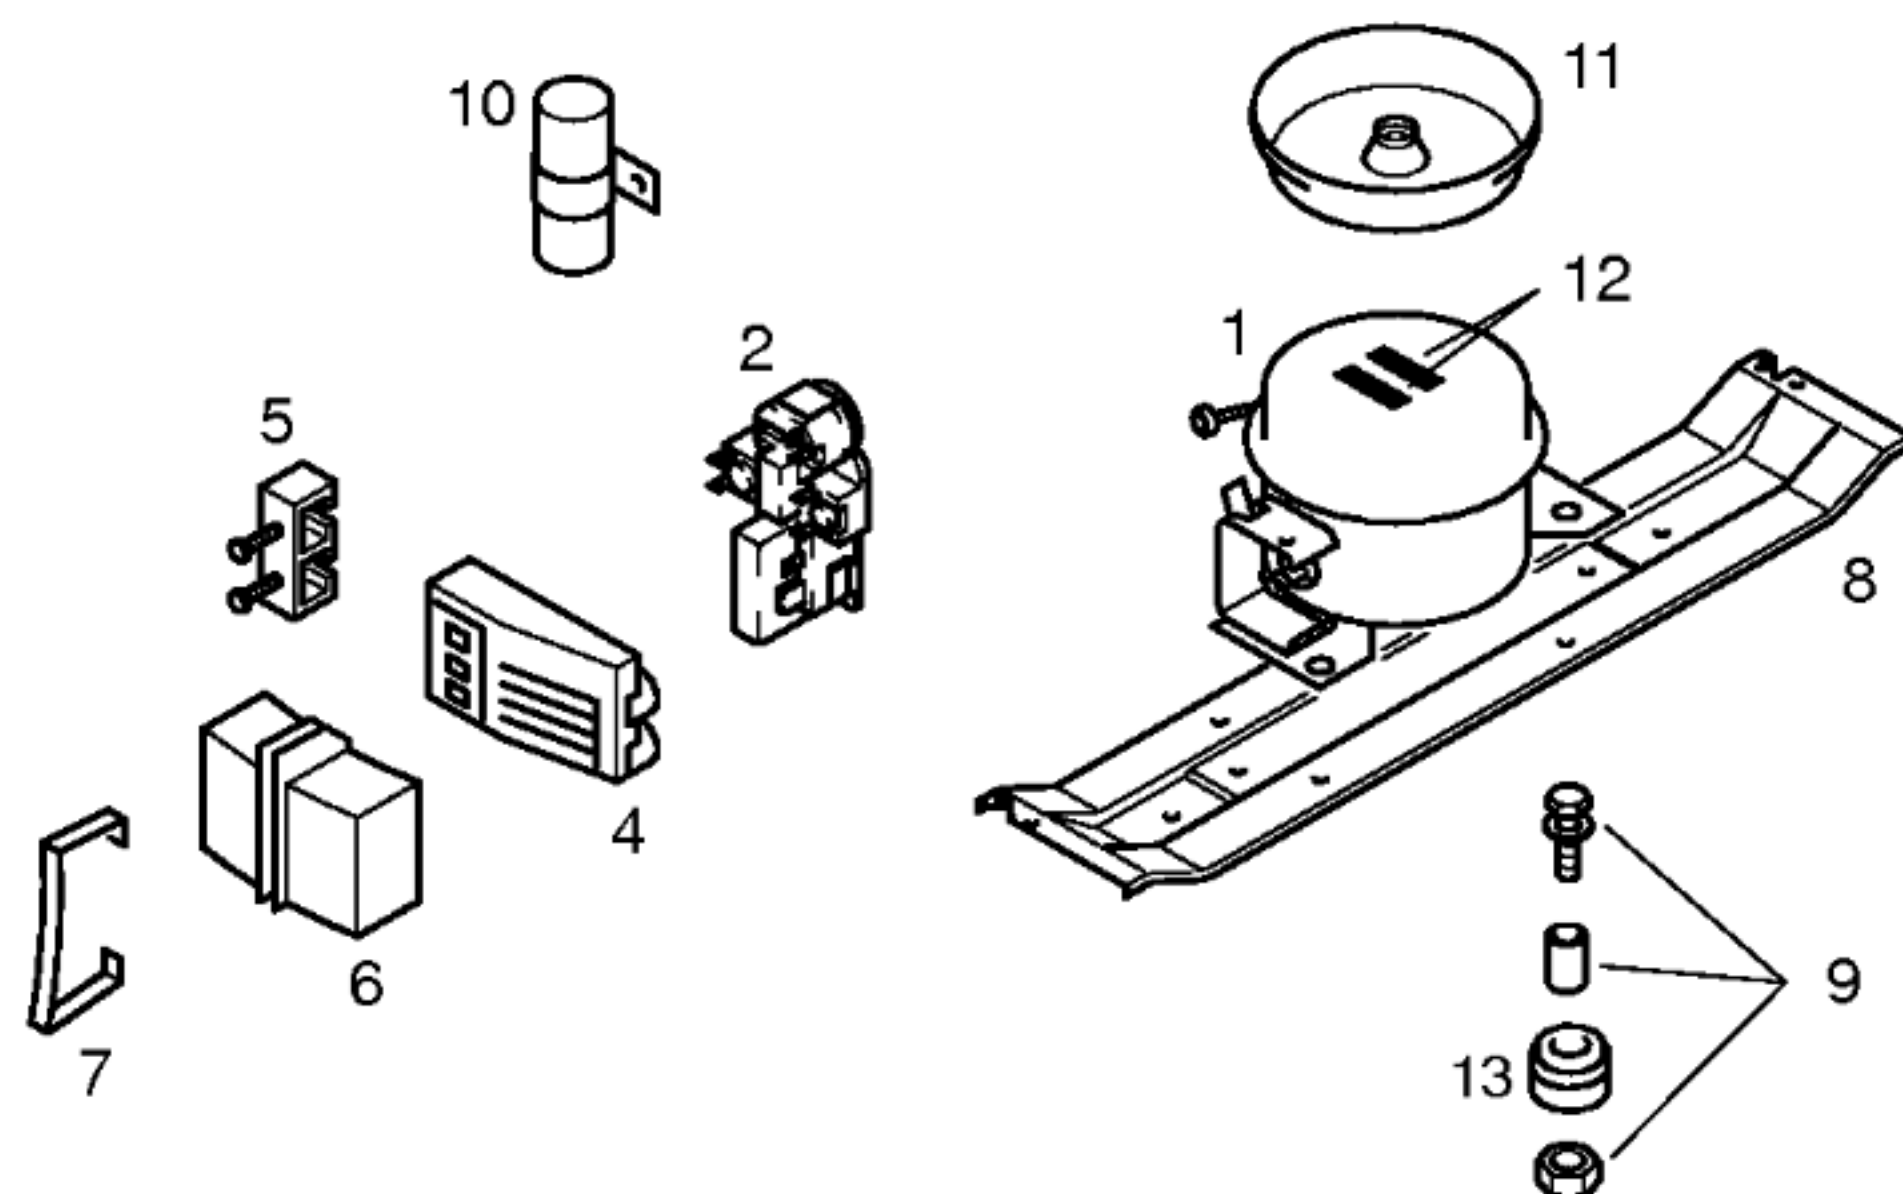

Pos.	Kühlgeräte	
	Matsushita	
	DA125E	
1	14 1553	
2	06 6875	
3		
4		
5		
6		
7		
8	28 8253	
9	06 4259	
10		
11	09 3771	
12		
13	06 4260	

TECHNISCHE DATEN/TECHNICAL DATA/DONNEES TECHNIQUES/DATOS TECNICOS		
Verdichter/Compressor/Compresseur/Compresor Typ/Type/Tipo Förderleistung/Delivery/Debit/Aspiración l/h Anlaufstrom/Starting current/Cour.démarrage/Int.arranque A Widerstand/Resistance/Resistencia. Ha/main/prin. Ohm Hi/aux.	Matsushita DA125E	
Temp.Reyler/Thermostat/Termostato Typ/Type/Tipo Reglerstellung/Position/Conexión Schaltwerte/Switching values/ ..ein/conex. °C Valeurs de commutation/Desconex. ..aus"/descon. (..abtaven' od) ..alarm'	RANCO MIN MAX. +5 °C -21 °C -31 °C	
Füllmenge/Fill. quantily/Charge/Carga R600a	g	80
Anschlusswert/Comm. load/Puiss. Connect./Potenc.	W	
Heizung/Heater/Chauflage/Resistenc.descong. Widerstand/Resistance/Resistencia Leistung/Power/Puissance/Potencia	Ohm W	
Ventilador/Blower/Ventilateur/Ventilador Widerstand/Resistance/Resistencia	Ohm	
Magnetventil/Magnetic valve/Electrovanne/Electrovalvula Widerstand/Resistance/Resistencia Spannung/Voltage/Tension/Tensión	Ohm V	
Temp.Reyler/Thermostat/Termostato ambiente para ventilador refrigerador		