 
 


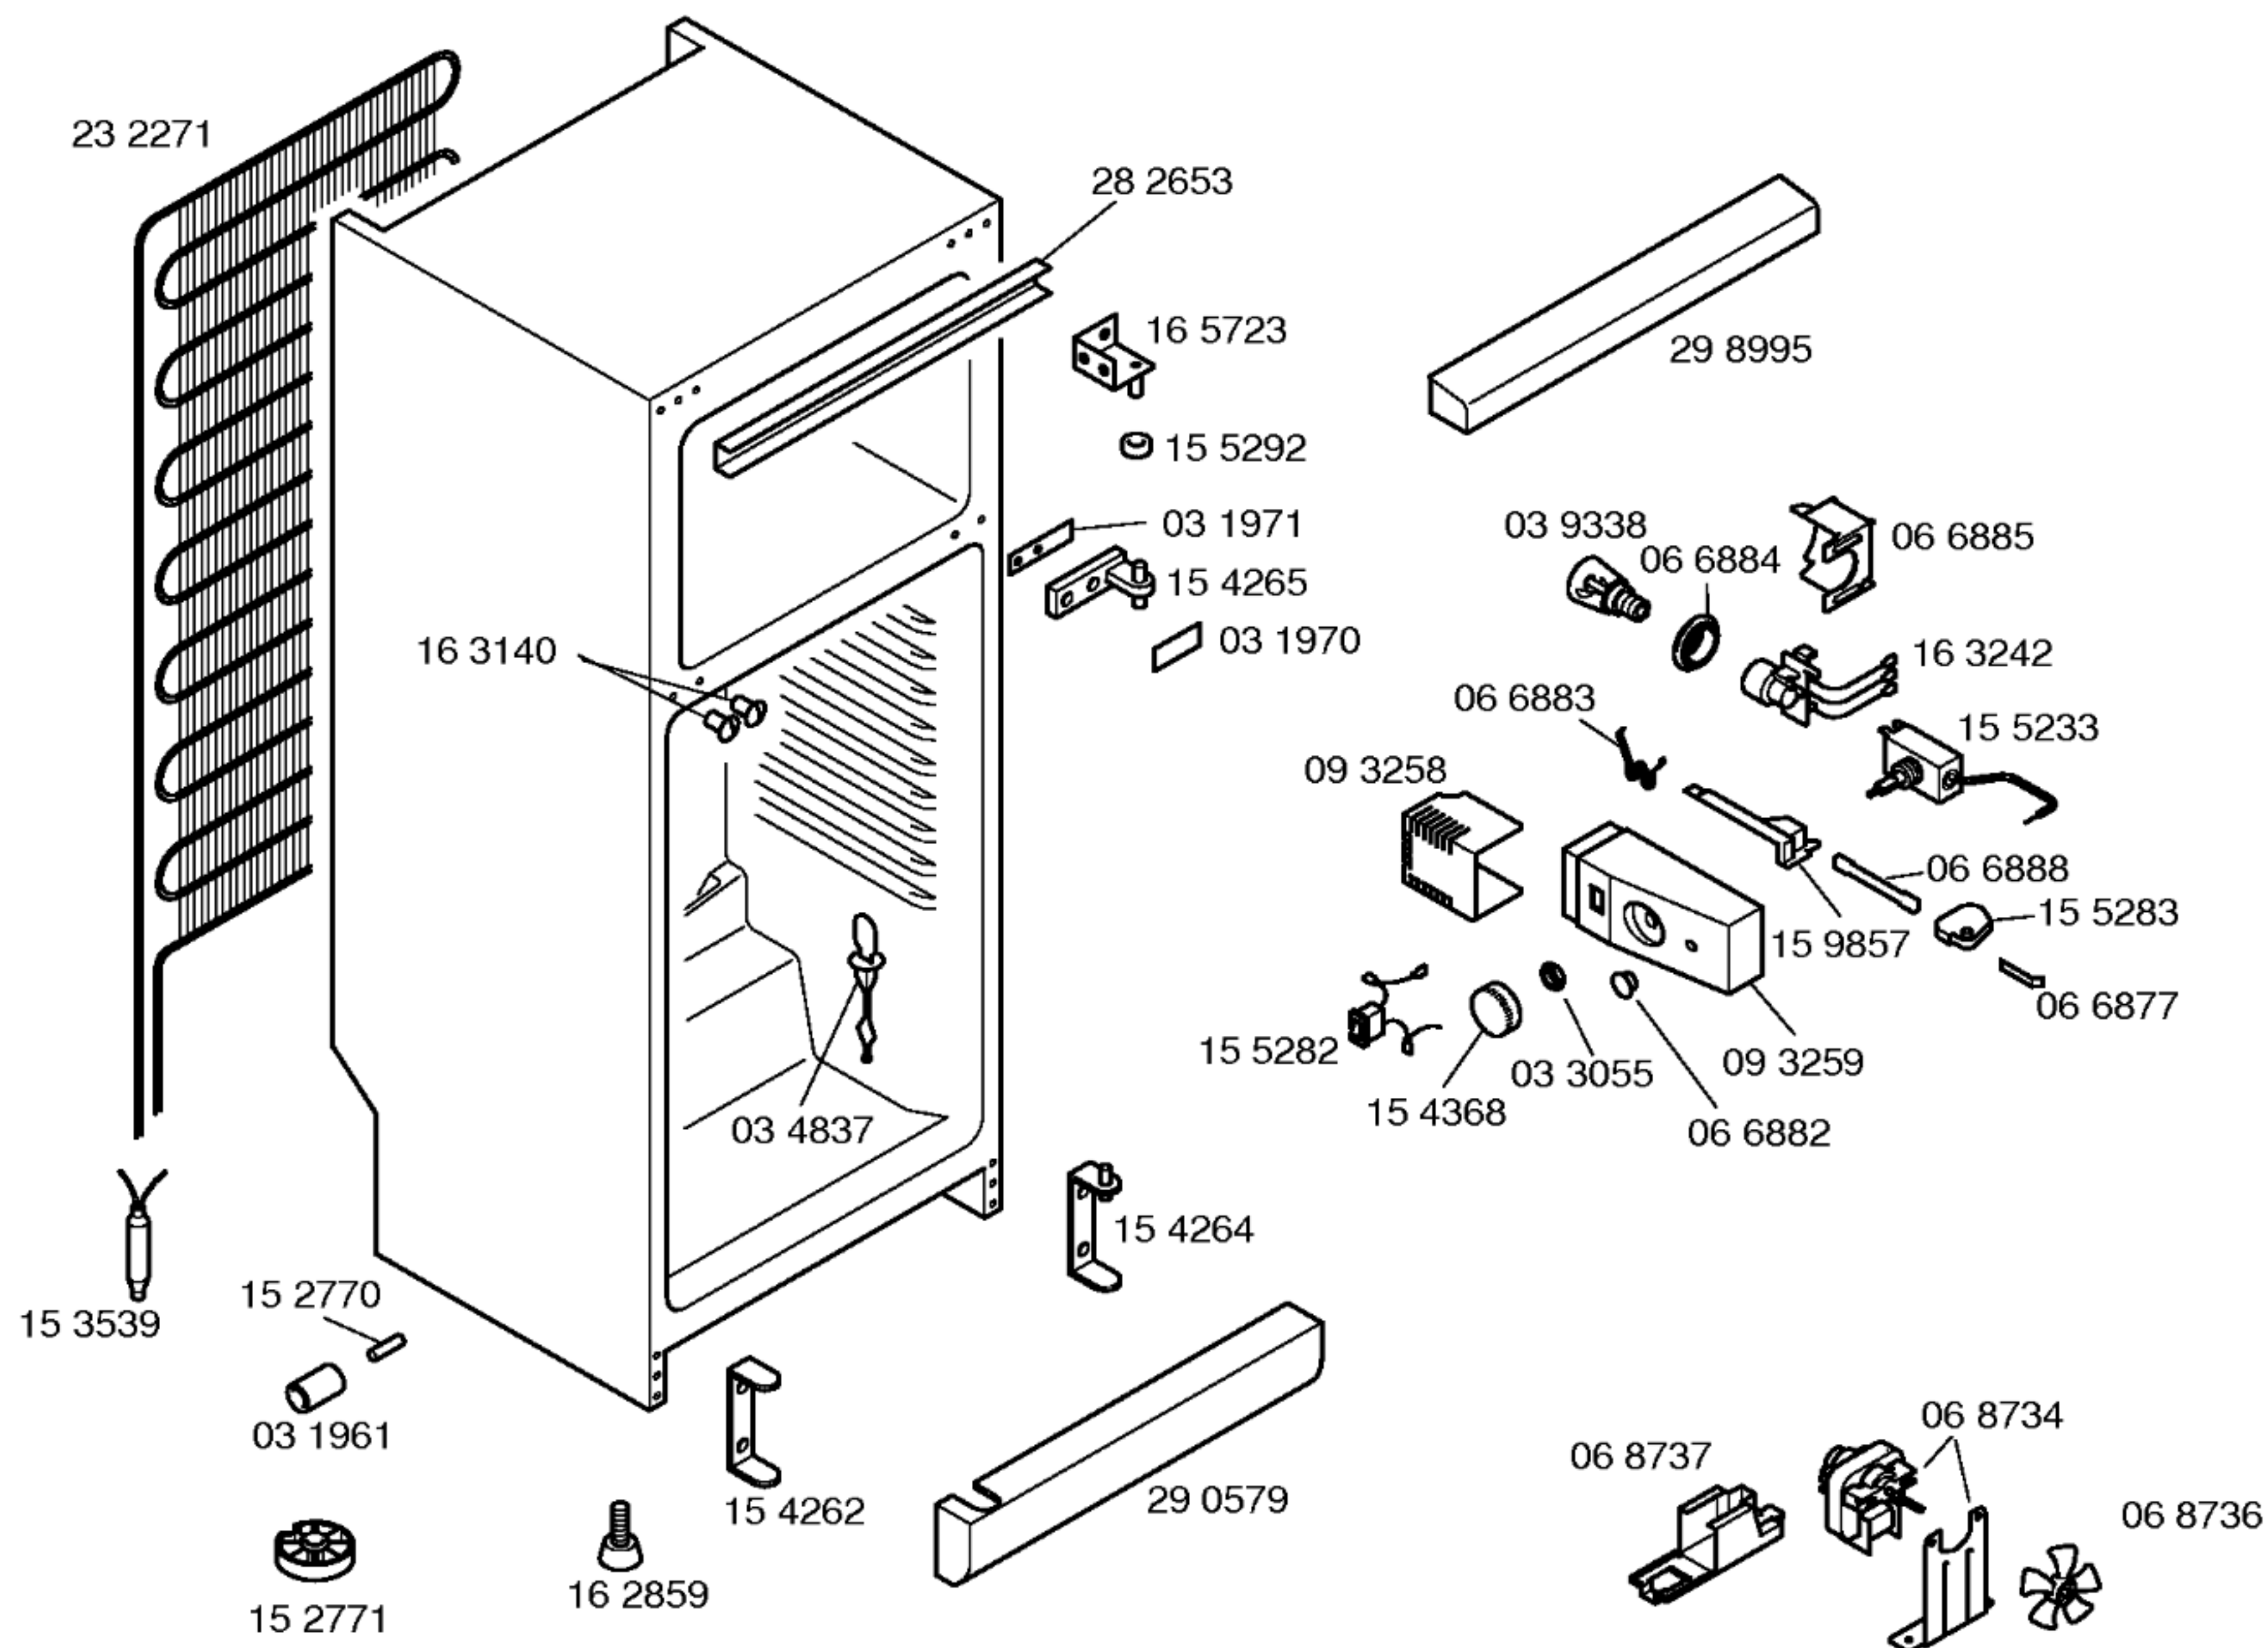 


Gebrauchsanweisung
52 0114
(GR)

Sicherheitsanweisung
R600a
51 9240
(E,GB,F,P,D,I,NL,N,
GR,DK,S,SF,TR)

Montageanweisung
52 0056
(E,GB,F,P,D,I,NL,GR)

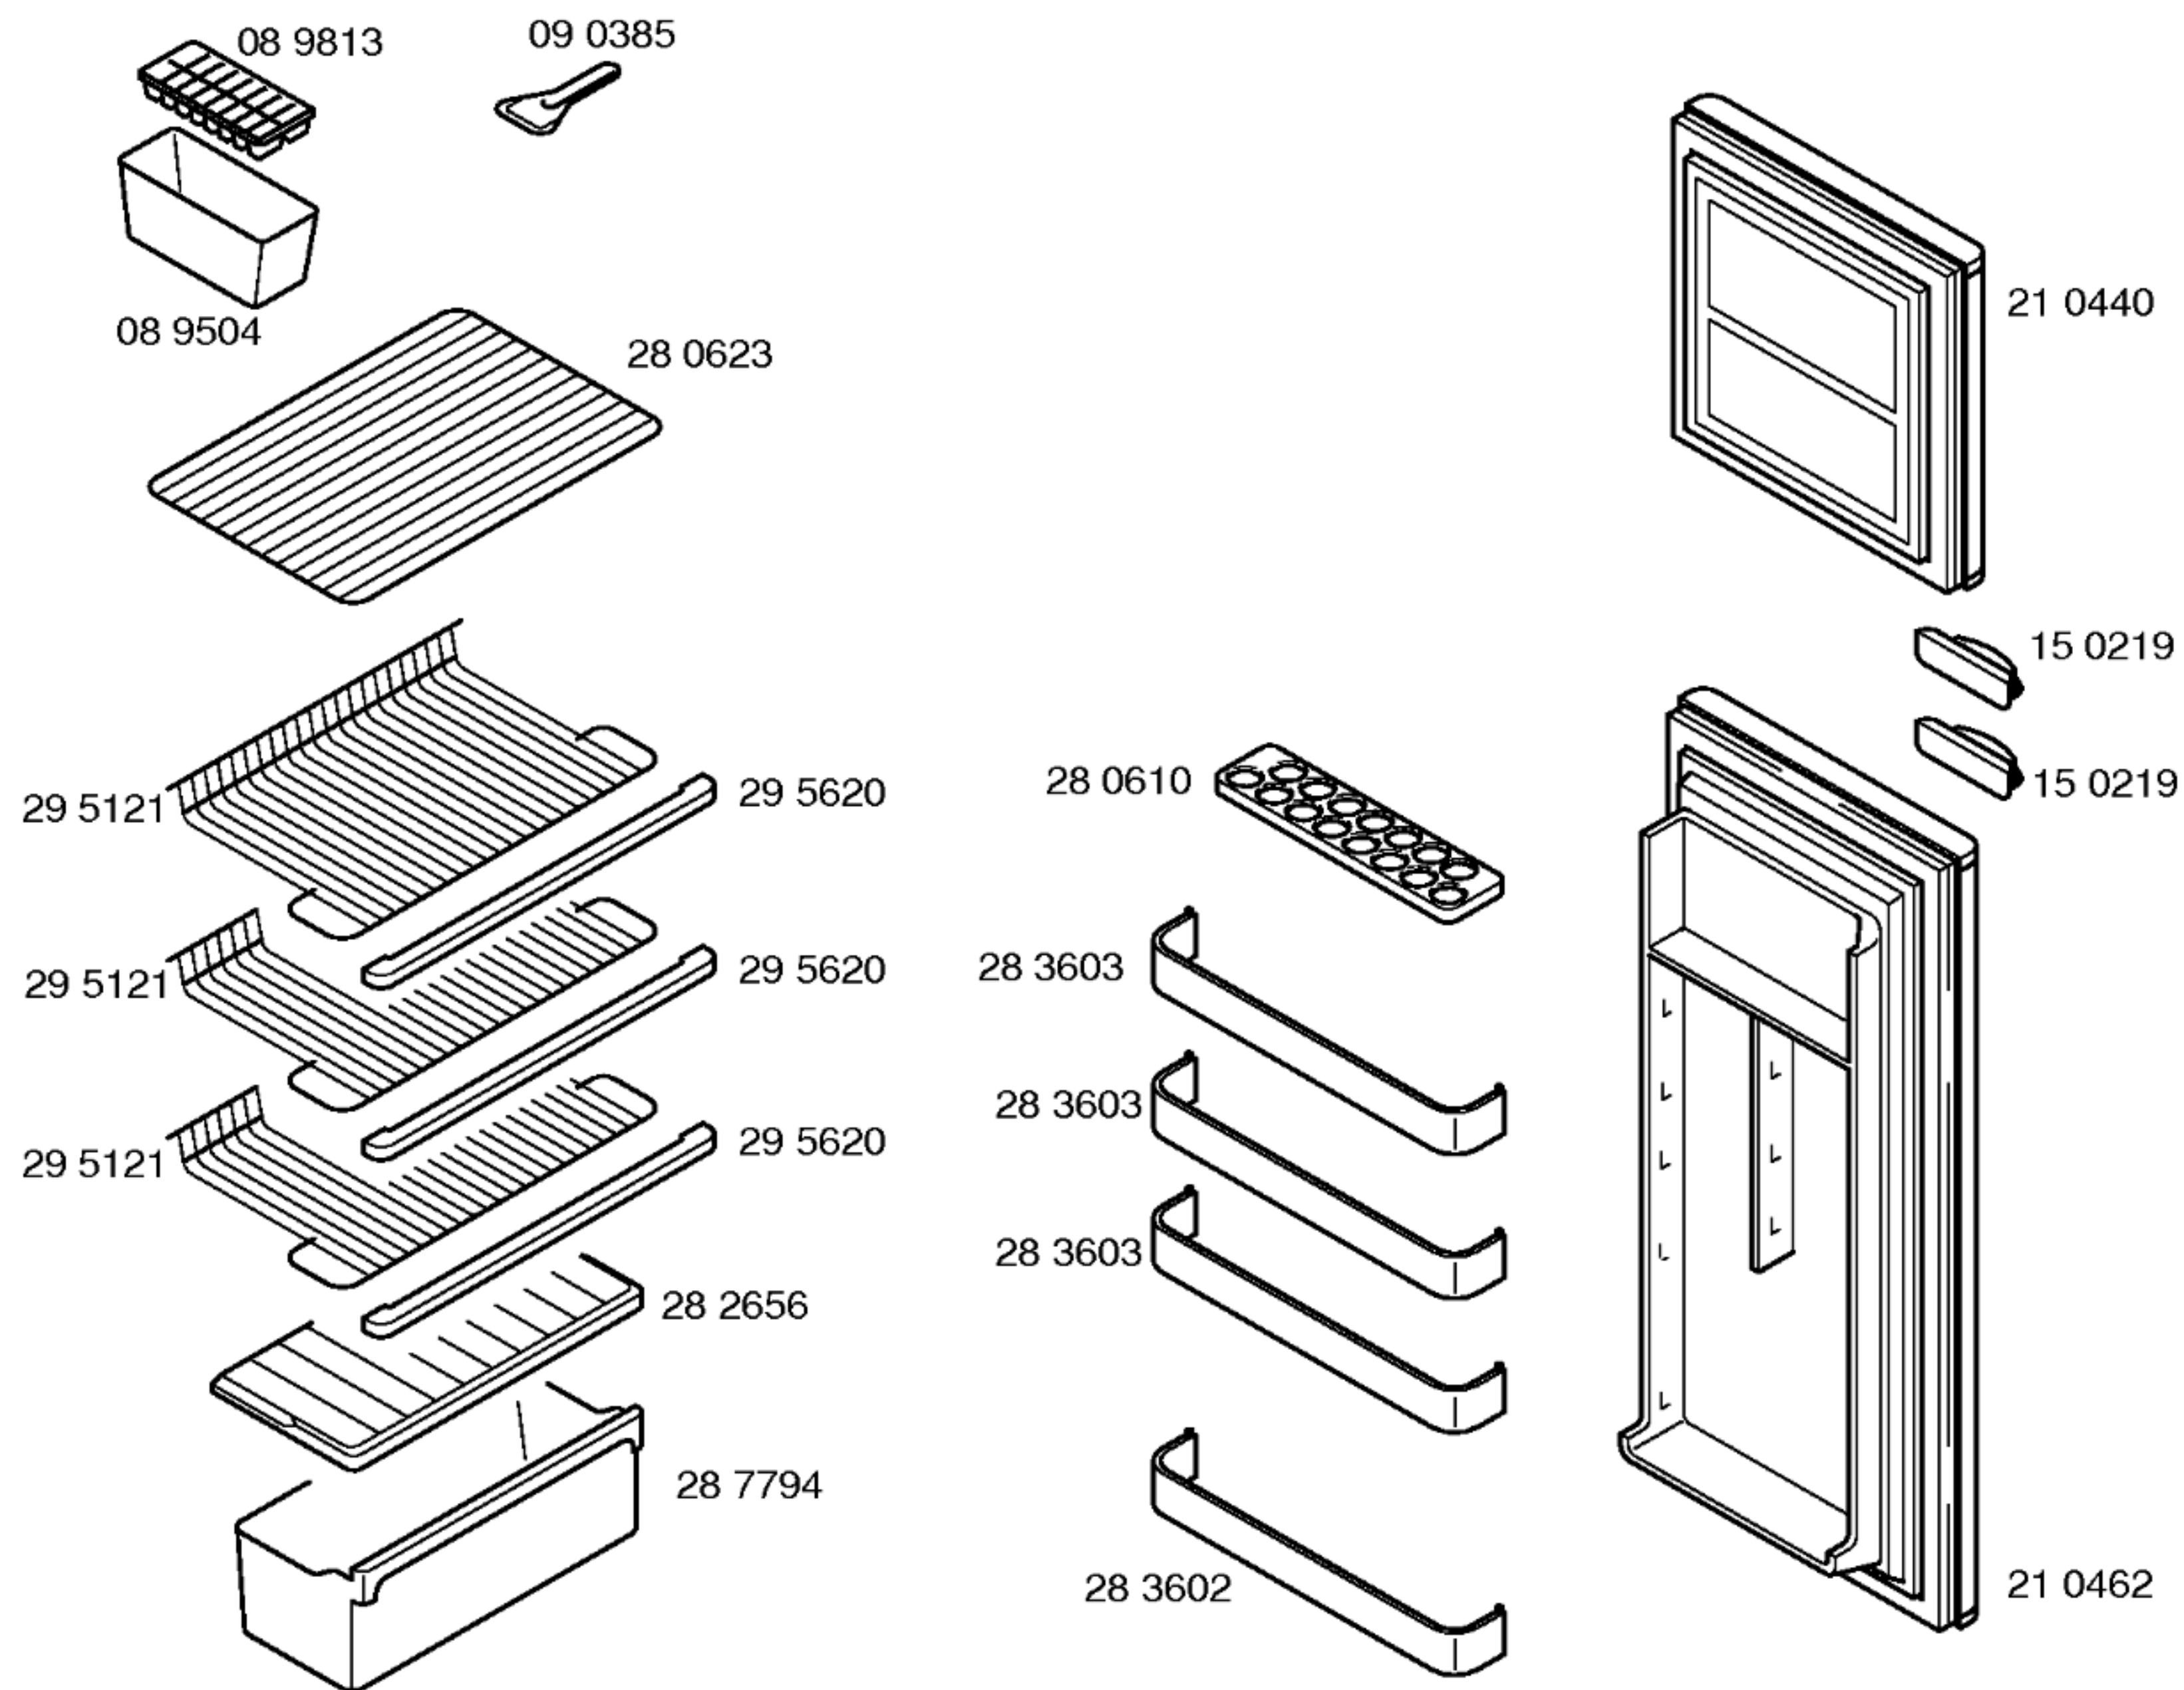

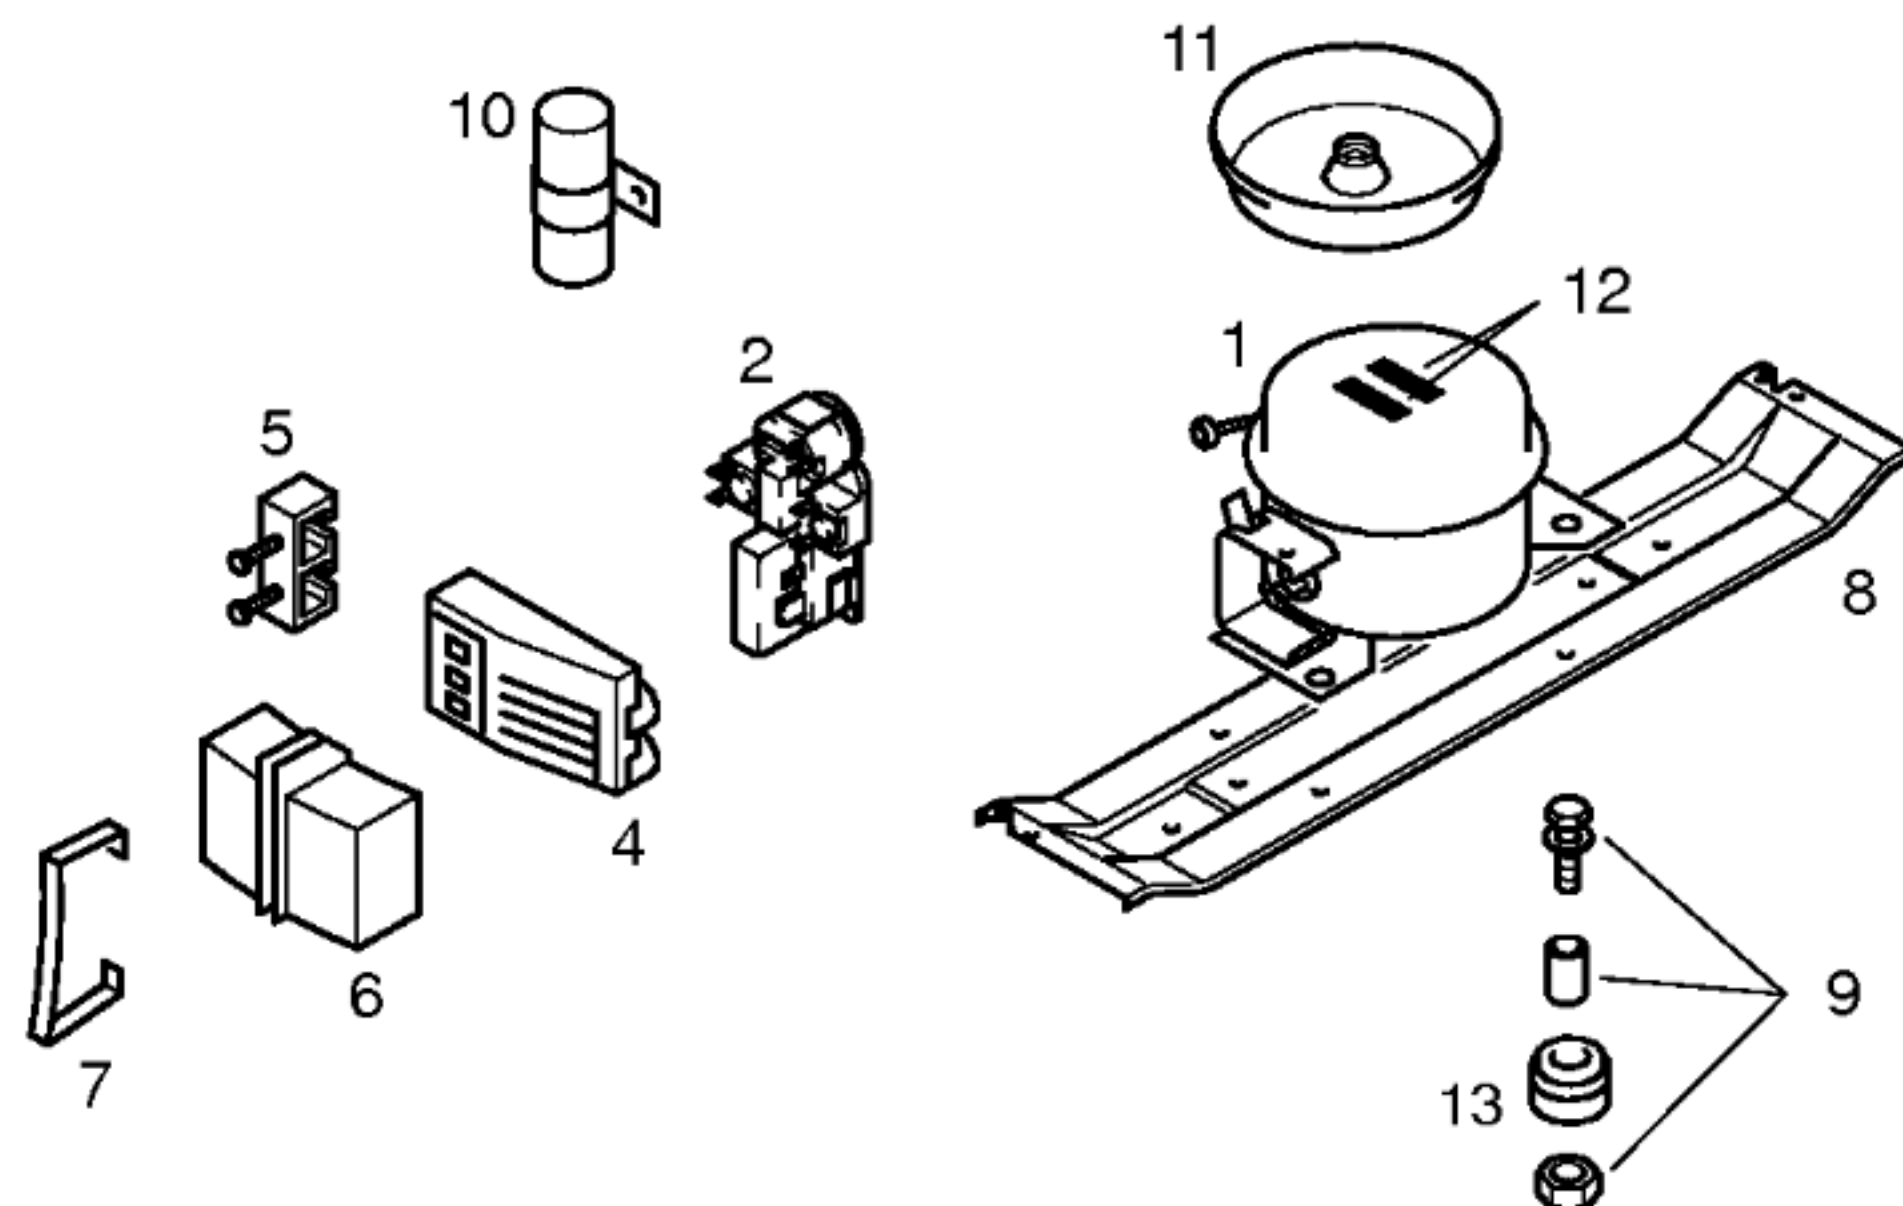

Pos.	Masushita	
	DA125E	
1	14 1553	
2	06 6875	
3		
4		
5		
6		
7		
8	28 8253	
9	05 0166	
10		
11	06 4259	
12		
13	06 4260	

TECHNISCHE DATEN/TECHNICAL DATA/DONNEES TECHNIQUES/DATOS TECNICOS		
Verdichter/Compressor/Compresseur/Compresor Typ/Type/Tipo Förderleistung/Delivery/Debit/Aspiración l/h Anlaufstrom/Starting current/Cour.démarrage/Int.arranque A Widerstand/Resistance/Resistencia. Ha/main/prin. Ohm Hi/aux.	Masushita DA125E 12,0 28,7	
Temp.Reyler/Thermostat/Termostato Typ/Type/Tipo Reglerstellung/Position/Conexión Schaltwerte/Switching values/ ..ein/conex. °C Valeurs de commutation/Desconex. ..aus"/descon. (..abtaven' od) ..alarm'	RANCO K52L1561 MIN MAX. 3,5° 6° 4° 14°	
Füllmenge/Fill. quantily/Charge/Carga R600a	g	*
Anschlusswert/Comm. load/Puiss. Connect./Potenc.	W	144
Heizung/Heater/Chauflage/Resistenc.descong. Widerstand/Resistance/Resistencia Leistung/Power/Puissance/Potencia	Ohm W	
Ventilador/Blower/Ventilateur/Ventilador Widerstand/Resistance/Resistencia	Ohm	
Magnetventil/Magnetic valve/Electrovanne/Electrovalvula Widerstand/Resistance/Resistencia Spannung/Voltage/Tension/Tensión	Ohm V	
Temp.Reyler/Thermostat/Termostato ambiente para ventilador refrigerador		

* Siehe Typenschild/Ver plaqueta de características