


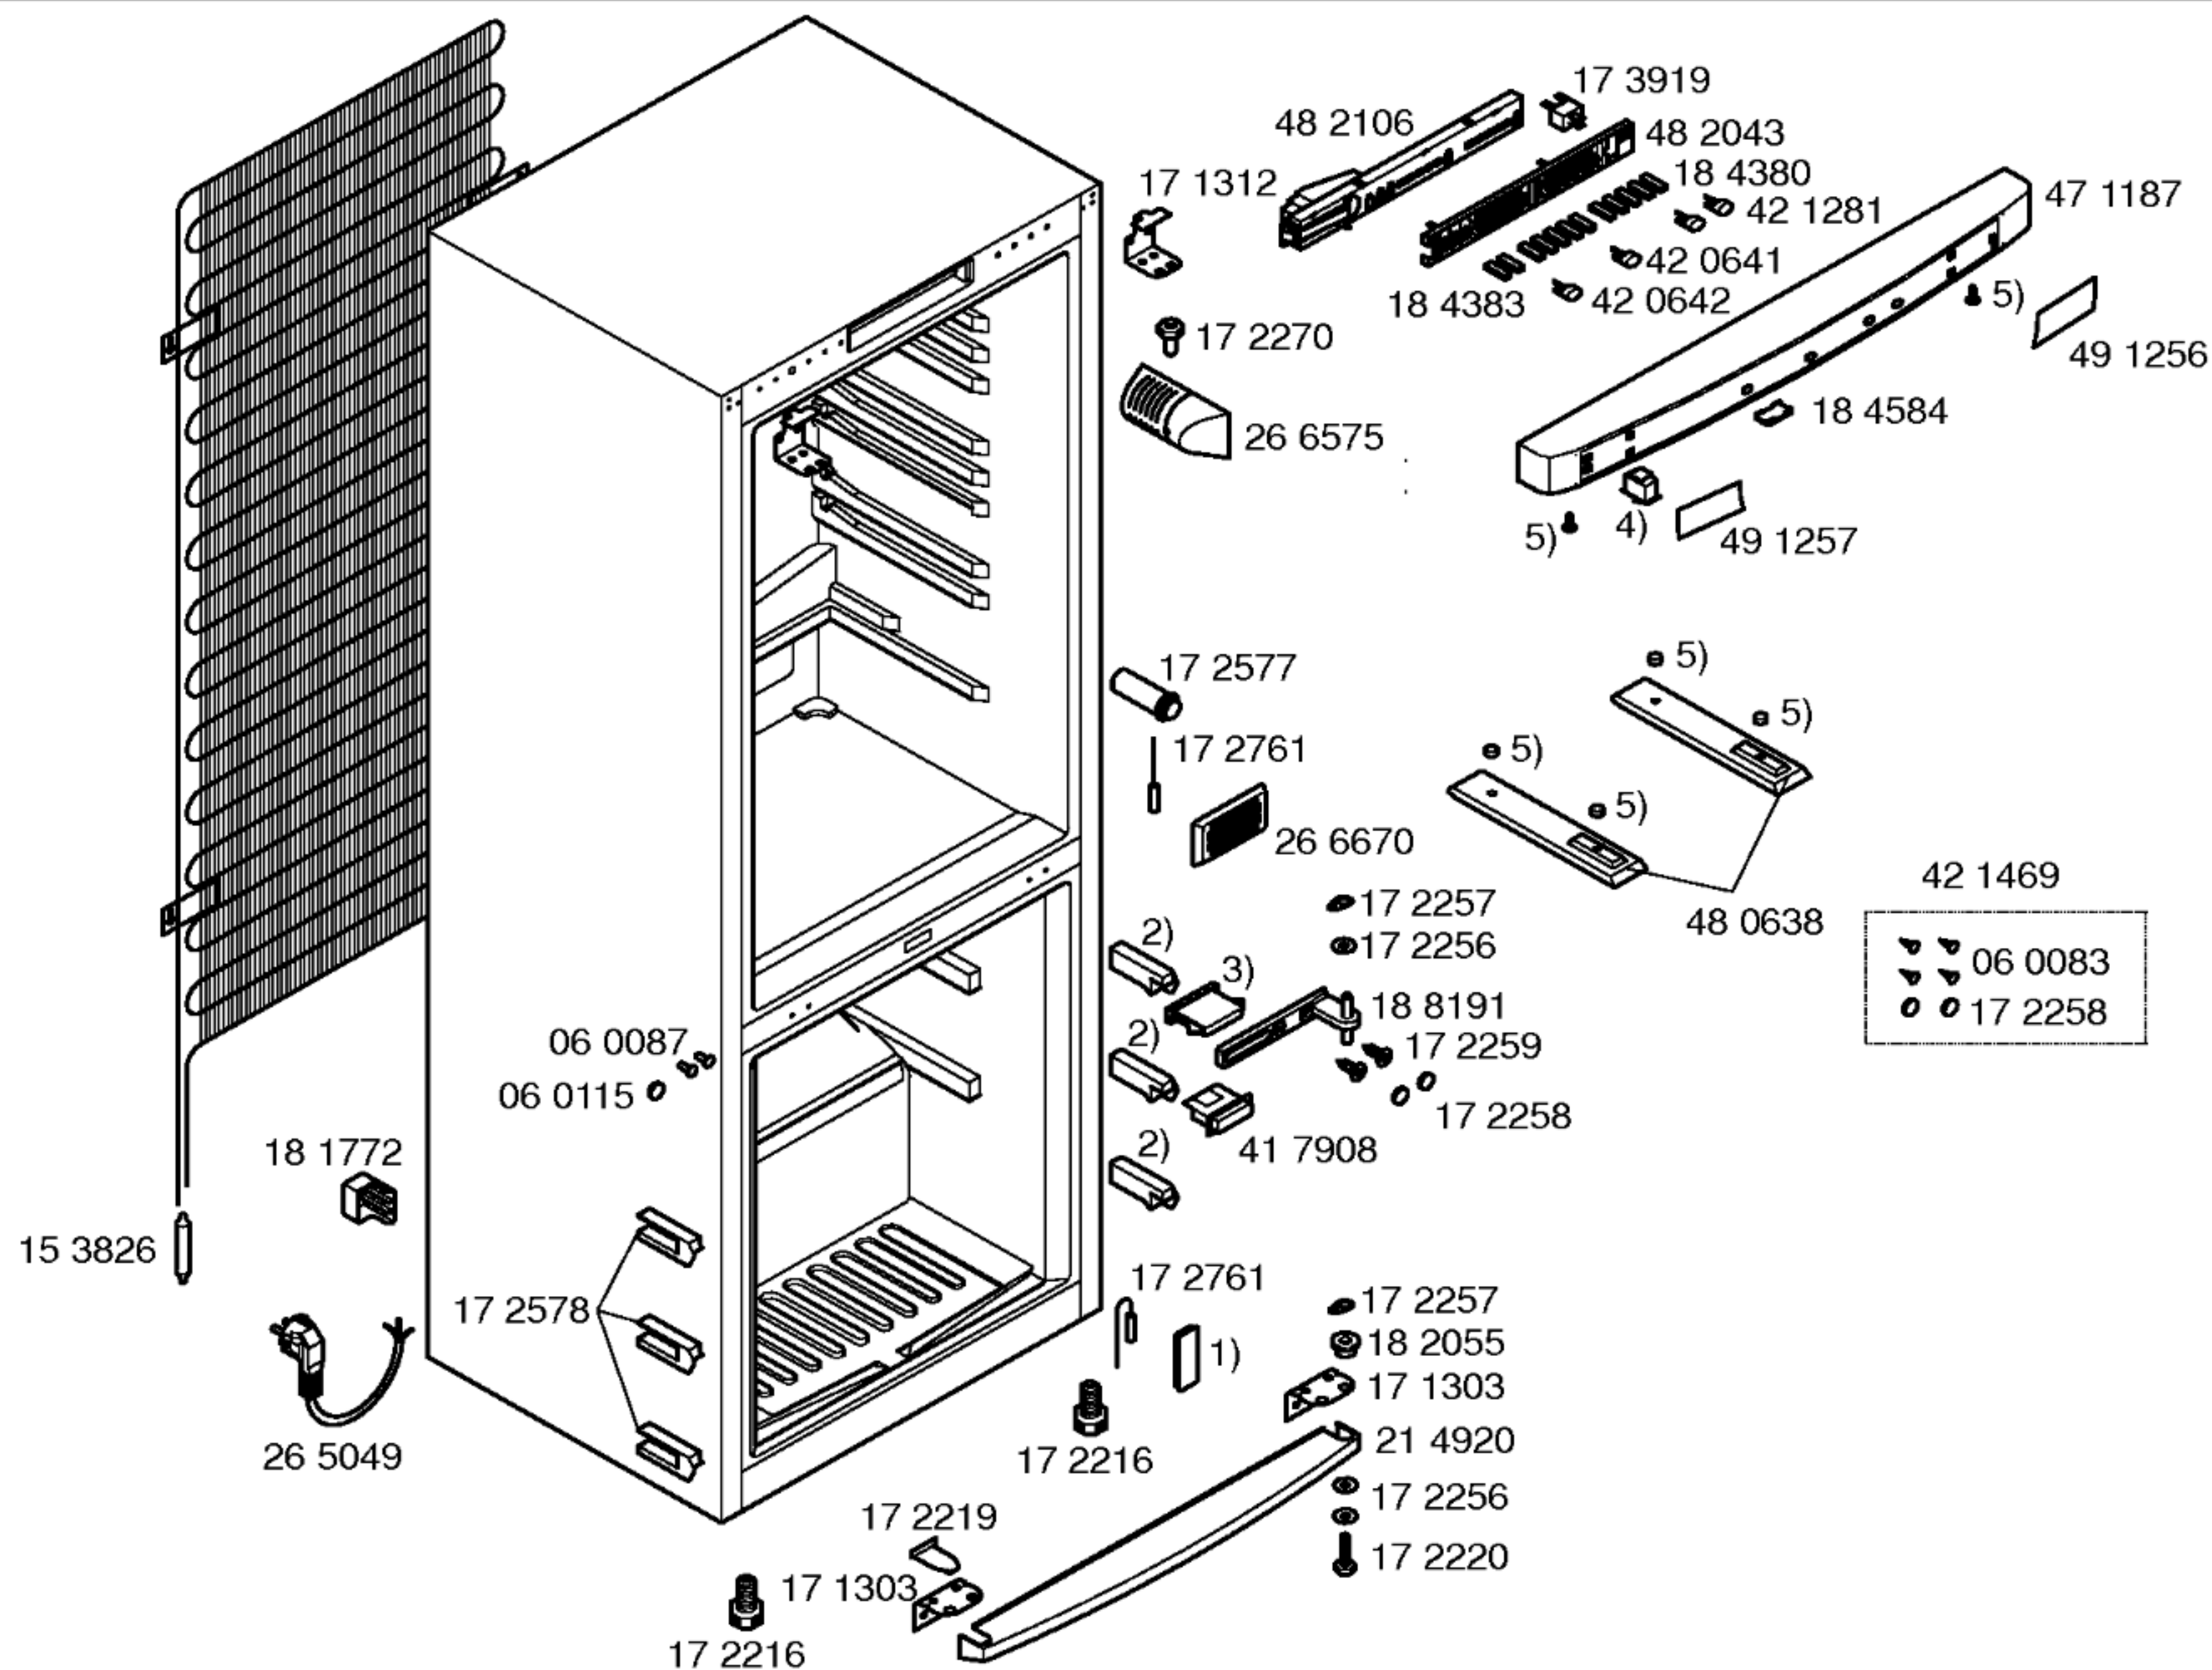

Gebrauchsanweisung


58 7334

 $(el, en)$ 

- 1) 17 2762
- 2) 17 2579
- 3) 41 8128
- 4) 18 4027
- 5) 06 0087


42 1469


06 0083  
17 2258

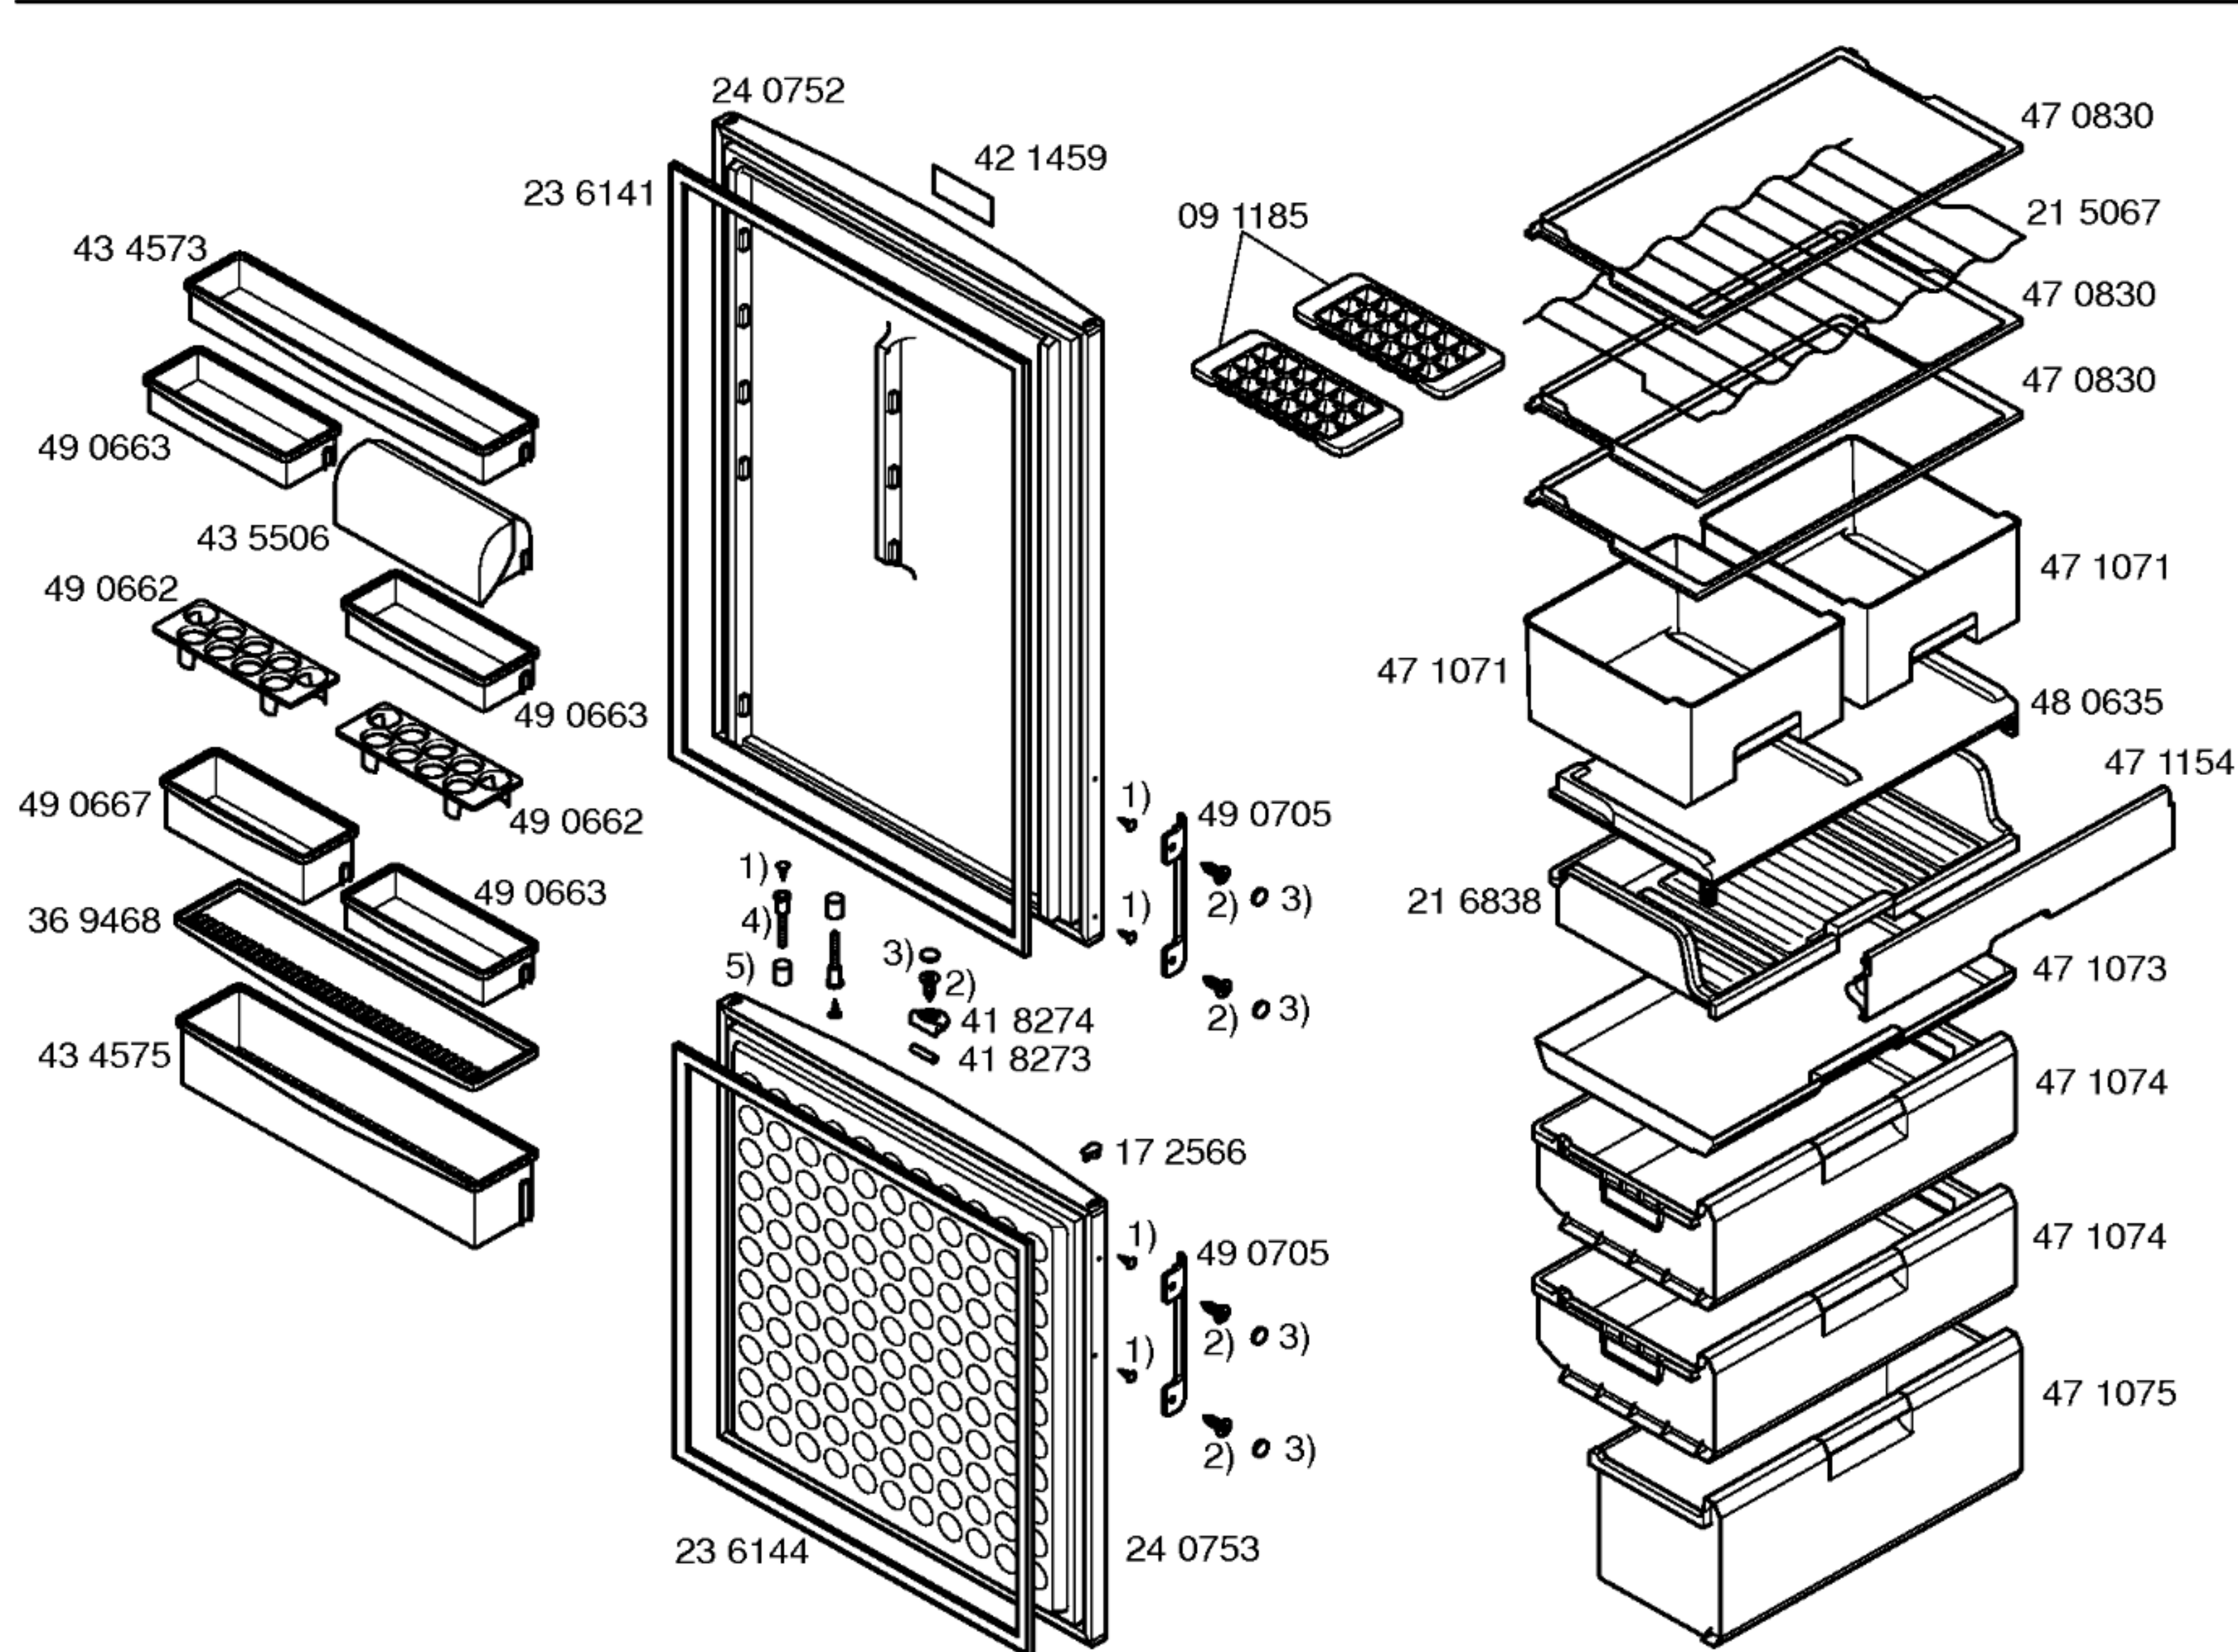

- 1) 06 0083
- 2) 17 2274
- 3) 06 0115
- 4) 18 8194
- 5) 18 8188



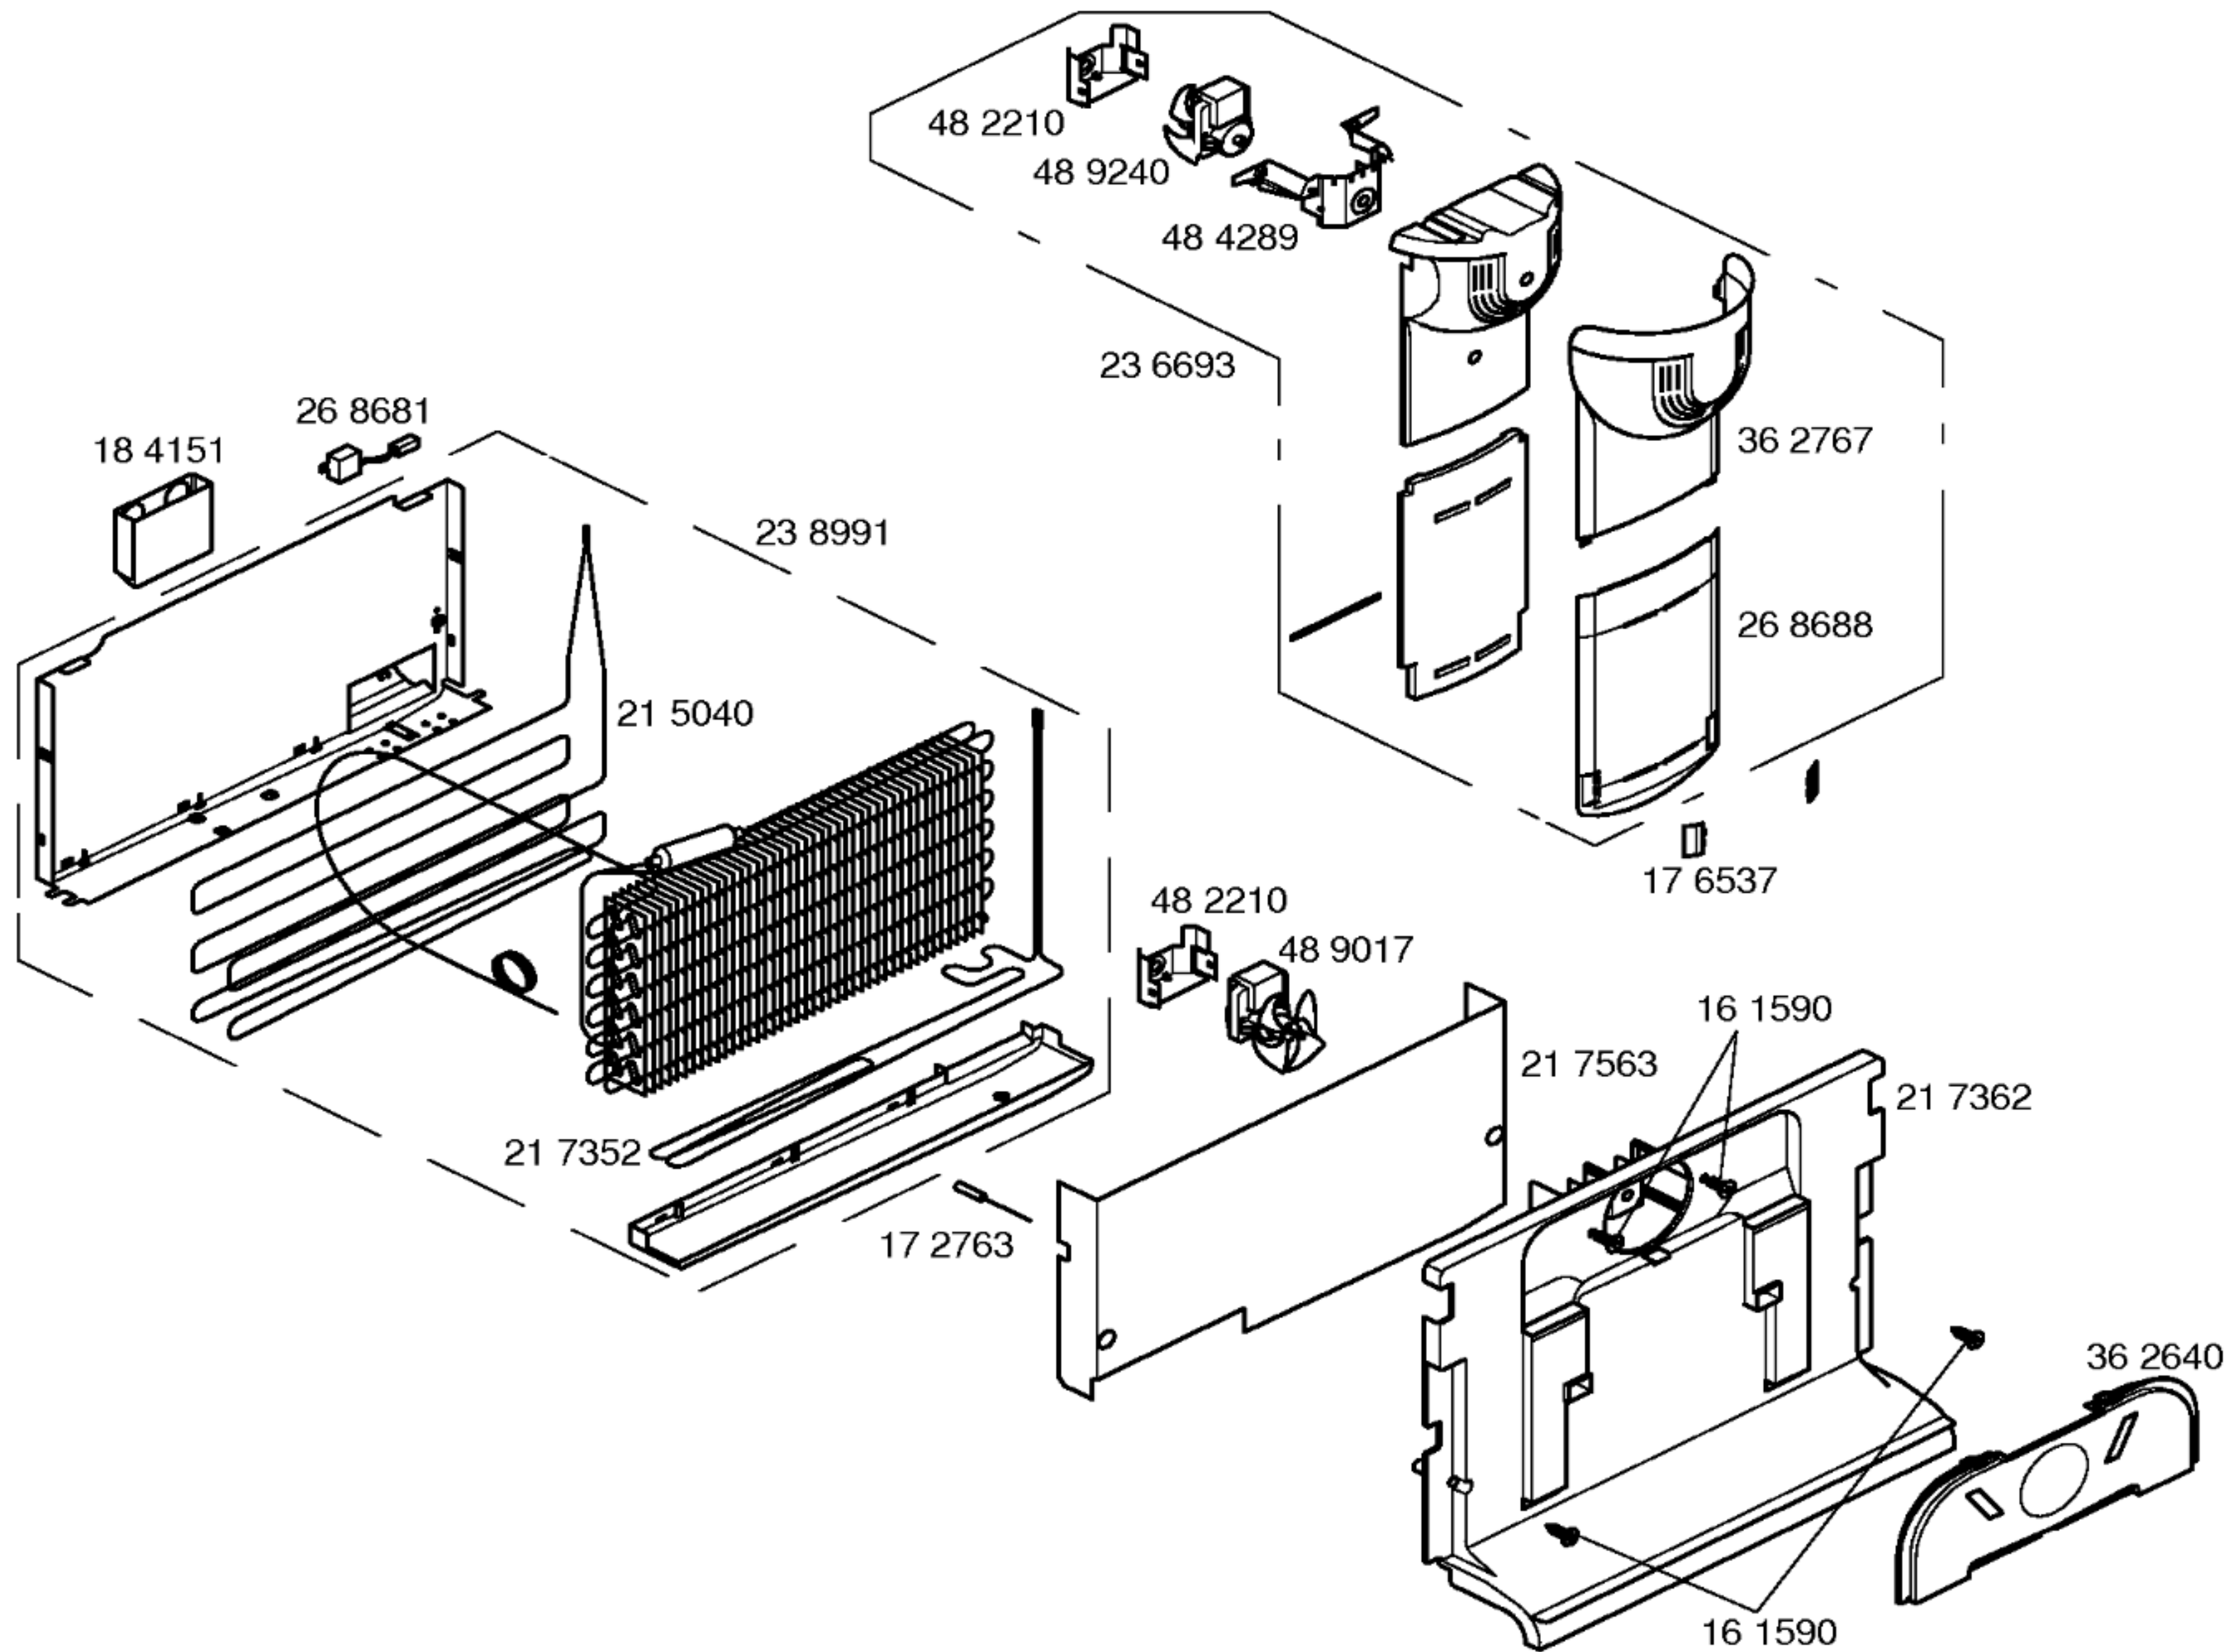

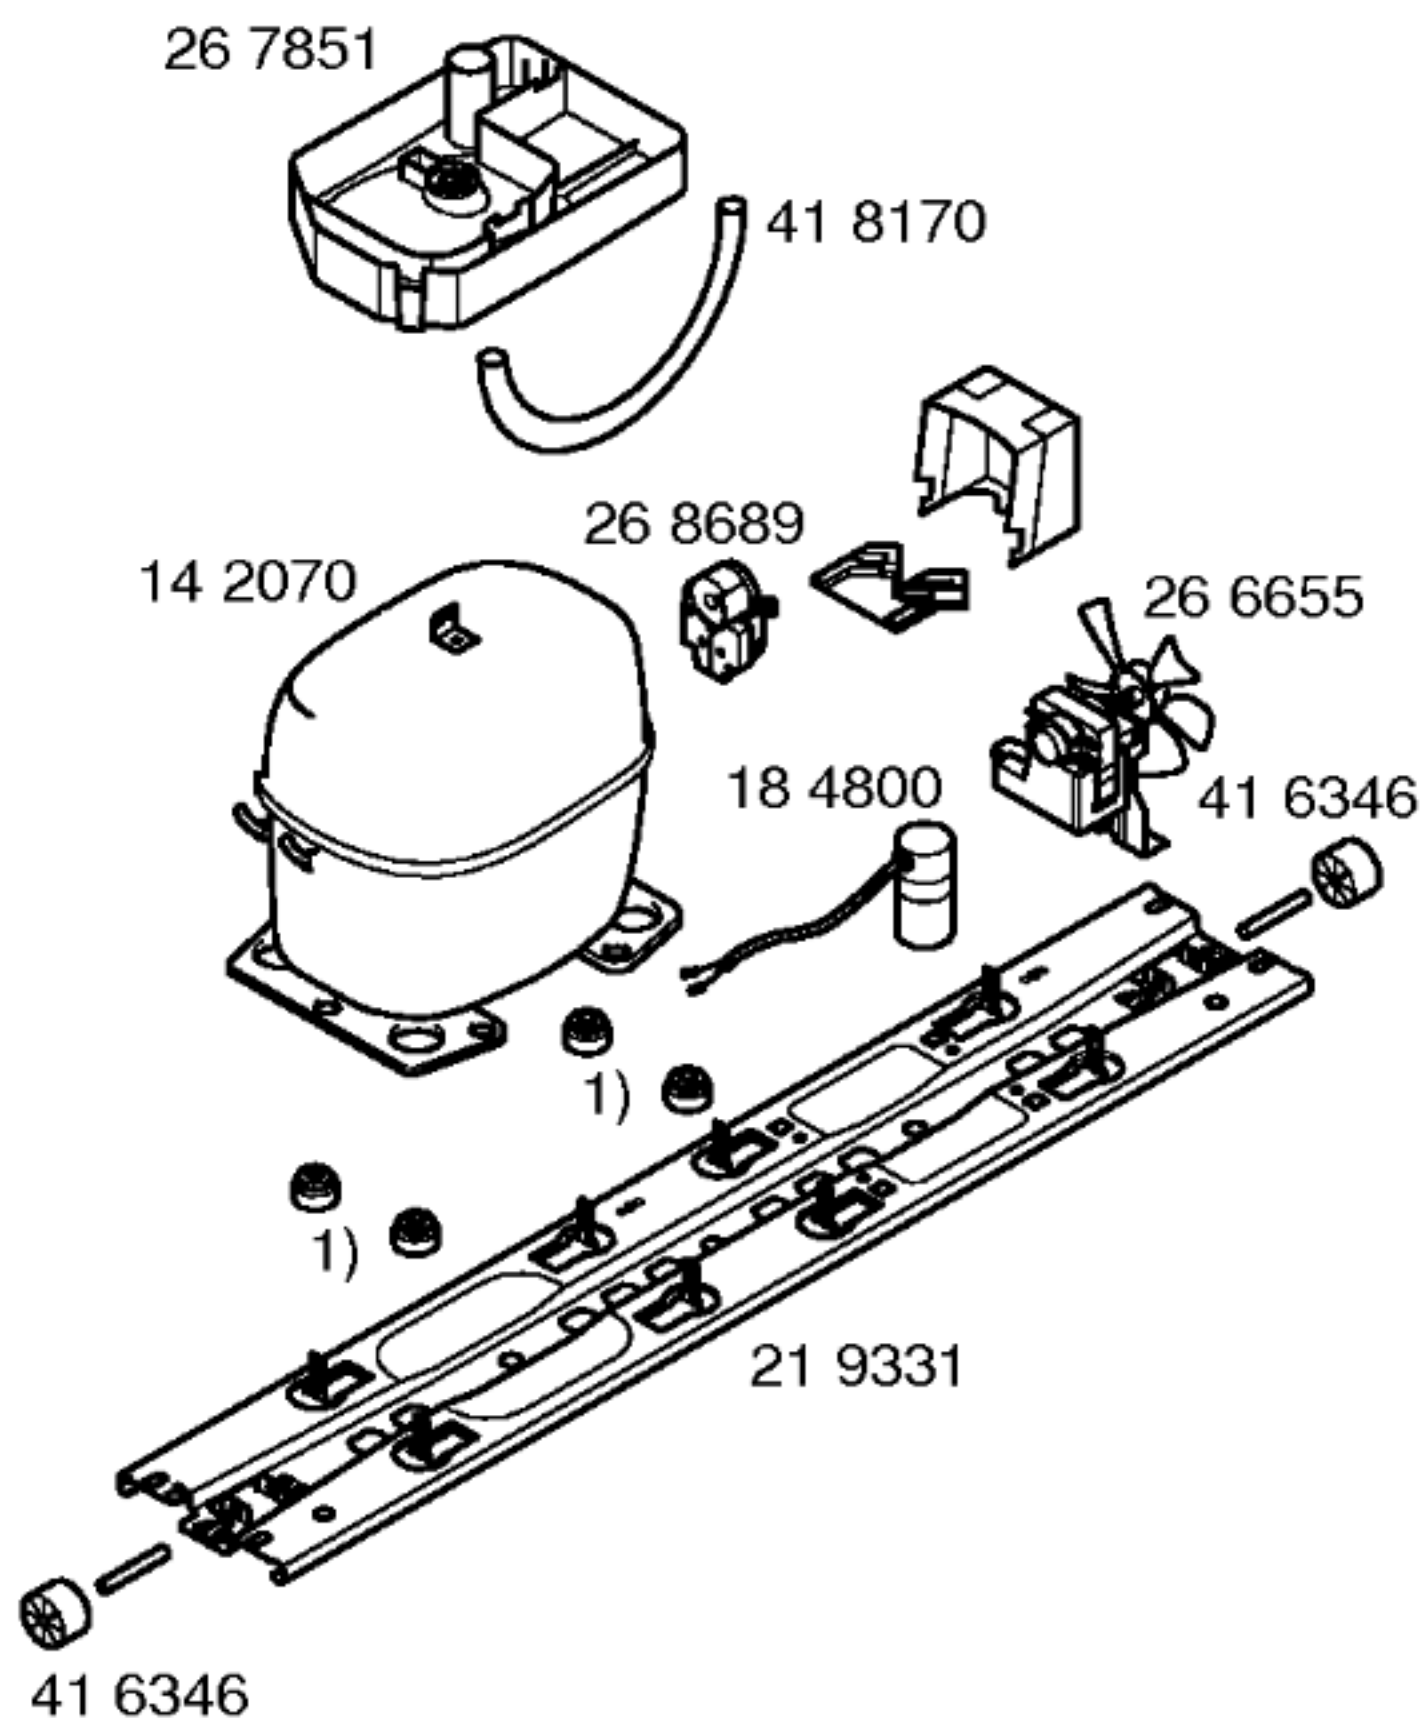

## TECHNISCHE DATEN/TECHNICAL DATA/DONNEES TECHNIQUES/DATOS TECNICOS

Verdichter/Compressor/Compresseur/Compresor  
Typ/Type/Tipo  
Förderleistung/Delivery/Debit/Aspiración l/h  
Anlaufstrom/Starting current/Cour.démarrage/Int.arranque A  
Widerstand/Resistance/Resistencia. Ha/main/prin. Ohm  
Hi/aux.

ASPERA  
NBT 1118Y  
2574  
—  
11.0  
16.4

Klappe Therm./Thermostat/Termostat  
Typ/Type/Tipo  
Reglerstellung/Position/Conexión  
Schaltwerte/Switching values/...ein/conex.°C  
Valeurs de commutation/Desconex. ...aus"/descon.  
(...abtaven' od) ...alarm'

Füllmenge/Fill. quantily/Charge/Carga R600

g 45

Anschlusswert/Comm. load/Puiss. Connect./Potenc.

W 150

Heizung/Heater/Chauflage/Resistenc.descong.  
Widerstand/Resistance/Resistencia  
Leistung/Power/Puissance/Potencia

|    | Verdampfer | Ablaufrinne | Luftkanal |
|----|------------|-------------|-----------|
| KΩ | 0.38       | 1.4         | 13.49     |
| W  | 145/230    | 37.5/230    | 4/230     |

Ventilador/Blower/Ventilateur/Ventilador  
Widerstand/Resistance/Resistencia

|    | Verdichter | Verdampfer |
|----|------------|------------|
| KΩ | 0.61       | 0.41       |

1) 06 0182