


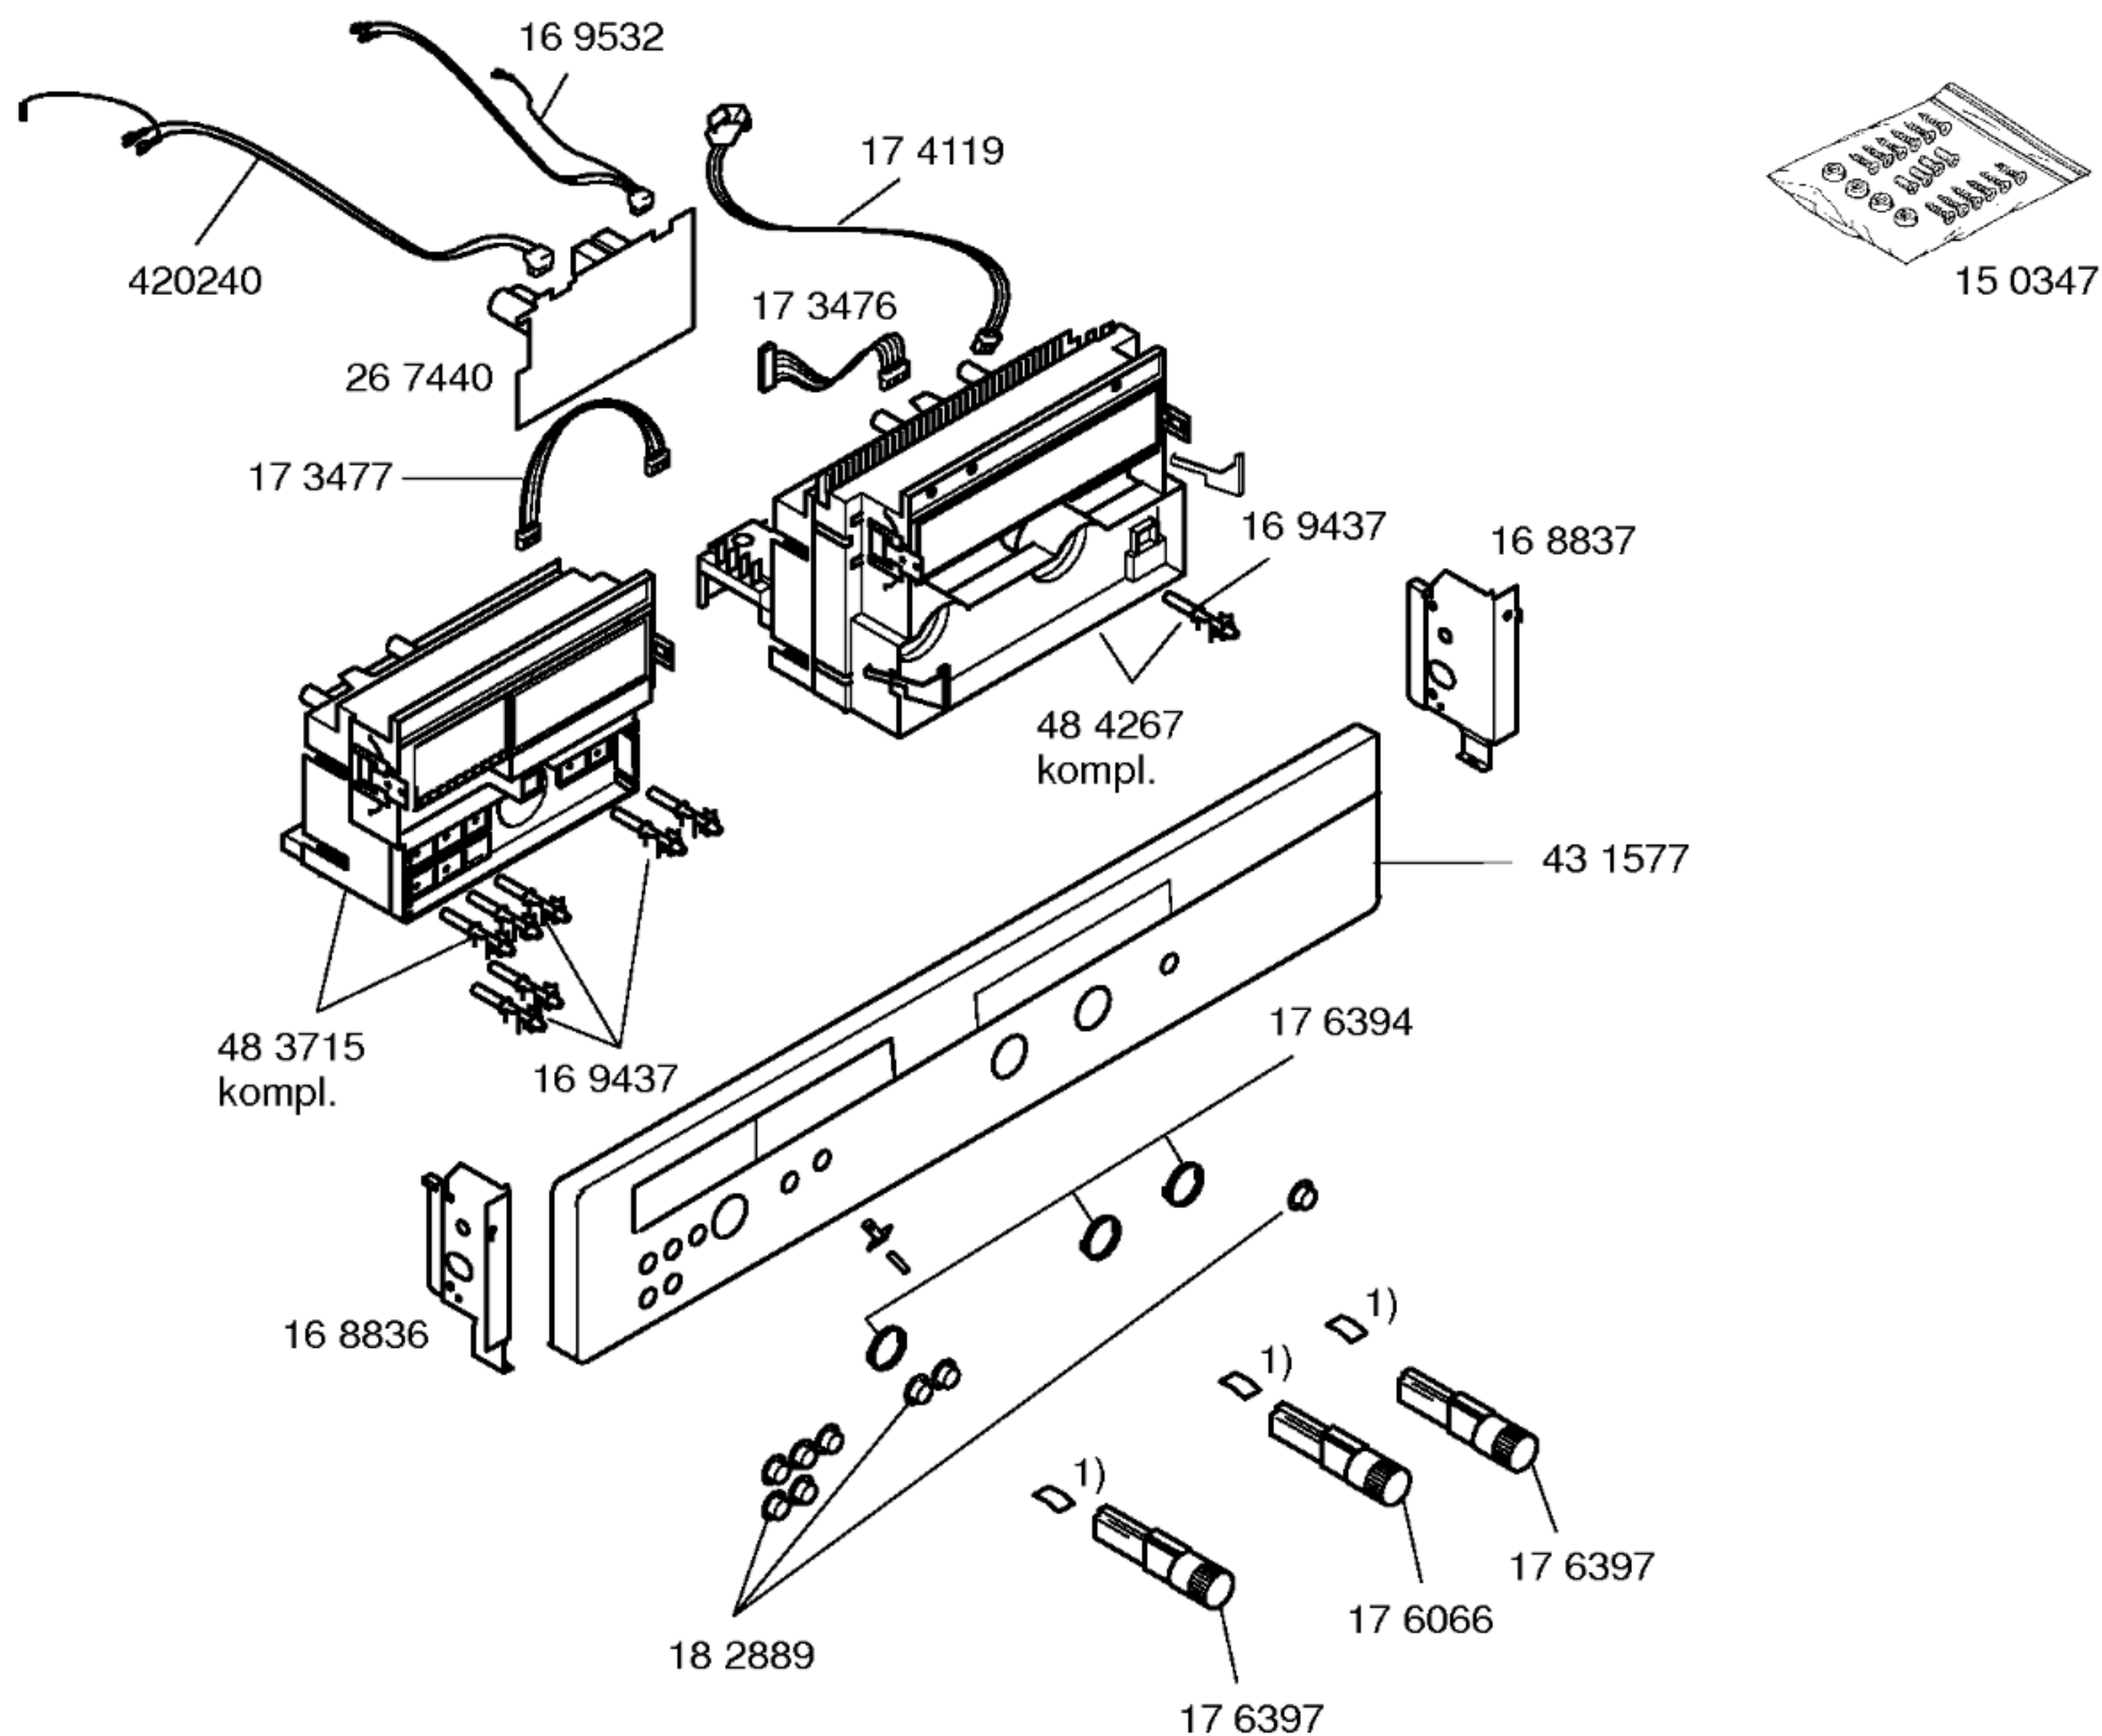

Gebrauchsanweisung
58 4685 (de,fr,it)

Montageanweisung:
52 4904
(de,en,fr,it,nl,da,sv,no
fi,es,pt,el,cs,pl,tr,ru)

Broschuere/Kochbuch
58 1778 (de)
58 3525 (fr)
58 3536 (it)
58 3524 (en)

Zubehoer:
HZ21004
Backblech Alu
HZ21101
Backblech emailliert
HZ21301
Universalpfanne
HZ21401
Kombirost
HZ22400
Einlegerost
HZ21710
Teleskopauszug
3-fach
HZ21700
Profi-Auszug
HZ24701
Deckel f. Profipfanne
HZ22500
Grillblech

1) 01 4254



e234540-6/2

