


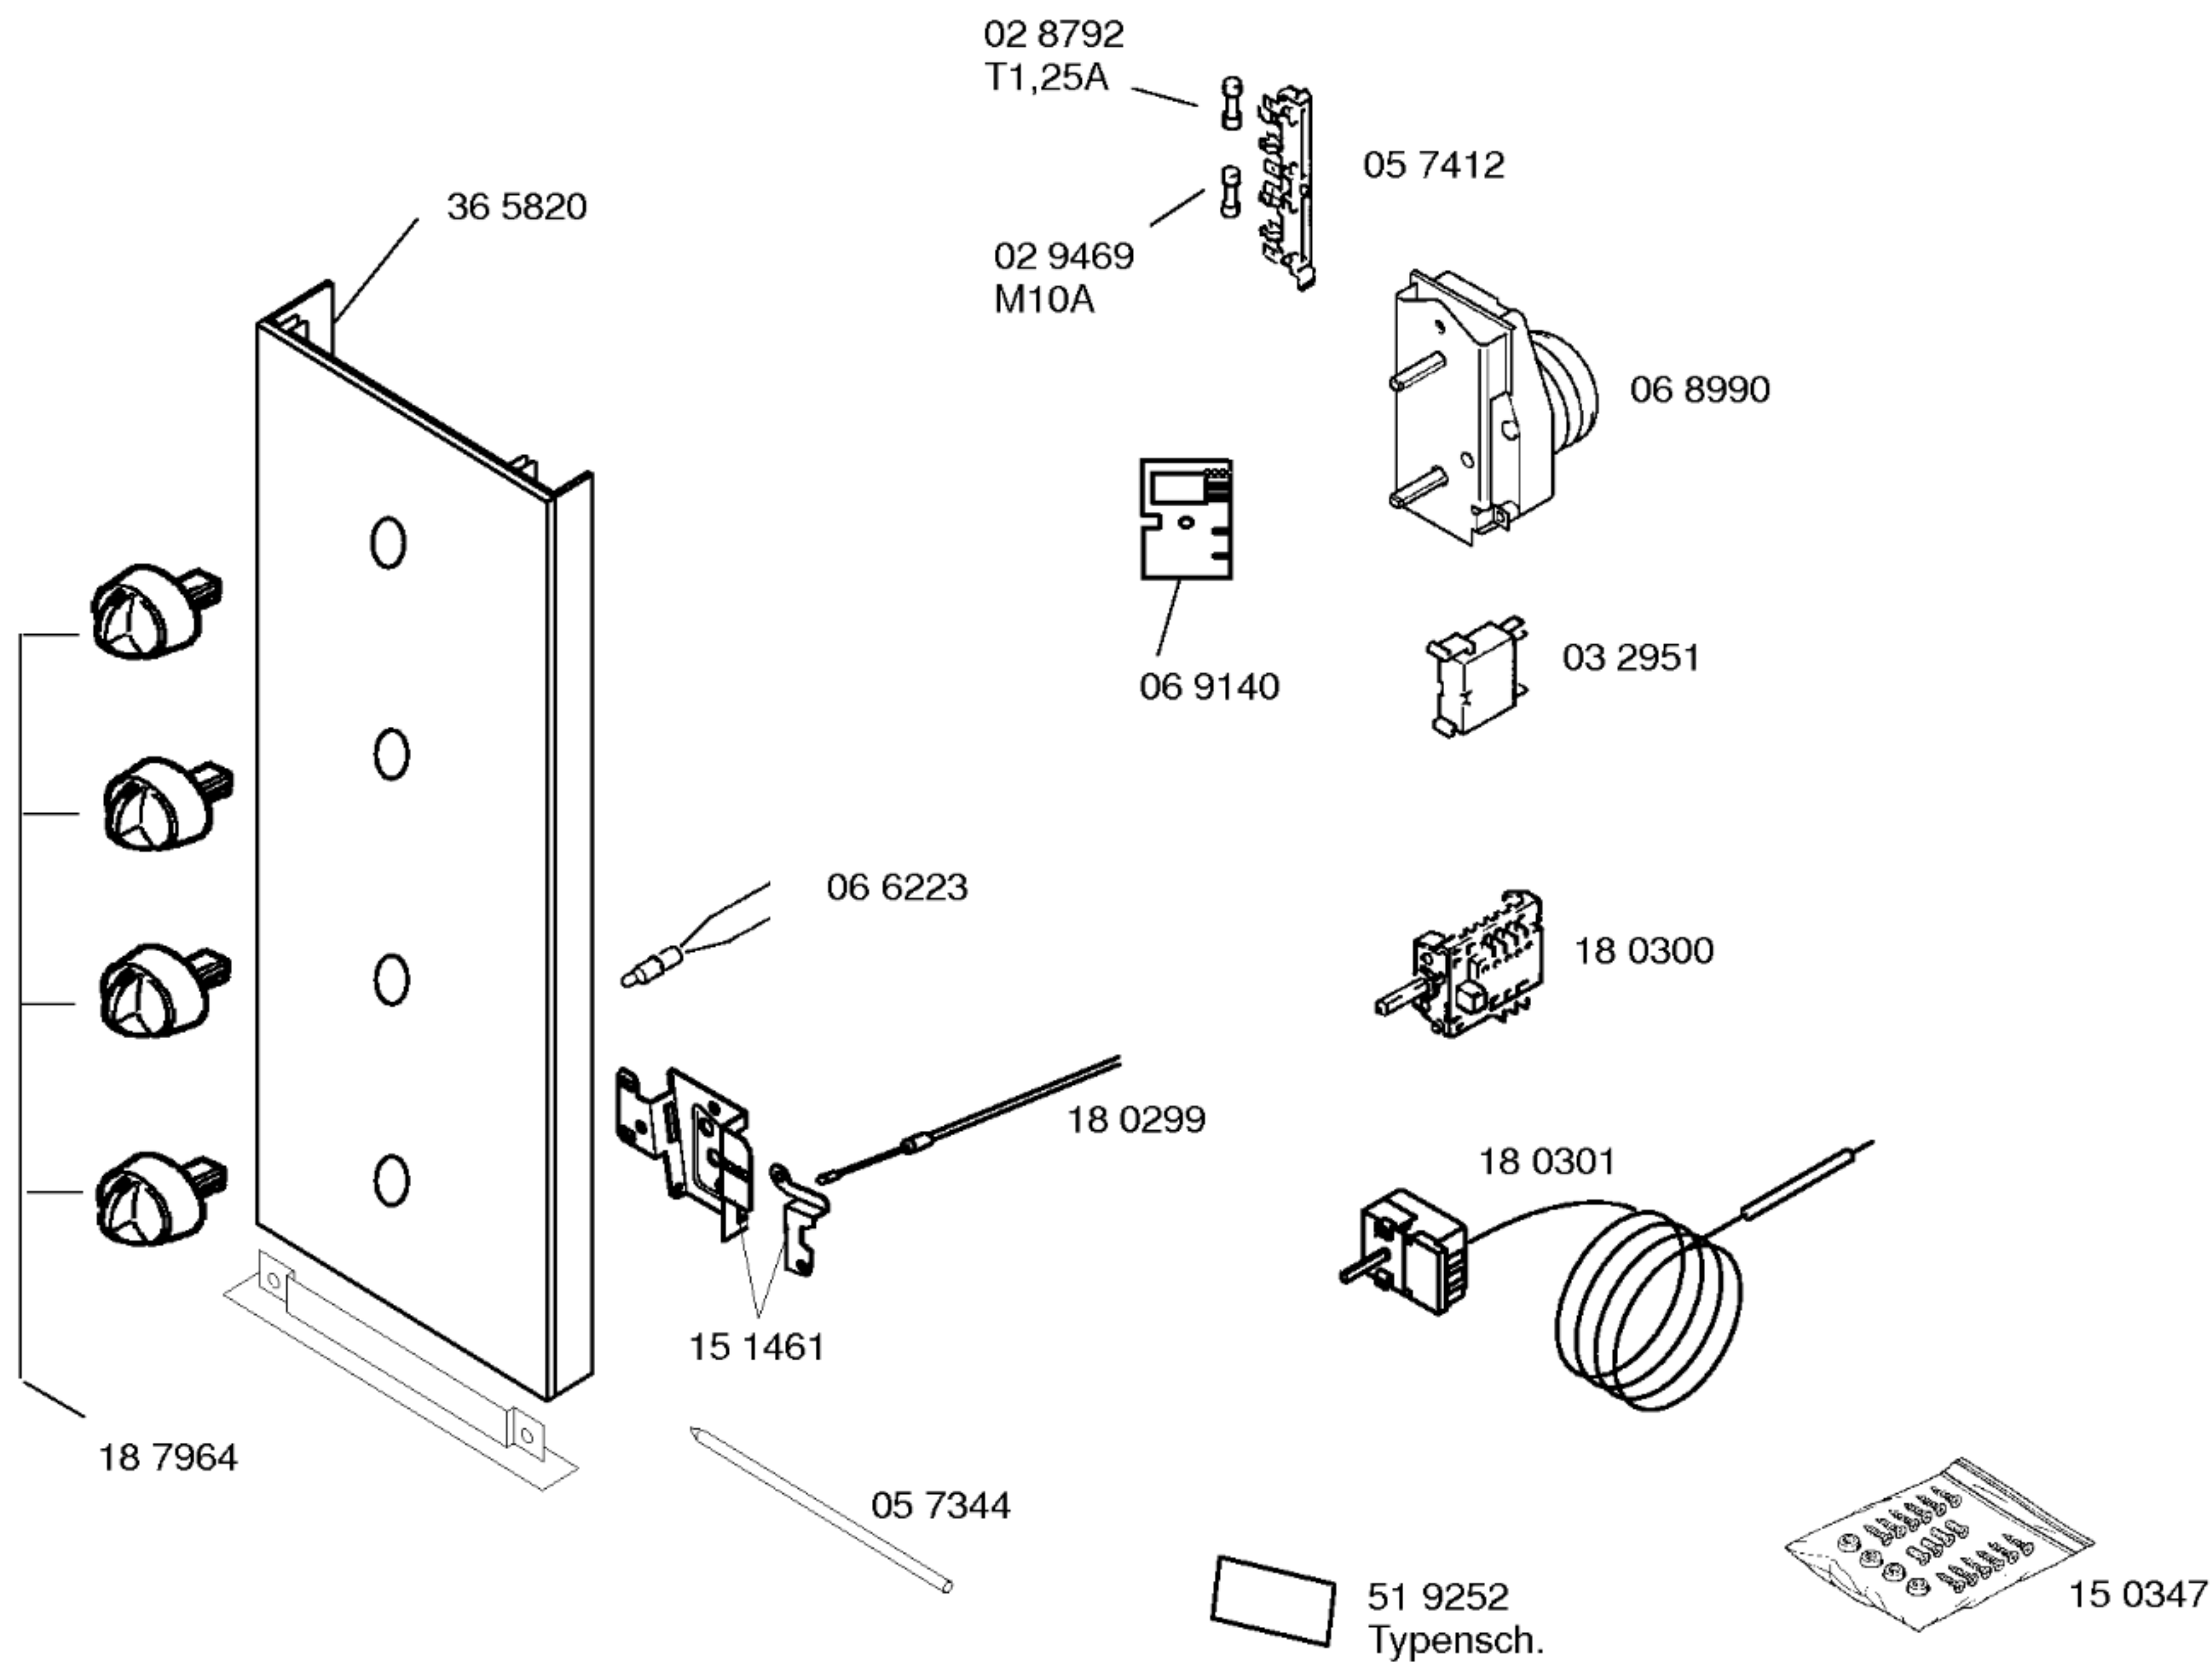


Mat. – Nr. – Konstante  
3740 . . . . .

Gebrauchsanleitung:  
52 9765  
(de,fr,nl)

Montageanleitung:  
52 8756  
(de,en,fr,it,nl,da,es,fi  
no,ru,se)


Kochbuch:  
52 7079  
(nl)

Zubehör:  
HZ8056  
Glaspfanne  
HZ8055  
AL-Backblech  
HZ67615  
Universalpfanne

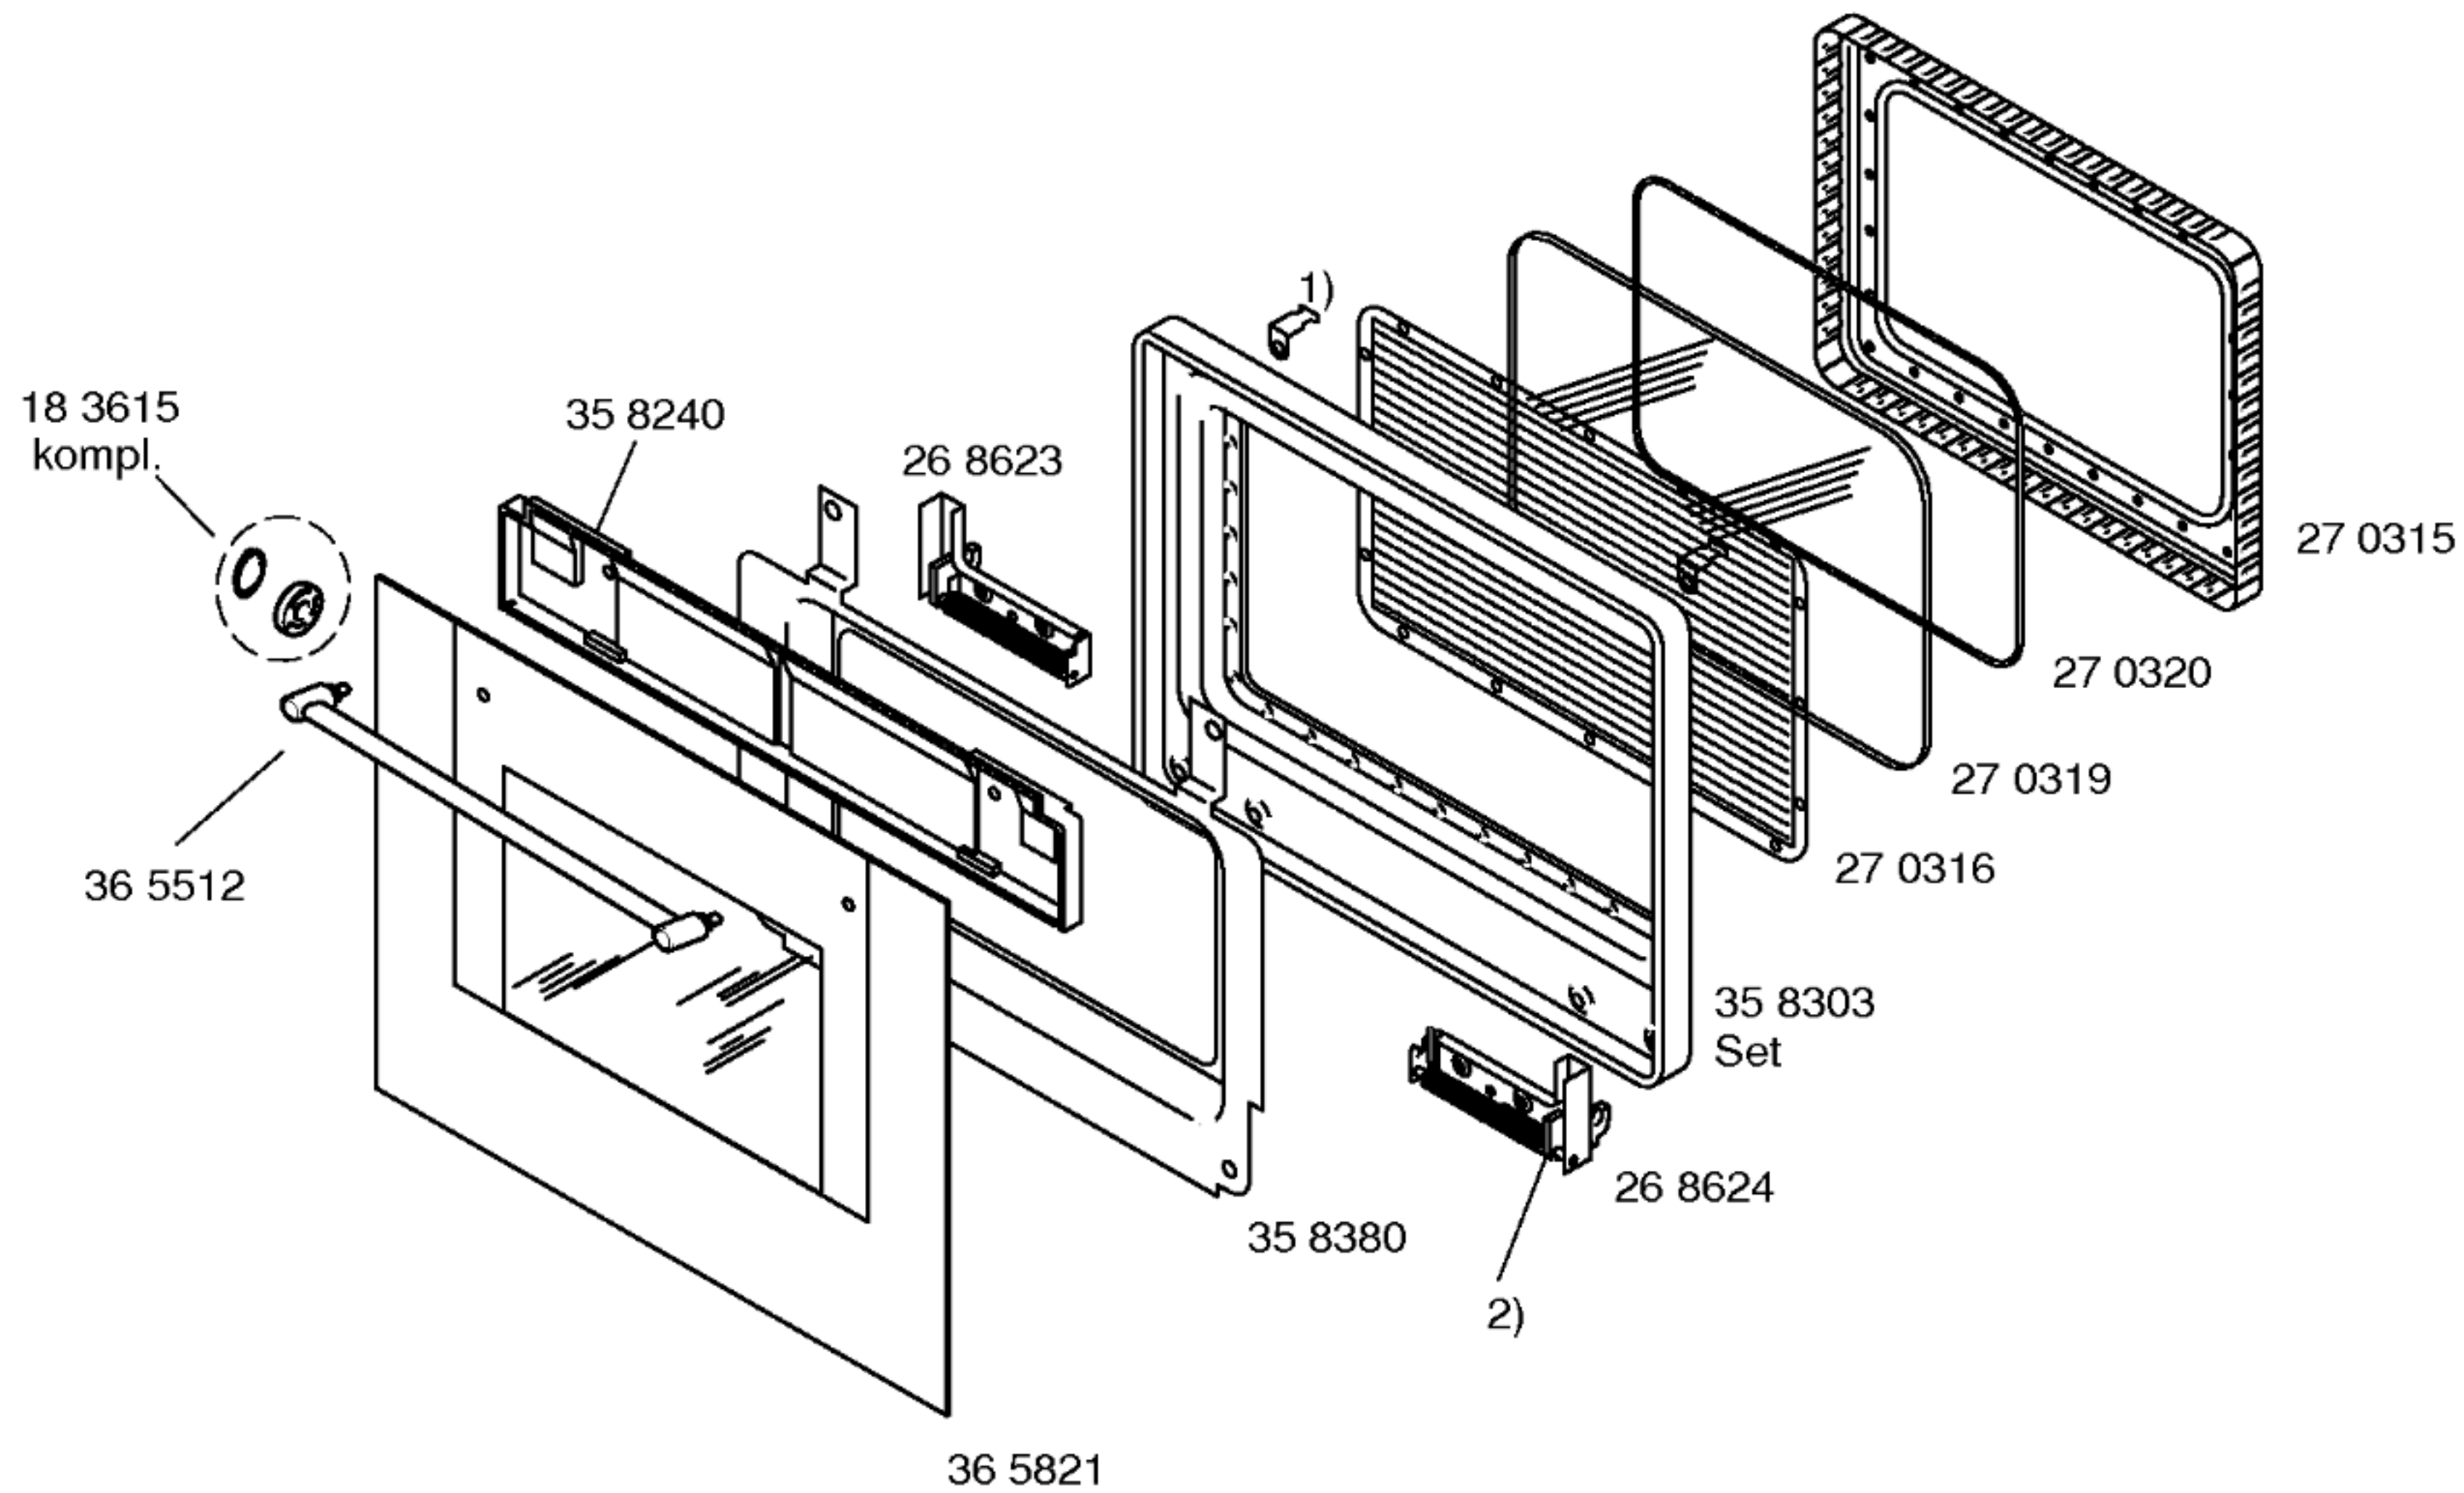


Mat. – Nr. – Konstante  
3740 . . . . .

1) 03 0671  
2) 03 0813  
Arretierstift)

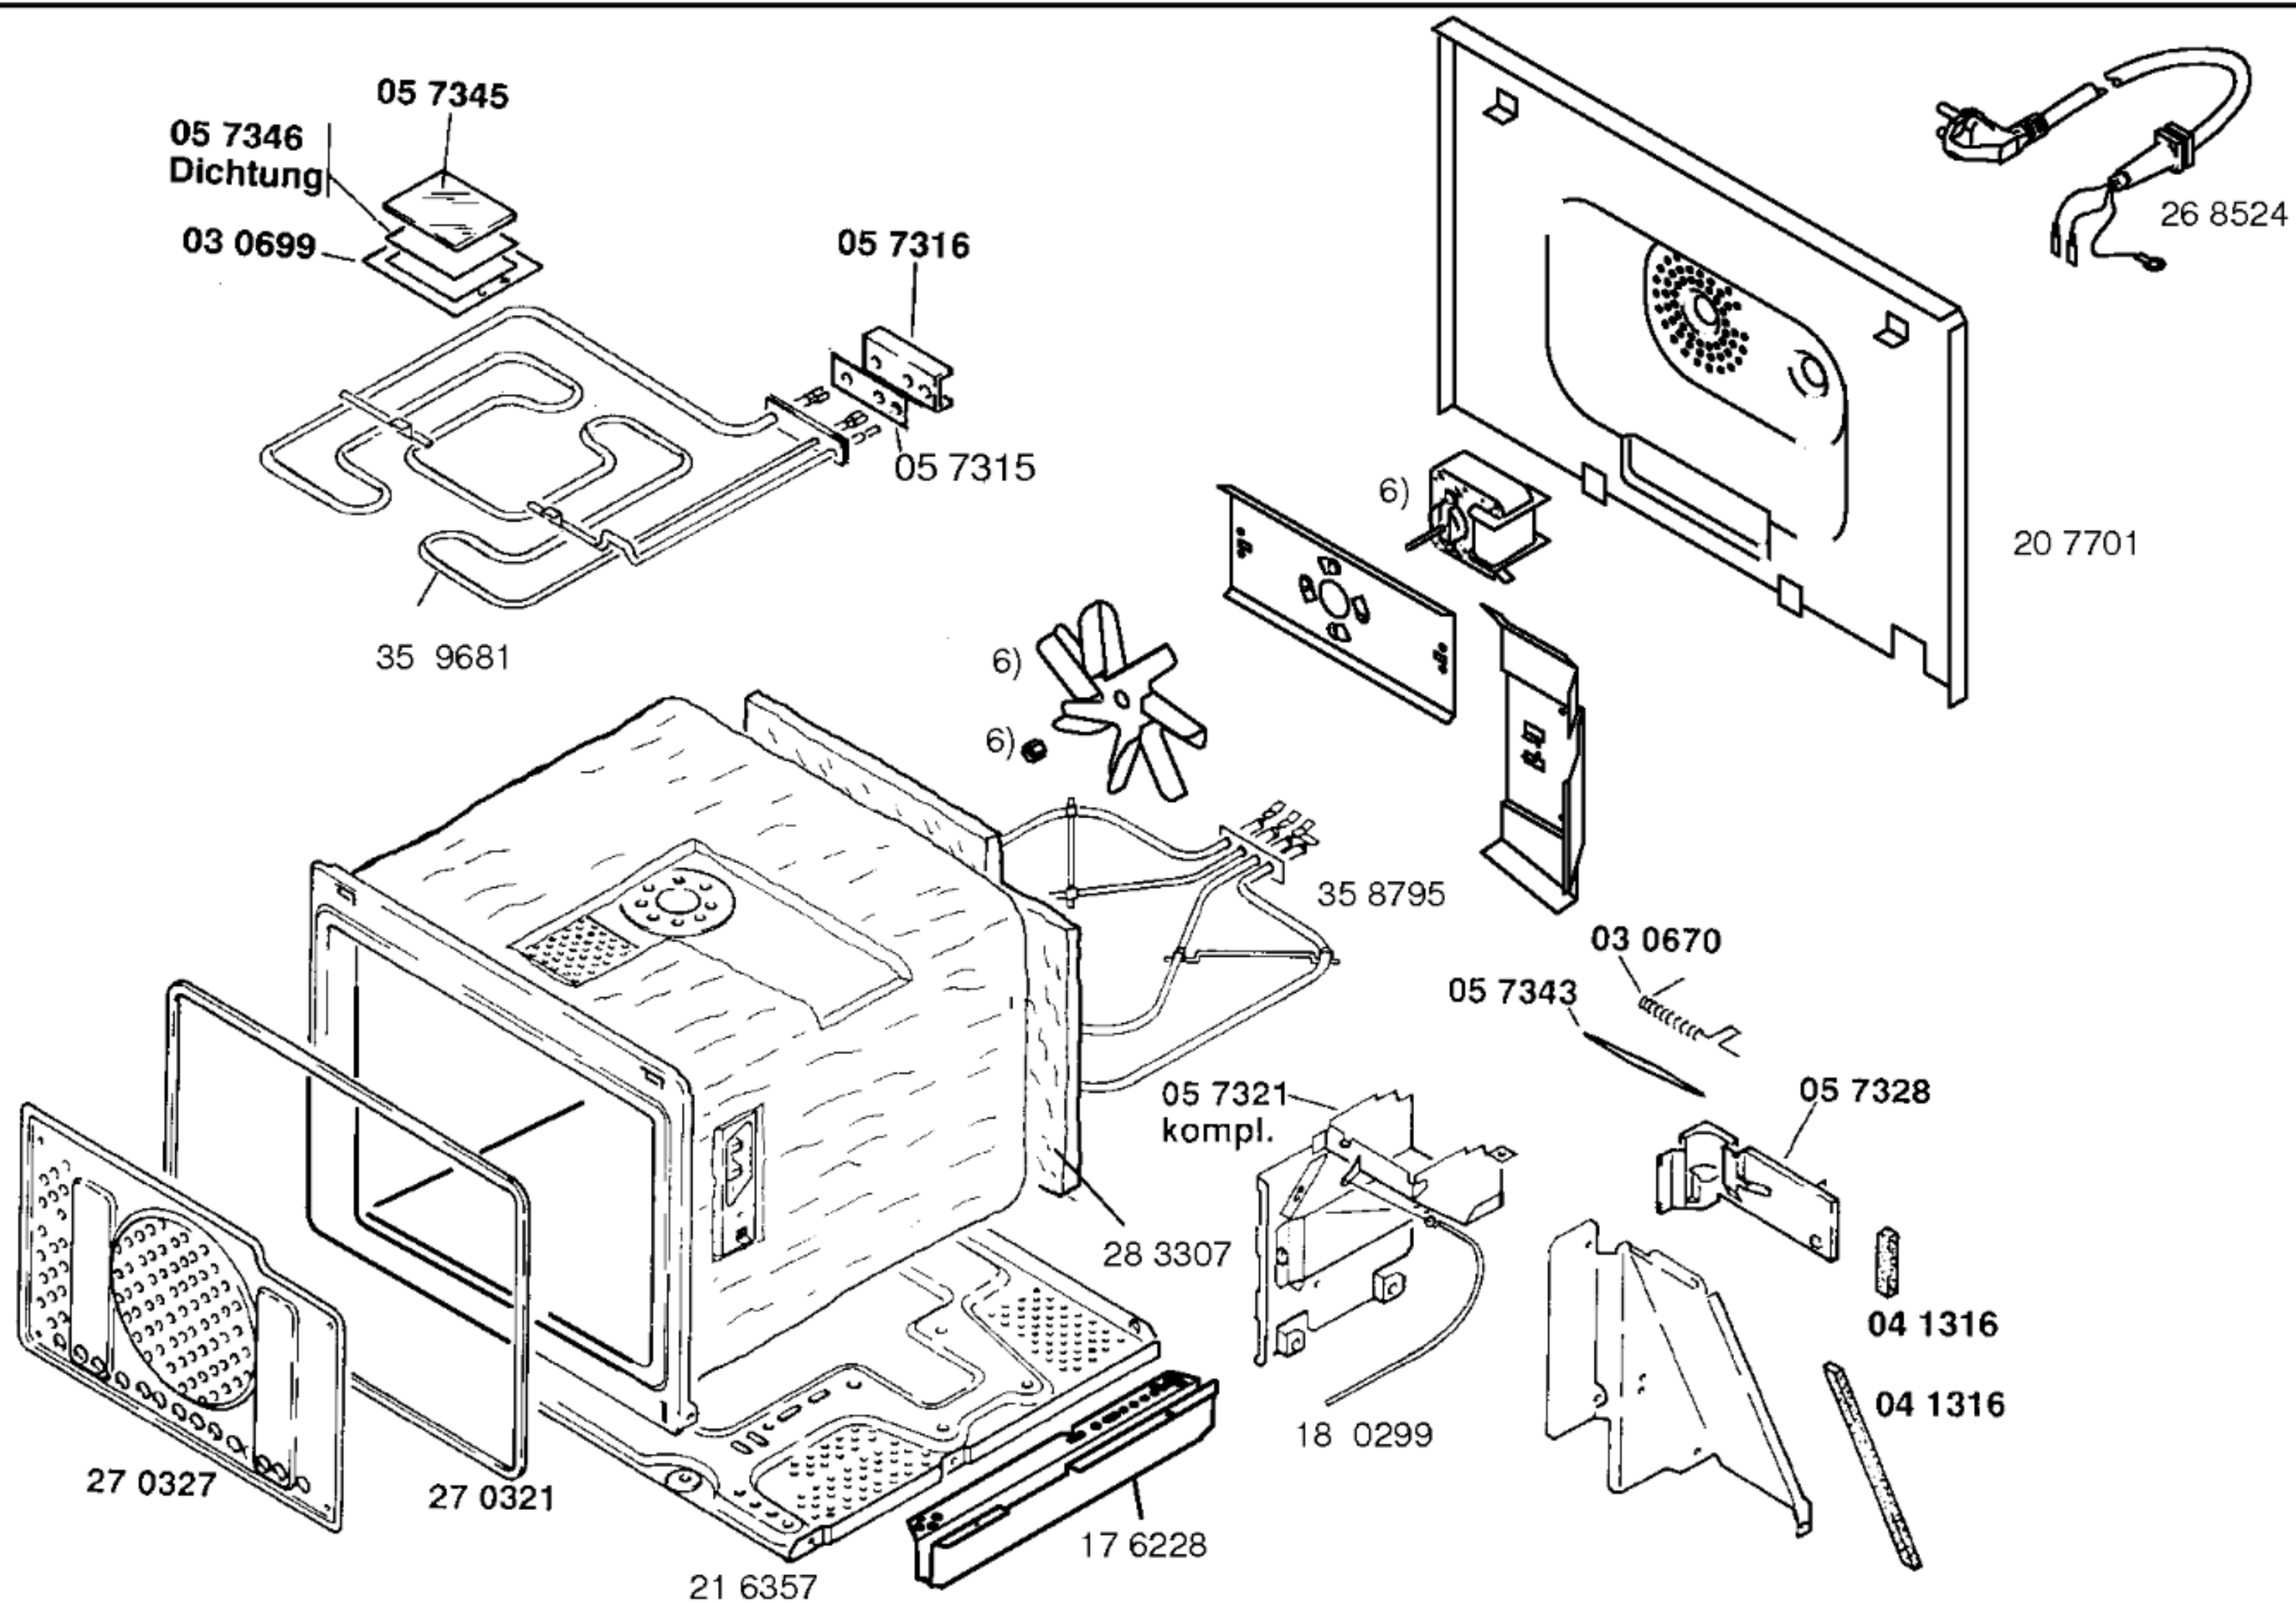

Mat. – Nr. – Konstante  
3740 . . . . .

6) 09 2676  
kompl.

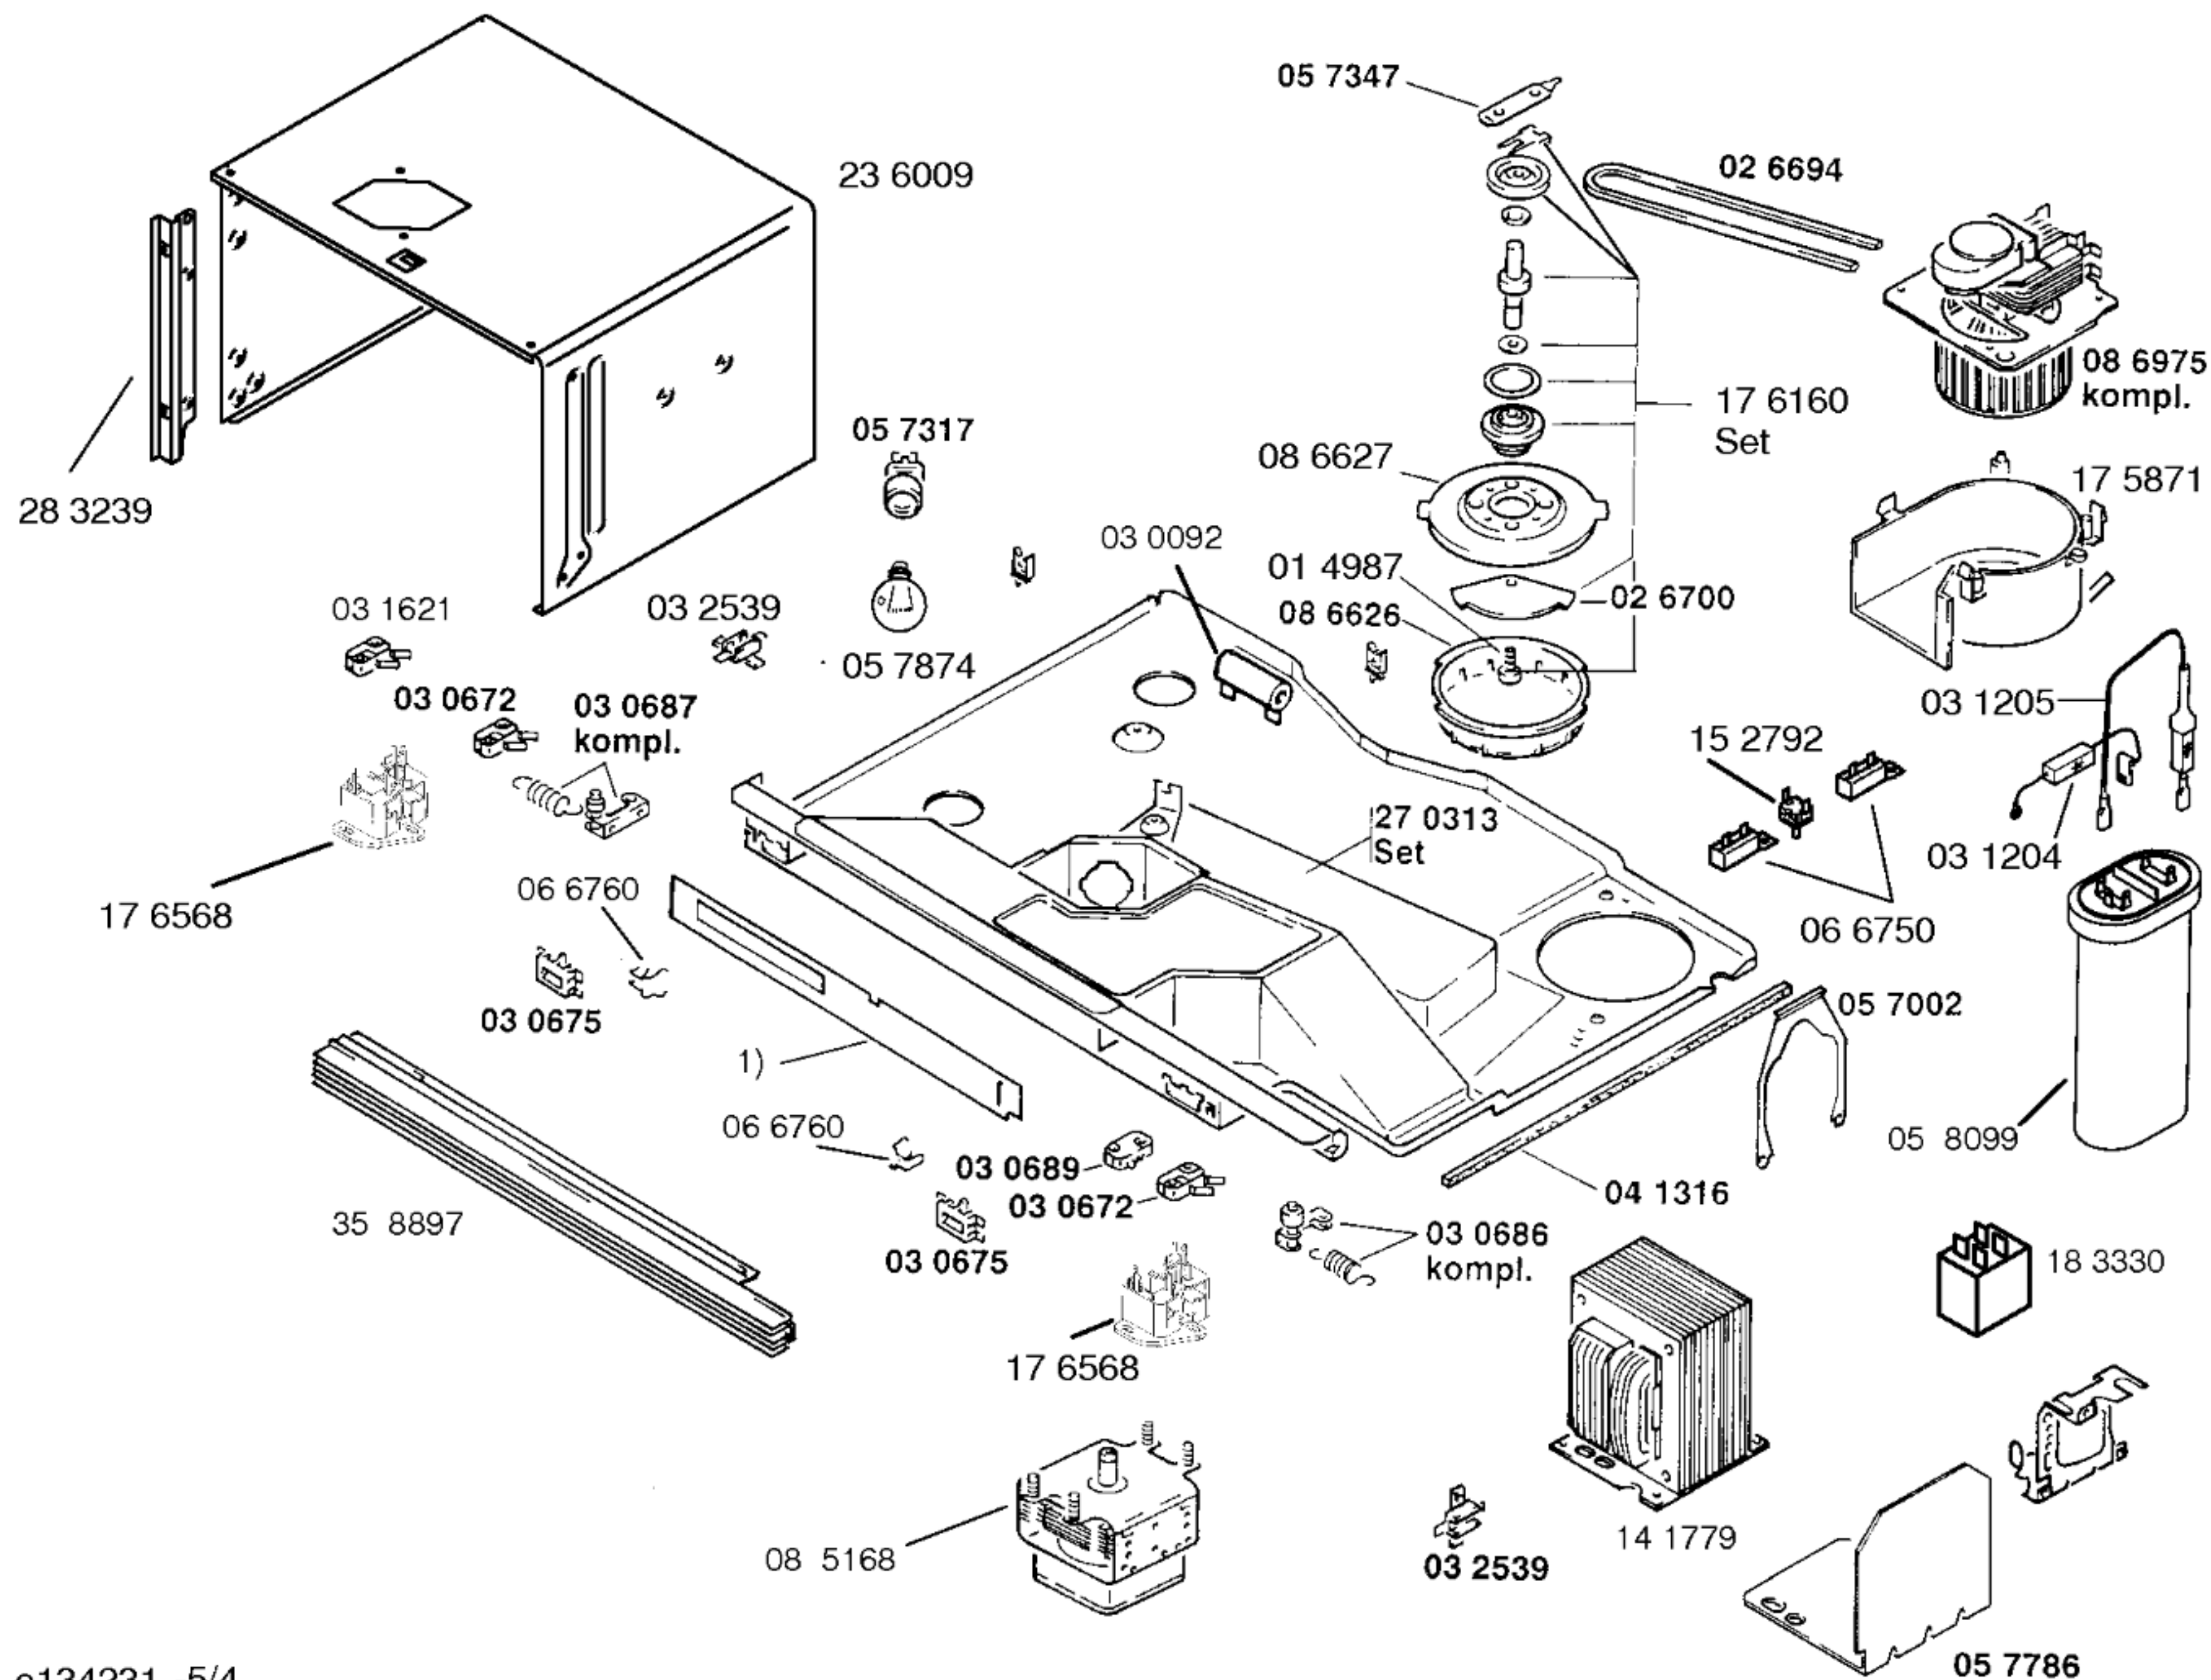

Mat. – Nr. – Konstante  
3740 . . . . .

- 1) 28 5984  
V01, V03  
35 9108  
V02, V04

Mat. – Nr. – Konstante  
3740 . . . . .  
1) 17 5720

