 


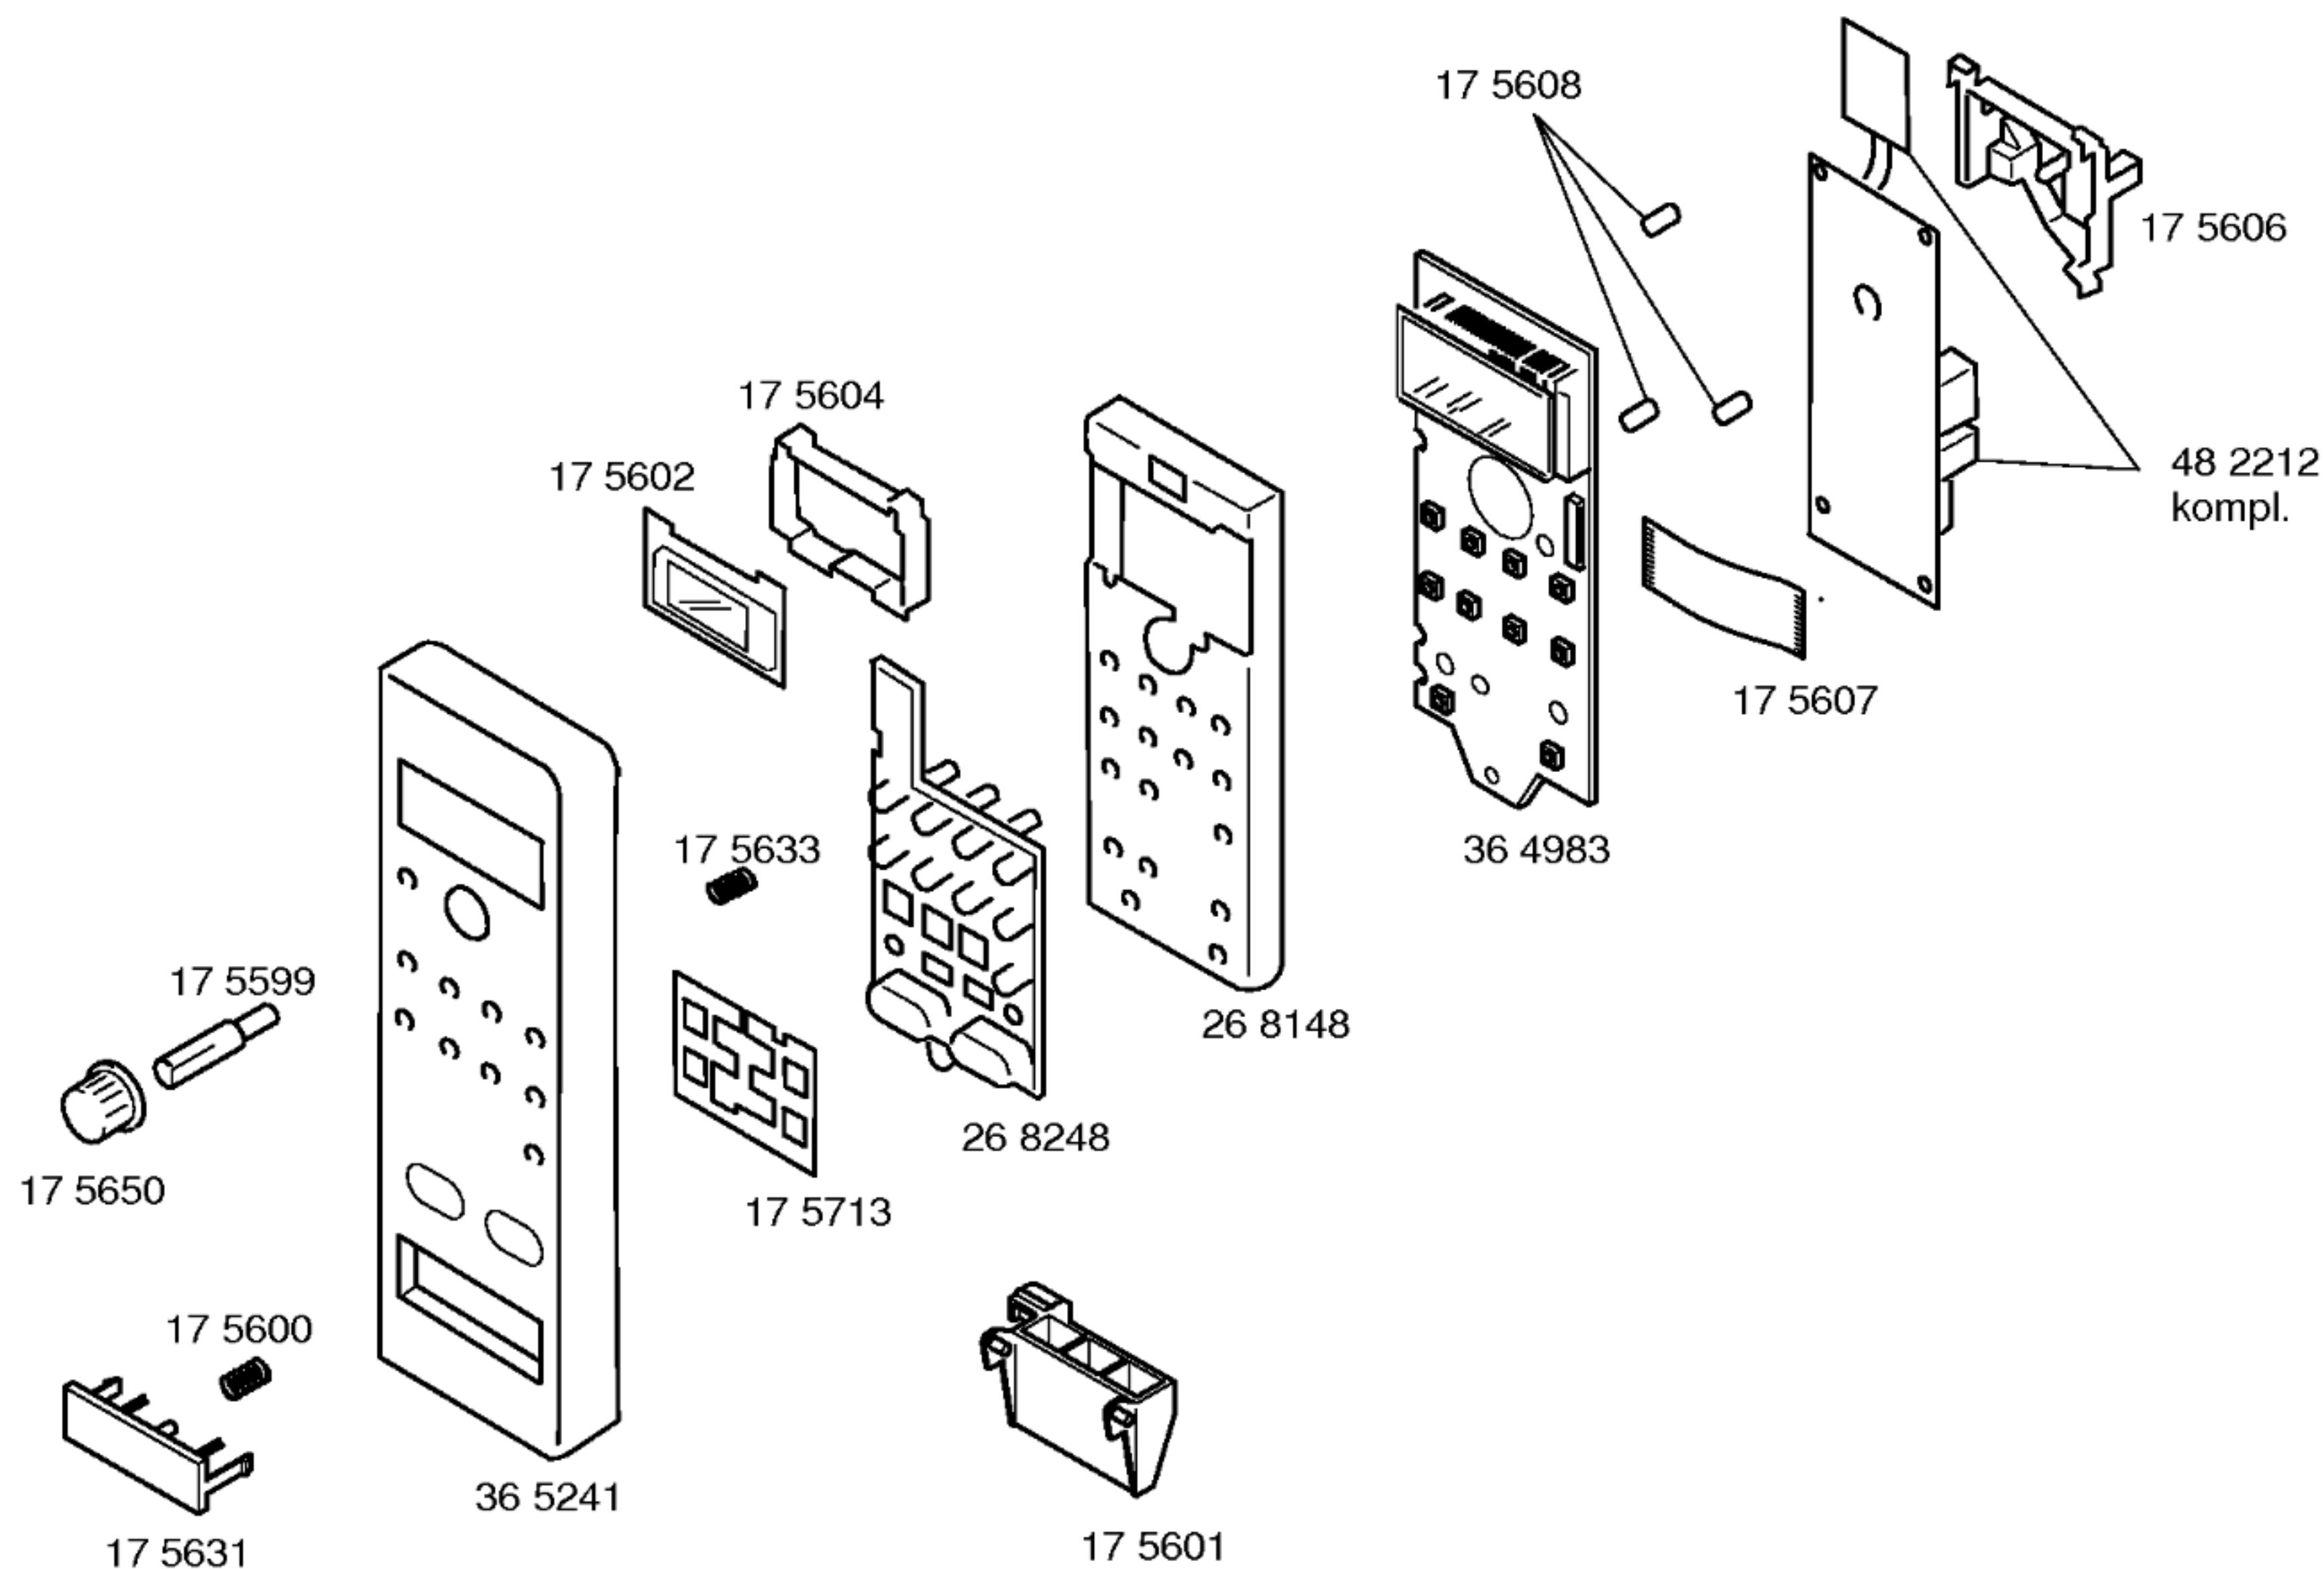

Gebrauchsanweisung

 
50 0121
(de,en,fr,it,nl)
50 0122
(es,pt,el,ru,tr)
50 0120
(da,sv,no,fi)

 
Kochbuch
52 9971
(de)
50 0232
(en)

Montageanleitung
53 6308
(de,en,fr,it,nl,da,pt,es,
el,no,sv,fi,ru,tr)

Schablone
52 8235

Aufkleber
52 5667
(de,en,fr,it,nl)
52 5585
(es,pt,el,ru,tr)
52 8227
(da,sv,no,fi)

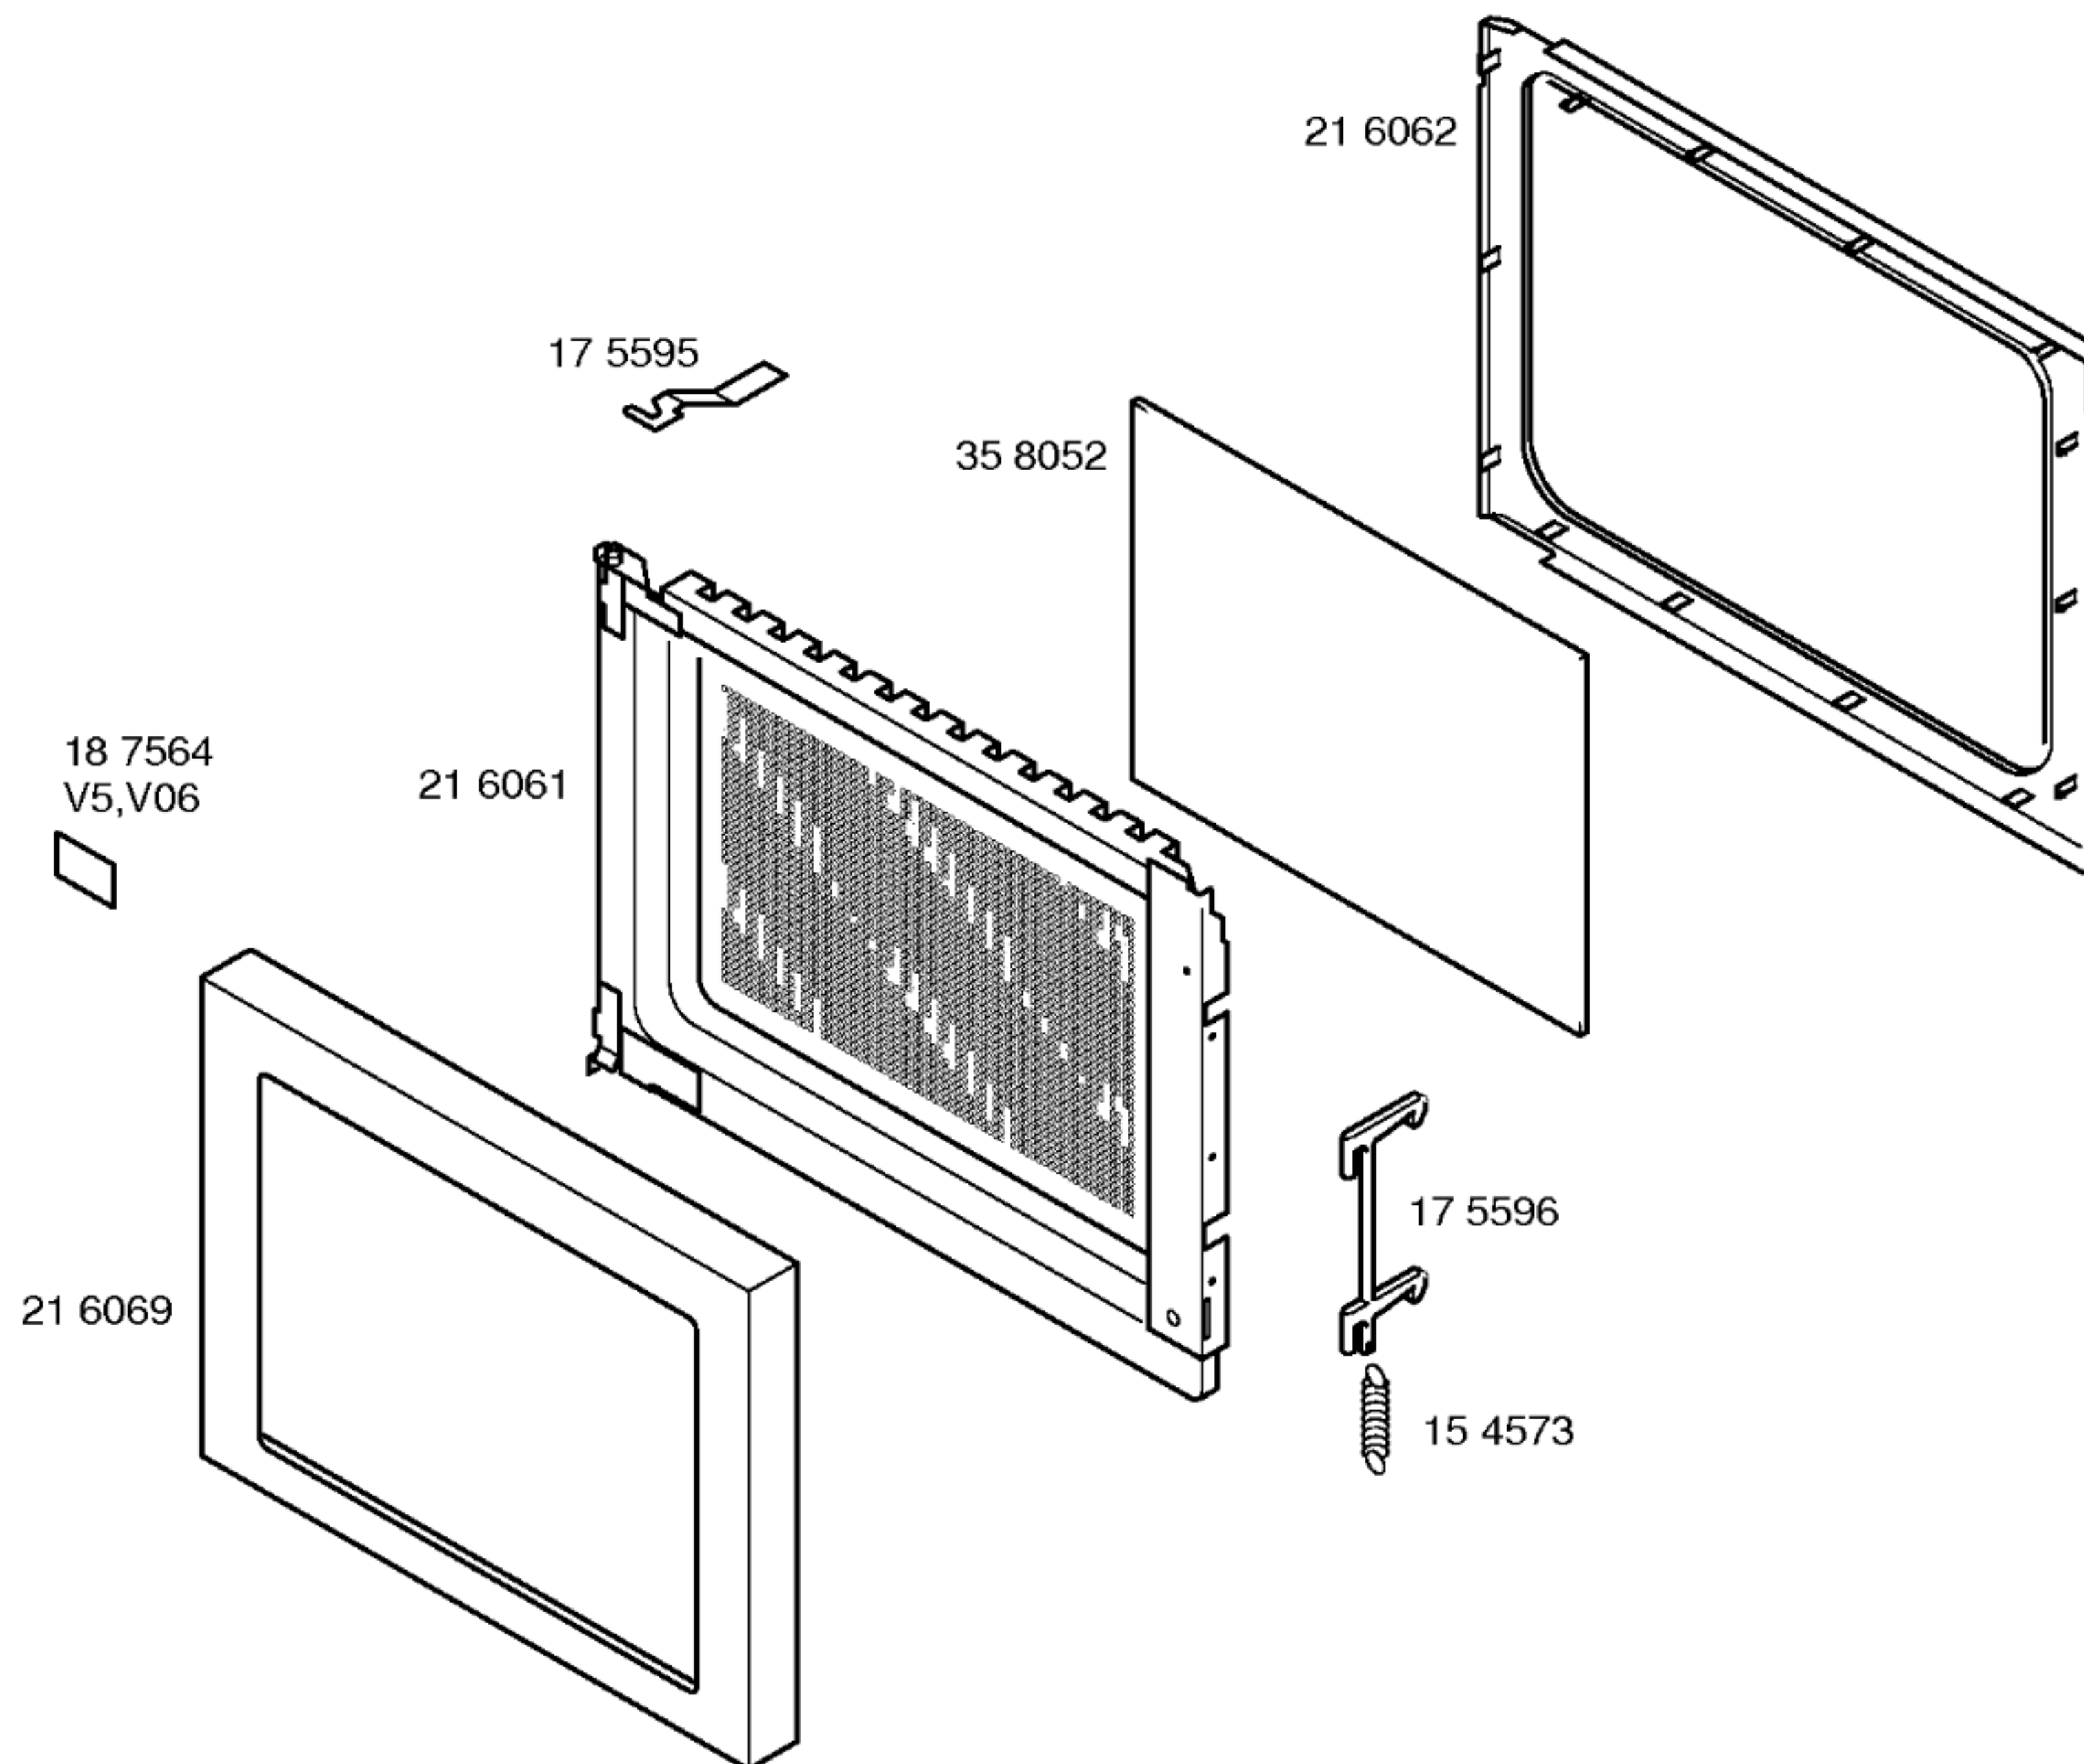

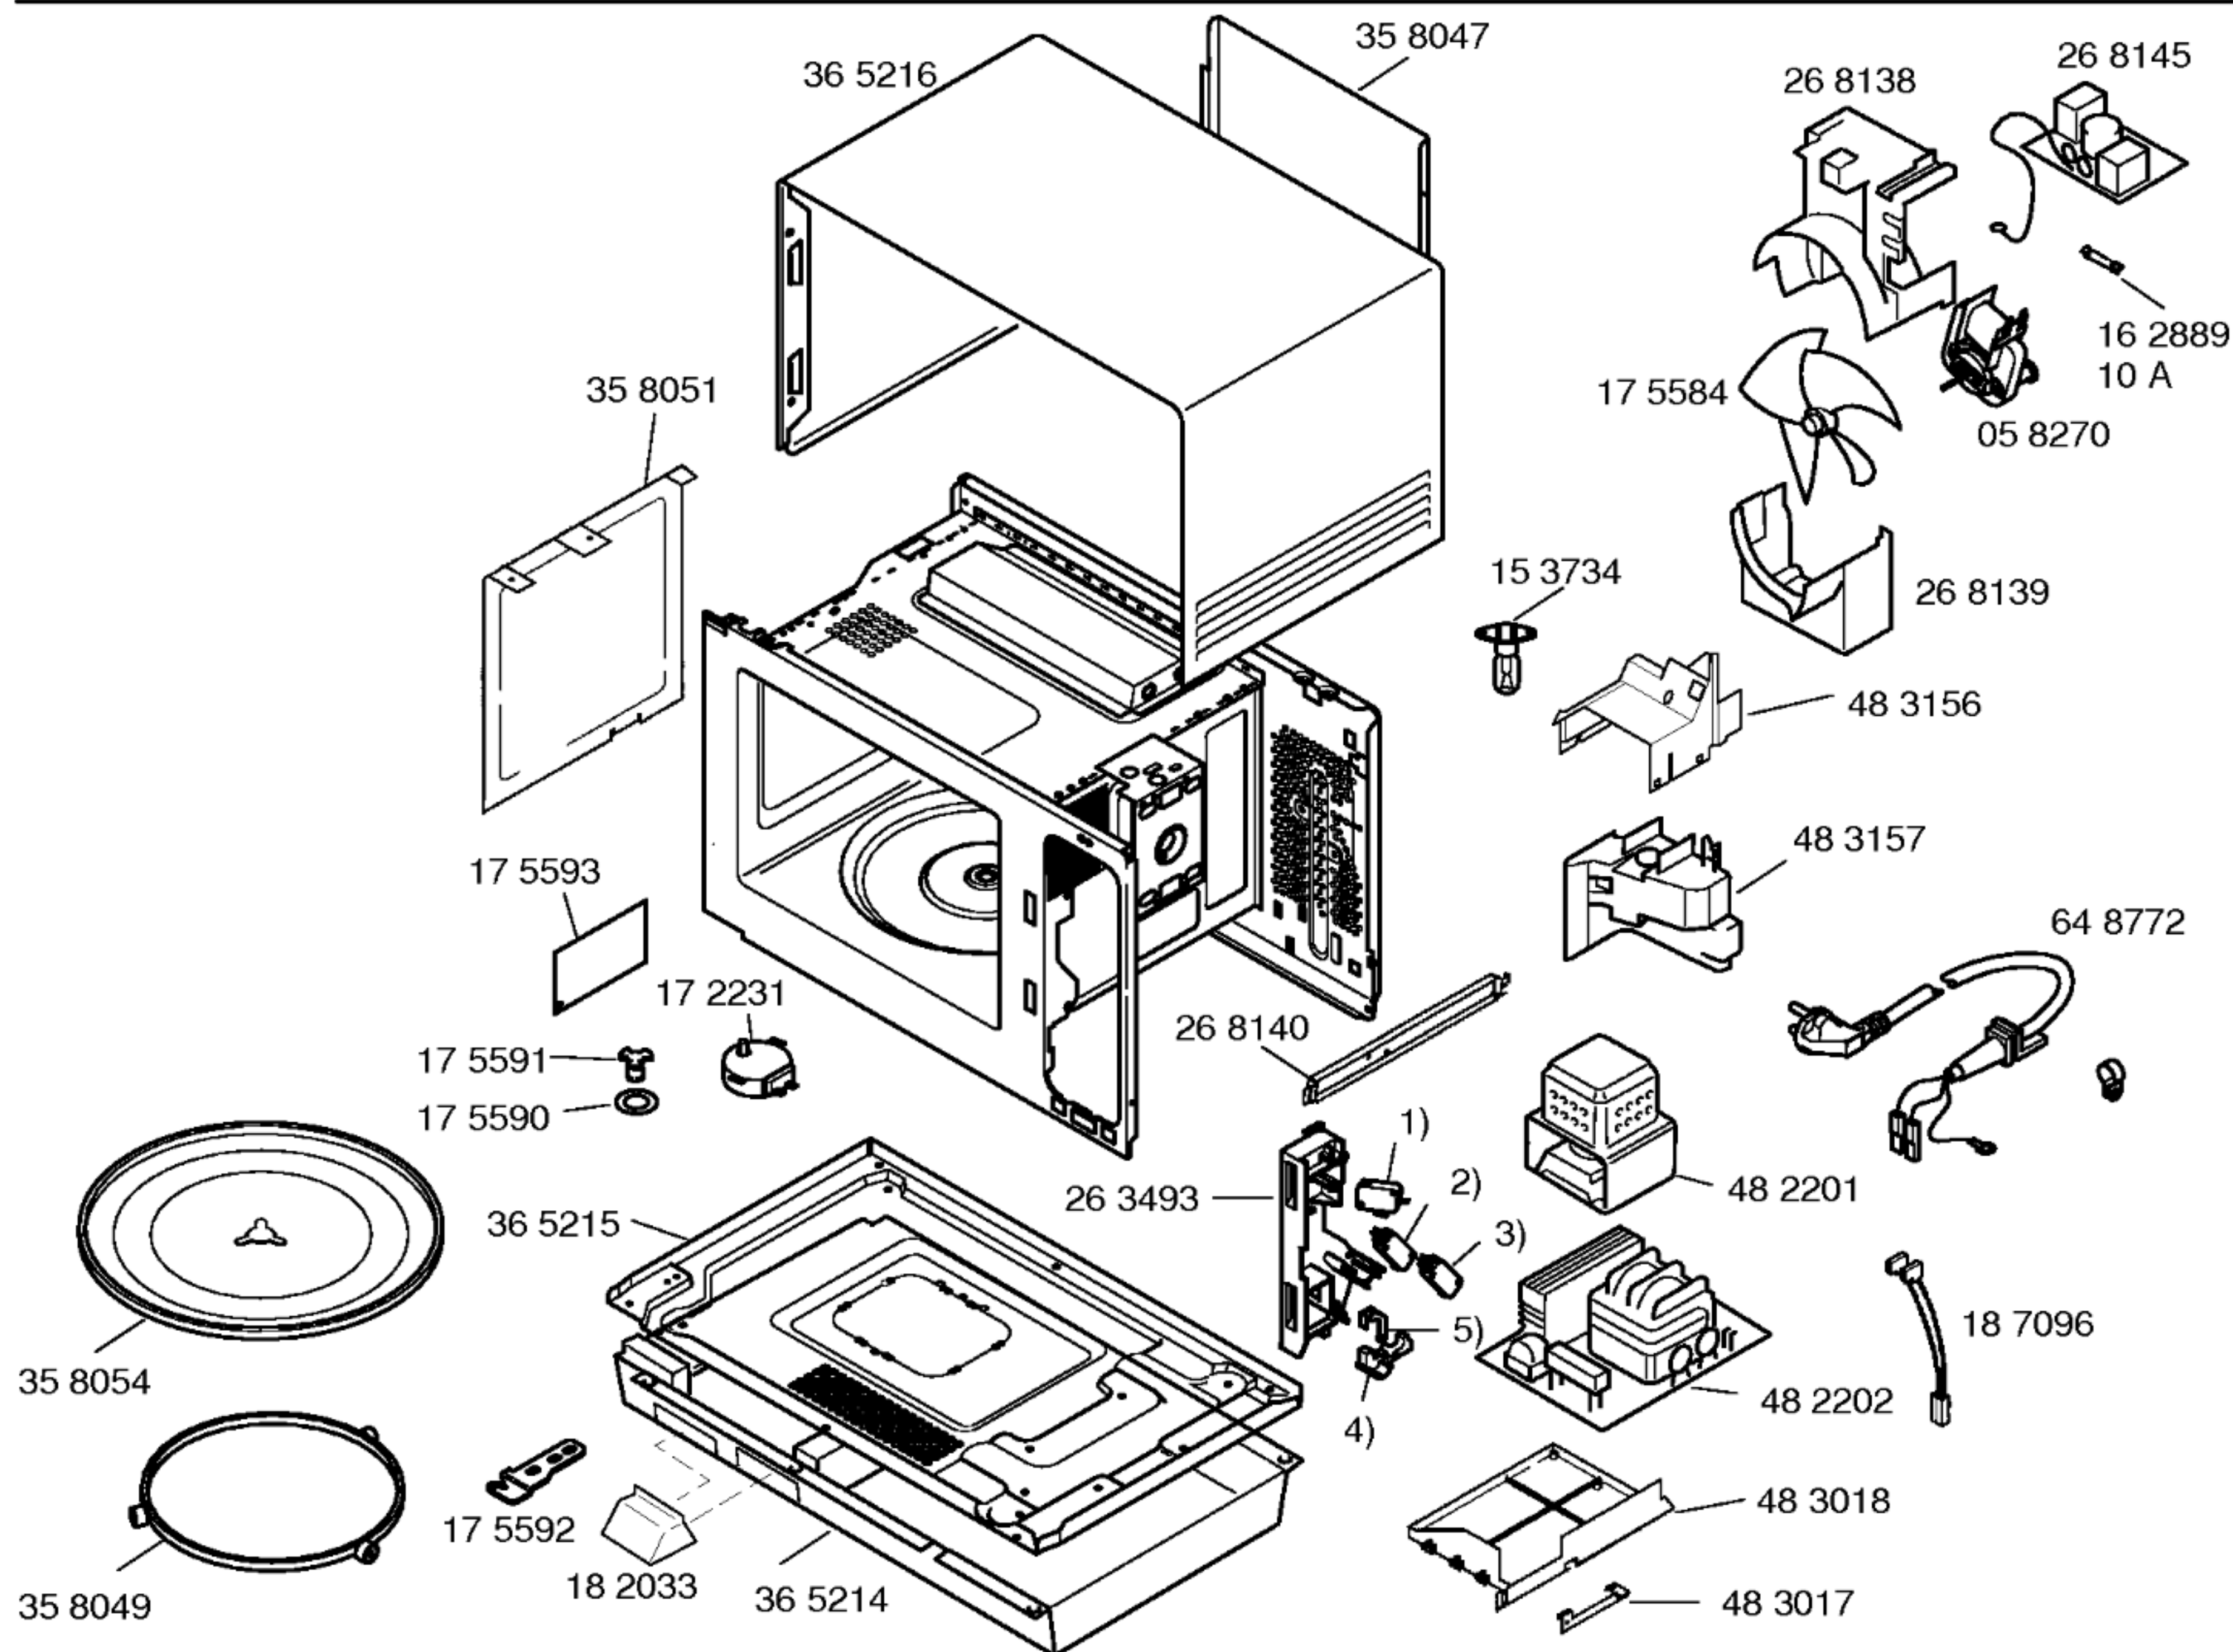

- 1) 15 3735
- 2) 17 5588
- 3) 15 3735
- 4) 17 2234
- 5) 03 1447

