




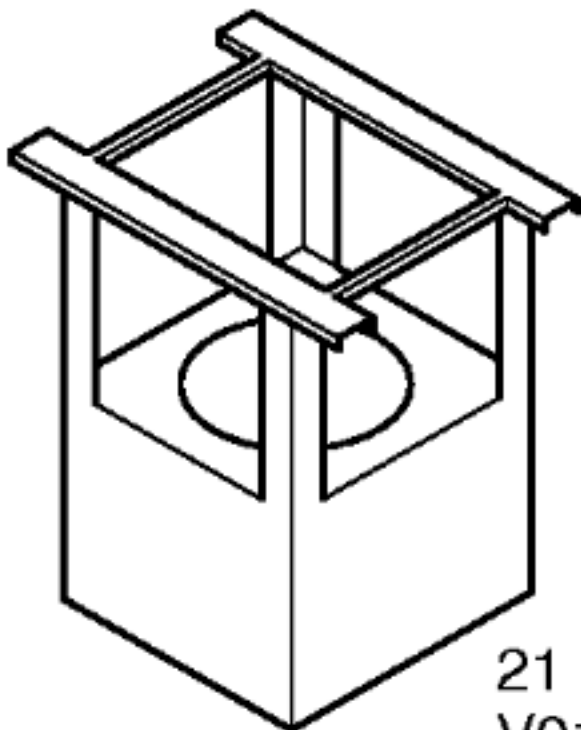


21 3338
V01,V04

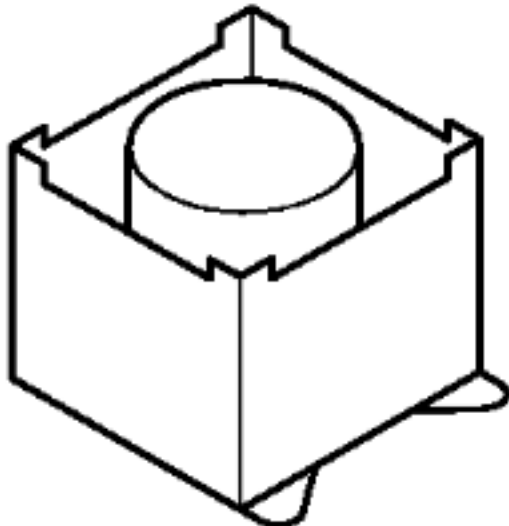

21 3340
V01,V04

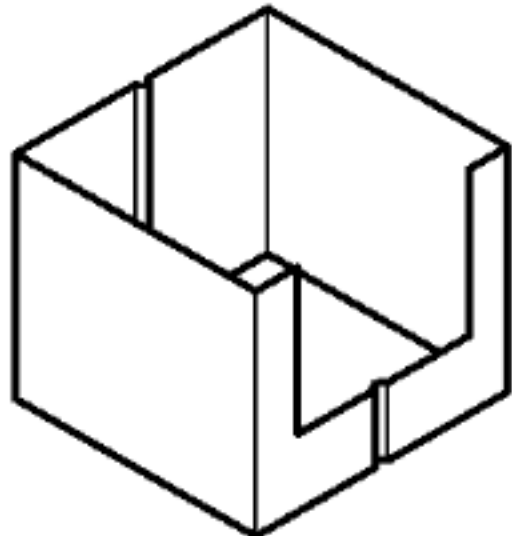


21 3344
V01,V04

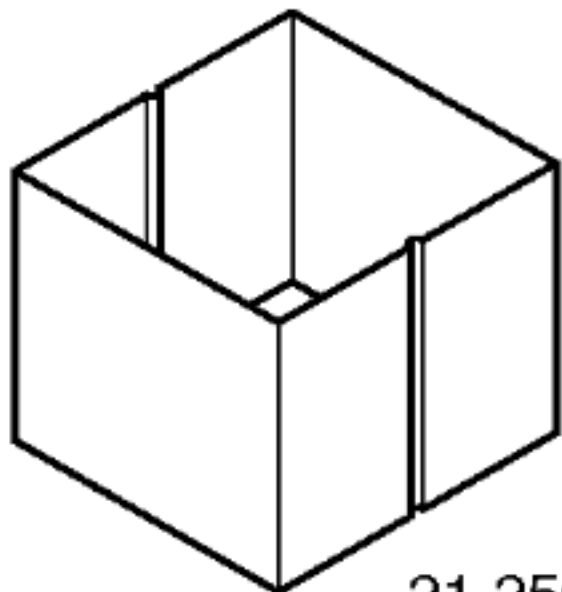


21 2501
V01,V04

Europa:
V01,V02,V03


USA:
V04,V05,V06

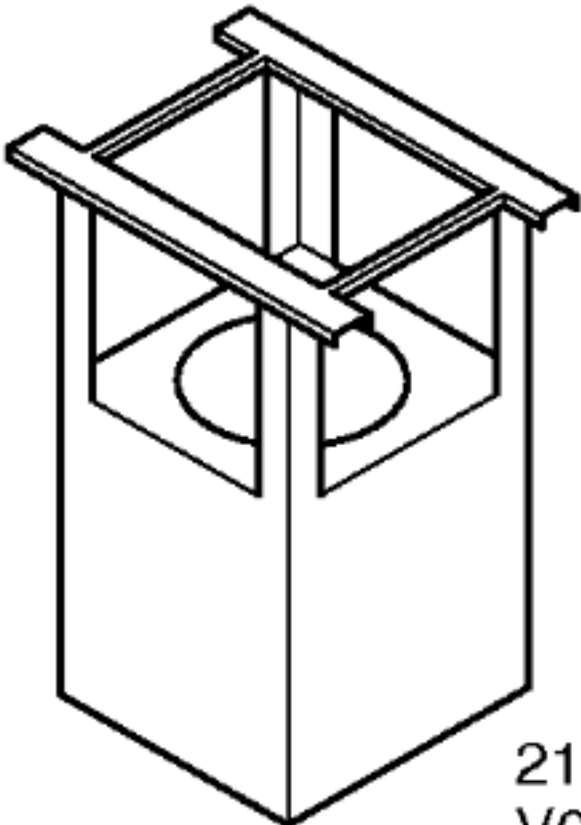


21 3339
V02,V05

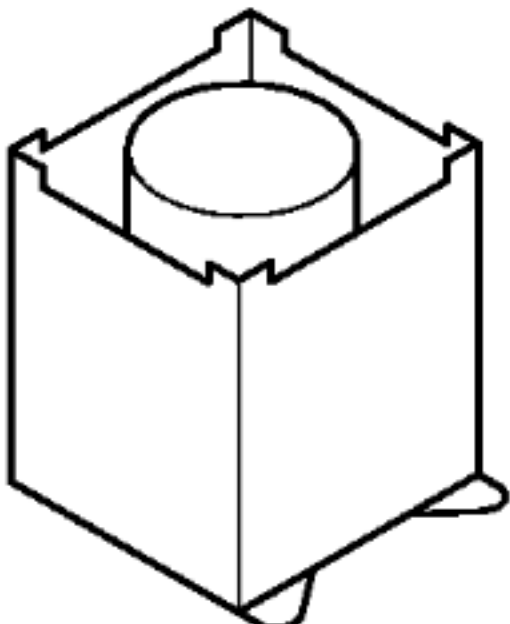

21 3341
V02,V05


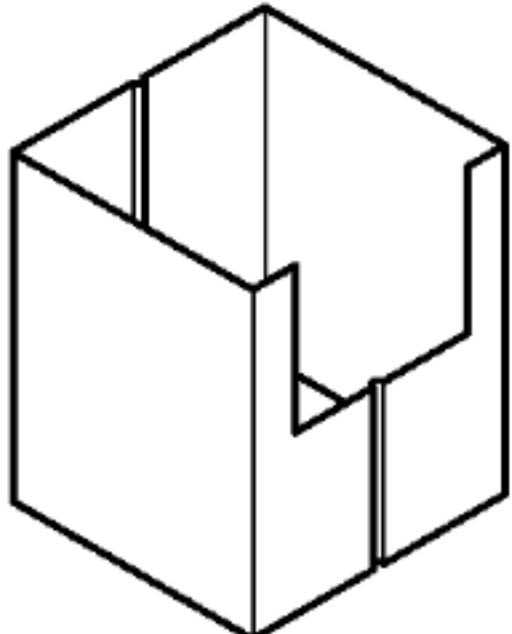


21 3264
V02,V05

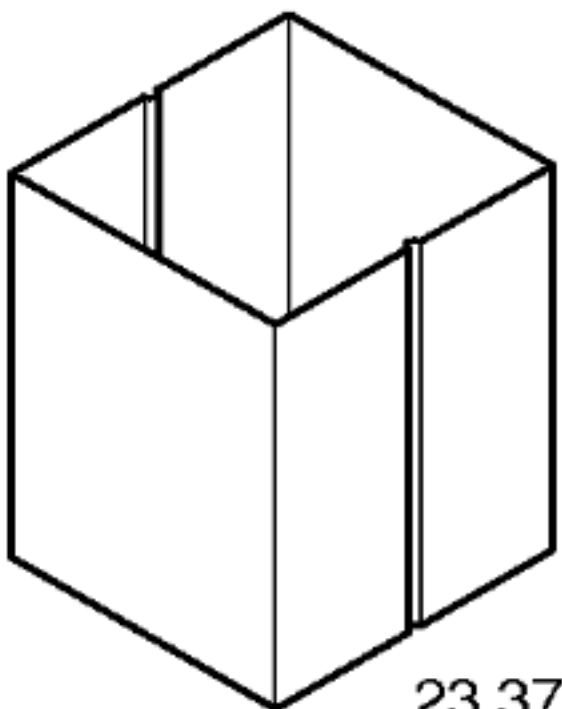


23 3714
V02,V05


26 3365
Umlenkstutzen

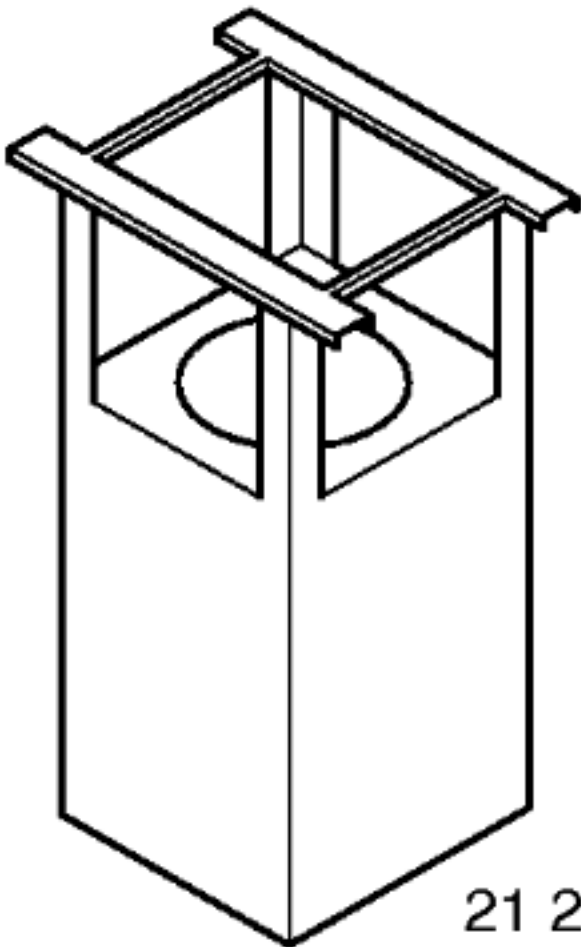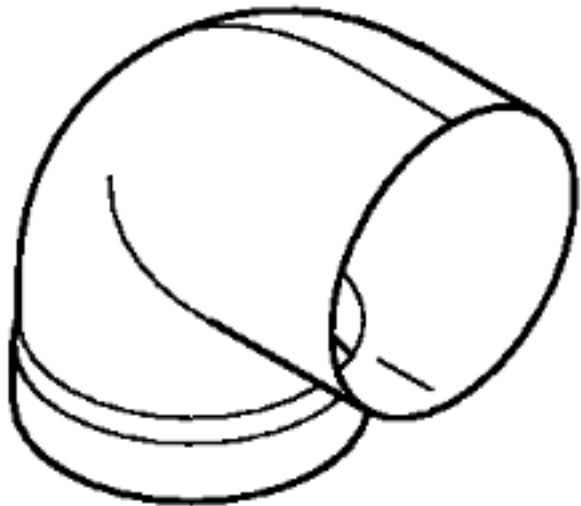


21 2045
V03,V06

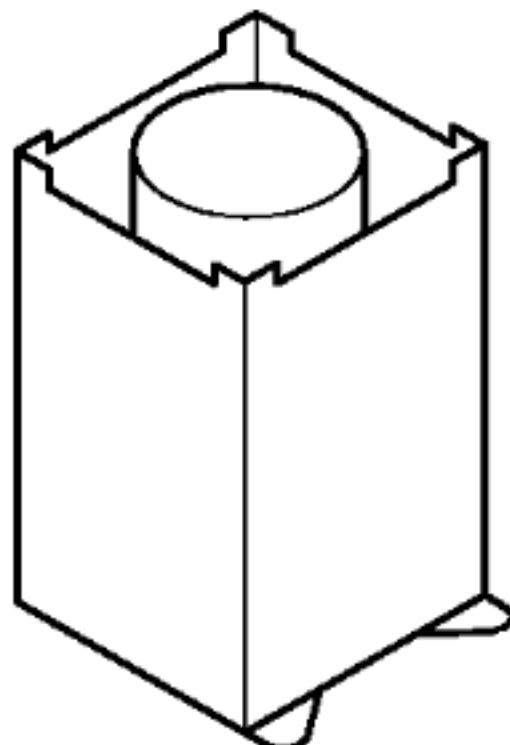

21 2044
V03,V06

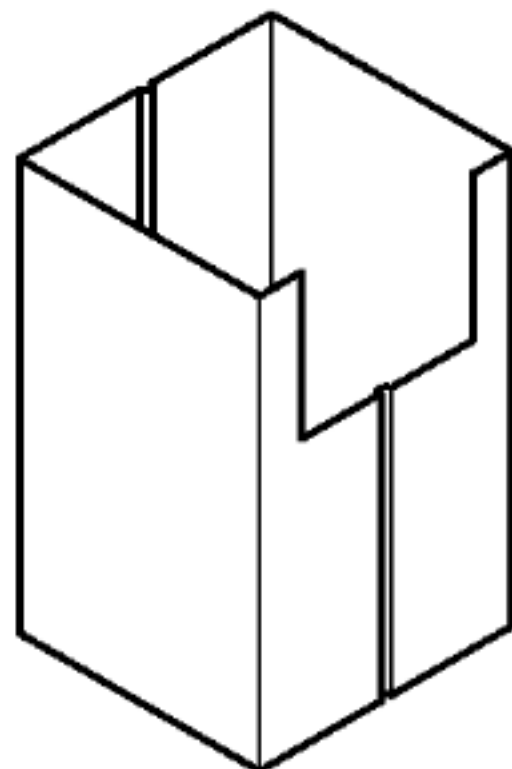

21 2043
V03,V06

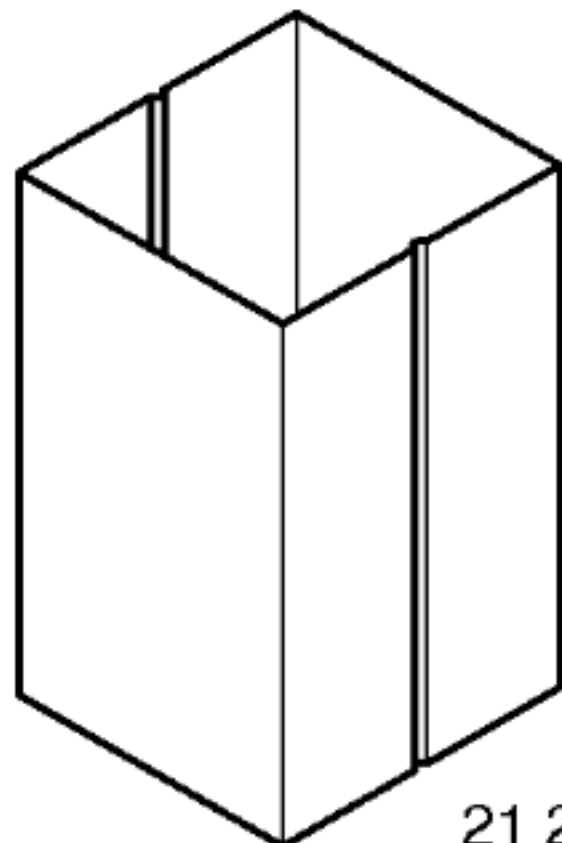

21 2042
V03,V06