


KÜHLAUTOMAT KE 2560 -D1, KE 256058-F1
 KE 2561 -D2, KE 256158-F2
 KE 256016-CH1,
 KE 256116-CH2,

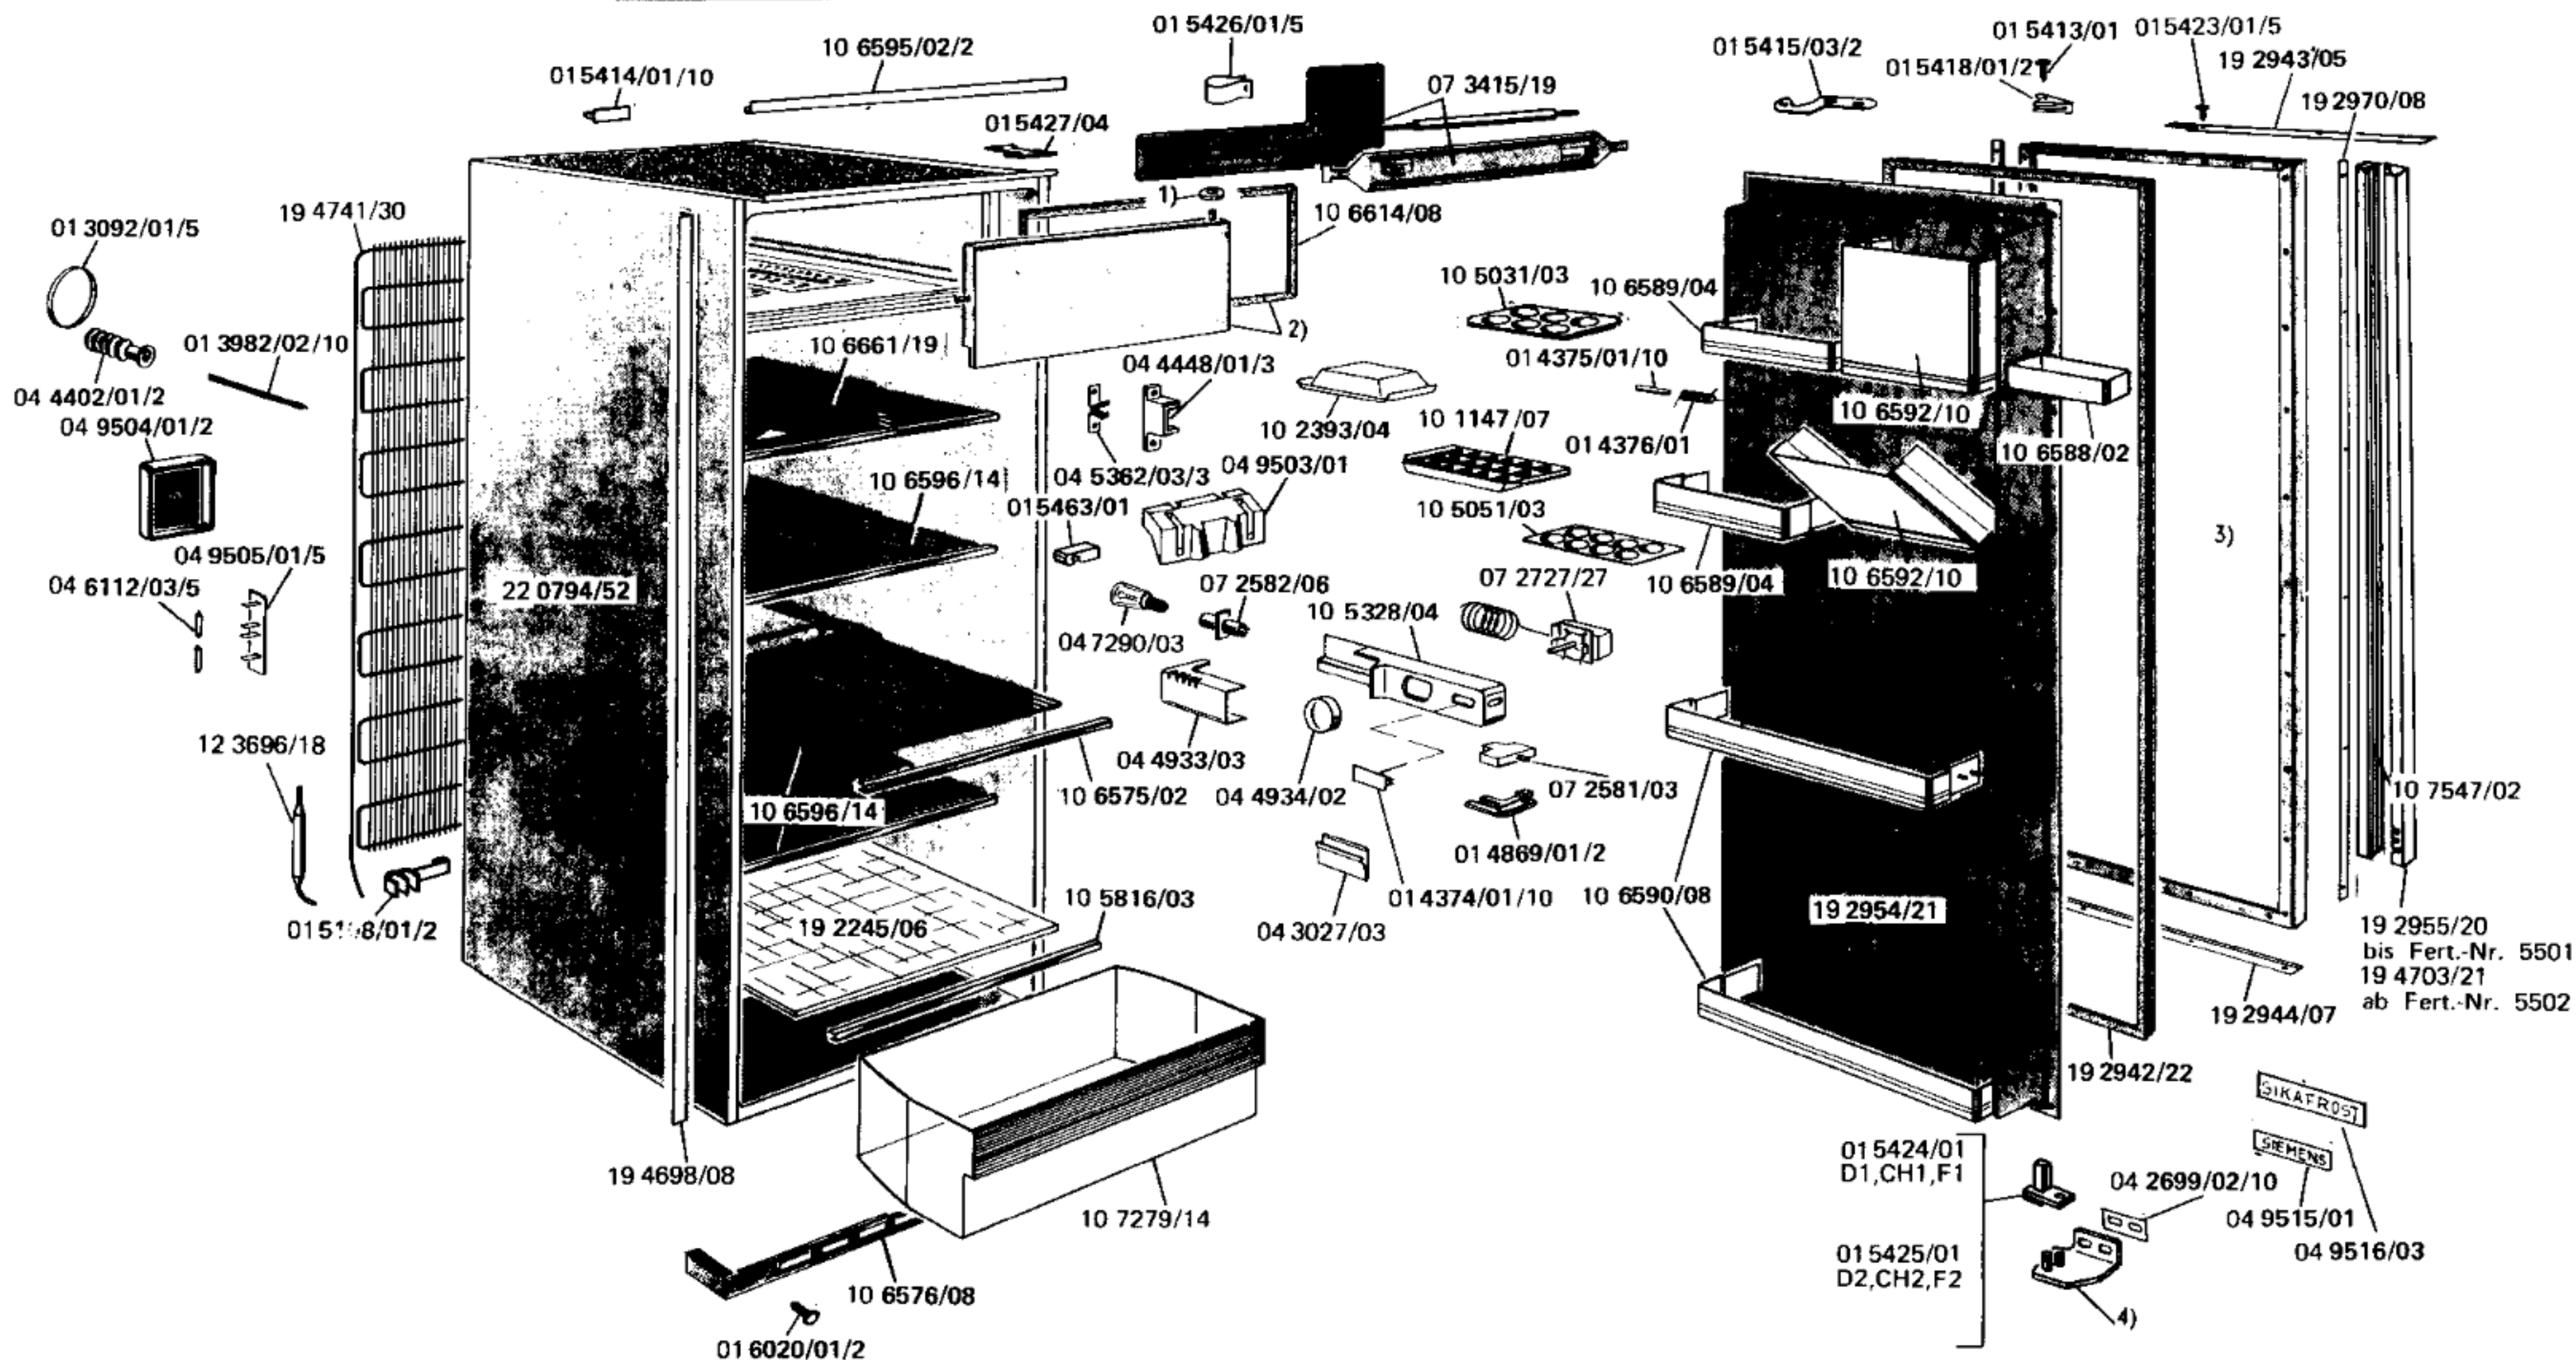

- 1) 01 2837/01/10
 2) 10 5077/25
 D1
 CH1
 F1


10 5078/25
 D2,CH2,F2

- 3) 19 2939/32
 D1
 CH1
 F1
 19 2940/32
 D2
 CH2
 F2

- 4) 01 5416/02
 D1
 CH1
 F2
 01 5417/02
 D2
 CH2
 F2

50 8311/00
 Bed.-Anleitung
 50 8575/00
 Mont.-Anleitung

07 2130/18
 bis Fert.-Nr. 5601
 07 3899/09
 ab Fert.-Nr. 5602

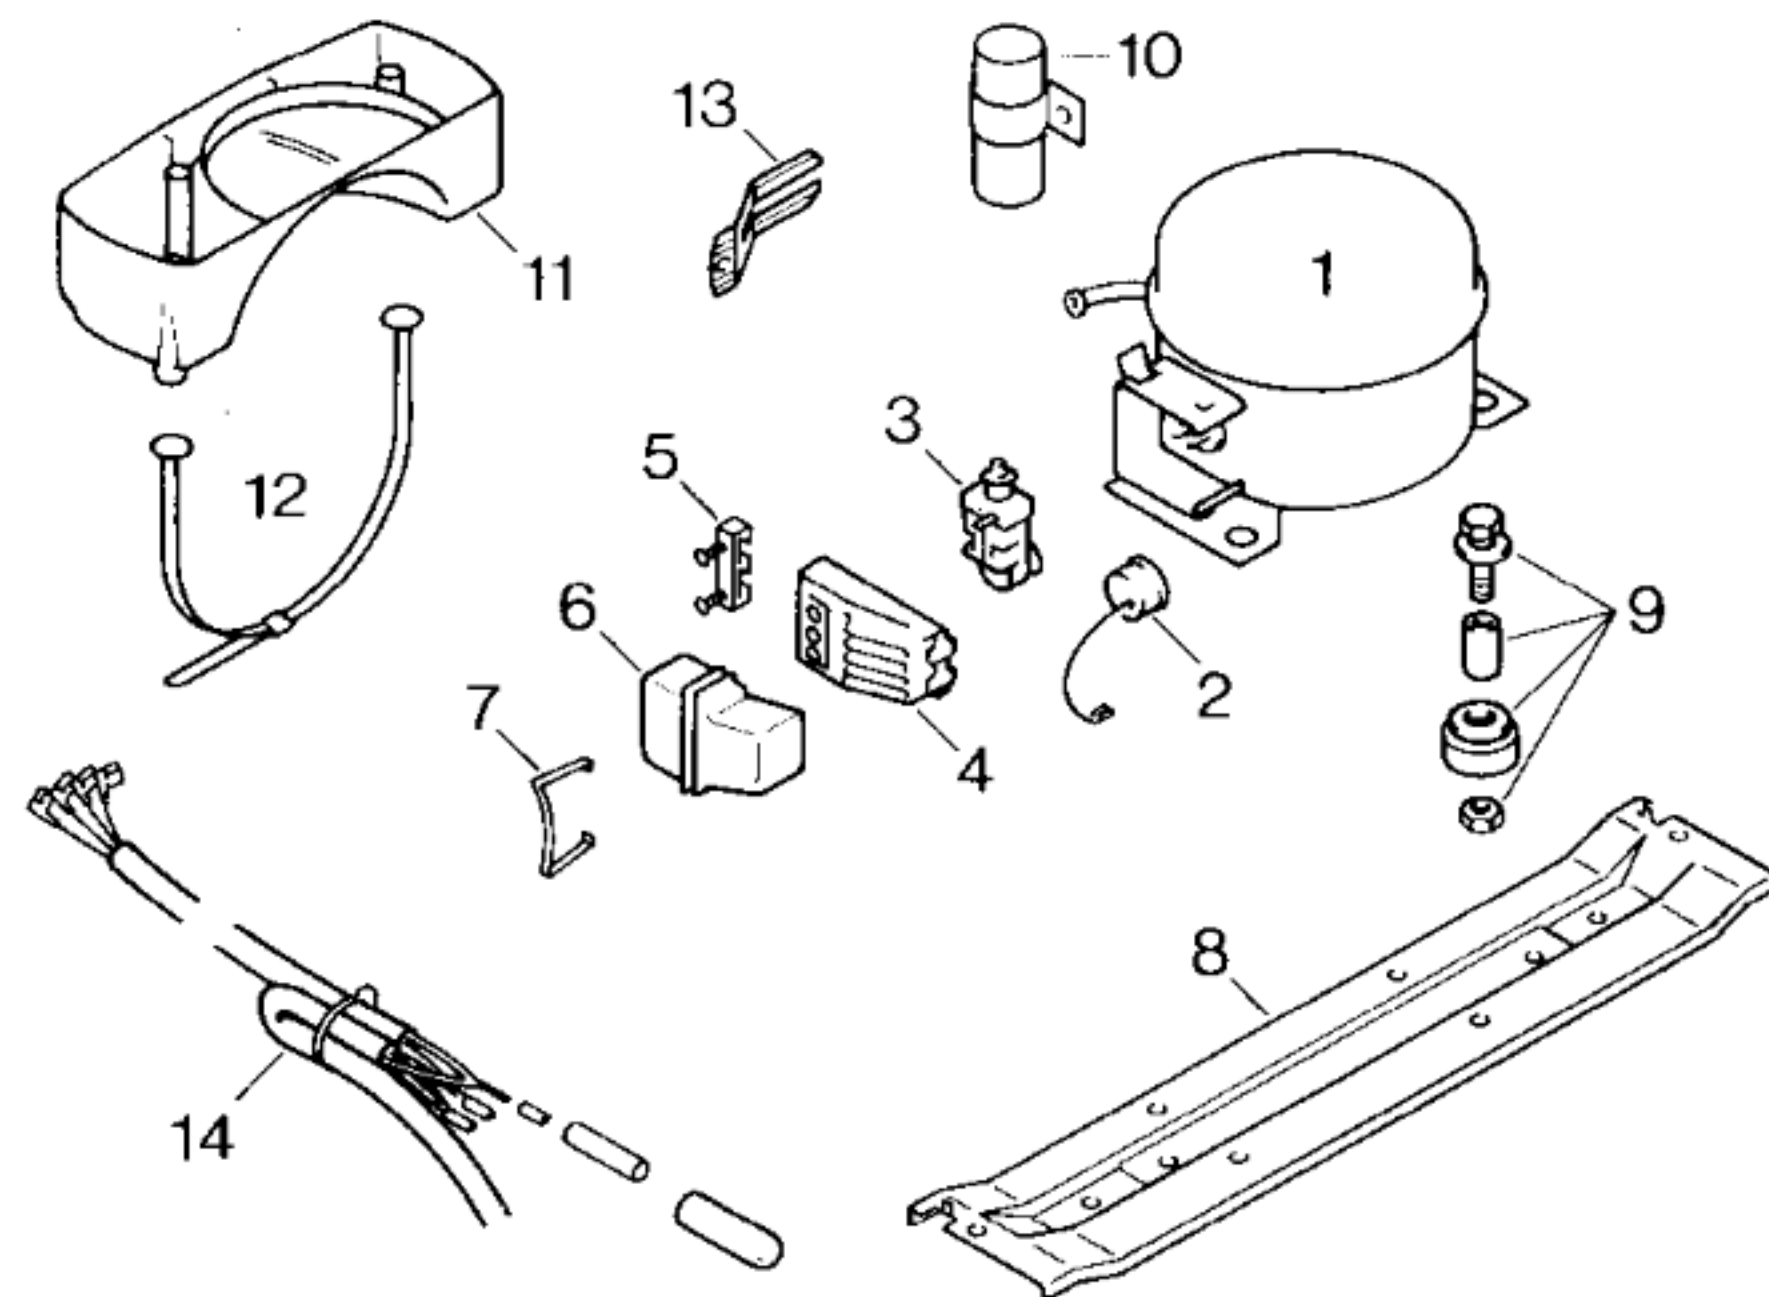

Pos.	D1,D2,F1,F2	CH1, CH2	D1,D2,CH1, CH2,F1,F2
	Bosch bis Fert.-Nr.5601	Bosch ab Fert.-Nr.5602	Danfoss
1			14 0065/45
2	07 2131/18	07 2131/18	
3	07 2130/18	07 3899/09	02 0108/27
4	04 9865/05	04 9757/02	
5			02 1361/04
6	10 3602/02	04 9758/02	05 1413/06
7			
8			*11 1839/07
9			*05 0166/05/4
10			
11	10 6693/03	10 6693/03	*11 1243/01
12			
13			*04 1568/01/2
14			*05 1226/08

*) Bei Ersatz des Bosch-Verdichters mitbestellen
 To be ordered when replacing the Bosch compressor
 A commander lors du remplacement du compresseur Bosch

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES

Verdichter/Compressor/Compresseur		Bosch	Danfoss		
Typ/Type		V 1040	TL 5 A		
Förderleistung/Delivery/Débit		l/h	1040	920	
Anlaufstrom/Starting current/Cour. de démarrage		A	9,5	9,0	
Widerstand/Resistance/Résistance		Ha/main/prin.	Ω	17,6	15,7
		Hi/aux	Ω	28,7	18,8
Temp.-Regler/Thermostat		Ranco			
Typ/Type		A 59			
Reglerstellung/Position		kalt	warm		
Schaltwerte/Switching values/		+ 4	+ 4		
Valeurs de commutation		- 29	- 20		
		(„abtauen“ od.)	„alarm“		
Füllmenge/Fill.quantity/Charge		R12	g	125	
Anschlußwert/Conn.load/Puiss. connectée		W	120		
Heizung/Heater/Chauffage					
Widerstand/Resistance/Résistance		Ω	3280		
Leistung/Power/Puissance		W	14,8		
Ventilator/Blower/Ventilateur					
Widerstand/Resistance/Résistance		Ω			
Magnetventil/Magnetic valve/Electrovanne					
Widerstand/Resistance/Résistance		Ω			
Spannung/Voltage/Tension		V			