



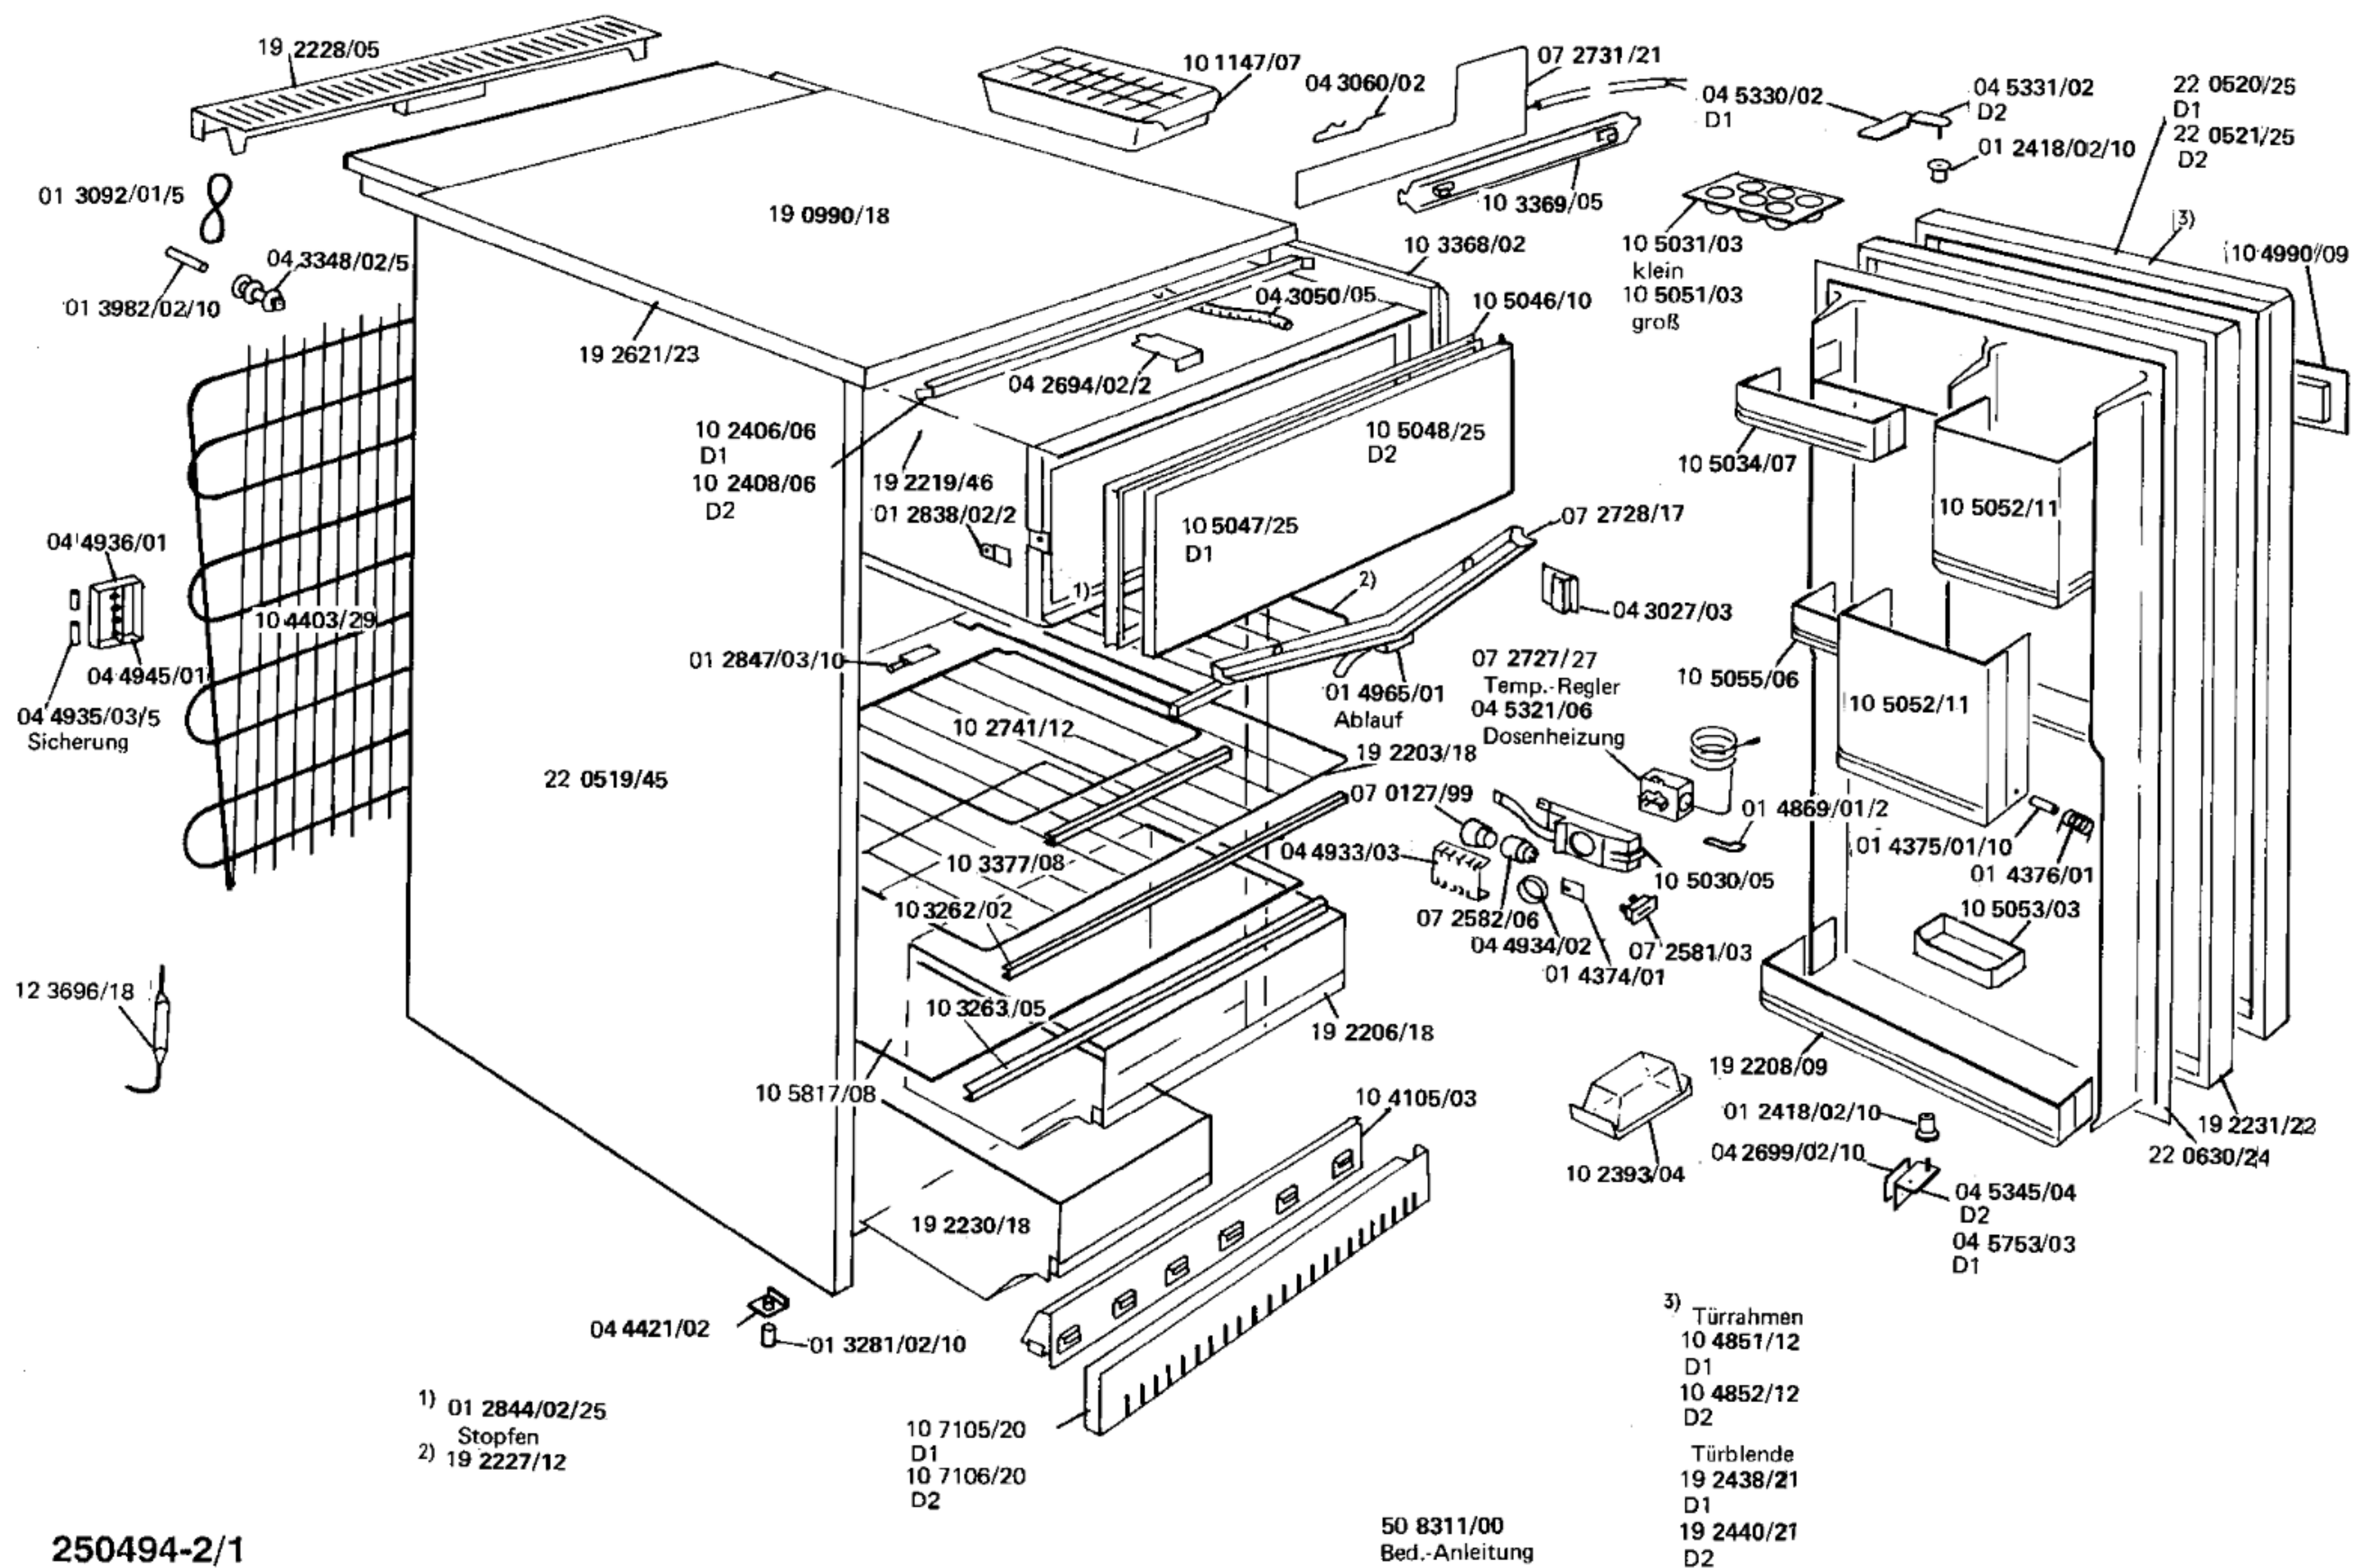

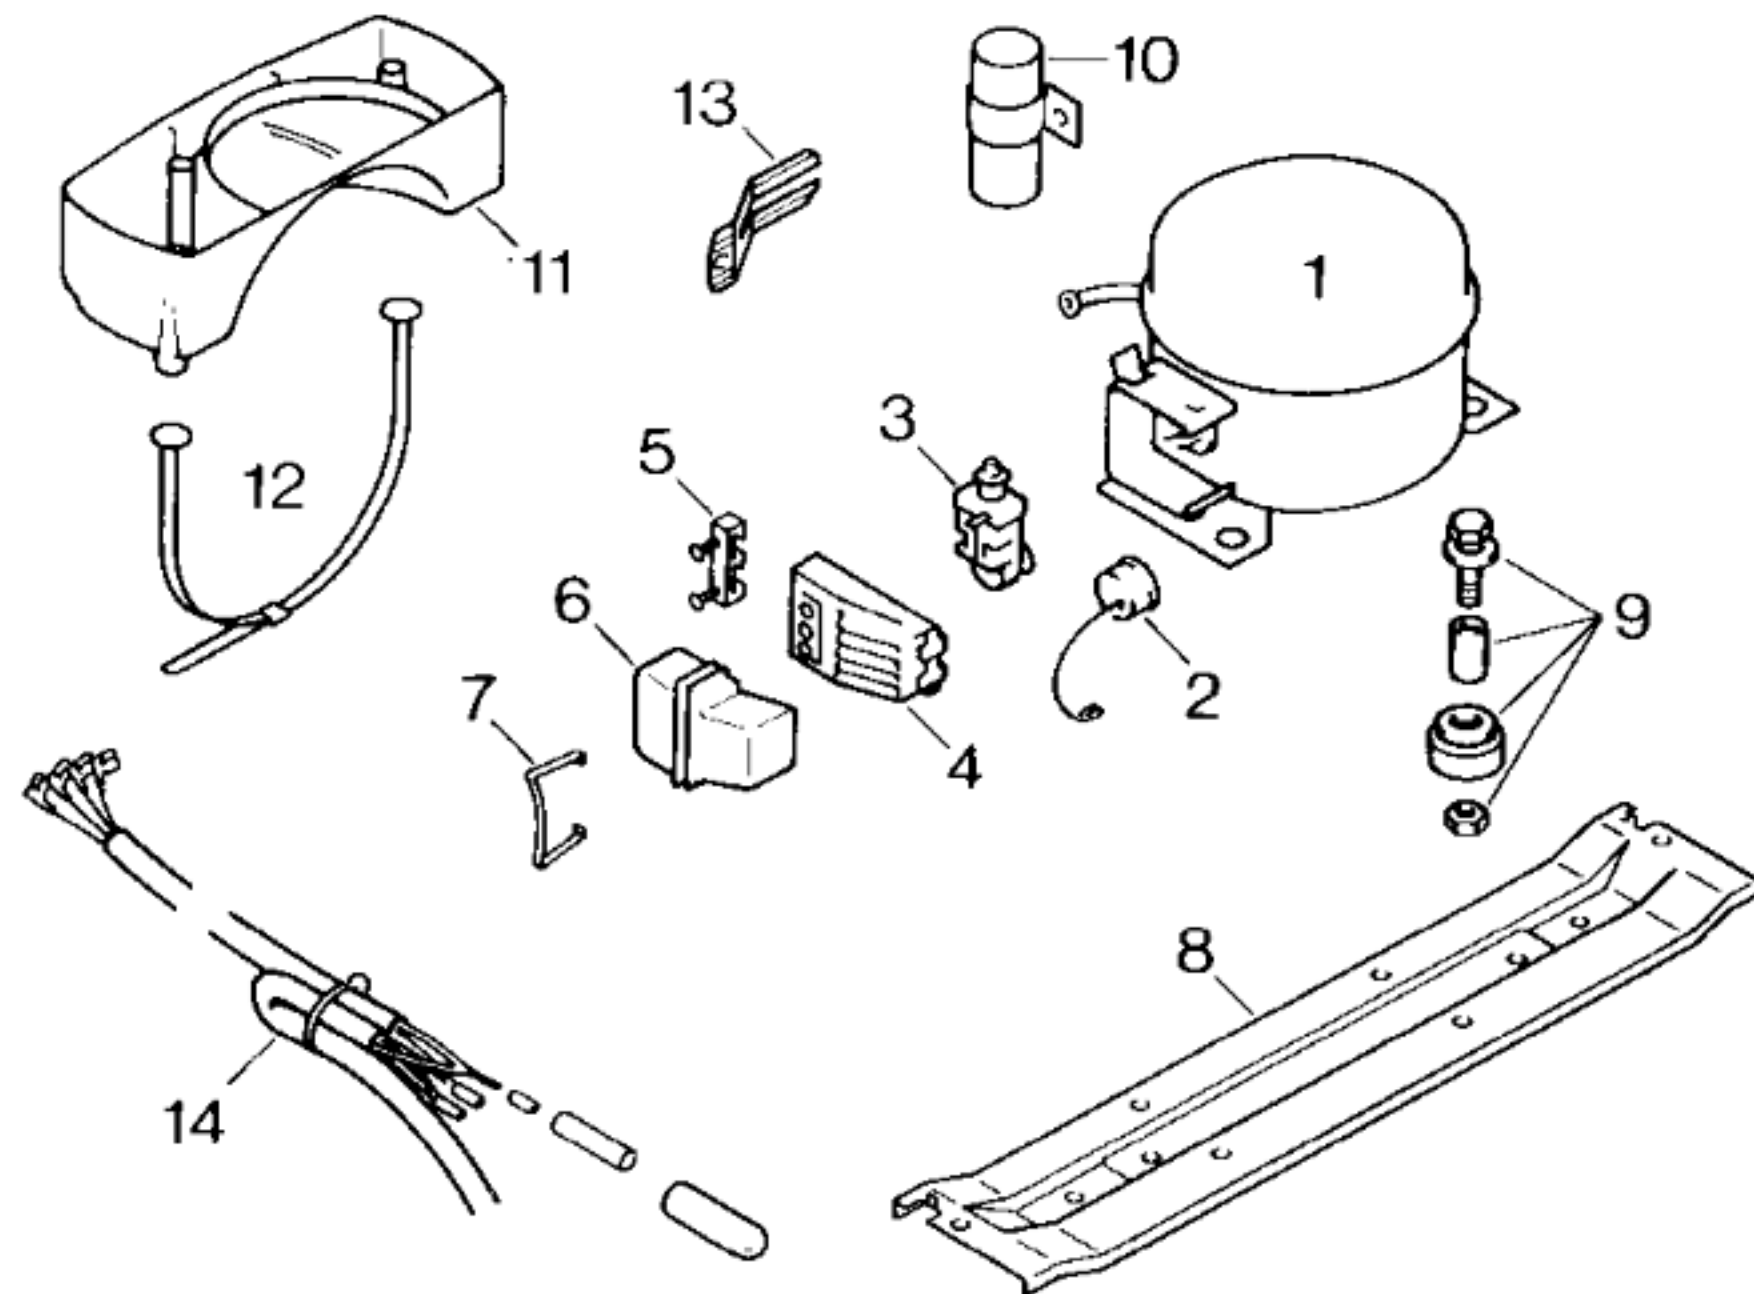

Pos.	D1, D2	D1, D2		
	Bosch	Danfoss		
1		13 1064/45		
2	07 2115/18			
3	07 1804/18	02 0108/27		
4	04 9757/02			
5		02 1361/04		
6	04 9758/02	05 1413/06		
7				
8		*11 1839/07		
9		*05 0166/05/4		
10				
11	10 6693/03	*11 1243/01		
12				
13		*04 1568/01/2		
14		*05 1226/08		

*) Bei Ersatz des Bosch-Verdichters mitbestellen
To be ordered when replacing the Bosch compressor
A commander lors du remplacement du compresseur Bosch

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES

Verdichter/Compressor/Compresseur		Bosch	Danfoss		
Typ/Type		V 792	TL 4 A		
Förderleistung/Delivery/Débit		l/h	792	702	
Anlaufstrom/Starting current/Cour. de démarrage		A	8,3	7,8	
Widerstand/Resistance/Résistance		Ha/main/prin. Ω	23,0	23,8	
		Hi/aux Ω	25,2	17,0	
Temp.-Regler/Thermostat		Ranco			
Typ/Type		A 59			
Reglerstellung/Position		kalt	warm		
Schaltwerte/Switching values/		„ein“	+ 4	+ 4	
Valeurs de commutation		„aus“	- 29	- 19	
		(„abtauen“ od.)	„alarm“		
Füllmenge/Fill.quantity/Charge		R12	g	130	
Anschlußwert/Conn.load/Puiss. connectée		W	120		
Heizung/Heater/Chauffage					
Widerstand/Resistance/Résistance		Ω	3280		
Leistung/Power/Puissance		W	14,8		
Ventilator/Blower/Ventilateur					
Widerstand/Resistance/Résistance		Ω			
Magnetventil/Magnetic valve/Electrovanne					
Widerstand/Resistance/Résistance		Ω			
Spannung/Voltage/Tension		V			