



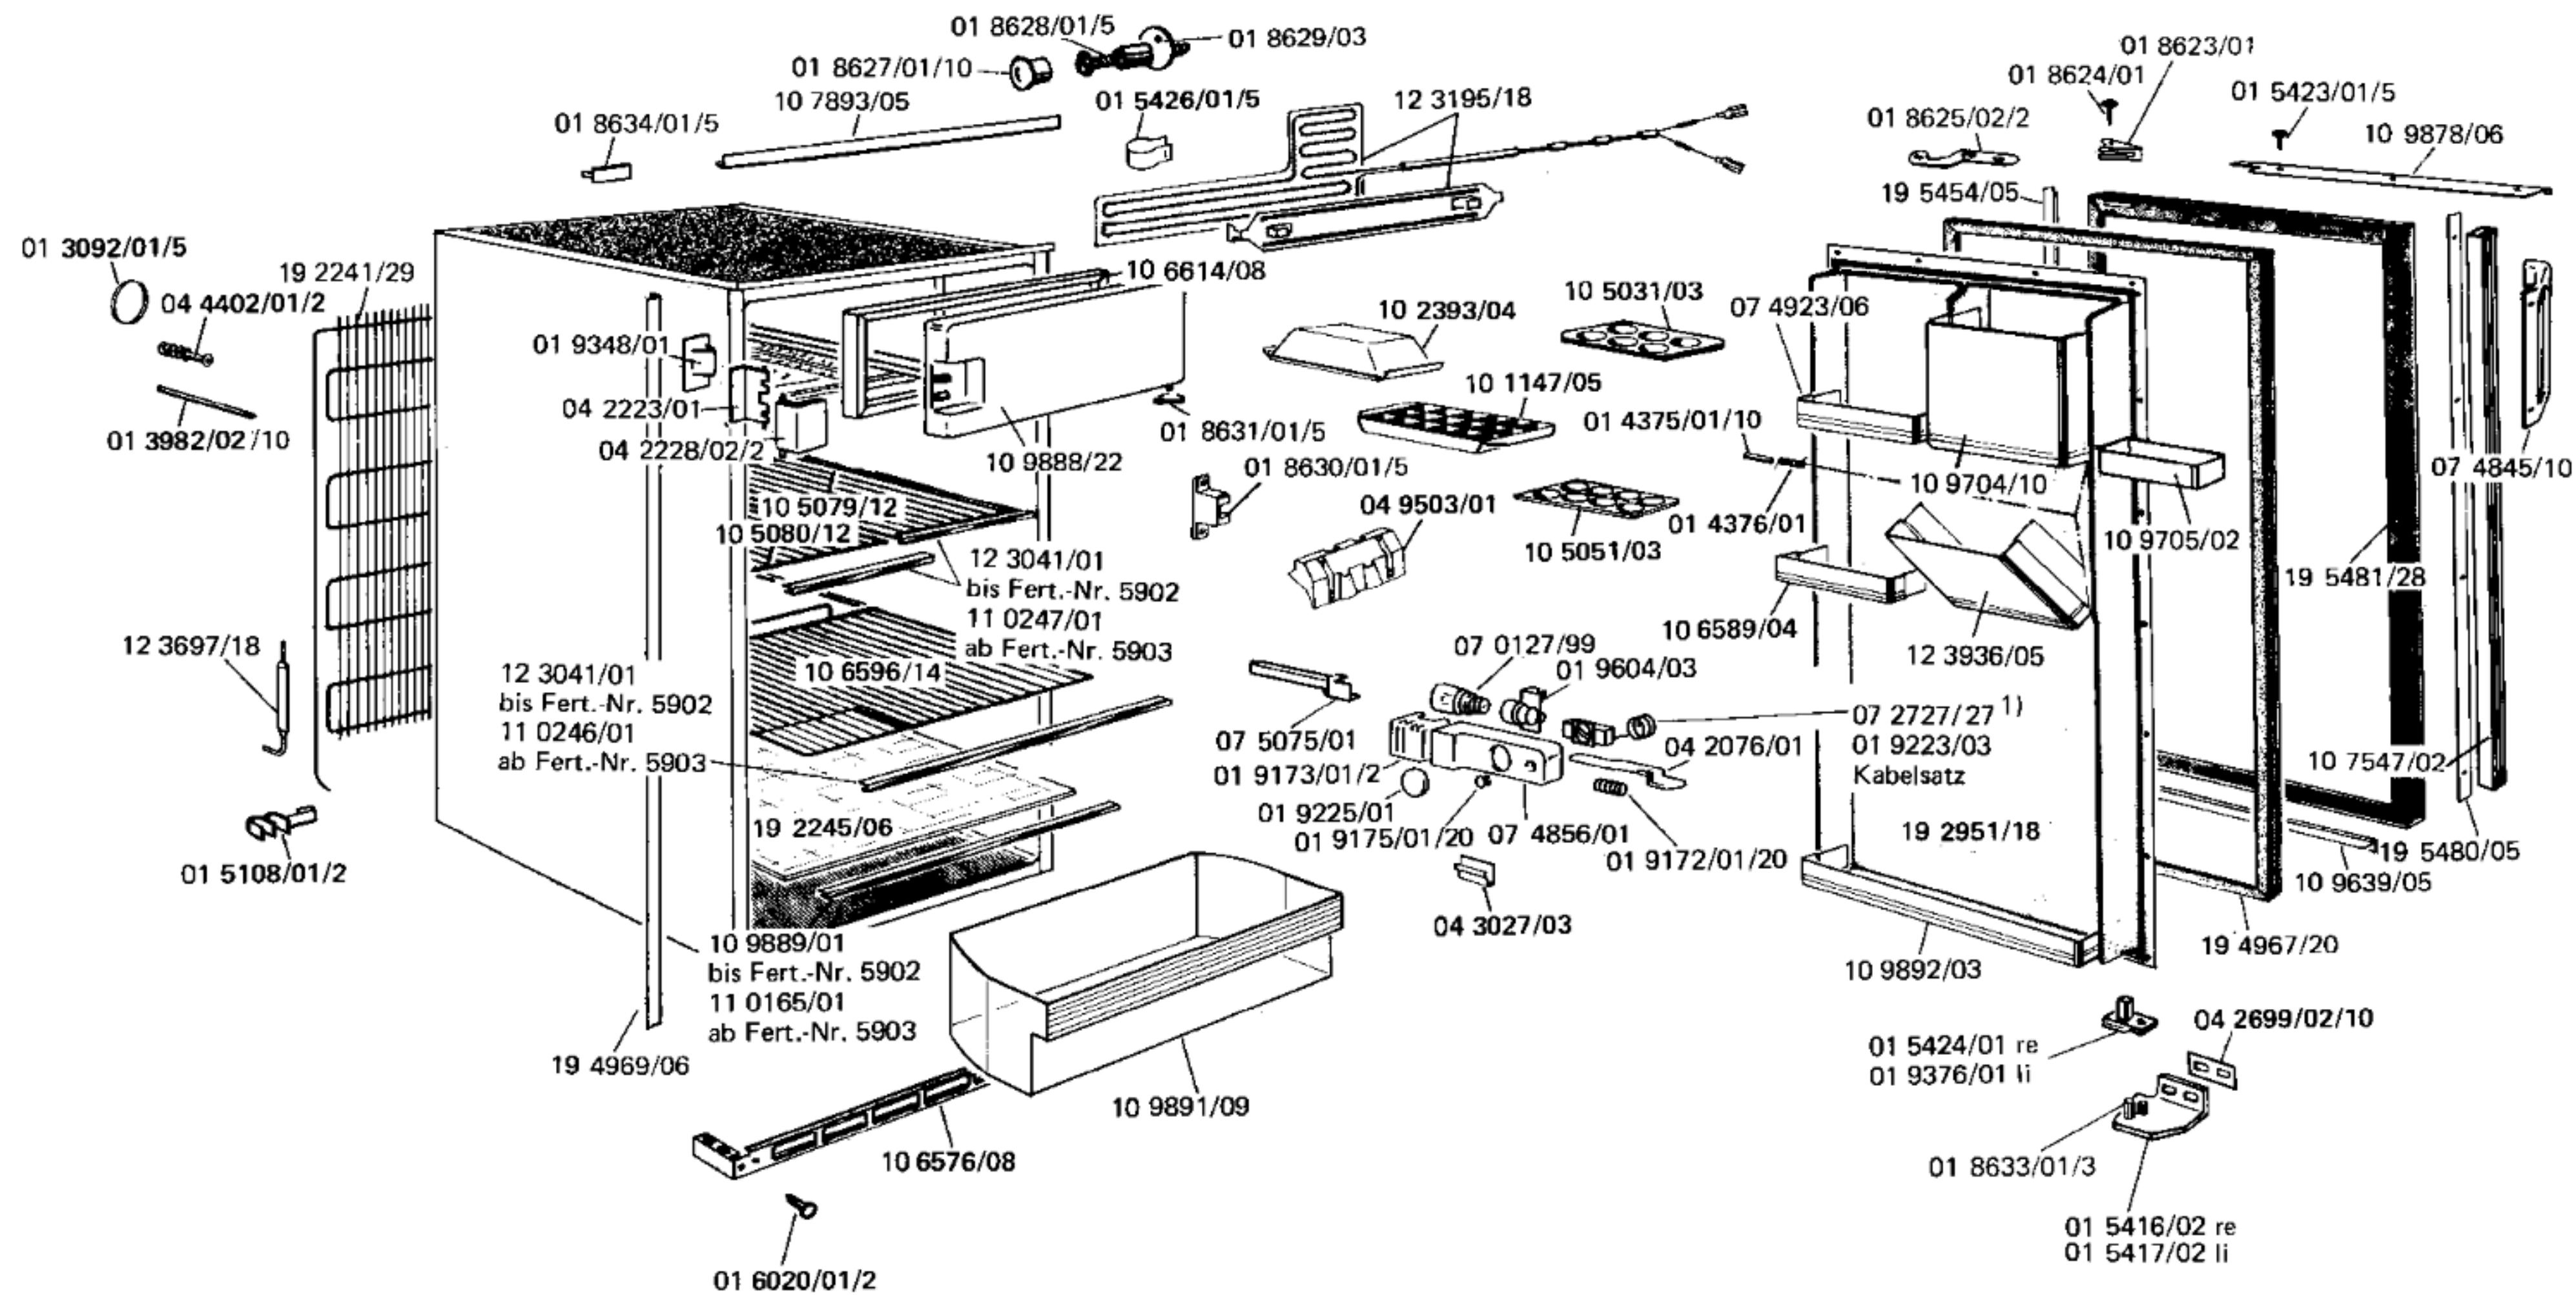

50 8614/00
Bed.-Anleitung
50 8876/00
Mont.-Anleitung

1) 01 9223
mitbestellen

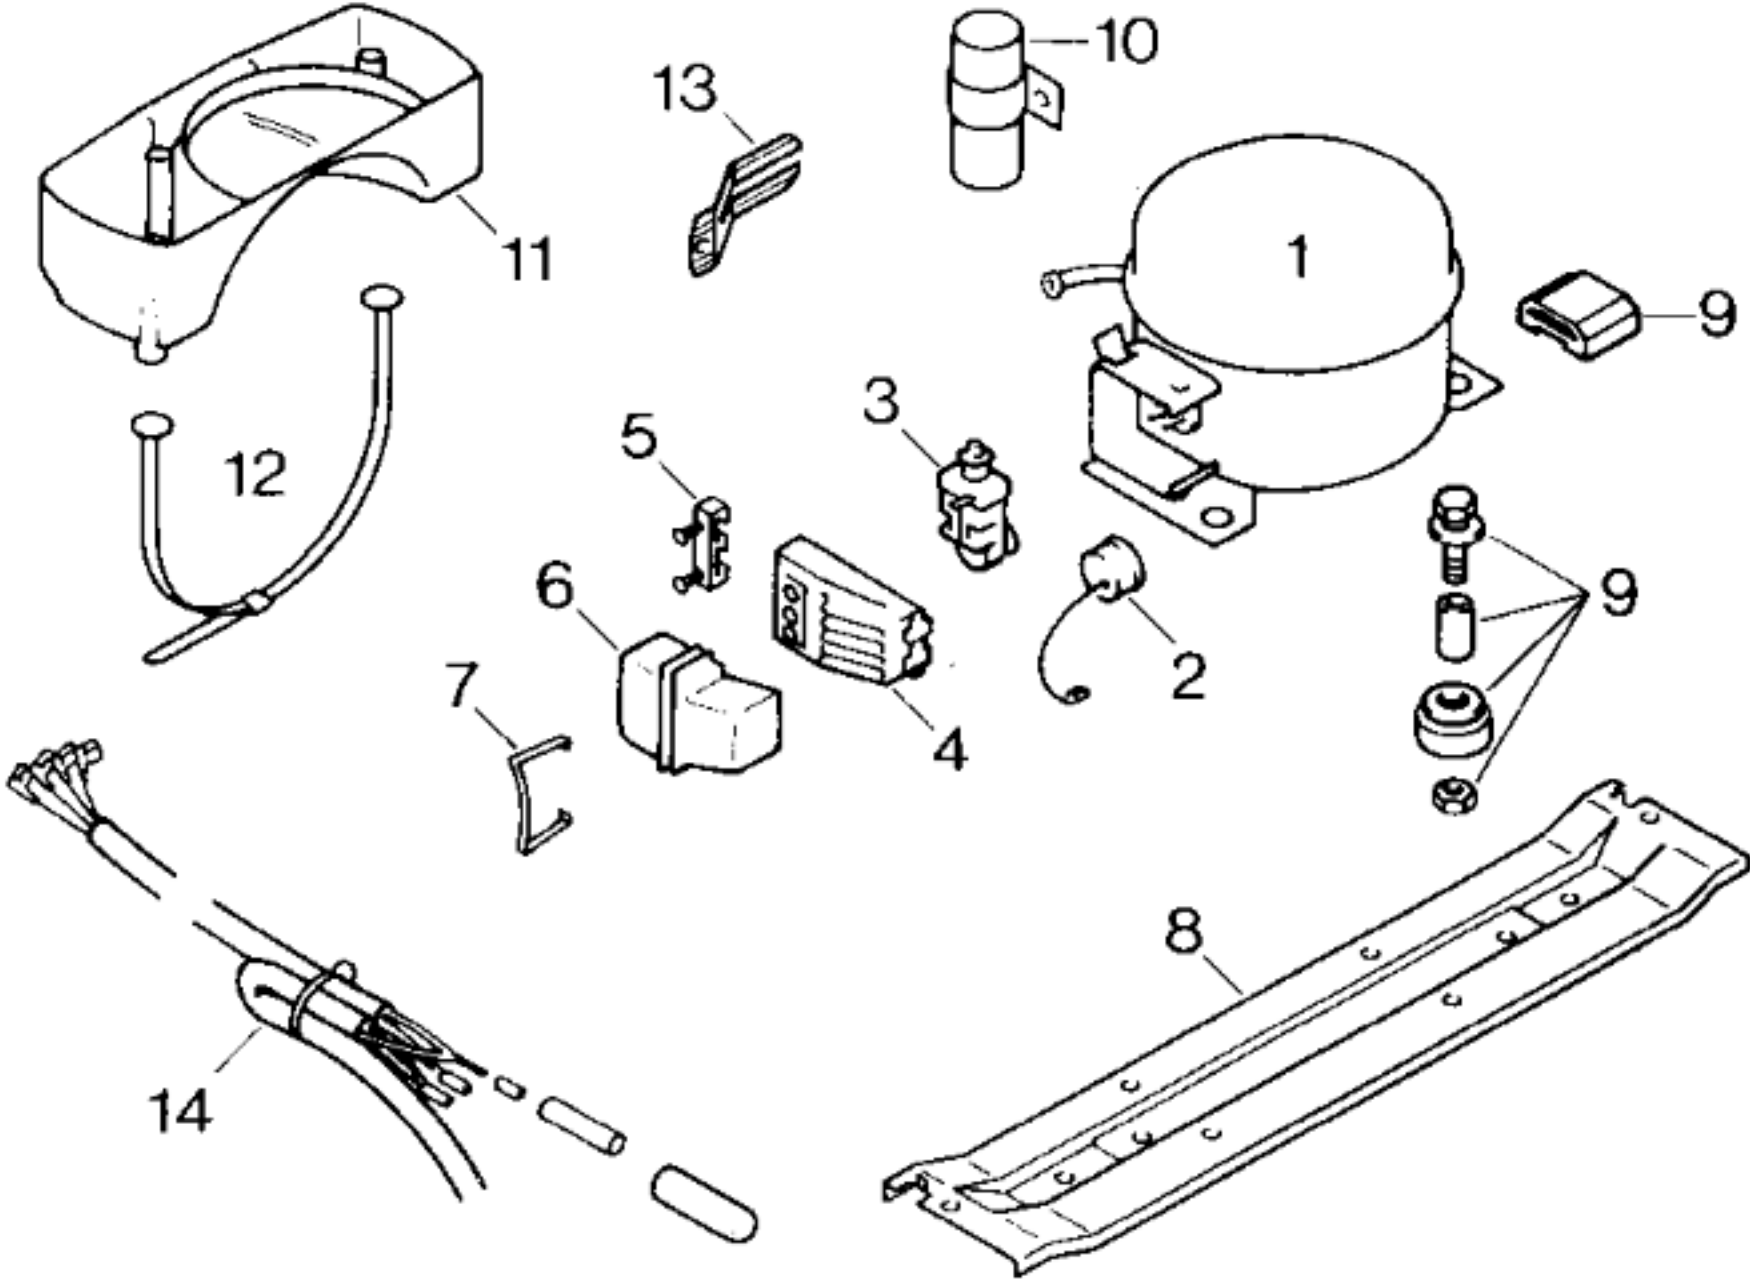

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES				
Verdichter/Compressor/Compresseur		Bosch	Danfoss	
Typ/Type		V 792	TL 4 A	
Förderleistung/Delivery/Débit	l/h	792	702	
Anlaufstrom/Starting current/Cour. de démarrage	A	8,3	7,8	
Widerstand/Resistance/Résistance	Ha/main/prin. Ω	23,0	23,8	
	Hi/aux Ω	25,2	17,0	
Temp.-Regler/Thermostat		Ranco		
Typ/Type		A 59		
Reglerstellung/Position		kalt warm		
Schaltwerte/Switching values/	„ein“ $^{\circ}\text{C}$	+ 4 + 4		
Valeurs de commutation	„aus“	- 29 - 20		
	(„abtauen“ od.) „alarm“			
Füllmenge/Fill.quantity/Charge	R12 g	125		
Anschlußwert/Conn.load/Puiss. connectée	W	110		
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance	Ω			
Leistung/Power/Puissance	W			
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance	Ω			
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance	Ω			
Spannung/Voltage/Tension	V			

Pos.	D1, D2	D1, D2		
	Bosch	Danfoss		
1		13 1064/45		
2	07 2115/18			
3	07 1804/18	02 0108/27		
4	04 9757/02			
5		02 1361/04		
6	04 9758/02	05 1413/06		
7				
8		*11 1838/03		
9		*05 0166/05/4		
10				
11	10 6693/03	*11 1243/01		
12				
13		*04 1568/01/2		
14		*05 1226/08		

*) Bei Ersatz des Bosch-Verdichters mitbestellen
To be ordered when replacing the Bosch compressor
A commander lors du remplacement du compresseur Bosch

250128-2/2