



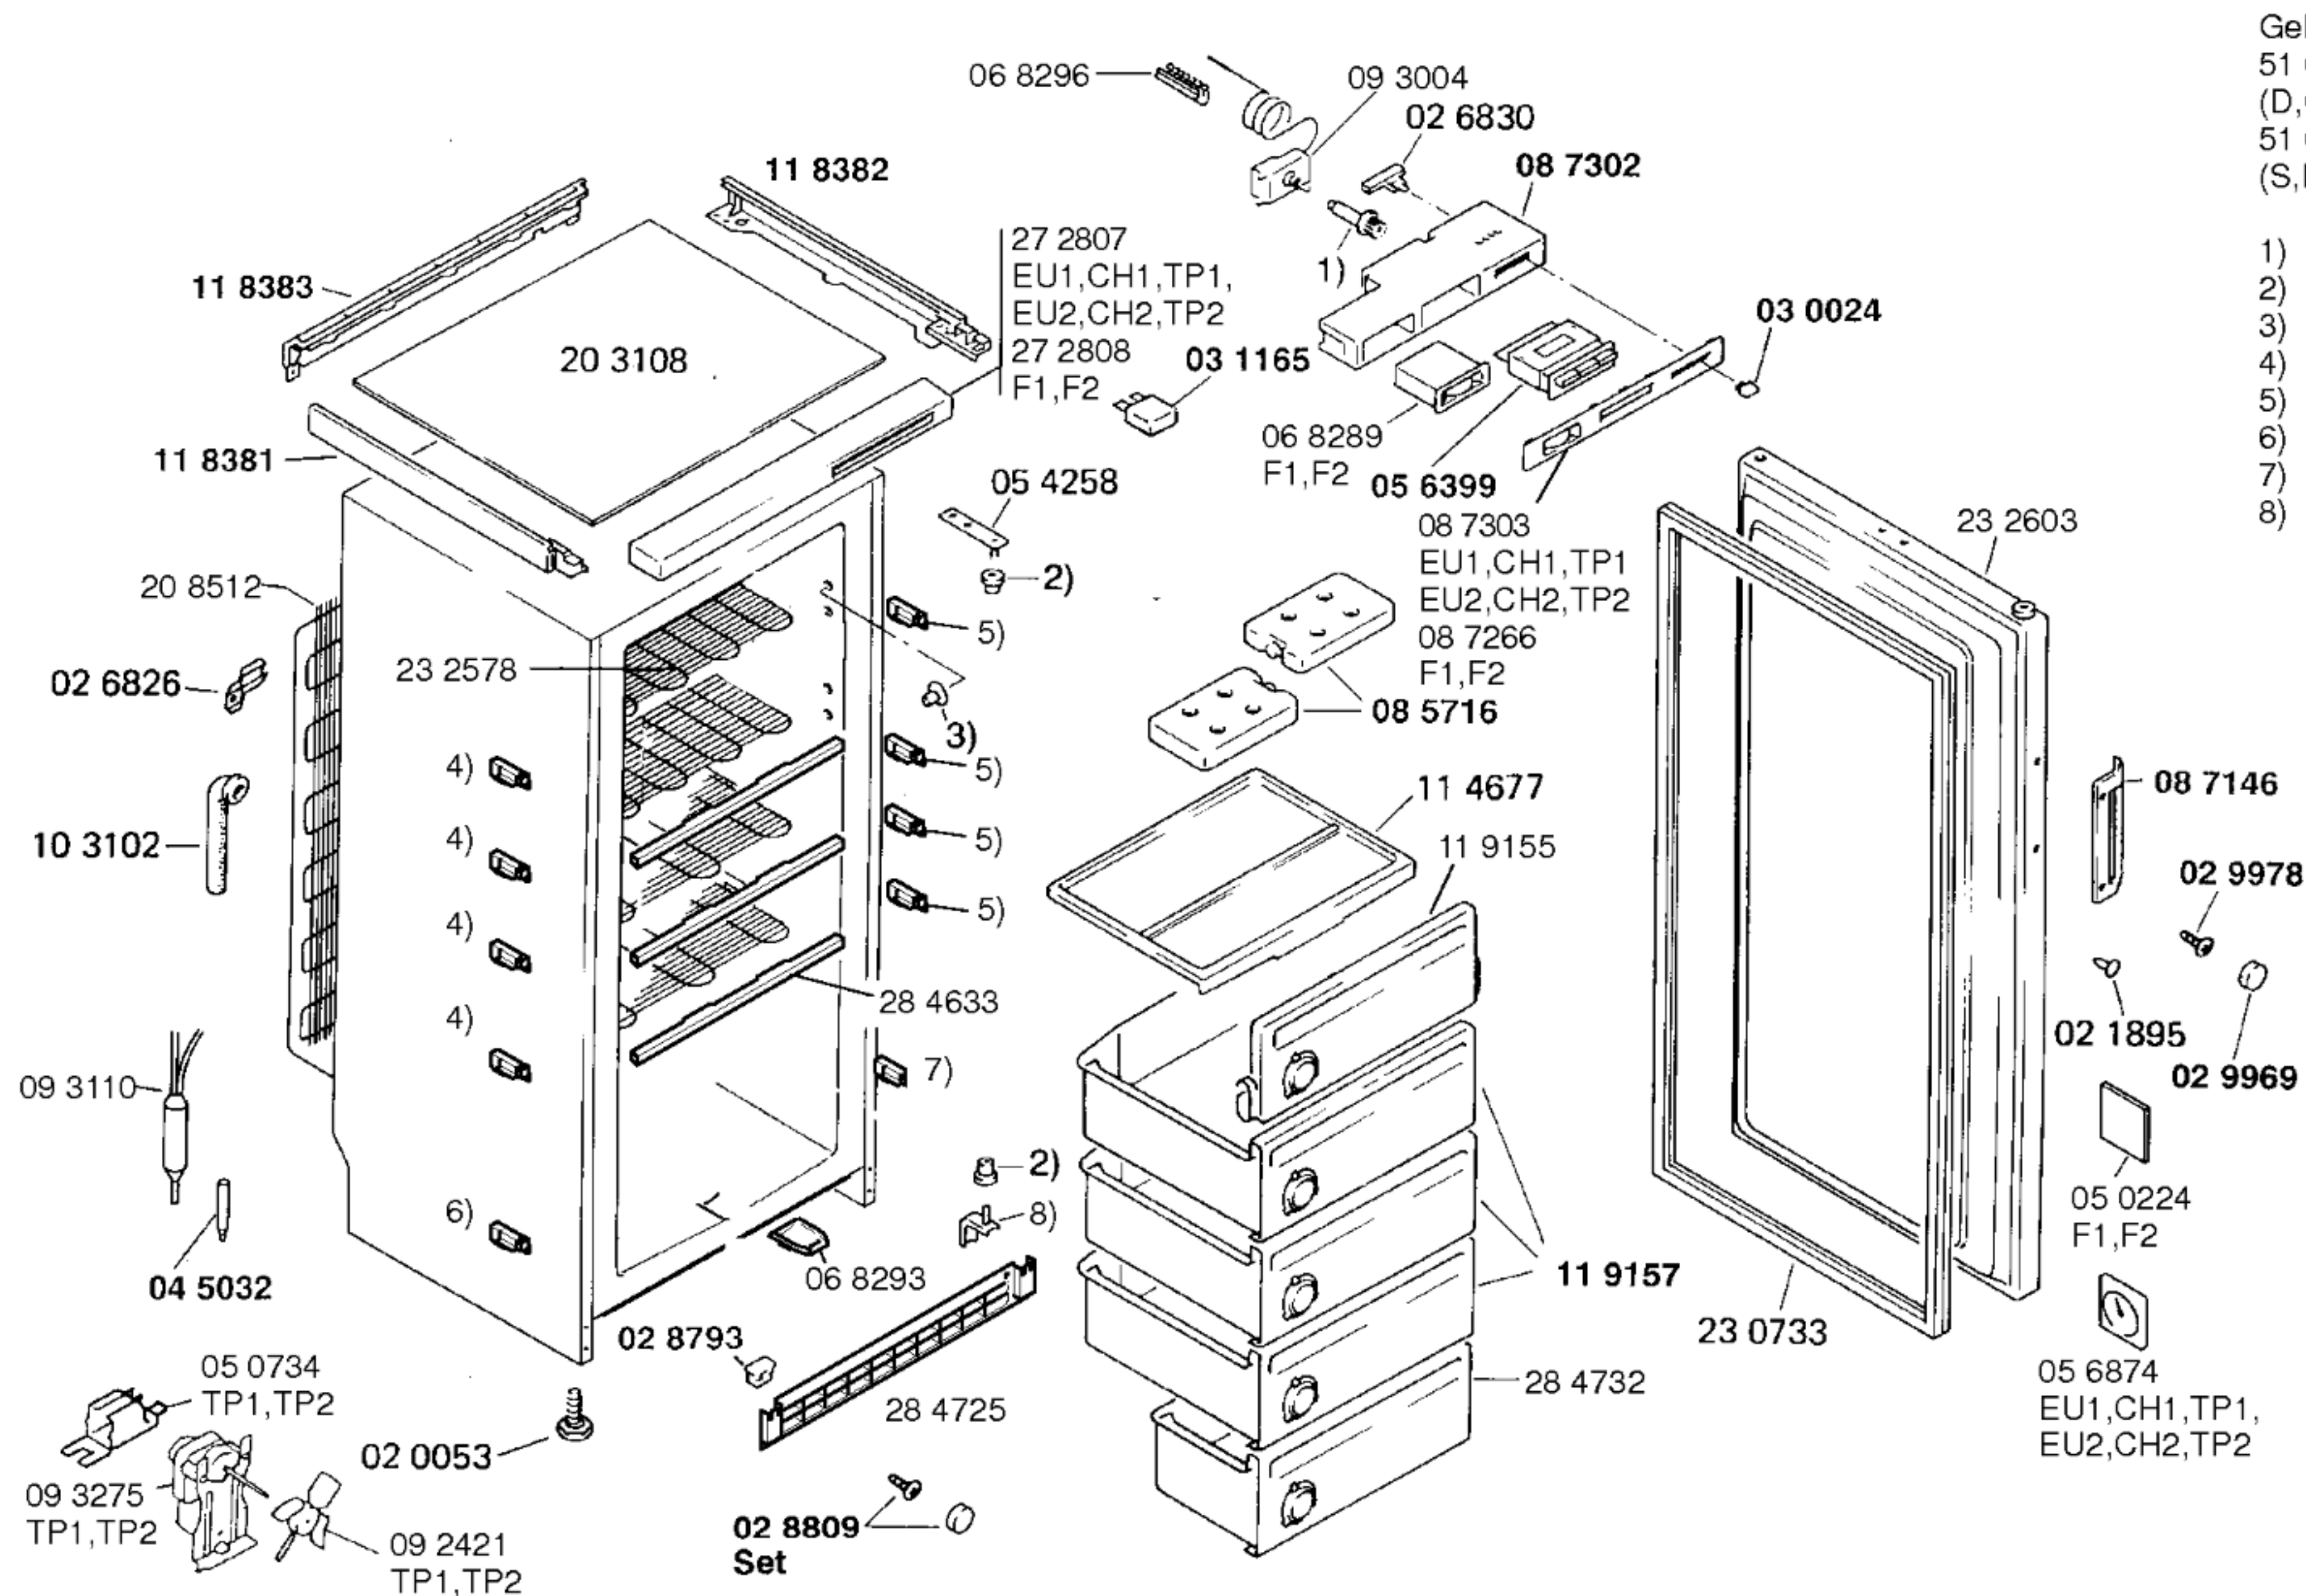

Gebrauchsanweisungen  
51 6982  
(D,GB,F,I,NL,P,E)  
51 6983  
(S,DK,SE,N)

- 1) 02 6828
- 2) 02 7786
- 3) 02 6824
- 4) 06 8297
- 5) 06 8298
- 6) 06 8299
- 7) 06 8300
- 8) 06 8499

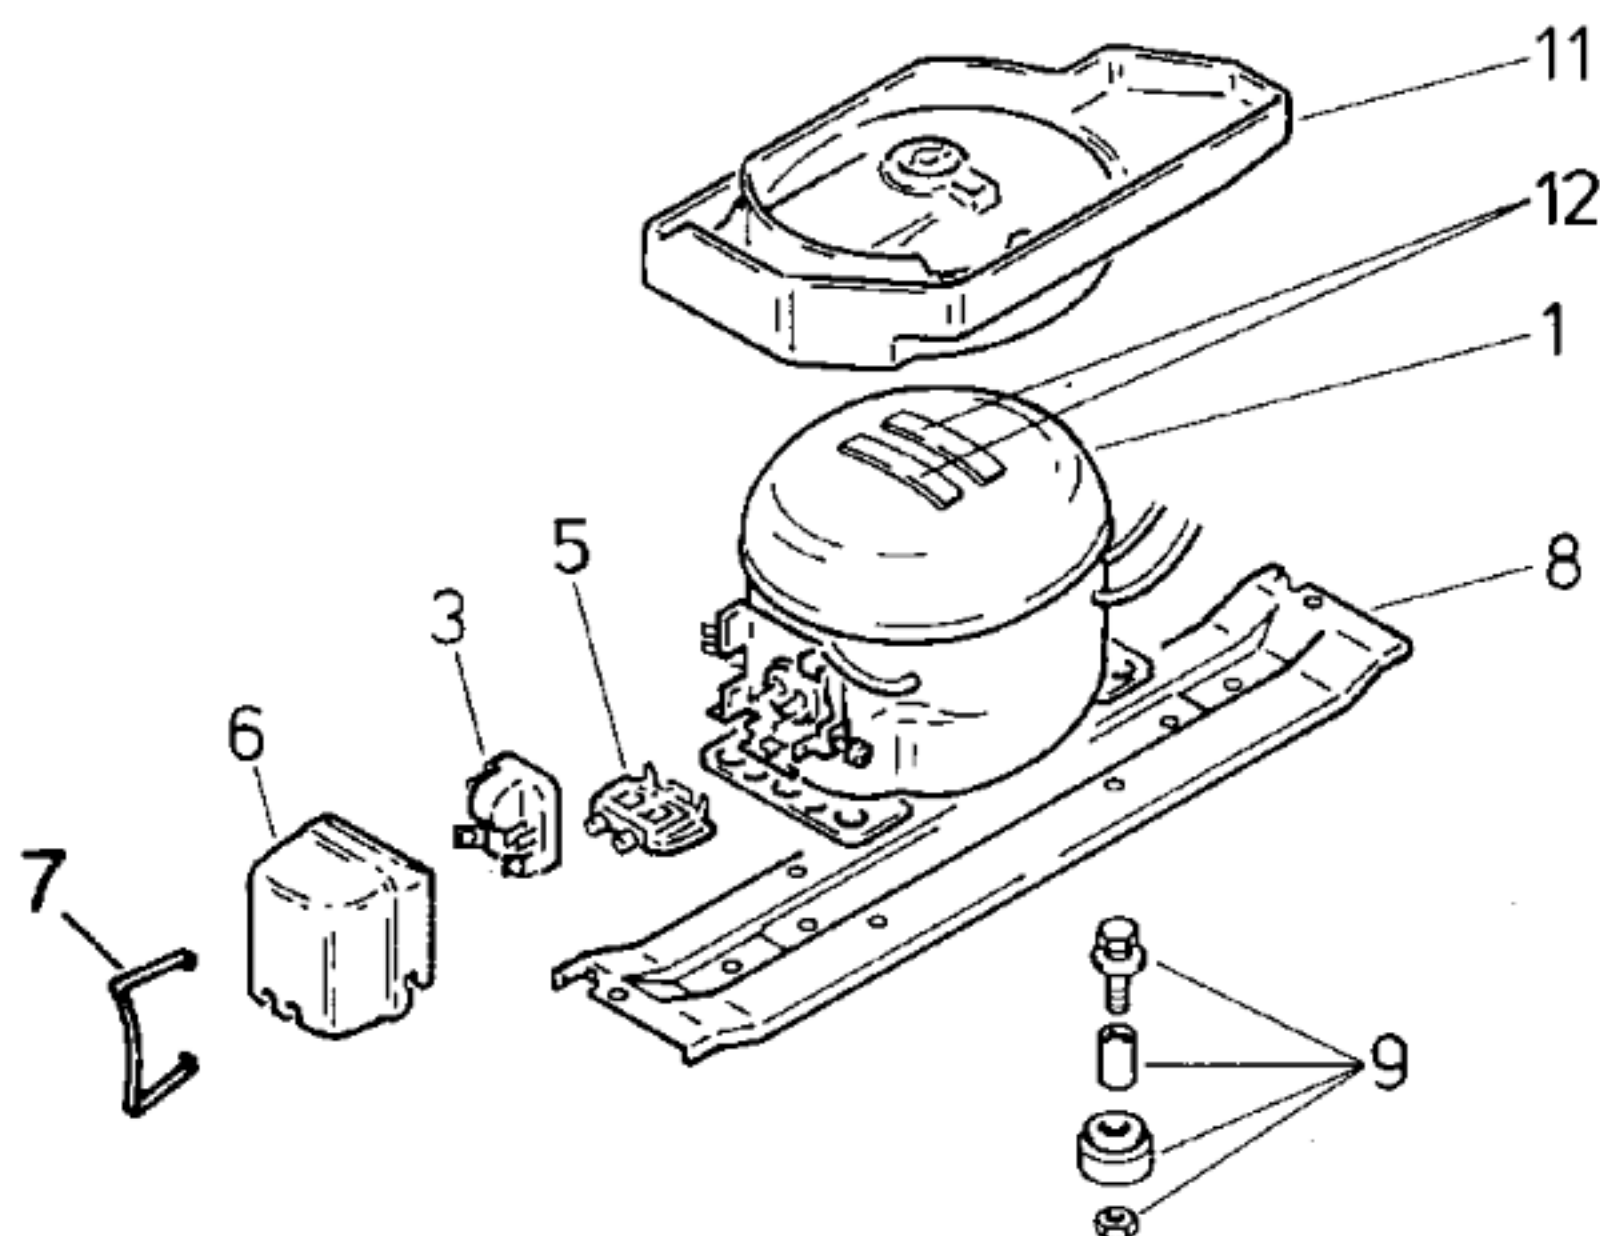

|      | EU1,CH1,F1,TP1 | EU2,CH2,F2,TP2 |  |
|------|----------------|----------------|--|
| Pos. | Matsushita     | Danfoss        |  |
|      | D113LRRA       | NL6A           |  |
| 1    | 14 1121        | 14 1147        |  |
| 2    |                |                |  |
| 3    | 06 8301        | 06 8290        |  |
| 4    |                |                |  |
| 5    |                | 06 8292        |  |
| 6    | 05 8458        | 06 8291        |  |
| 7    | 02 6731        |                |  |
| 8    | 11 1567        | 11 1567        |  |
| 9    | 05 0166        | 05 0166        |  |
| 10   |                |                |  |
| 11   |                |                |  |
| 12   |                |                |  |

| TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES |  |                          |         |      |
|--------------------------------------------------------|--|--------------------------|---------|------|
| Verdichter/Compressor/Compresseur                      |  | Matsushita               | Danfoss |      |
| Typ/Type                                               |  | D113LRRA                 | NL6A    |      |
| Förderleistung/Delivery/Débit                          |  | l/h                      | 918     | 1098 |
| Anlaufstrom/Starting current/Cour de démarrage         |  | A                        | 6,8     | 5,1  |
| Widerstand/Resistance/Résistance                       |  | Ha/main/prin. $\Omega$   | 19,2    | 16,1 |
|                                                        |  | Hi/aux $\Omega$          | 33,4    | 13,6 |
| Temp.-Regler/Thermostat                                |  | Danfoss                  |         |      |
| Typ/Type                                               |  | 077B2157                 |         |      |
| Reglerstellung/Position                                |  | kalt warm                |         |      |
| Schaltwerte/Switching values/                          |  | „ein“ $^{\circ}\text{C}$ | -22     | -14  |
| Valeurs de commutation                                 |  | „aus“                    | -32     | -22  |
|                                                        |  | („abtauen“ od.) „alarm“  | -17,5   | -10  |
| Füllmenge/Fill.quantity/Charge                         |  | R12                      | g       | 185  |
| Anschlußwert/Conn.load/Puiss. connectée                |  | W                        | 120     | 140  |
| Heizung/Heater/Chauffage                               |  |                          |         |      |
| Widerstand/Resistance/Résistance                       |  | $\Omega$                 |         |      |
| Leistung/Power/Puissance                               |  | W                        |         |      |
| Ventilator/Blower/Ventilateur                          |  |                          |         |      |
| Widerstand/Resistance/Résistance                       |  | $\Omega$                 |         |      |
| Schaltuhr/Timer/Minuterie de contact                   |  |                          |         |      |
| Widerstand/Resistance/Résistance                       |  | $\Omega$                 |         |      |
| Magnetventil/Magnetic valve/Electrovanne               |  |                          |         |      |
| Widerstand/Resistance/Résistance                       |  | $\Omega$                 |         |      |
| Spannung/Voltage/Tension                               |  | V                        |         |      |