
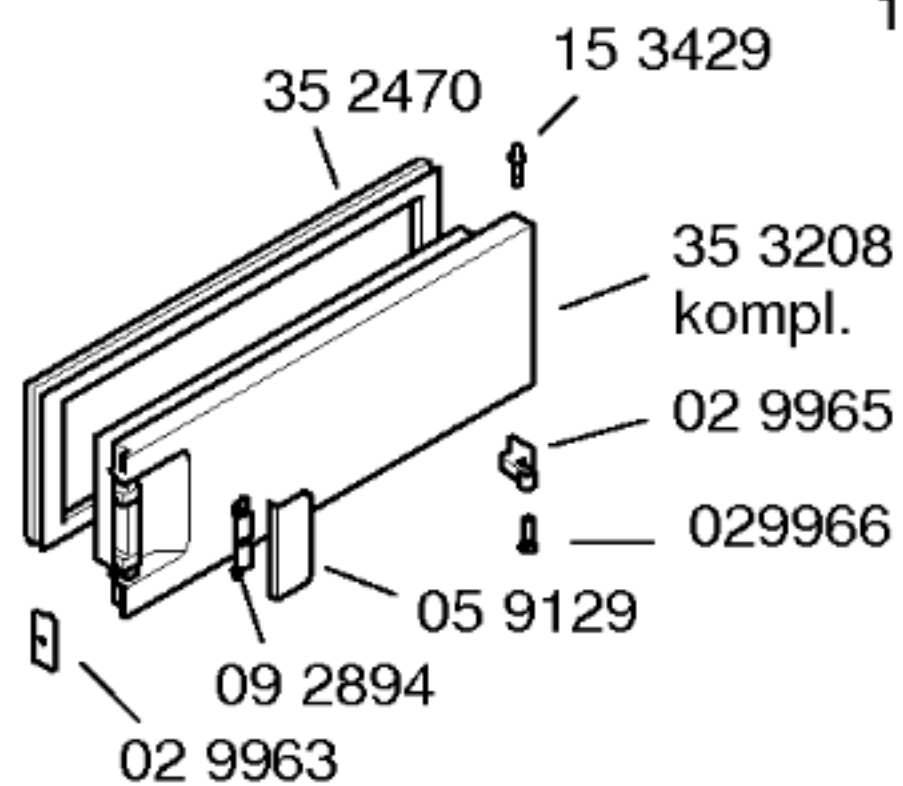
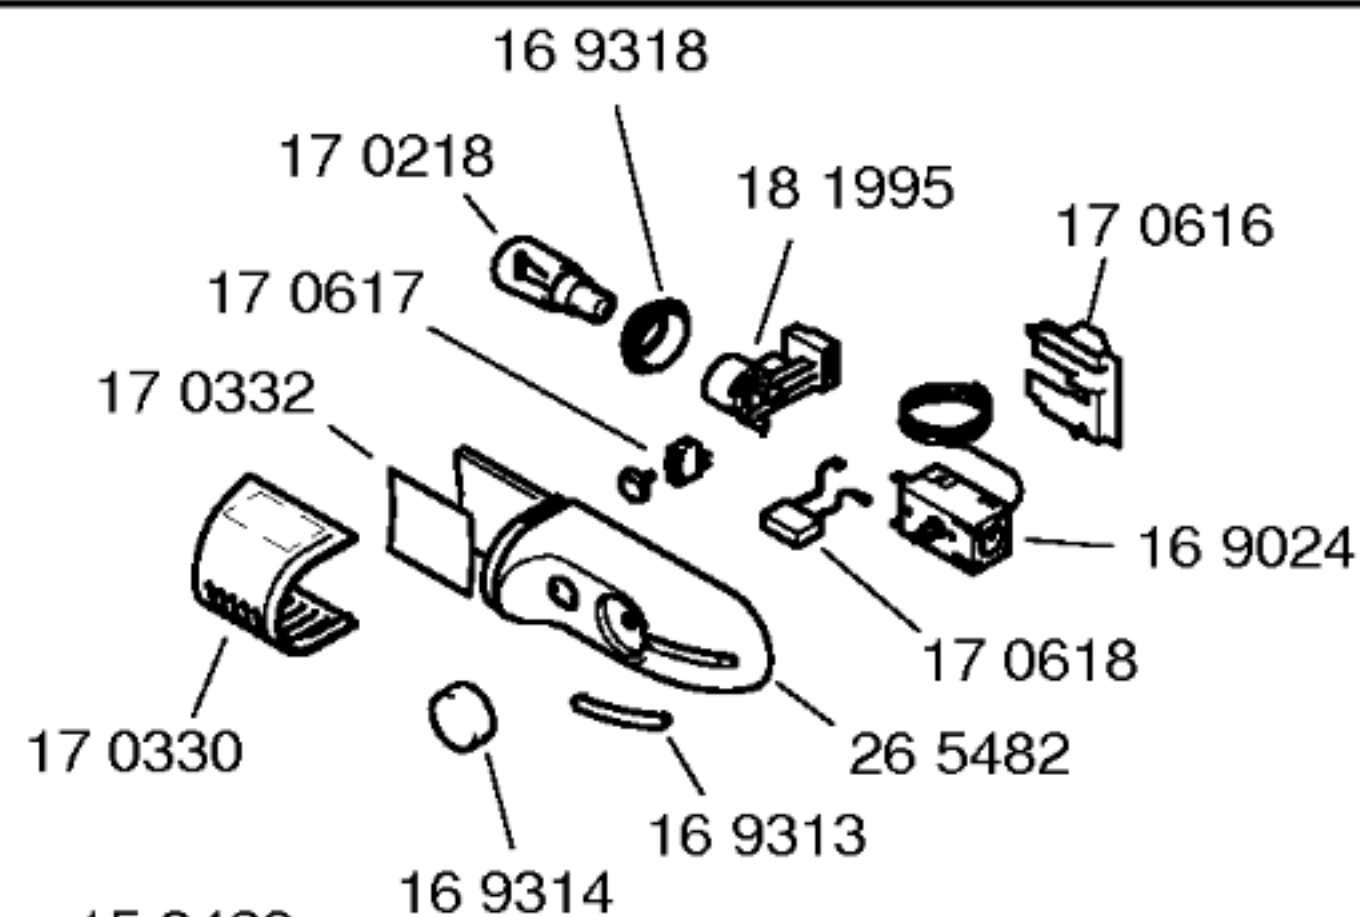


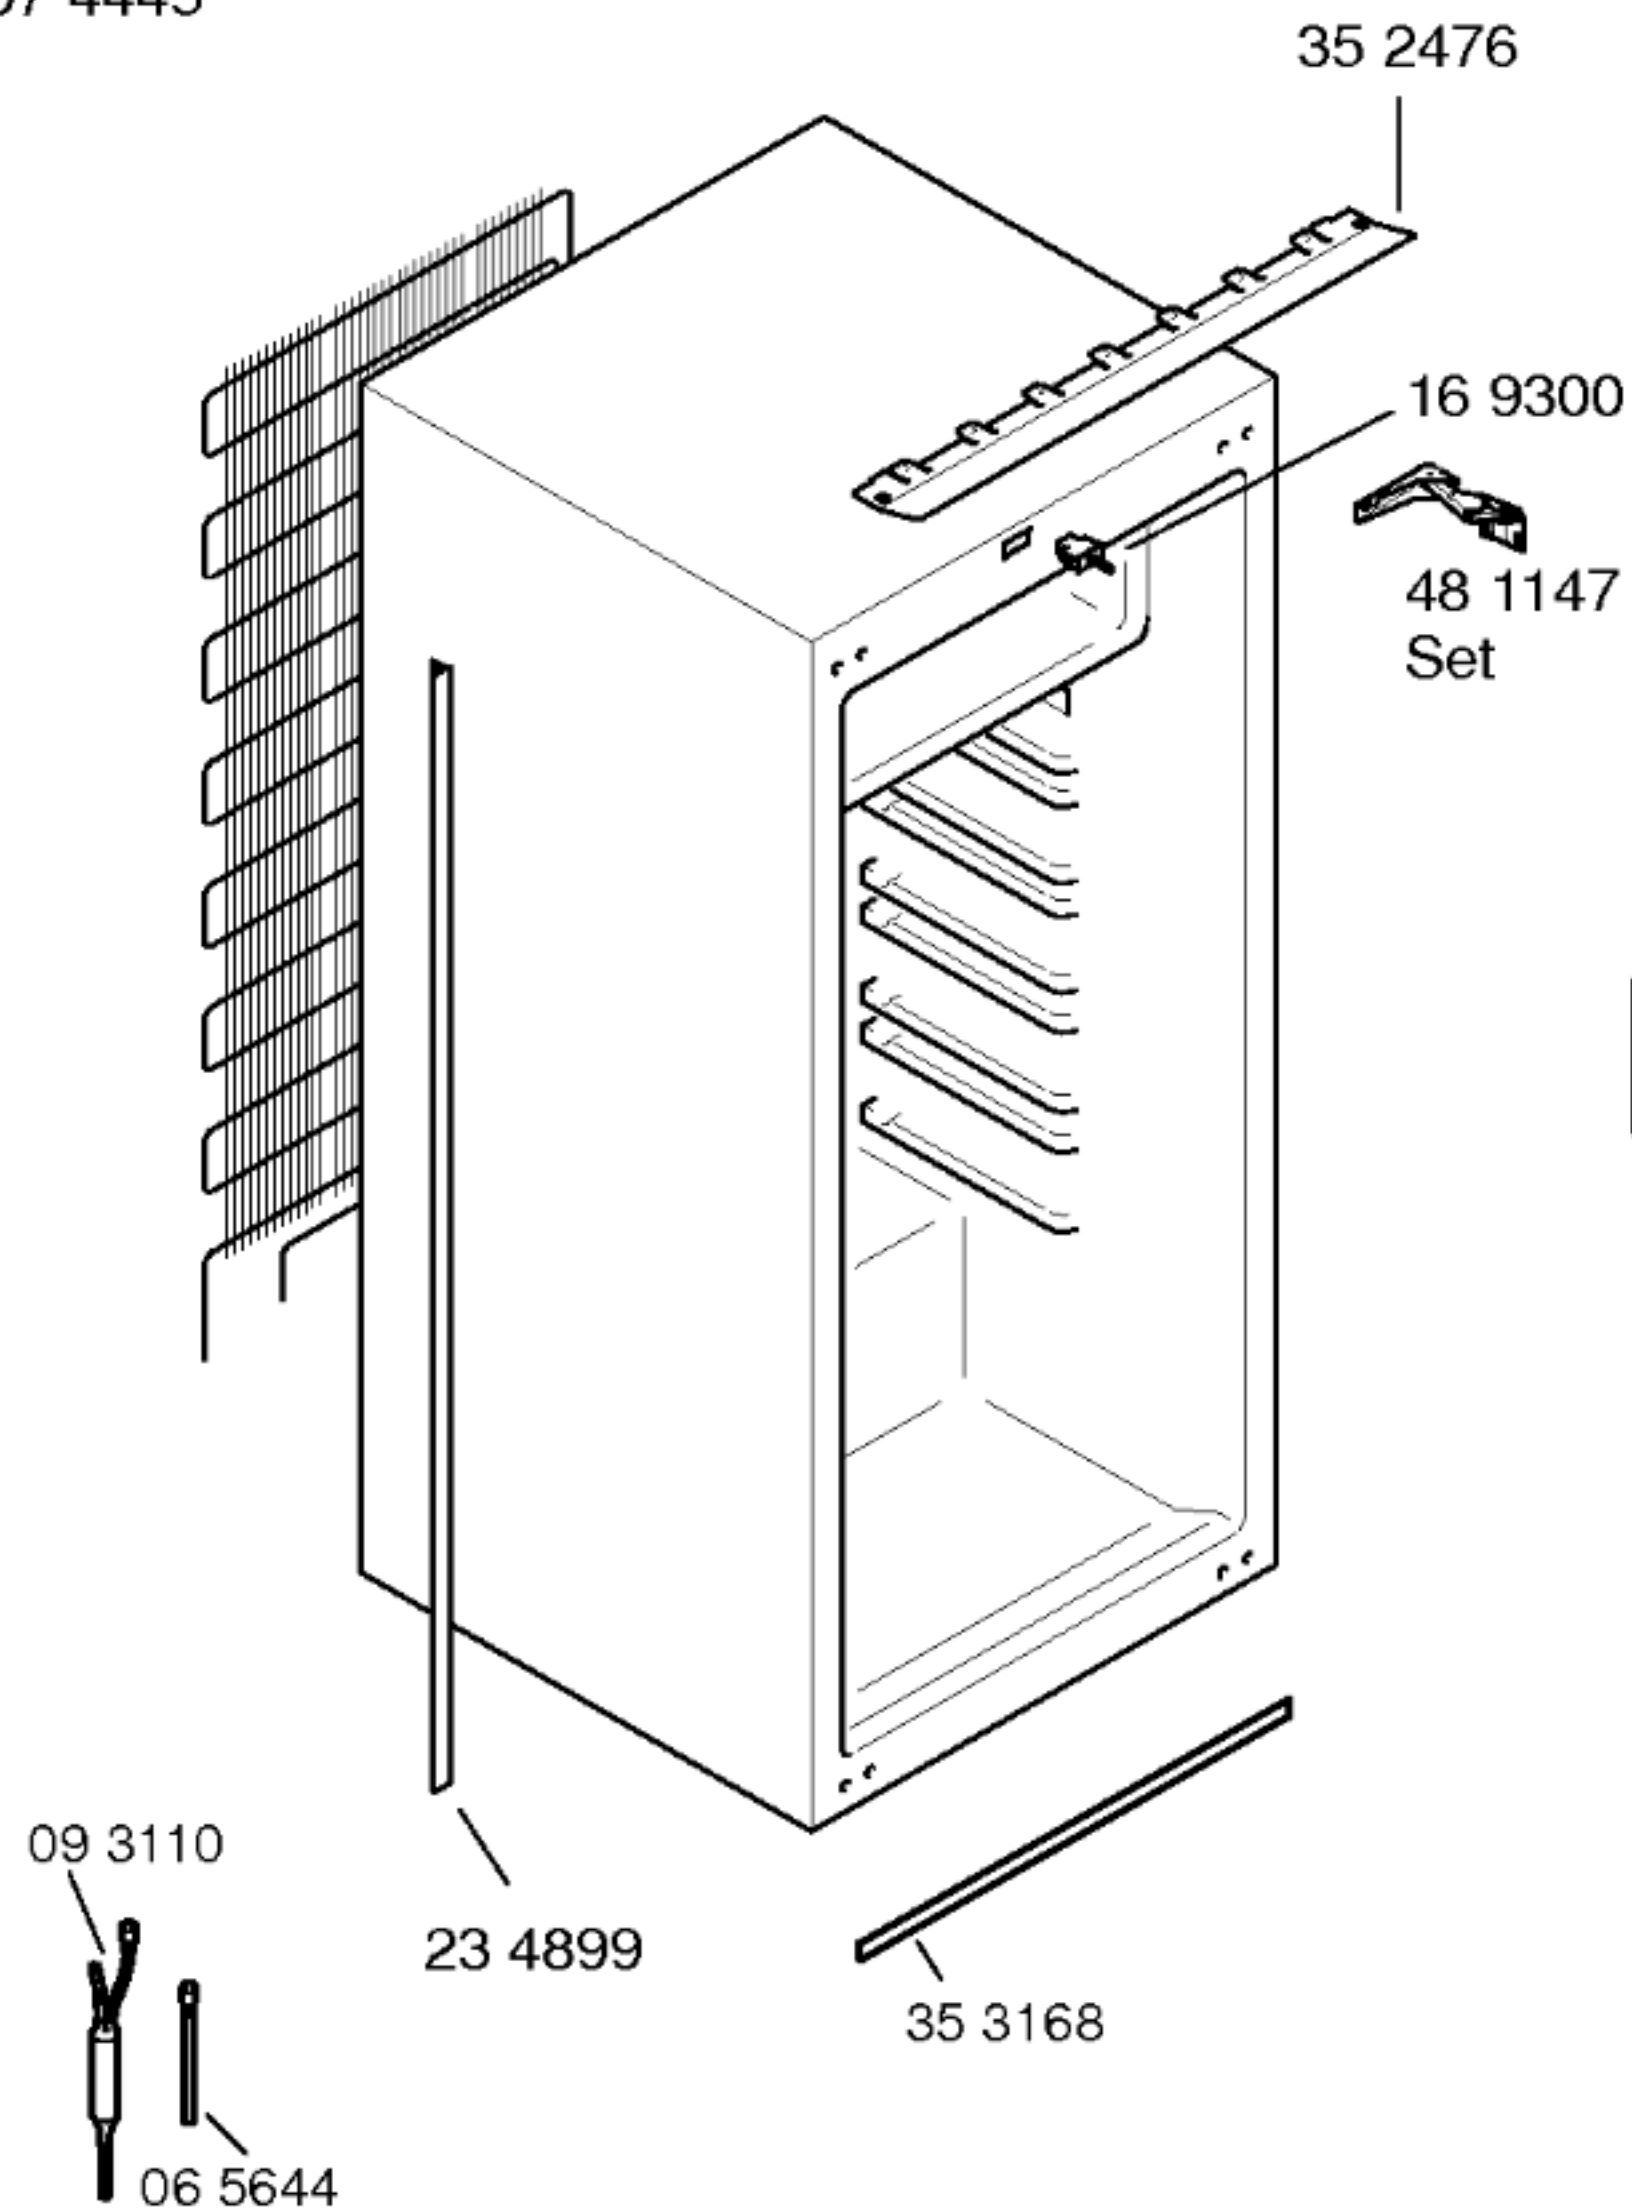



07 4445


Gebrauchsanweisung
52 2548
(D,GB,F,I,NL)

Montageanleitung
52 2494
(D,GB,F,I,NL,DK,N,SF,
SE,TR)

Beistellsatz
48 1531

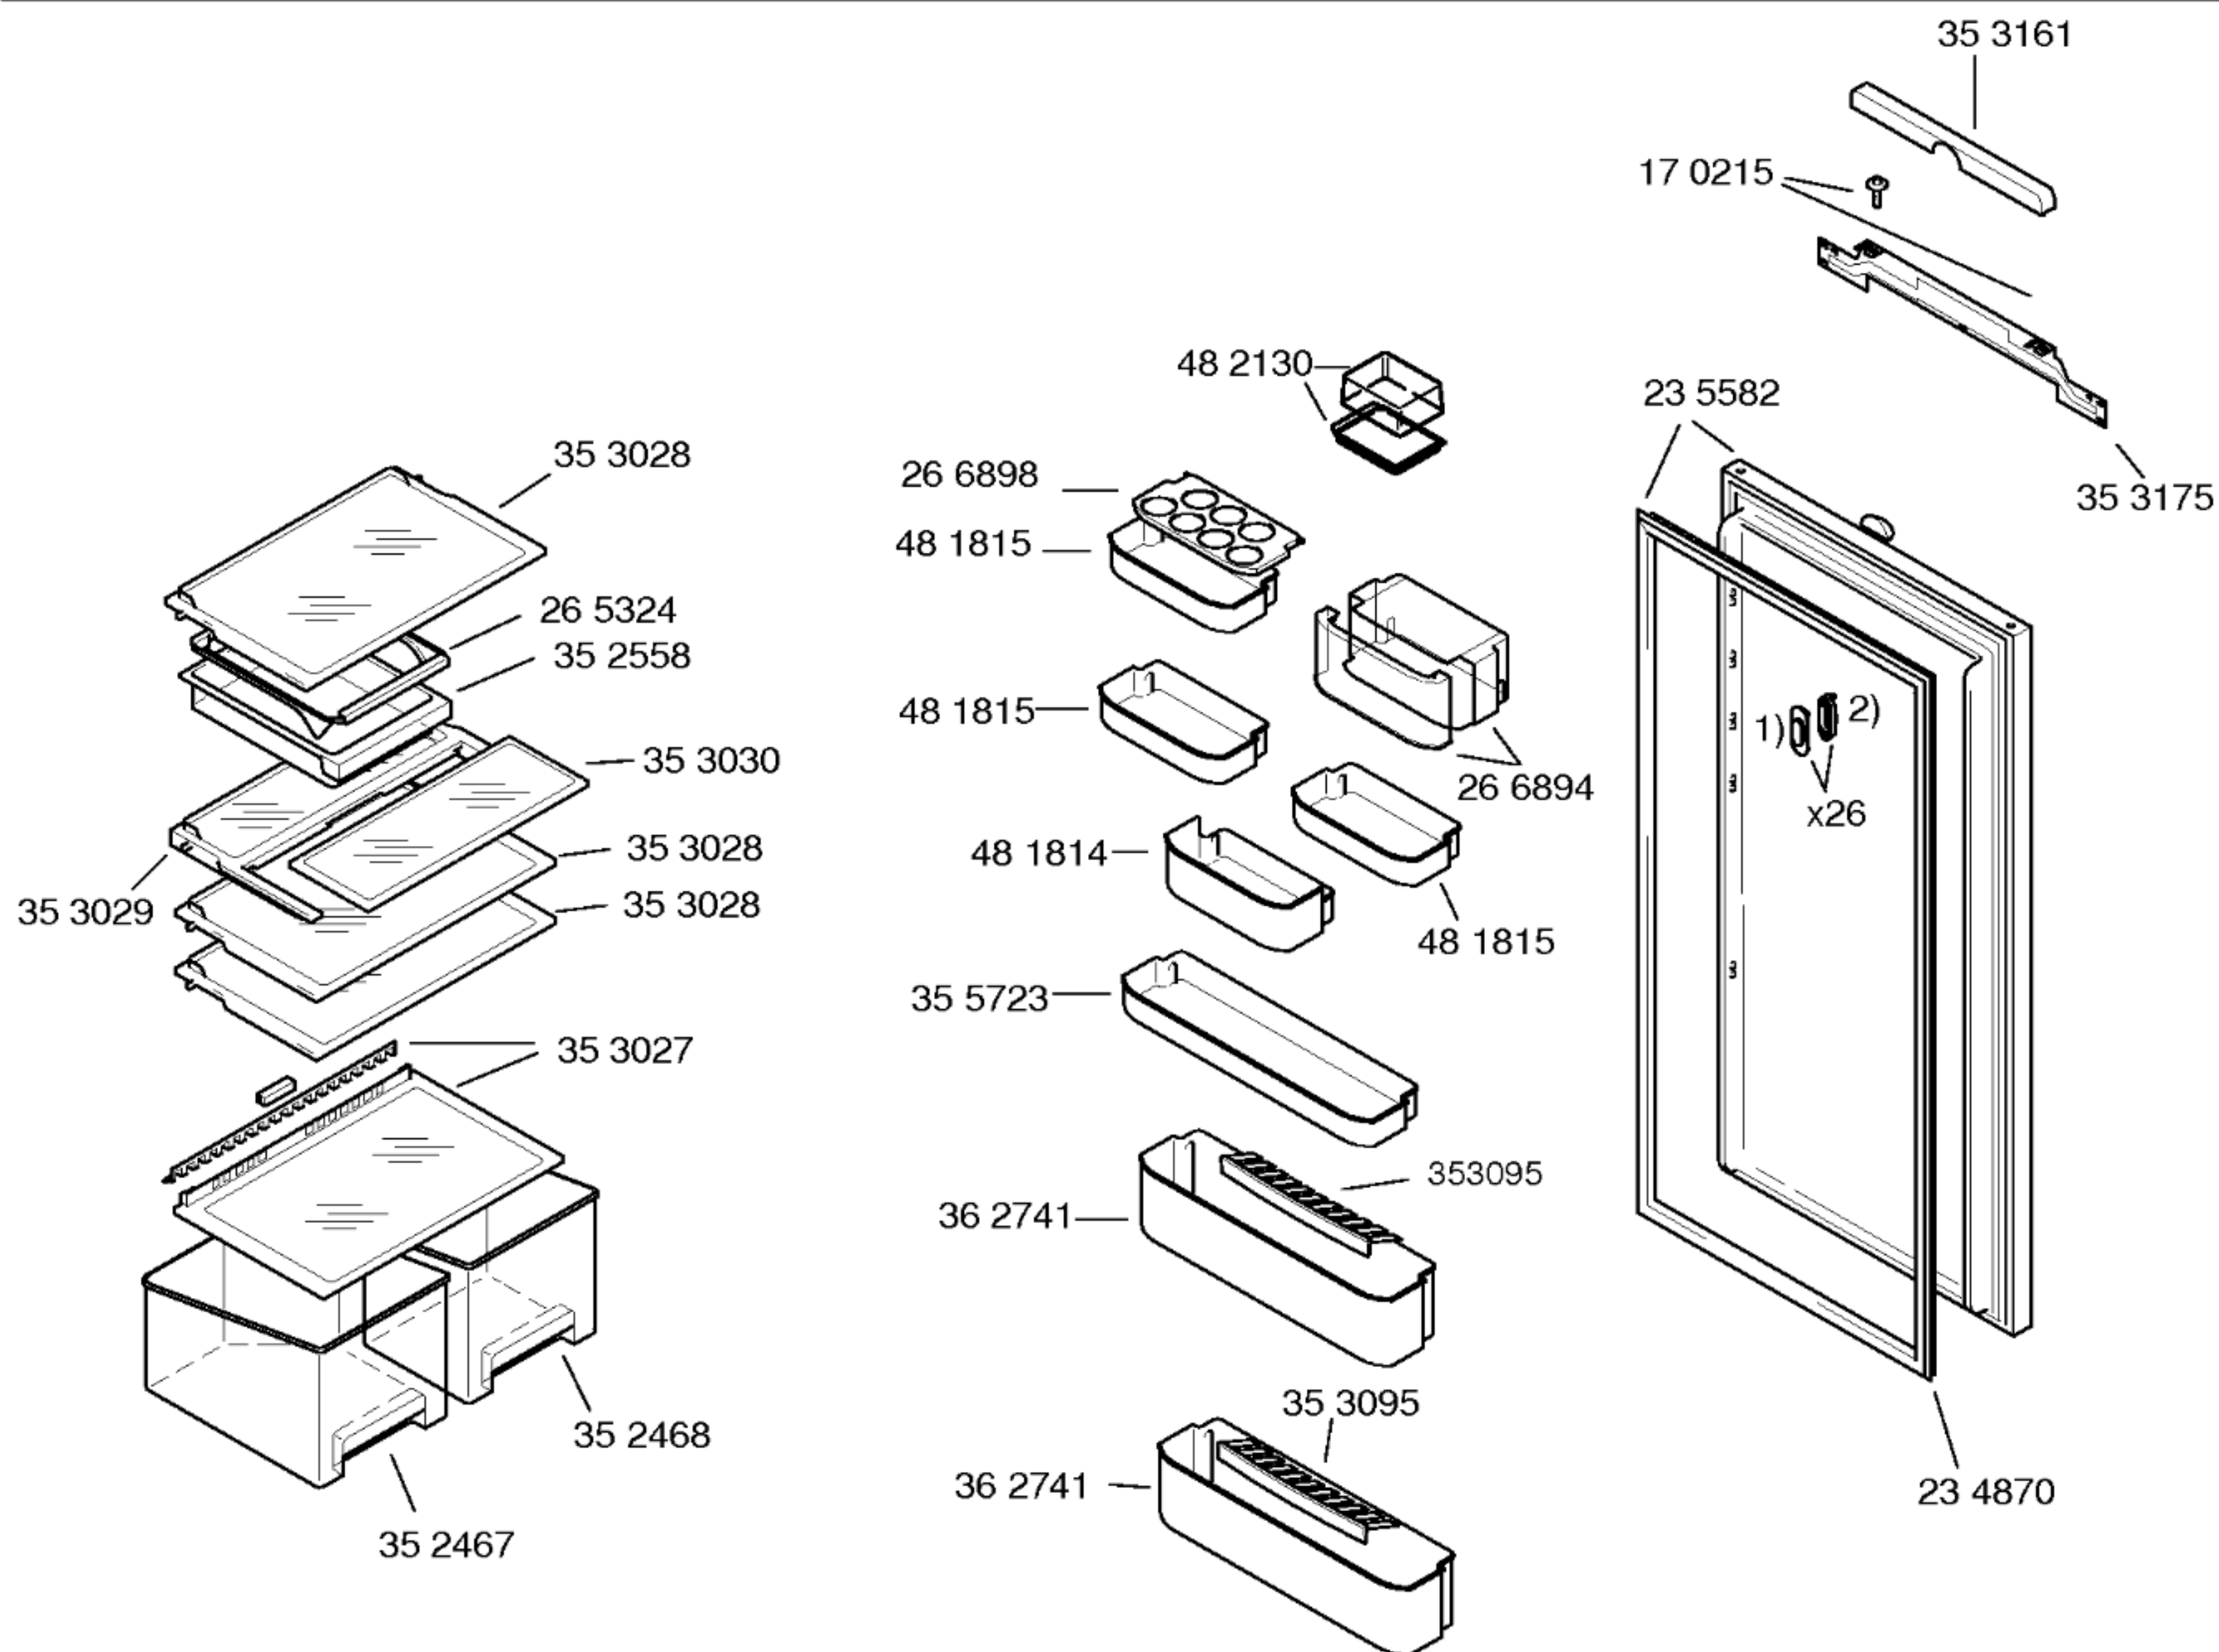

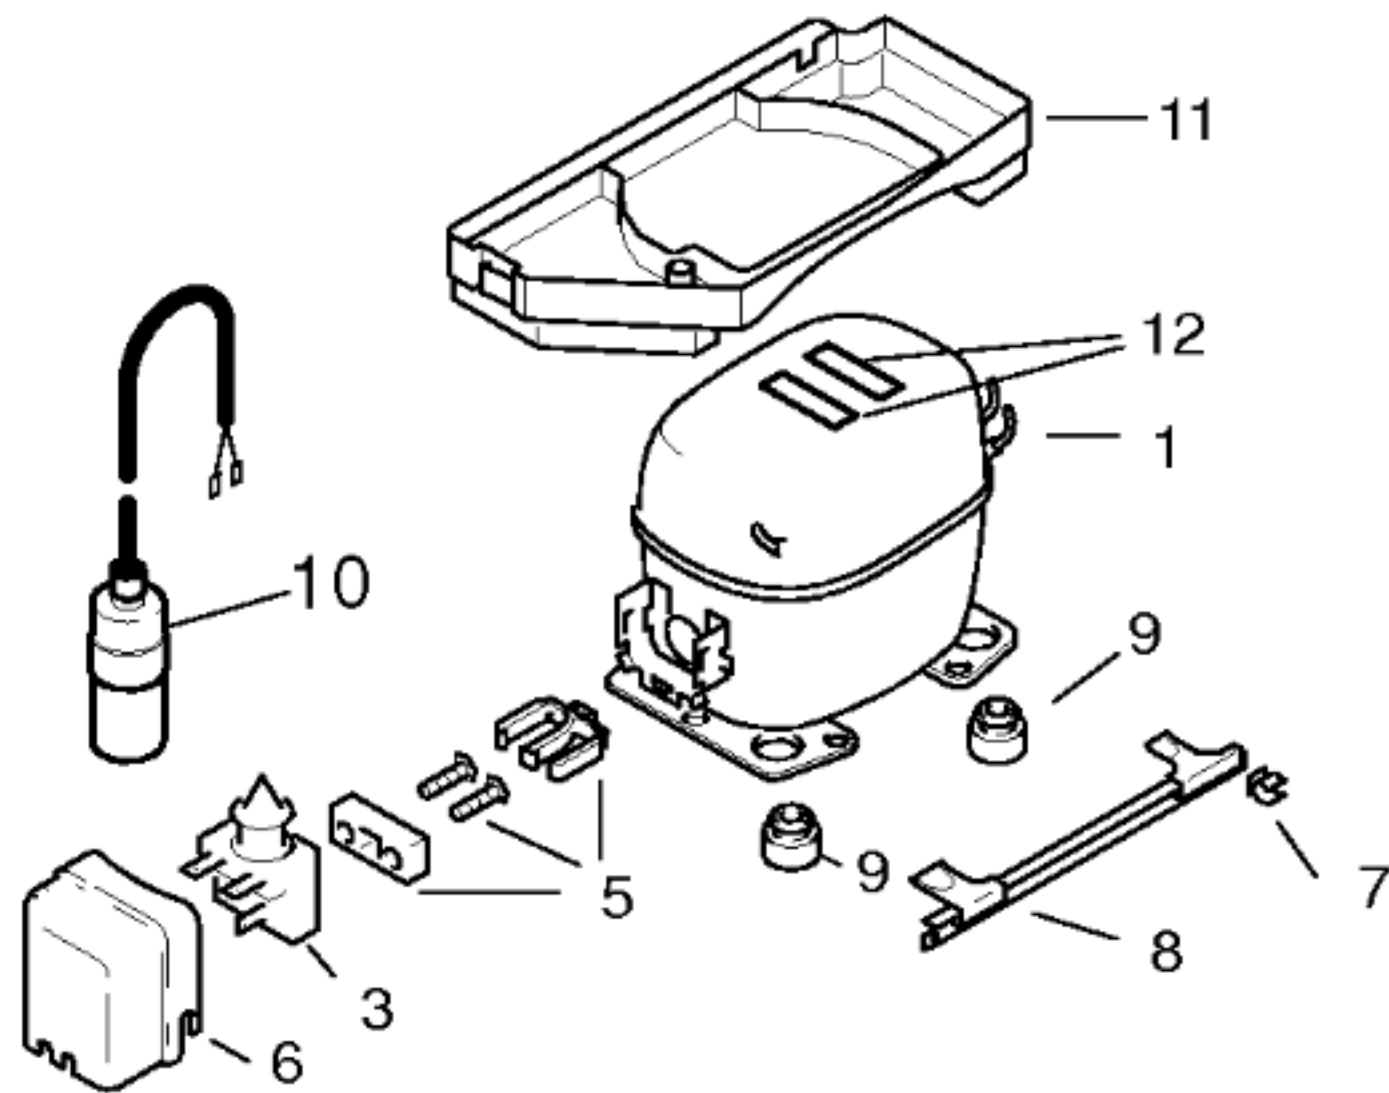

Pos.			
	Danfoss		
	TLY7K		
1	14 1816		
2			
3	15 1055		
4			
5	15 0760		
6	15 1072		
7	16 9319		
8	26 4879		
9	05 0166		
10	16 5852		
11	35 4549		
12	05 6008		

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES				
Verdichter/Compressor/Compresseur		Danfoss		
Typ/Type		TLY 7 K		
Förderleistung/Delivery/Débit		l/h	1168	
Anlaufstrom/Starting current/Cour de démarrage		A	5,7	
Widerstand/Resistance/Résistance Ha/main/prin		W	27,1	
Hi/aux		W	27,2	
Temp.-Regler/Thermostat		Ranco		
Typ/Type		K59		
Regelstellung/Position		kalt	warm	
Schaltwerte/Switching values		"warm"	+5,2	
Valeurs de commutation		"kalt"	-32,0	
		"alarm"	-15,0	
Füllmenge/Fill.quantity/Charge		R600a	*	
Anschlußwert/Conn.load/Puiss. connectée		W	67	
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance		W		
Leistung/Power/Puissance		W		
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance		W		
Temp.-Regler/Thermostat				
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance		W		
Spannung/Voltage/Tension		V		

* siehe Typenschild