



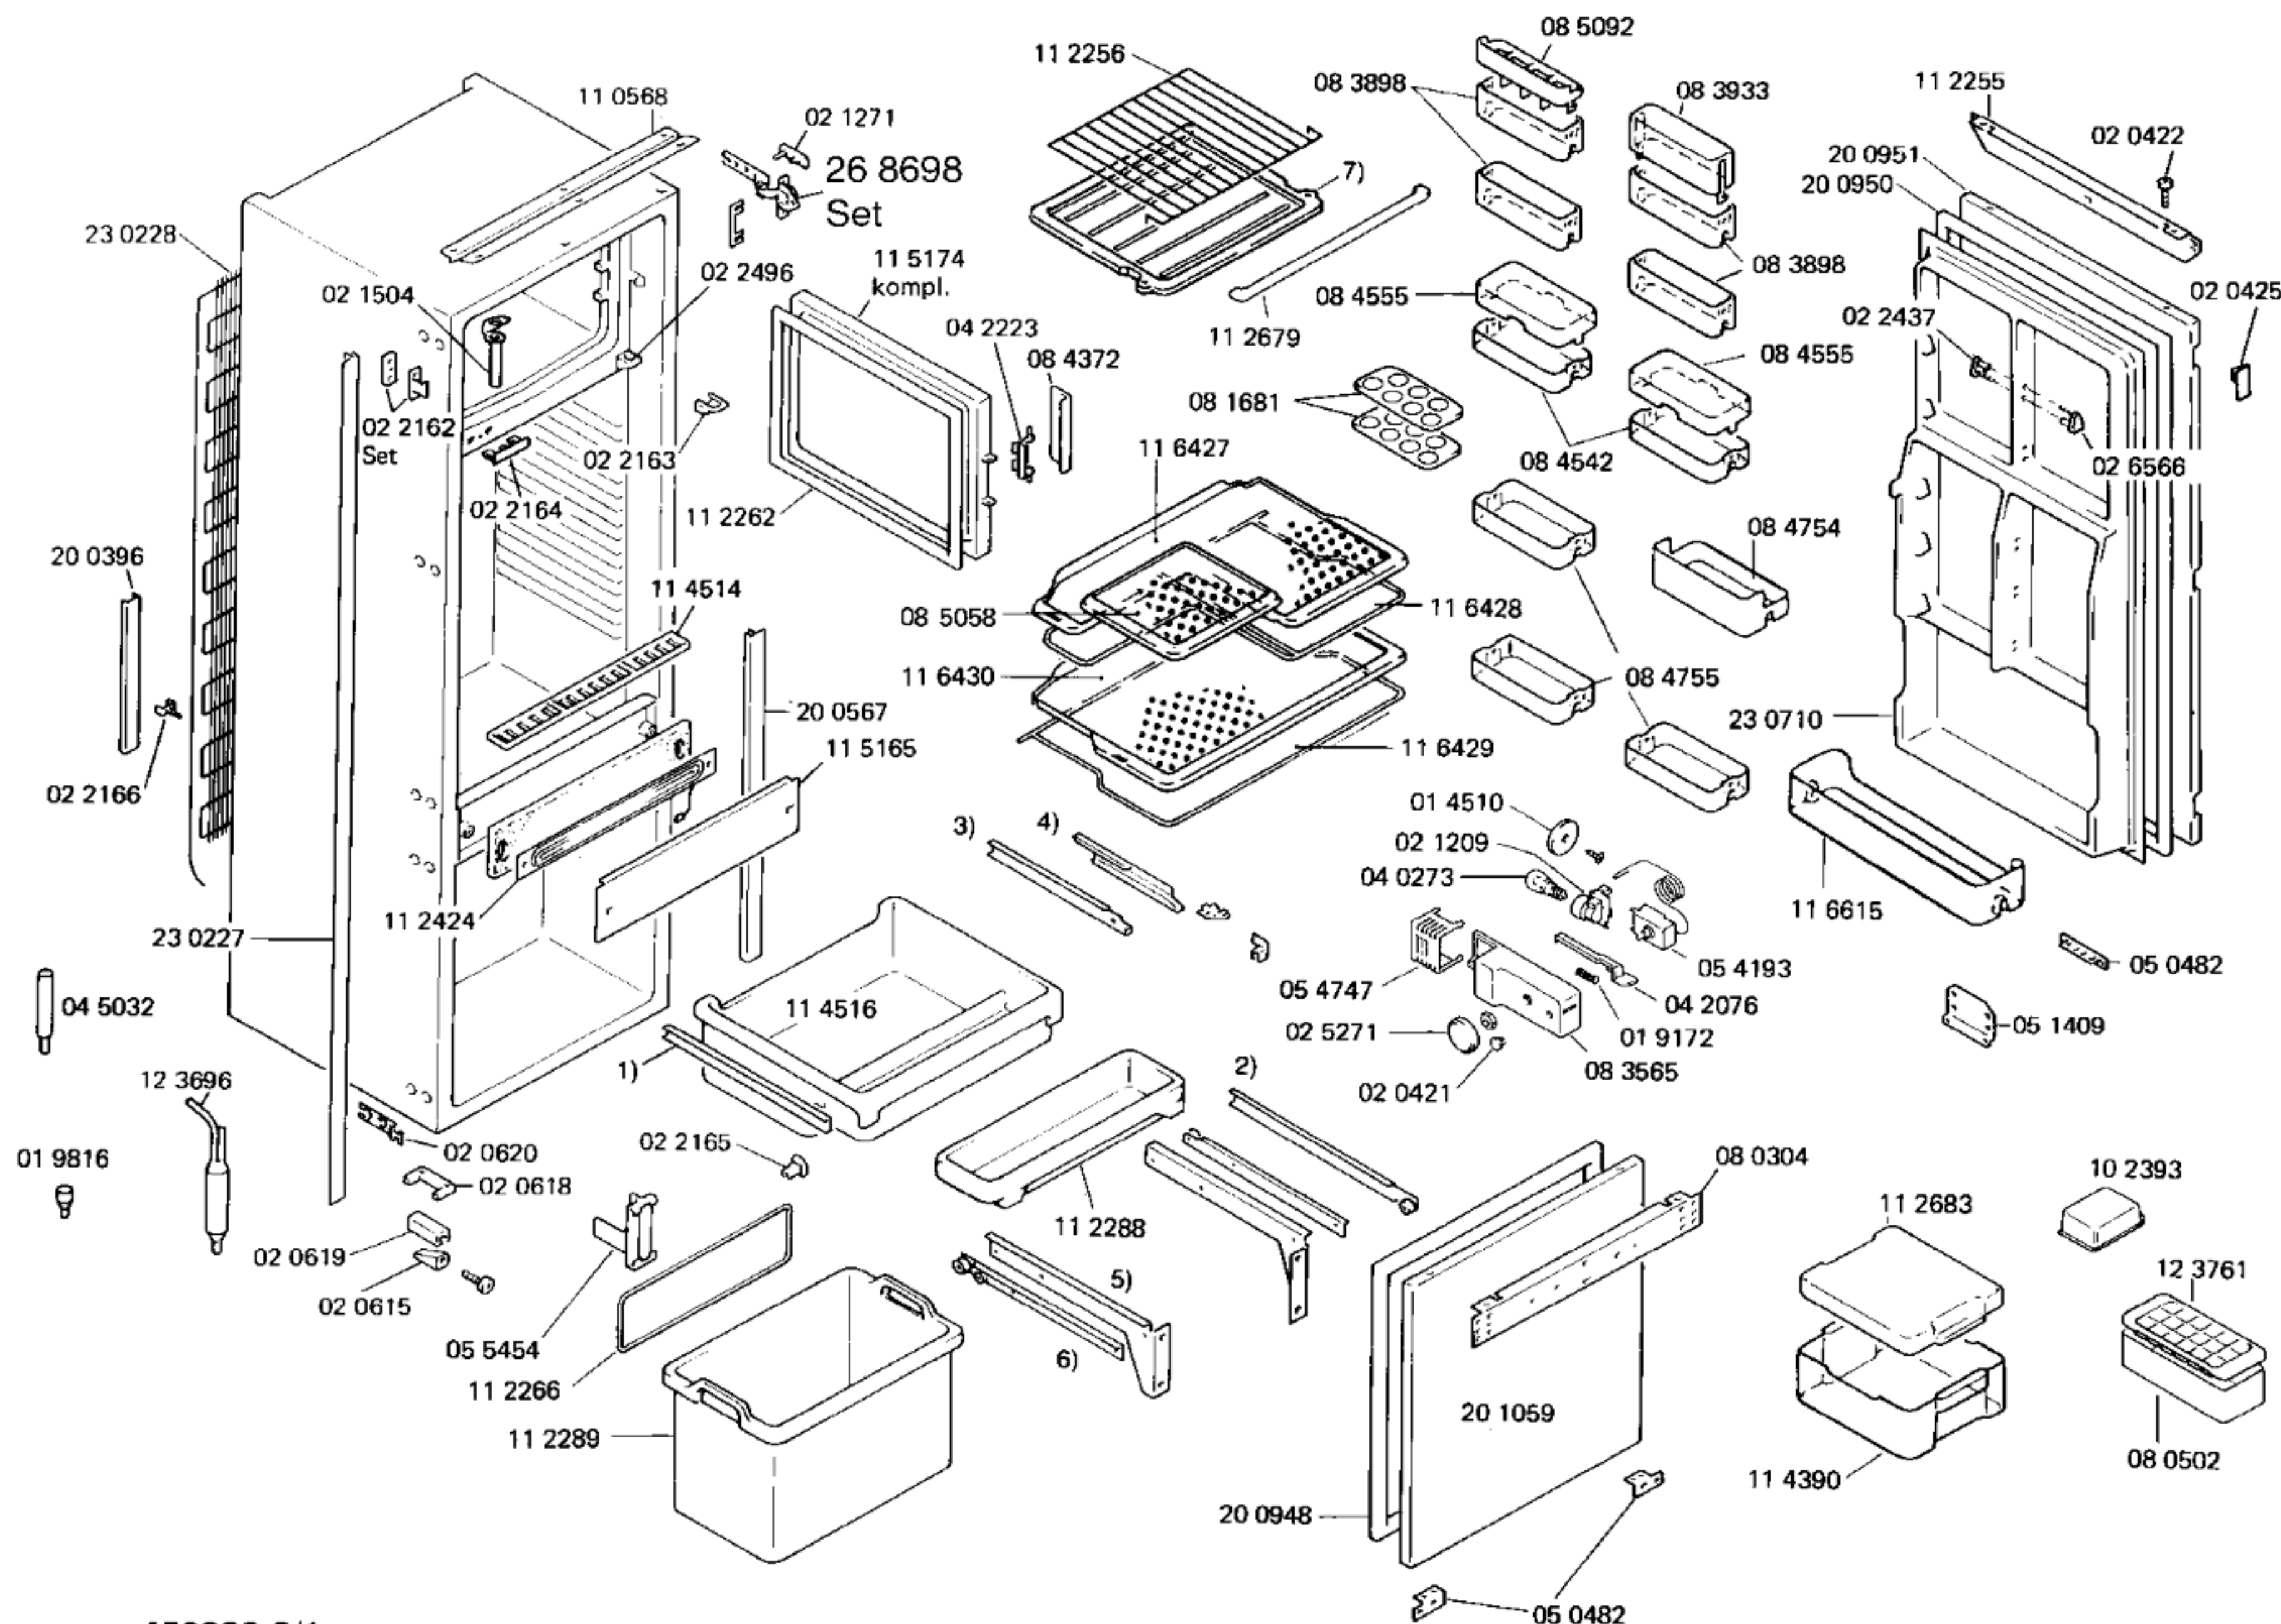

51 2746  
 EU1, F1, GB1  
 Gebrauchsanweisung  
 (D, F, GB, I, NL)  
 51 2707  
 EU1, F1, GB1  
 Montageanleitung  
 (D, F, GB, I, NL)

- 1) 11 2267  
rechts  
11 2268  
links
- 2) 11 2272  
rechts  
11 2273  
links
- 3) 11 2270  
rechts  
11 2271  
links
- 4) 07 5574  
rechts  
07 5575  
links
- 5) 11 2276  
rechts  
11 2277  
links
- 6) 11 2274  
rechts  
11 2275  
links
- 7) 11 2598  
F1  
  
08 4137  
Befestigungssatz  
08 4136  
Schraubensatz

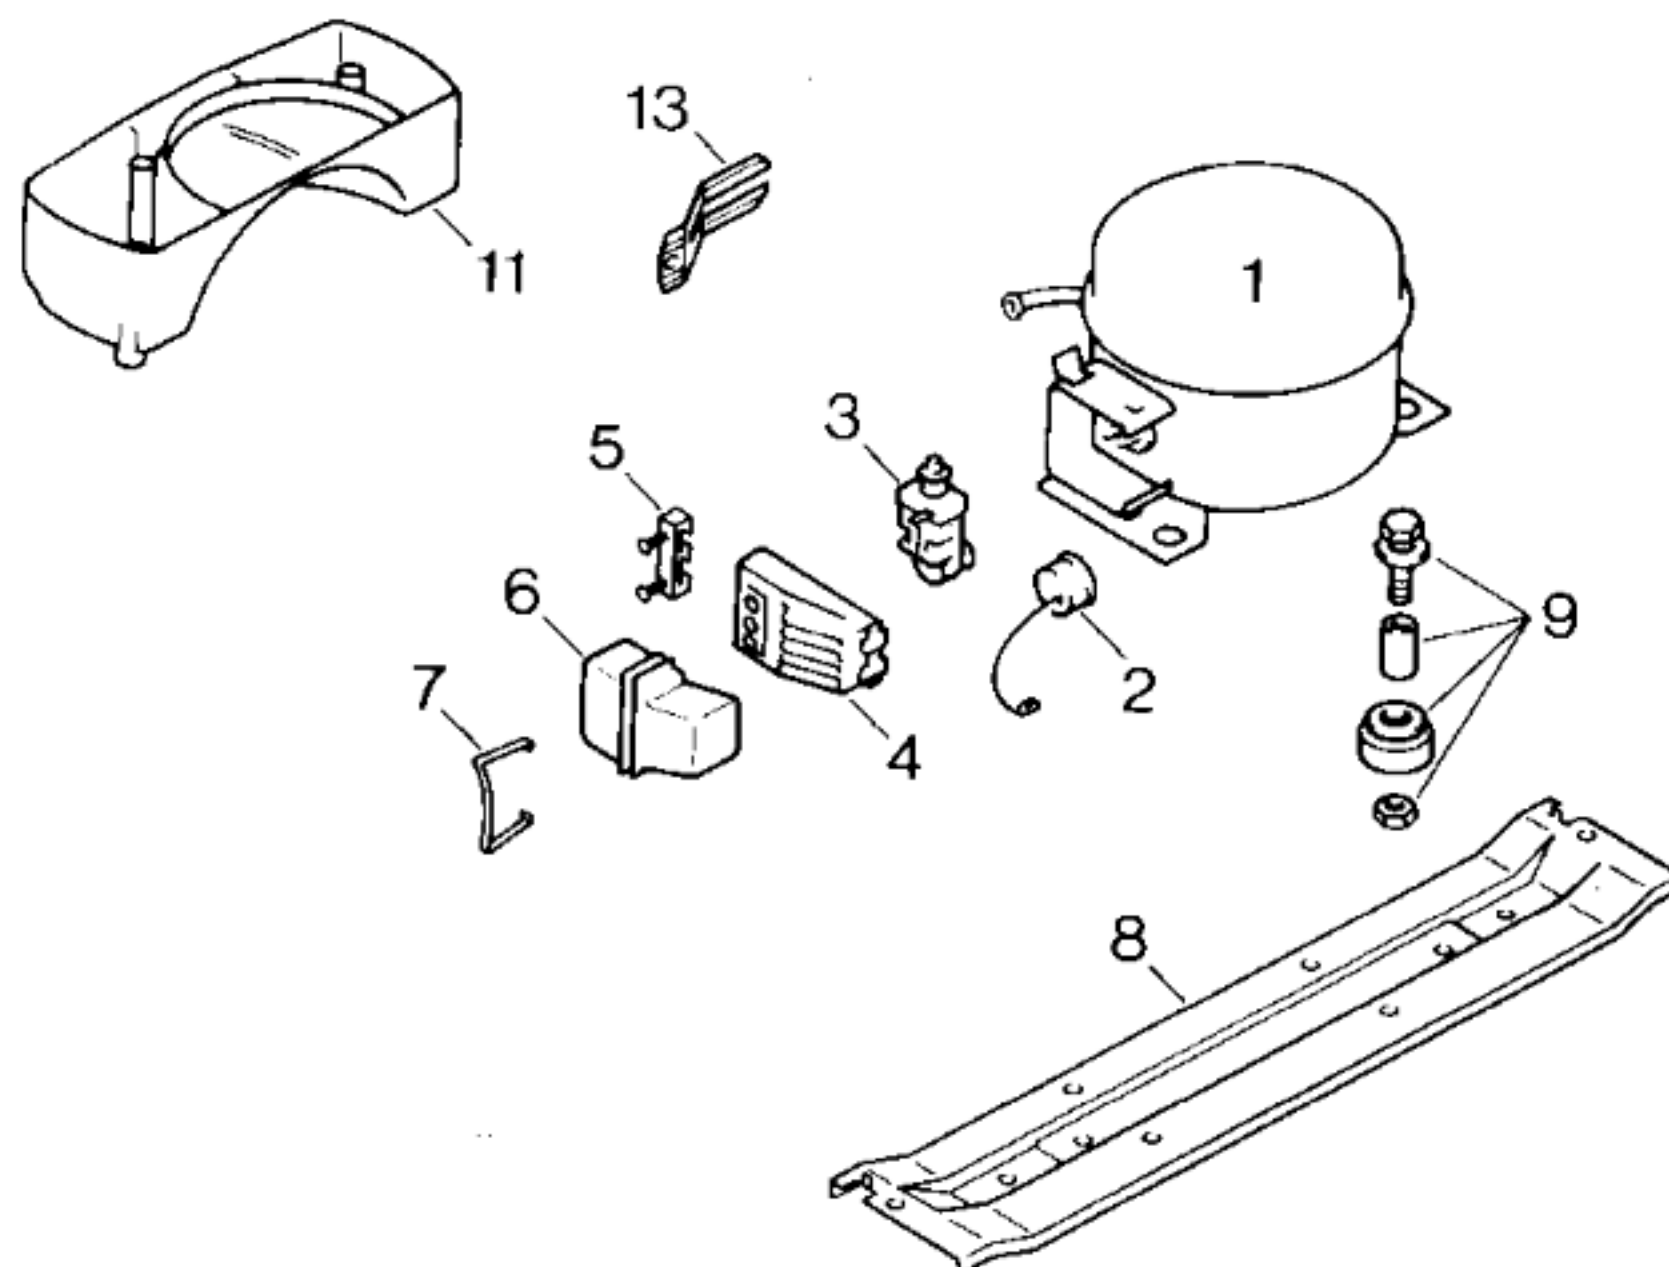

| Pos. | EU1,GB1,F1 |  |  |  |
|------|------------|--|--|--|
|      | Aspera     |  |  |  |
| 1    | 14 0405    |  |  |  |
| 2    | 02 6559    |  |  |  |
| 3    | 02 2342    |  |  |  |
| 4    | 05 1748    |  |  |  |
| 5    | —          |  |  |  |
| 6    | 05 1746    |  |  |  |
| 7    | 02 2339    |  |  |  |
| 8    | 11 1919    |  |  |  |
| 9    | 05 0166    |  |  |  |
| 10   | —          |  |  |  |
| 11   | 08 5091    |  |  |  |
| 12   | —          |  |  |  |
| 13   | 04 2688    |  |  |  |
| 14   | —          |  |  |  |

# TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES

|                                                         |                          |                 |         |     |  |
|---------------------------------------------------------|--------------------------|-----------------|---------|-----|--|
| Verdichter/Compressor/Compresseur                       |                          | Aspera          |         |     |  |
| Typ/Type                                                |                          | BY 1116 A       |         |     |  |
| Förderleistung/Delivery/Débit                           |                          | l/h             | 1450    |     |  |
| Anlaufstrom/Starting current/Cour. de démarrage         |                          | A               | 9,9     |     |  |
| Widerstand/Resistance/Résistance                        | Ha/main/prin.            | Ω               | 11,7    |     |  |
|                                                         | Hi/aux                   | Ω               | 37,7    |     |  |
| Temp.-Regler/Thermostat                                 |                          | M + J           |         |     |  |
| Typ/Type                                                |                          | TF 57           |         |     |  |
| Reglerstellung/Position                                 |                          | kalt            | warm    |     |  |
| Schaltwerte/Switching values/<br>Valeurs de commutation | „ein“                    | °C              | + 4     |     |  |
|                                                         | „aus“                    |                 | - 28    |     |  |
|                                                         |                          | („abtauen“ od.) | „alarm“ |     |  |
| Füllmenge/Fill.quantity/Charge                          |                          | R12             | g       | 180 |  |
| Anschlußwert/Conn.load/Puiss. connectée                 |                          | W               | 150     |     |  |
| Heizung/Heater/Chauffage                                |                          |                 |         |     |  |
| Widerstand/Resistance/Résistance                        |                          | Ω               | 8800    |     |  |
|                                                         | Leistung/Power/Puissance | W               | 5,5     |     |  |
| Ventilator/Blower/Ventilateur                           |                          |                 |         |     |  |
| Widerstand/Resistance/Résistance                        |                          | Ω               |         |     |  |
| Magnetventil/Magnetic valve/Electrovanne                |                          |                 |         |     |  |
| Widerstand/Resistance/Résistance                        |                          | Ω               |         |     |  |
|                                                         | Spannung/Voltage/Tension | V               |         |     |  |