





07 4445

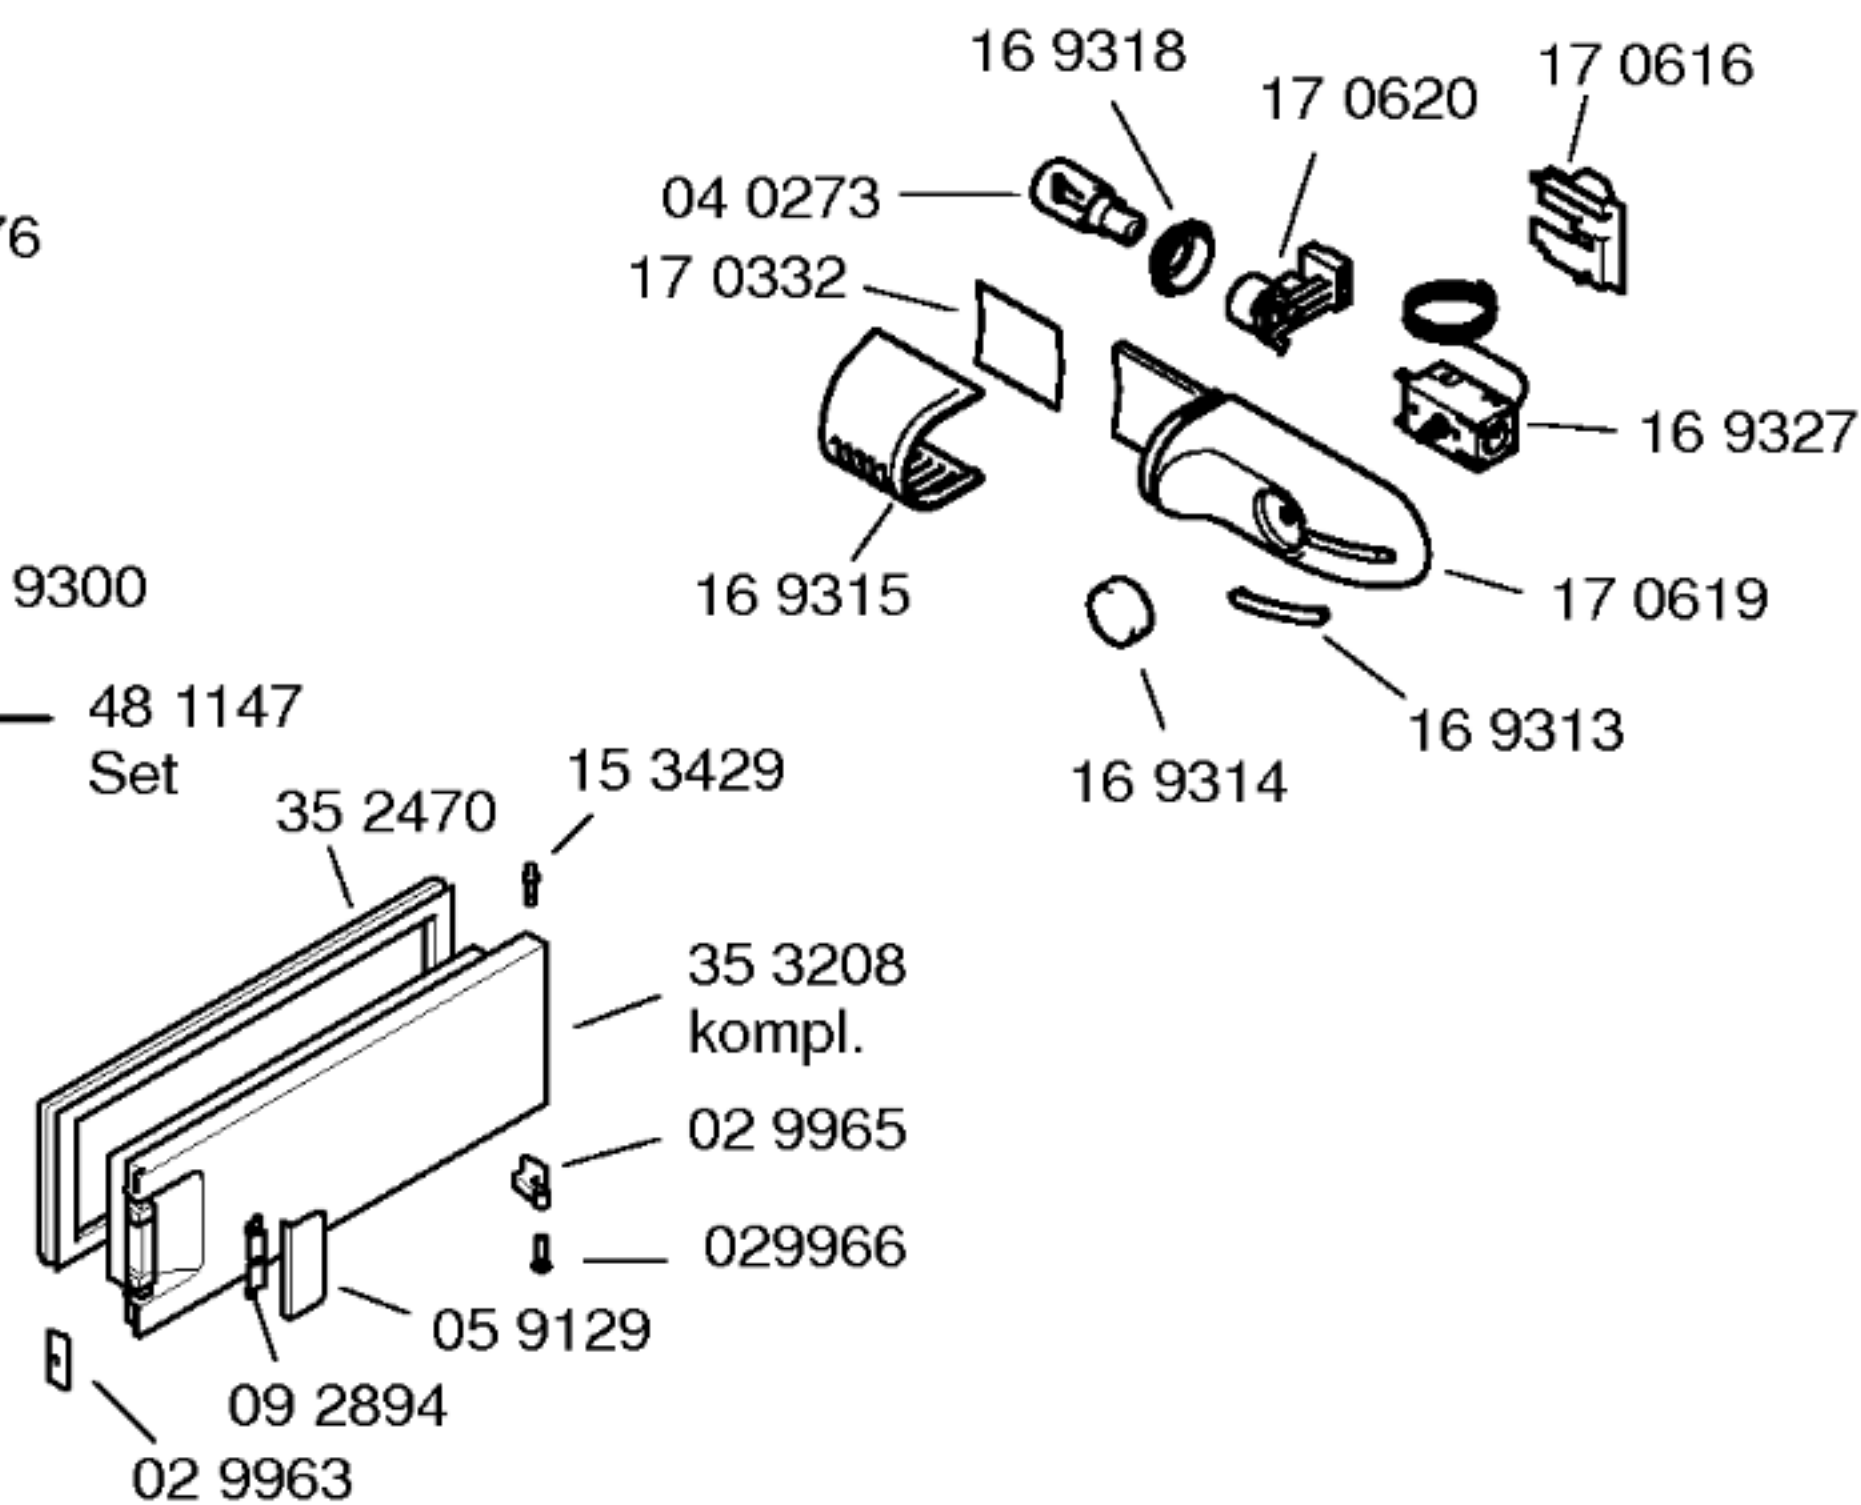

09 3110

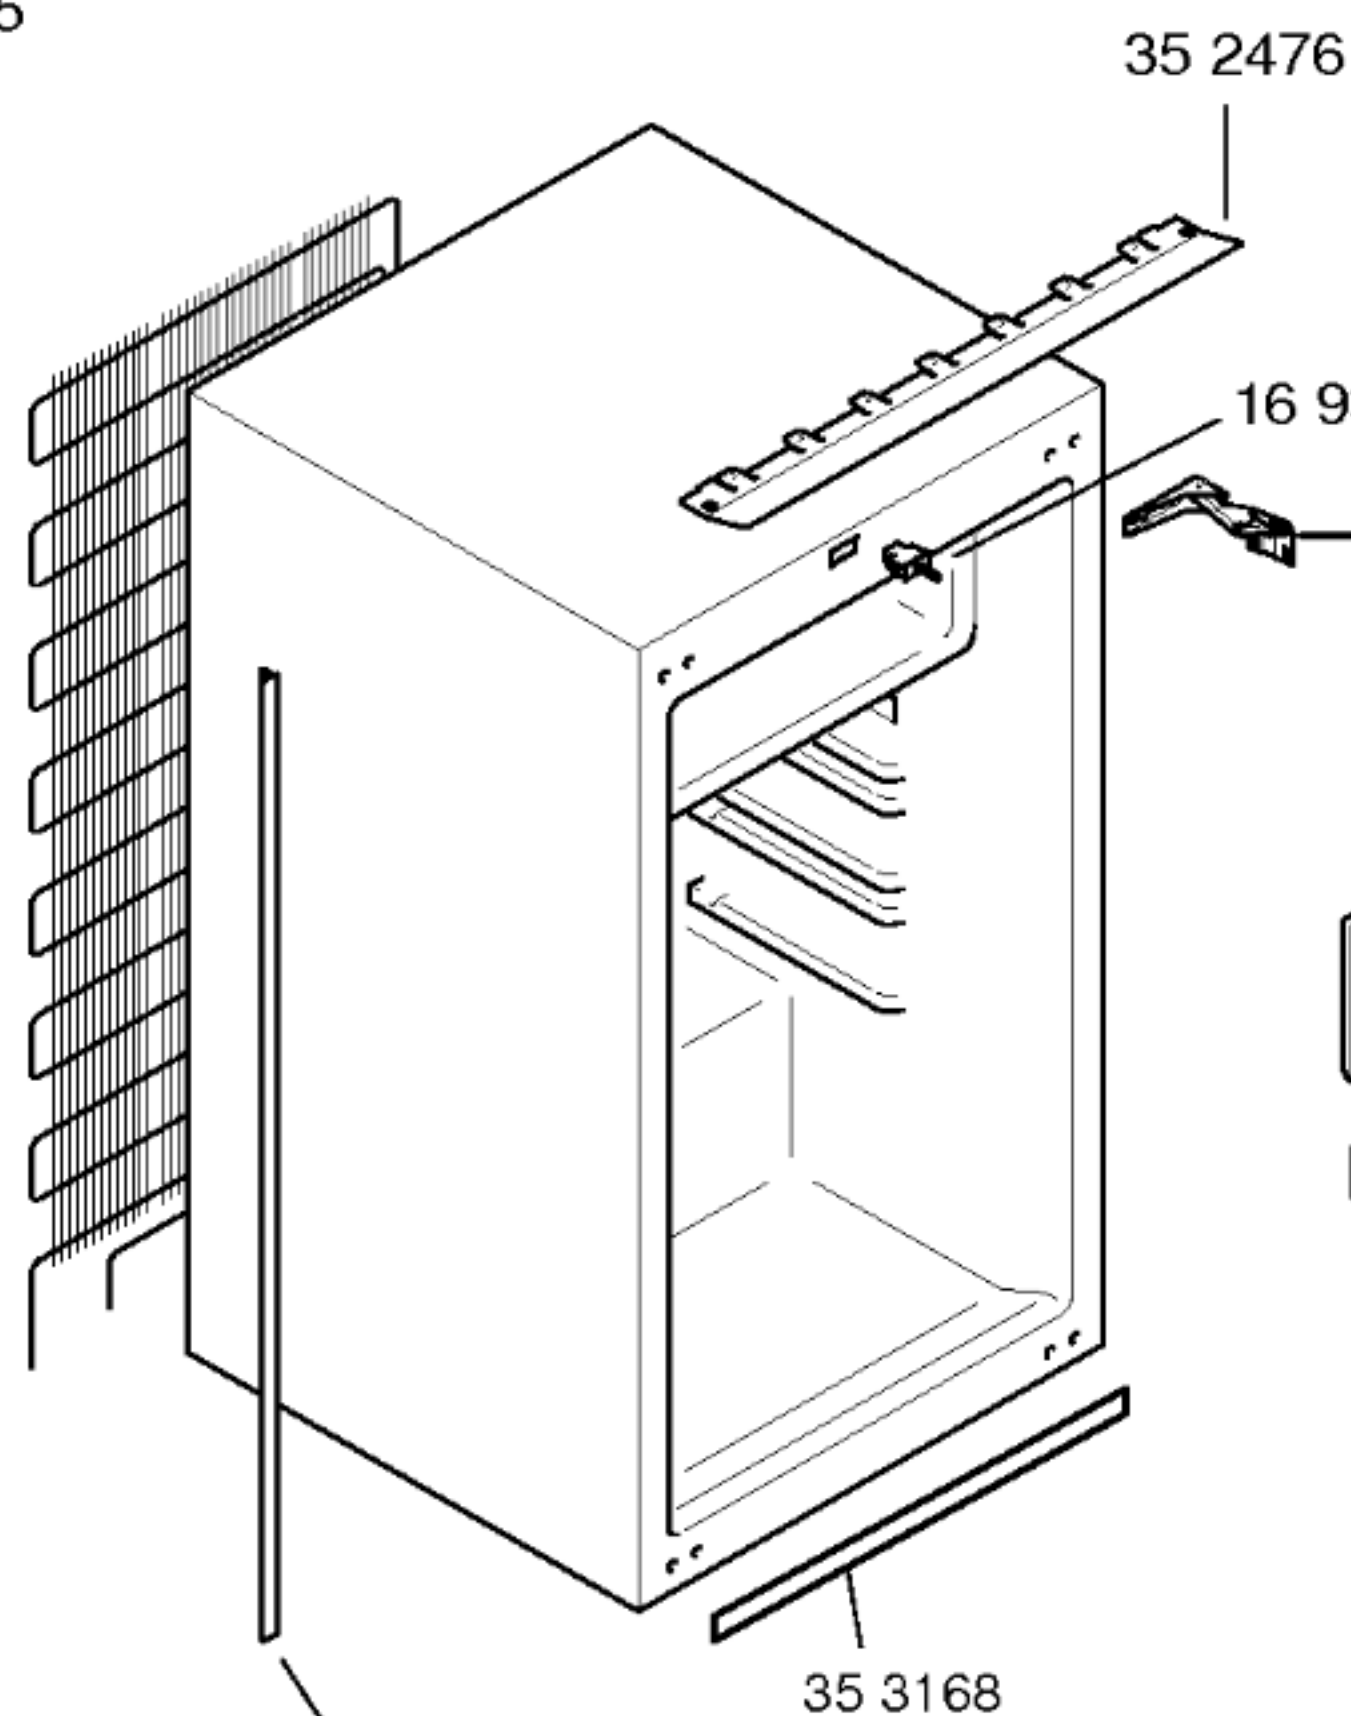


06 5644


Gebrauchsanweisung
52 2511
(D,GB,F,I,NL)
52 3400
(I,E,P,GR,TR)

Montageanleitung
52 2494
(D,GB,F,I,NL,DK,N,SF,
SE,TR)

Beistellsatz
26 5163

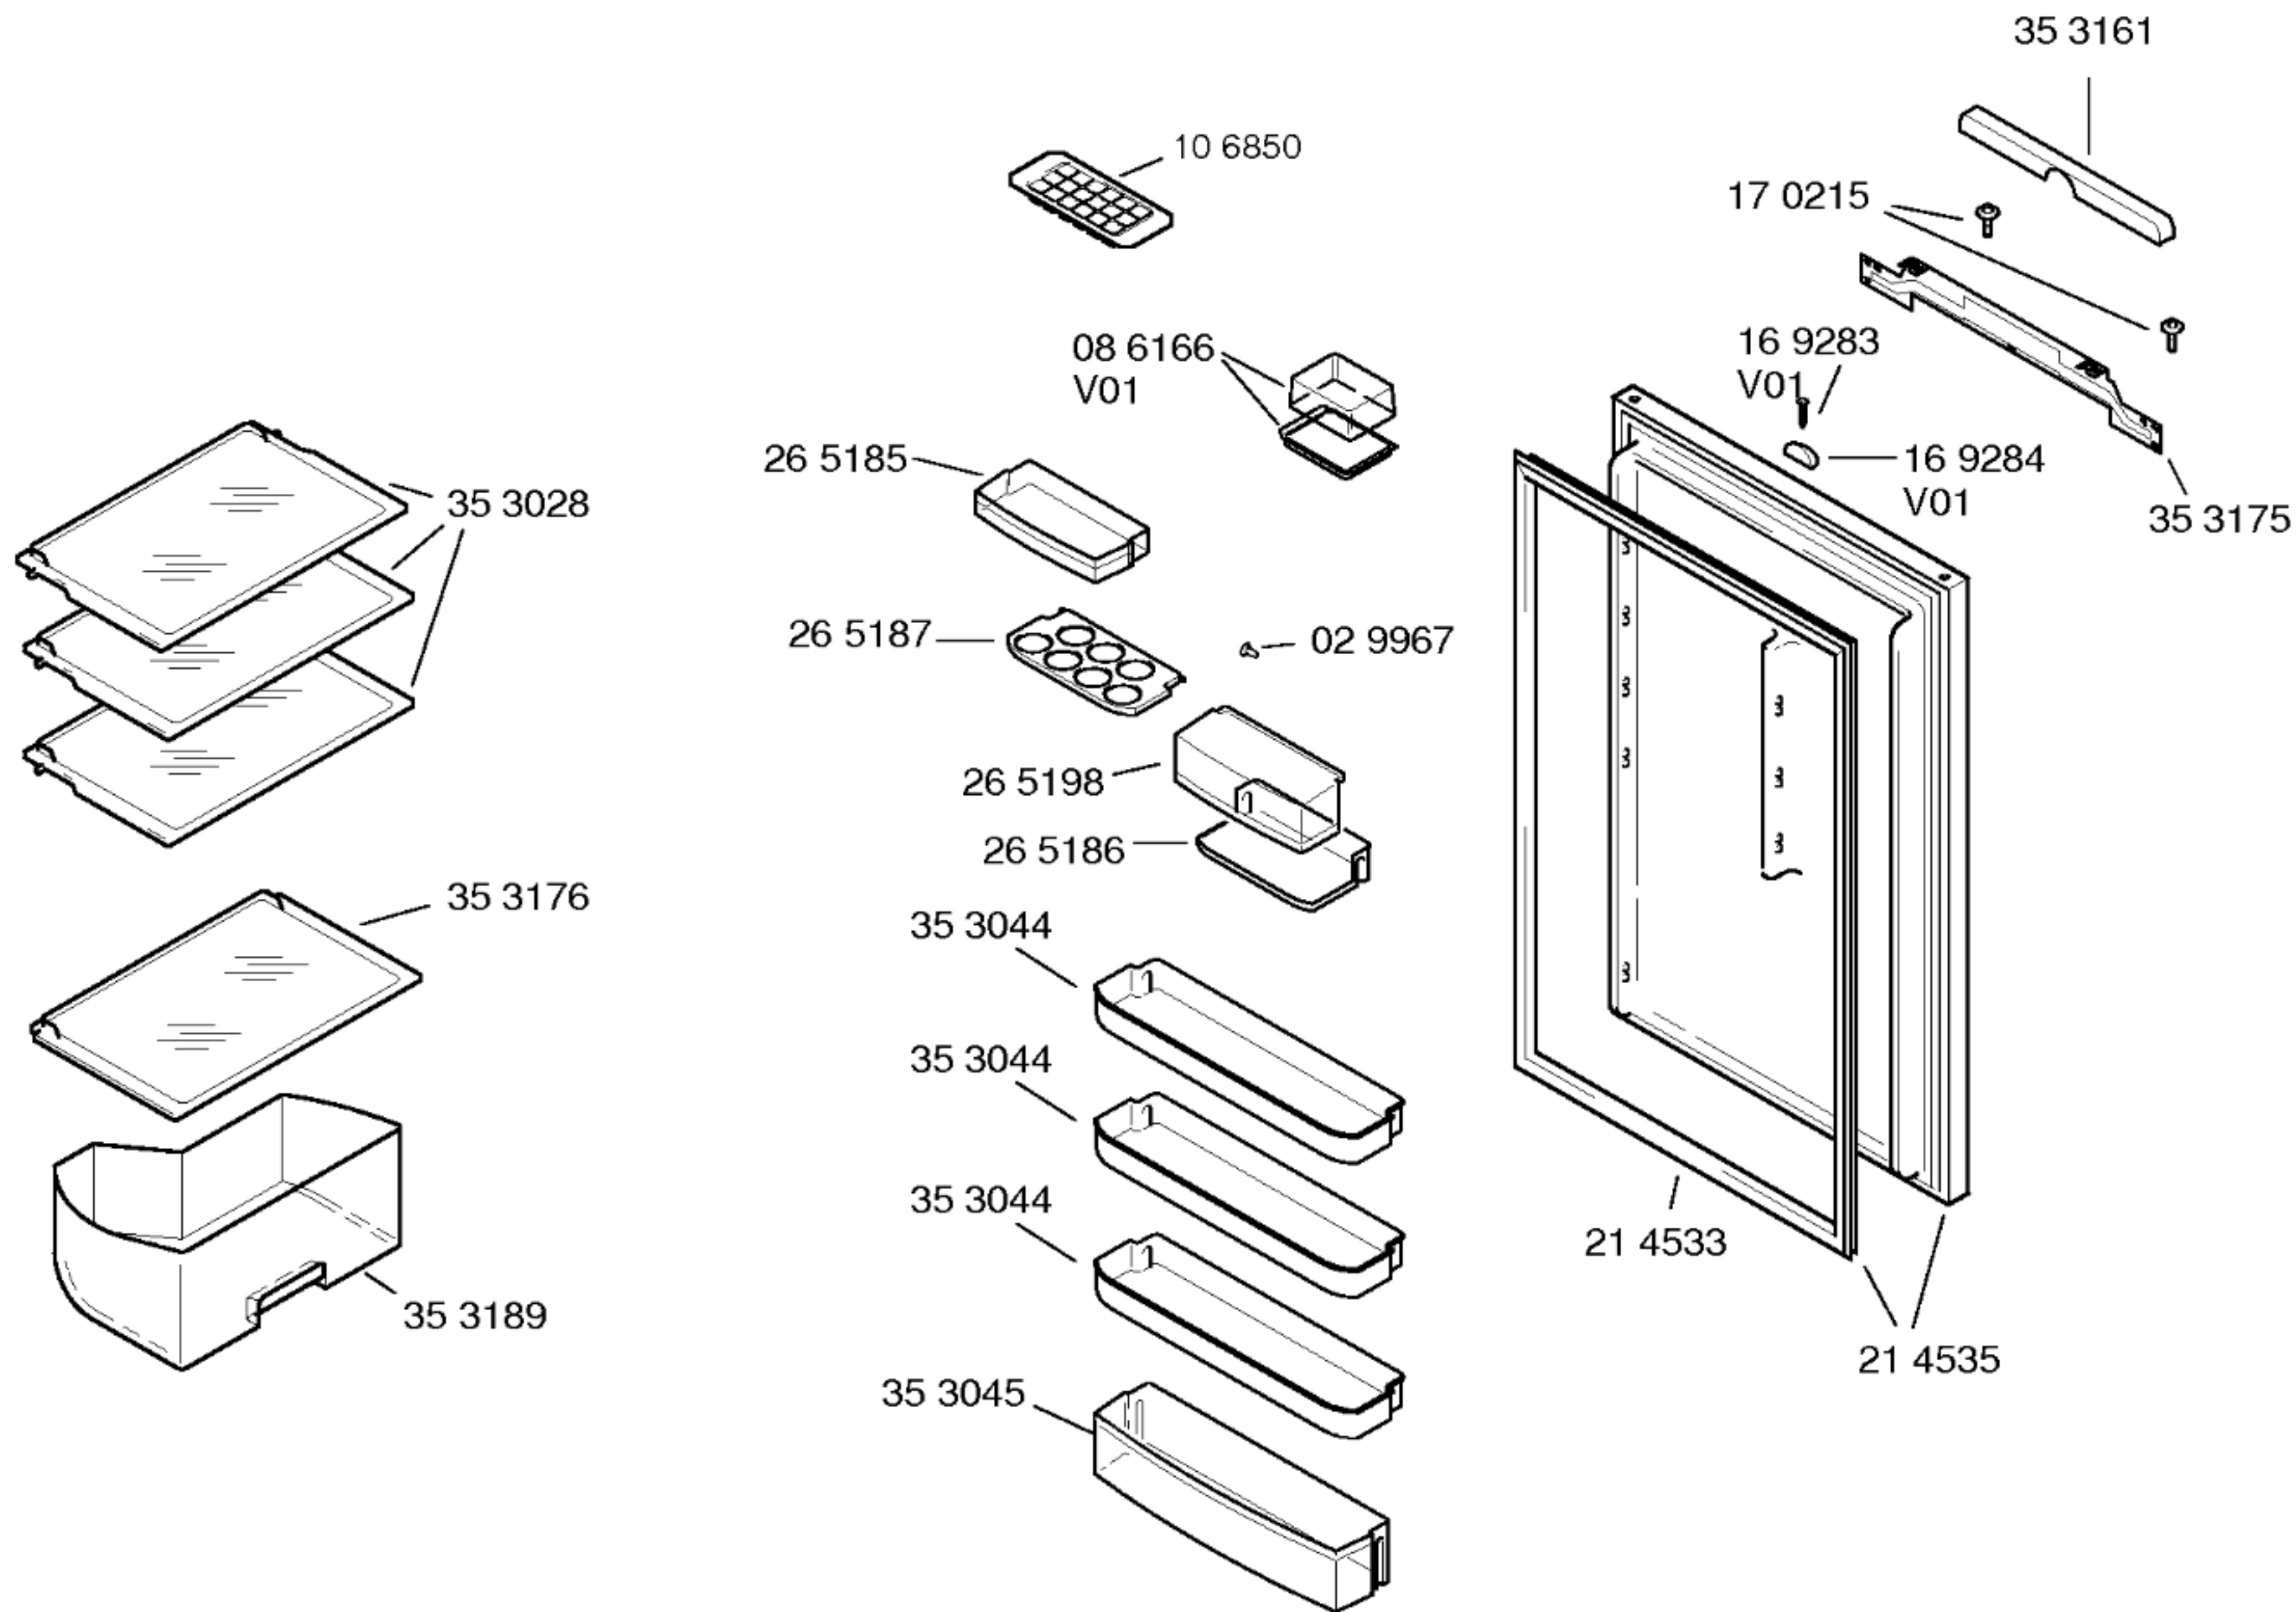

Mat. – Nr. – Konstante
3740

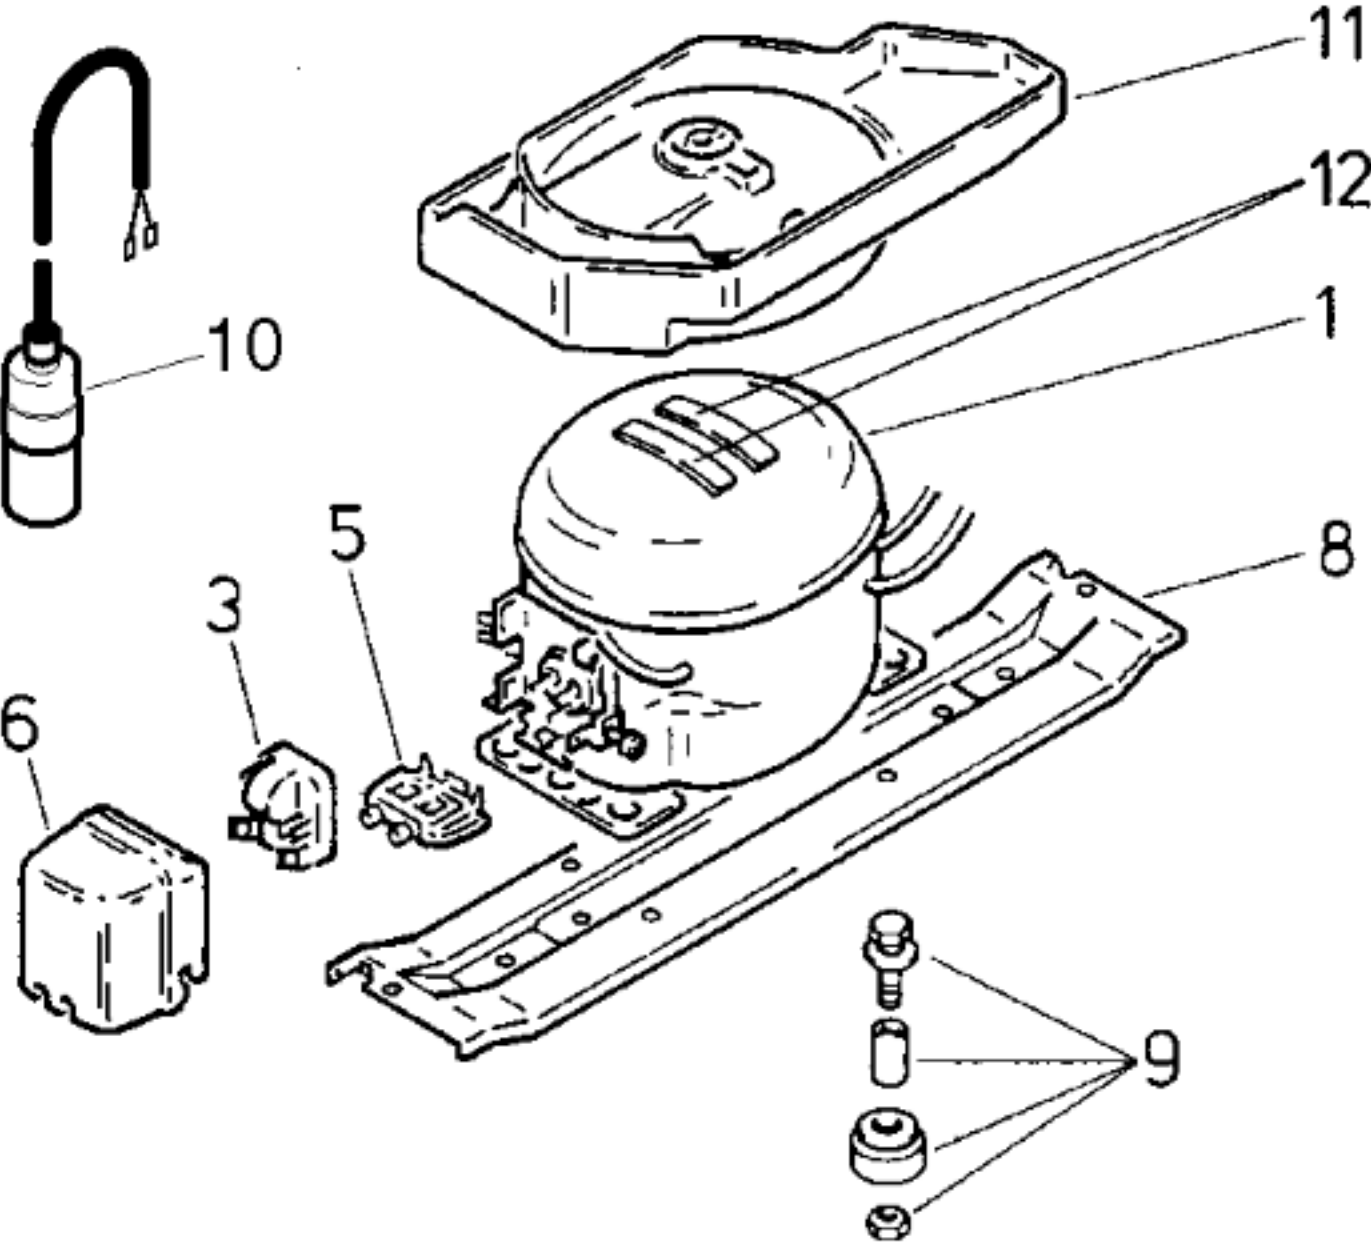

Pos.	V01	V02	
	Danfoss TLY 7 K	Aspera BPK 1084Y	
1	14 1816	14 2101	
2			
3	15 1055	18 0819	
4			
5	15 0760	17 0882	
6	15 1072	17 0881	
7	16 9319	16 9319	
8	26 4879	26 4879	
9	05 0166	050166	
10			
11	26 4878	35 4549	
12	05 6008	05 6008	

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES				
Verdichter/Compressor/Compresseur		Danfoss		Aspera
Typ/Type		TLY 7 K		BPK 1084Y
Förderleistung/Delivery/Débit		i/h	1168	1201
Anlaufstrom/Starting current/Cour de démarrage		A	5,7	3,6
Widerstand/Resistance/Résistance		Ha/main/prin. Ω	27,1	29,6
		Hi/aux Ω	27,2	39,1
Temp.-Regler/Thermostat		Ranco		
Typ/Type				
Reglerstellung/Position		kalt warm		
Schaltwerte/Switching values/		+5,2 +5,2		
Valeurs de commutation		-32,0 -15,0		
		„ein“ „alarm“		
Füllmenge/Fill.quantity/Charge		R600a	g	*
Anschlußwert/Conn.load/Puiss. connectée		W	67	79
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance		Ω		
Leistung/Power/Puissance		W		
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance		Ω		
Schaltuhr/Timer/Minuterie de contact				
Widerstand/Resistance/Résistance		Ω		
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance		Ω		
Spannung/Voltage/Tension		V		

* siehe Typenschild