

Electrolux

ELECTROLUX HOME PRODUCTS PTY LTD

ABN 51 004 762 341

Technical Publication N° DW397

Issue: 6

Date: 10/19

2014 WESTINGHOUSE HOUSEHOLD DISHWASHER

MODEL:

WSF6608W

PNC 942001221 00


VARIANT CHANGE SUMMARY	
00	INTRODUCTION

Release Dates	
WSF6608W / 942001221 00	02/02/2014


CONTENTS	PAGE N°
VARIANT CHANGE SUMMARY and RELEASE DATES	2
CONTENTS	3
GENERAL ASSEMBLY	4 & 5
LOWER HYDRAULIC ASSEMBLY	6 & 7
MID HYDRAULIC ASSEMBLY	8 & 9
DOOR ASSEMBLY	10 & 11
PANEL CONTROL ASSEMBLY	12 & 13
ELECTRICAL COMPONENTS	14
BASKET UPPER ASSEMBLY	15
BASKET LOWER ASSEMBLY	16
FRAME TRAY CUTLERY UPPER ASSEMBLY	17
CIRCUIT DIAGRAM	18
LEGEND	19
DISHWASHER ACCESSORY COMPONENTS	20

NOTE: In Parts Listings


N.I. = Not Illustrated
 N.P.A. = No Part Available
 N.P.N. = Not Used on this Model

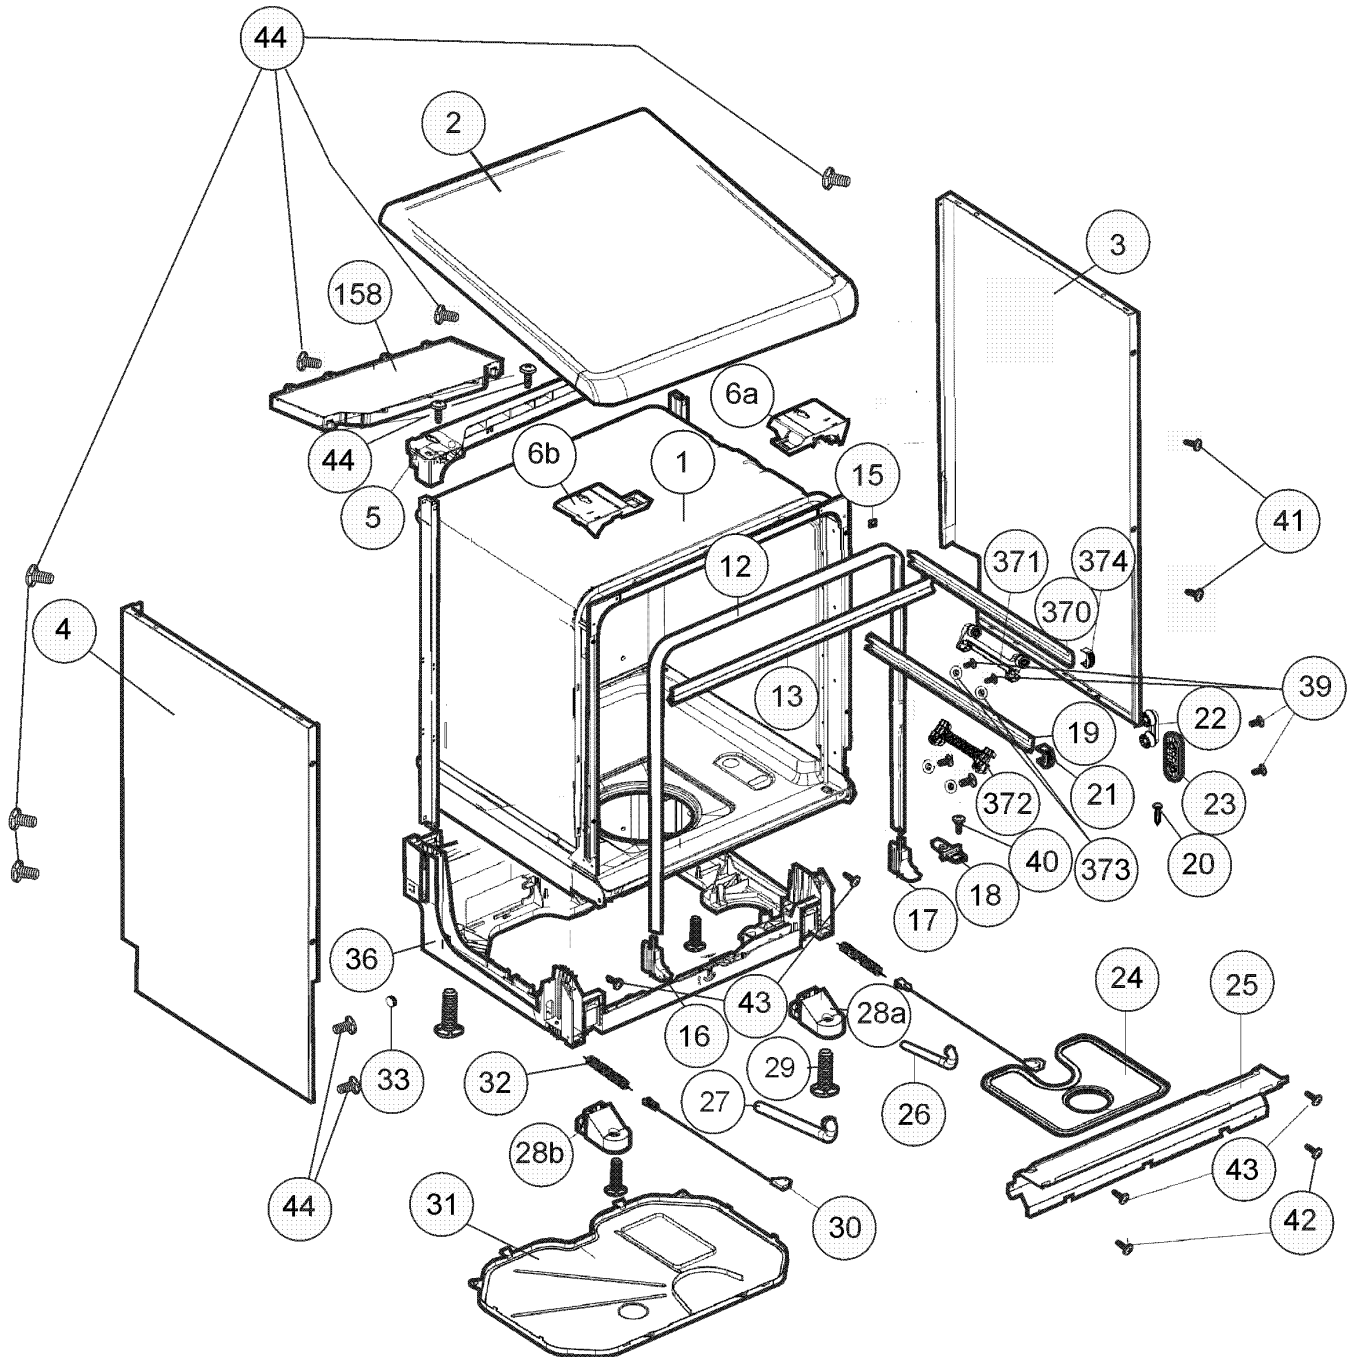

ITEM	PART N°	DESCRIPTION Ex. VIEW 8070	QTY
1	N.P.A.	TUB ASSEMBLY	-
2	42068575	WORKTOP - WHITE	1
3	20743026	PANEL SIDE - RIGHT HAND	1
4	20743027	PANEL SIDE - LEFT HAND	1
5	42005867	SUPPORT CROSS BAR REAR	1
6a	42094889	SUPRORT WORKTOP RIGHT	1
6b	42094890	SUPRORT WORKTOP LEFT	1
12	42064240	GASKET SEAL DOOR	1
13	42022756	GASKET SEAL TUB TOP	1
15	N.P.A.	CUP SCREW	-
16	N.P.A.	SUPPORT GASKET SEAL TUB LH (Part of Item 12)	-
17	N.P.A.	SUPPORT GASKET SEAL TUB RH (Part of Item 12)	-
18	37015415	LATCH DOOR	1
19	20797564	RAIL BASKET UPPER	2
20	42021919	STOP REAR RAIL UPPER BASKET	2
21	42021918	STOP FRONT RAIL UPPER BASKET	2
22	42062738	ROLLER RAIL UPPER BASKET	4
23	42008680	SUPPORT REAR ROLLER RAIL	4
24	37019670	FILTER PRIMARY ST/ST	1
25	20634456	PANEL FRONT COVER	1
26	42041125	HOSE OVERFLOW - RIGHT	1
27	42041126	HOSE OVERFLOW - LEFT	1
28A	42046170	SUPPORT LEG LEVELING - LEFT	1
28B	42045390	SUPPORT LEG LEVELING- RIGHT	1
29	42052932	LEG LEVELING	4
30	47001133	CORD HINGE	2
31	42070786	TRAY SPILLAGE	1
32	37019790	SPRING HINGE (PURPLE)	2
33	42107473	PULLEY HINGE	2
36	N.P.A.	BASEMENT	-
39	37007076	SCREW PT5x20 TORX	8
40	37006233	SCREW M4x6 YSB SPIRAL	1
41	37018398	SCREW ST 3.9x9.5 PAN HEAD (S)	4
42	37006201	SCREW PT3.5x9 YSB	2
43	37008662	SCREW M4x10 YSB SPIRAL	4
44	37006212	SCREW PT4x12YSB	12
158	42070464	COUNTERWEIGHT CONCRETE UPPER	1
370	37016585	RAIL TRAY CUTLERY	2
371	42067808	ROLLER RAIL TRAY CUTLERY-R/H	1
372	42067809	ROLLER RAIL TRAY CUTLERY-L/H	1
373	37016714	WASHER TRAY CUTLERY	4
374	42067798	STOP FRONT RAIL TRAY CUTLERY	2

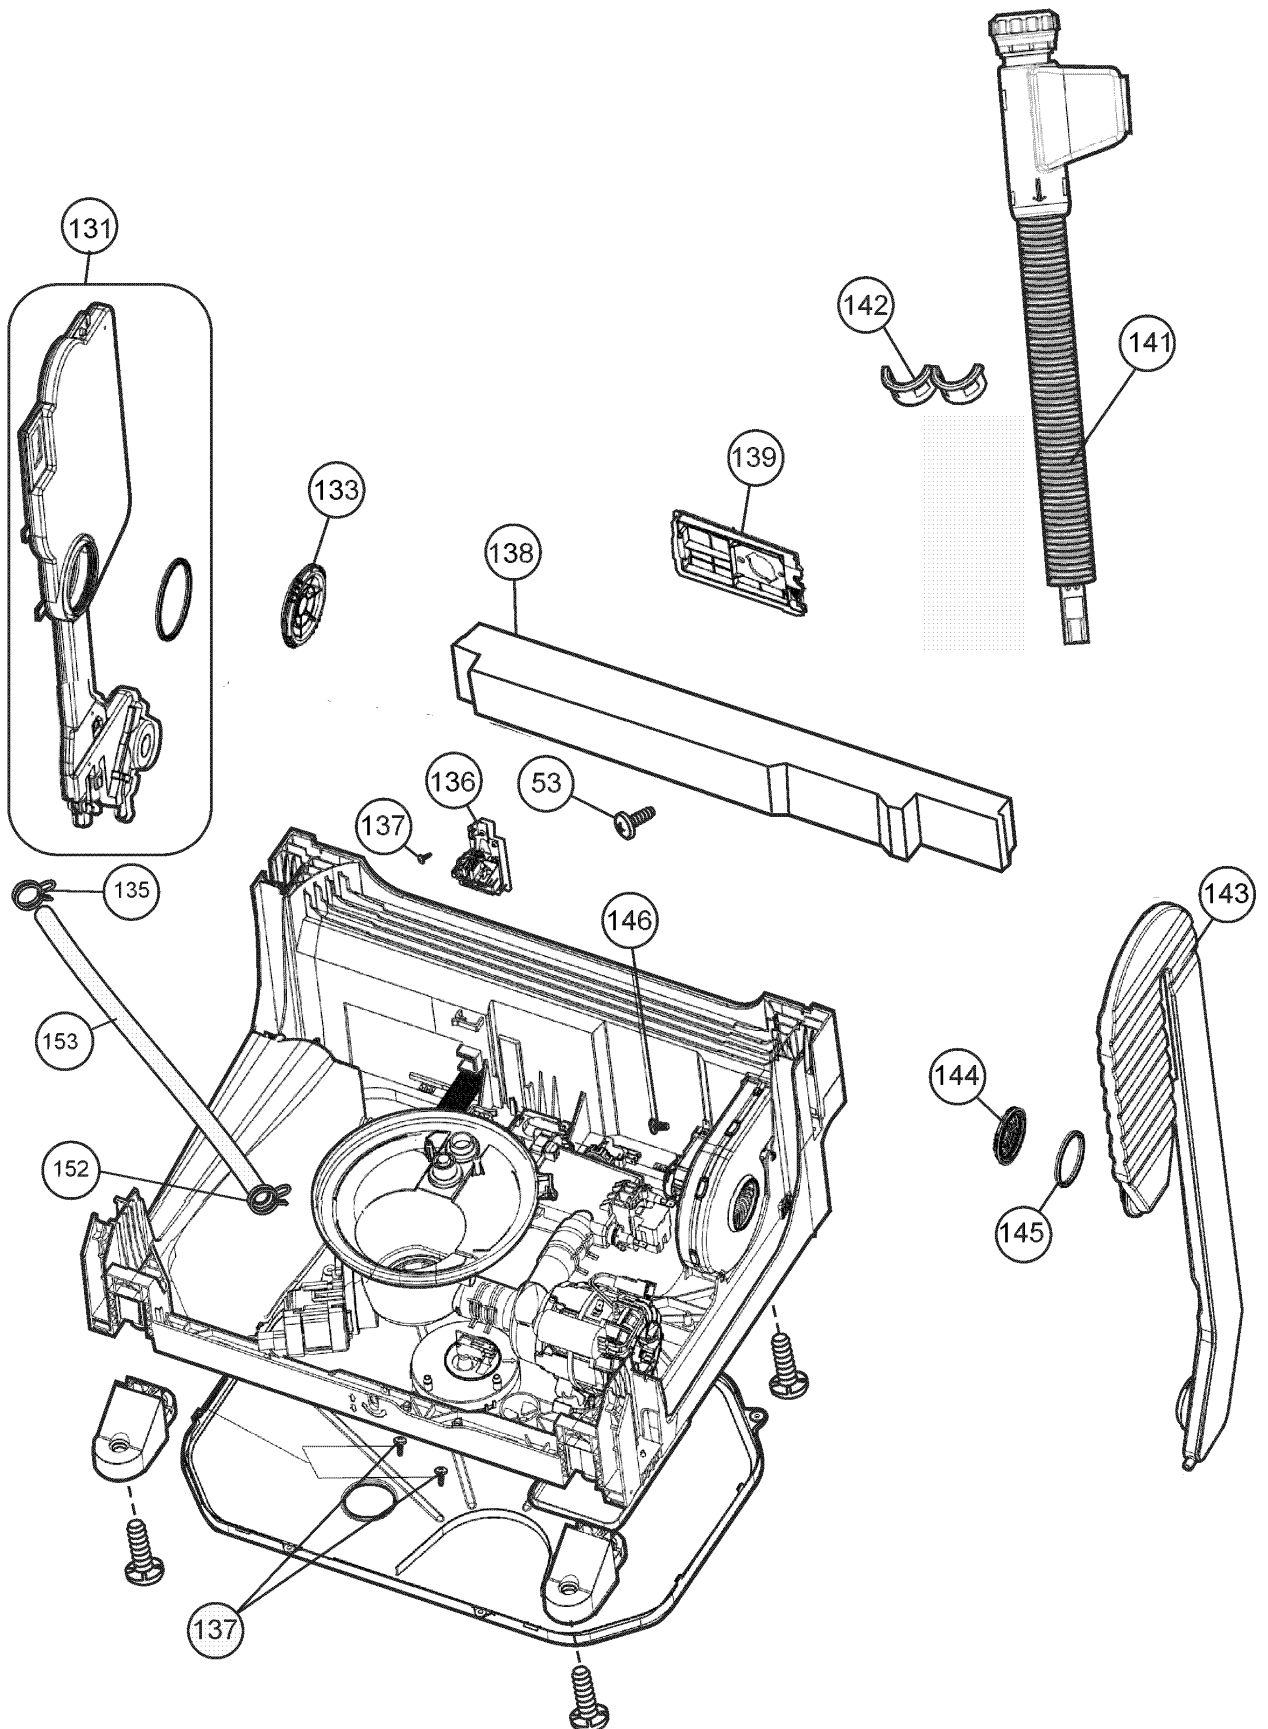

ITEM	PART N°	DESCRIPTION	Ex. VIEW 8068	QTY
53	37010849	SCREW PHCC4.2*32		1
131	42054633	TANK SIDE AIR BREAK + FLOW METER		1
133	42020657	VENT AIR BREAK NUT		1
135	37001625	CLAMP DAI16.8X8.4		1
136	32012071	FILTER EMC		1
137	37006787	SCREW PT3X9 YSB		3
138	47000819	COUNTERWEIGHT CONCRETE LOWER		1
139	42008681	COVER DRAIN HOSE BASEMENT		1
141	32018148	HOSE SAFETY		1
142	42020119	CLAMP HOSE SAFETY		1
143	42051787	CONDERSER STEAM CONTAINER		1
144	42017253	NUT CONTAINER ACTIVE DRY		1
145	42051789	SEAL CONTAINER CONDERSOR UNIT		1
146	N.P.A.	SCREW MOTOR FAN TURBO		1
152	37002755	CLAMP. MAX19.6X8.8		1
153	42039975	HOSE DIA10.5X3.2X295		1

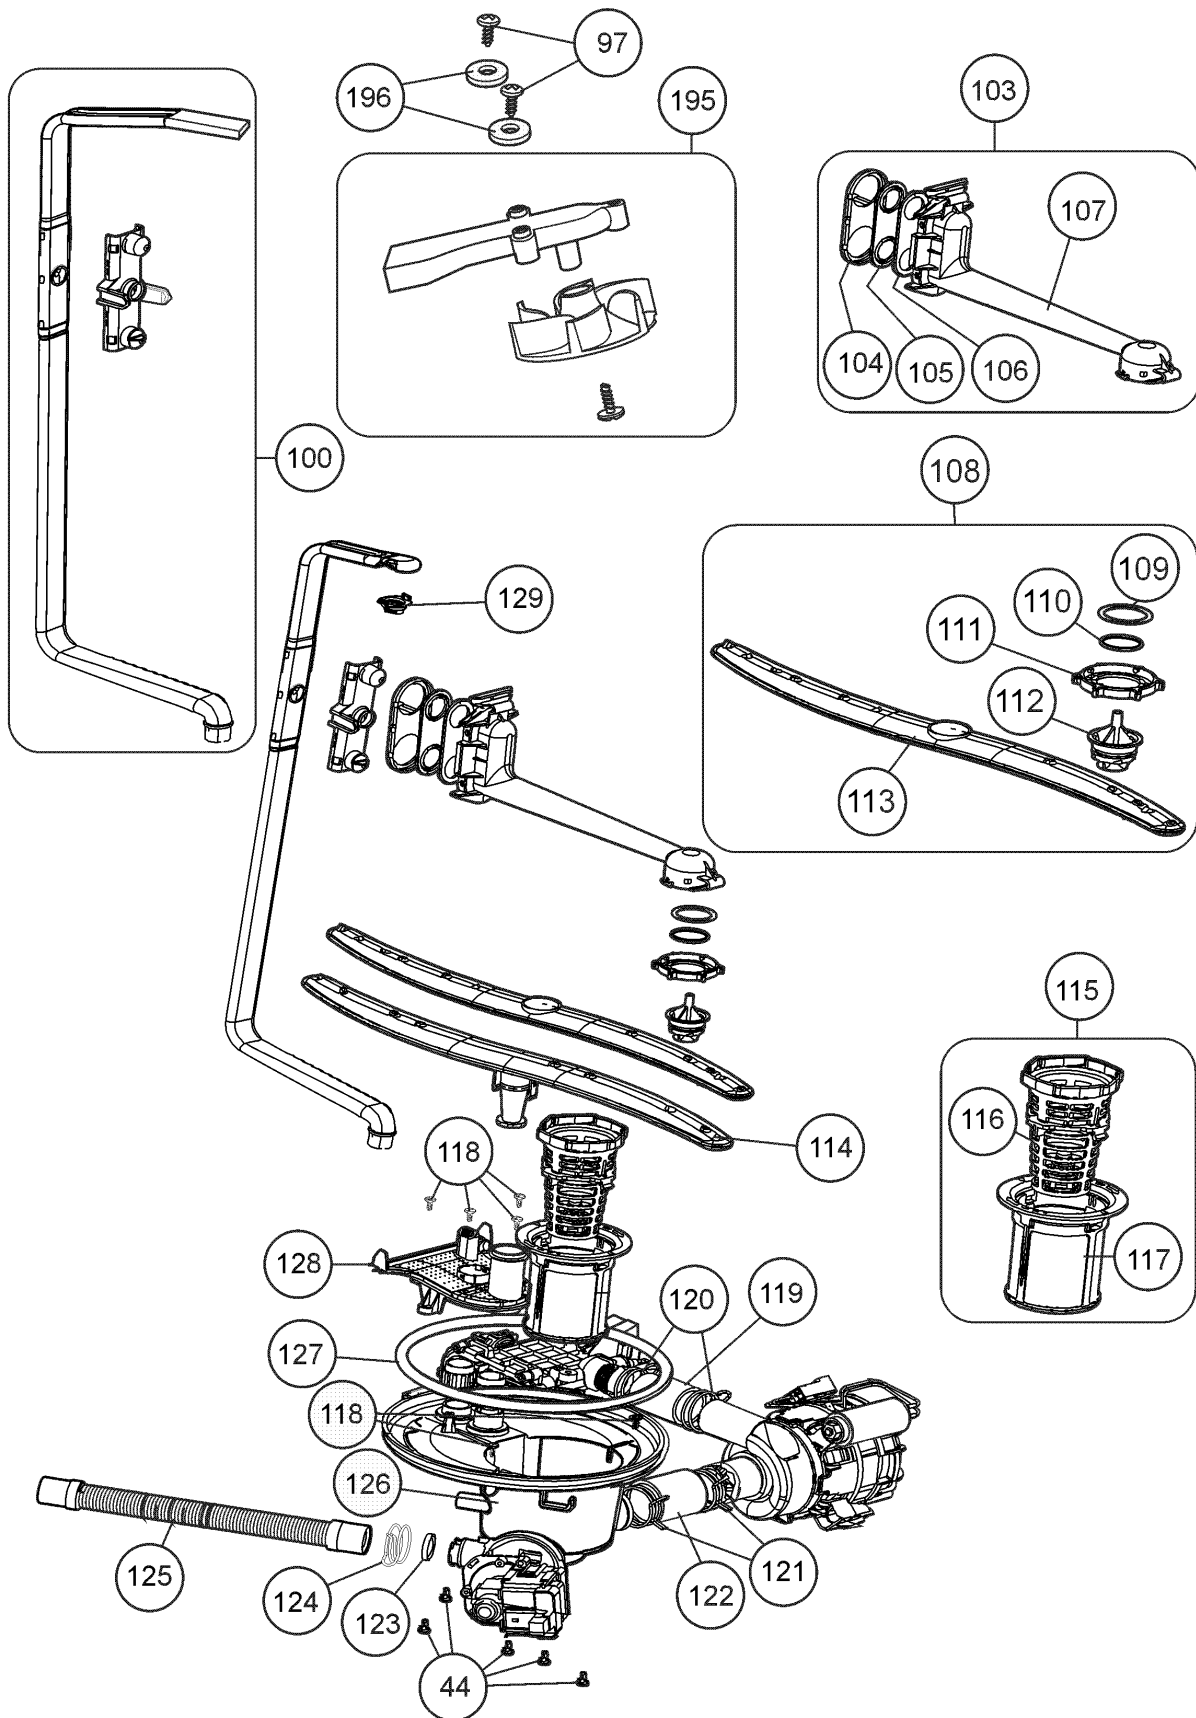


ITEM	PART N°	DESCRIPTION Ex. VIEW 8140	QTY
44	37006212	SCREWPT4X12YSB	5
97	37015420	SCREW PT4x8 PAN HEAD COLLAR	2
100	42065987	TUBE FEED UPPER SPRAYARM	1
103	42021922	TUBE UPPER SPRAY ARM FEEDING	1
104	42021095	COVER REAR UPPER SPRAY ARM	1
105	42005883	SEAL ADAPTOR UPPER SPRAY ARM	1
106	N.P.A.	ADAPTOR FLANGE UPPER SPRAY ARM (Part of Item 103)	-
107	N.P.A.	TUBE UPPER SPRAY ARM (Part of Item 103)	-
108	42021921	SPRAY ARM UPPER BASKET COMP	1
109	42005910	NUT UPPER SPRAY ARM	1
110	42005897	GROMMET UPPER SPRAY ARM	1
111	42021093	NUT SPRAY ARM UPPER	1
112	42022023	ADAPTOR UPPER SPRAY ARM	1
113	42021090	UPPER	1
114	42021087	SPRAY ARM LOWER	1
115	42035214	FILTER ASSEMBLY	1
116	42021086	FILTER COARSE (Part of Item 115)	1
117	42035215	FILTER MICRO (Part of Item 115)	1
118	37006363	SCREW PT4X12 YSB INOX	4
119	42016284	HOSE TO RECIRC.28.5X3	1
120	37006205	CLAMP ØMAX36.4X14	1
121	37006204	CLAMP ØMAX41X14.8	1
122	42016283	HOSE RECIRC TO SUMP.33X3	1
123	42008732	VALVE NON-RETURN	1
124	37012308	CLAMP	1
125	42005936	HOSE DRAIN	1
126	42005958	SUMP	1
127	42005959	SEAL SUMP	1
128	42021098	SUPPORT LOWER SPRAY ARM	1
129	42022065	NOZZLE PIPE FEED	1
195	42067892	IMPELLER TOP TUB ASSEMBLY	1
196	42067893	WASHER RUBBER TUB TOP	2


NOTE: If a Customer needs to extend their Drain Hose, order the following components:

1x 0571400142 Hose Drain (2M length), 1x 0182200002 Ferrule Hose Joiner (19mm) and 2x W011 Clamp.


For extensions less than 2 metres, use ES5323K Kit Hose Flex Drain (1M)

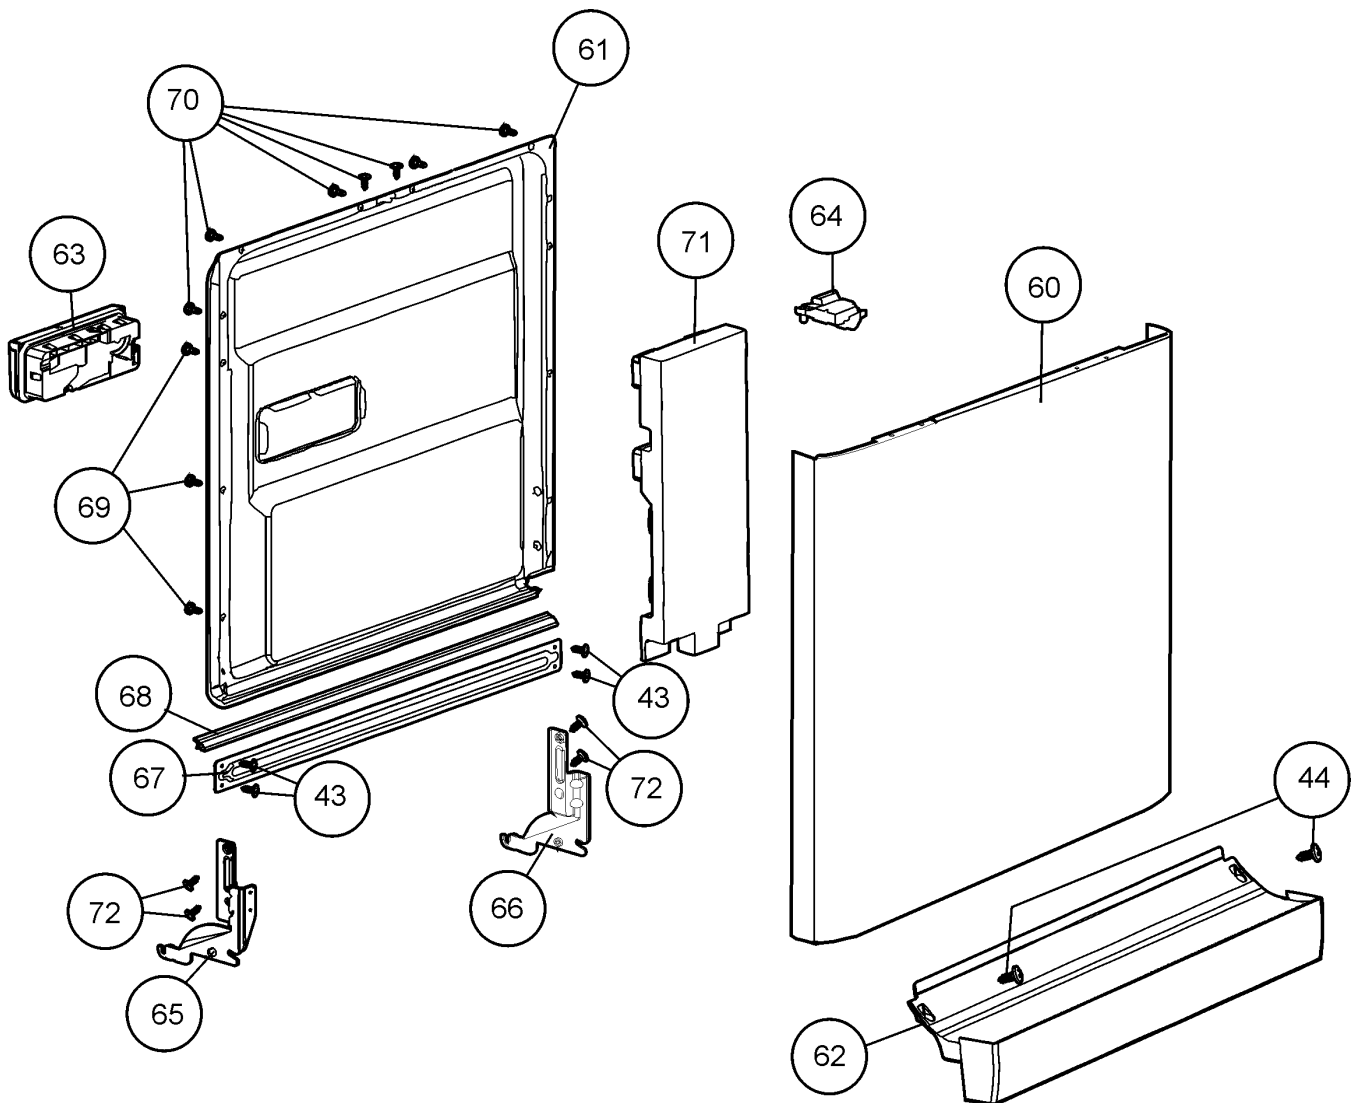


ITEM	PART N°	DESCRIPTION Ex. VIEW 8061	QTY
43	37008662	SCREW M4 x 10 YSB SPIRAL	4
44	37006212	SCREWPT4 x 12YSB	2
60	20722014	PANEL FRONT DOOR - WHITE	1
61	20755160	PANEL INNER DOOR	1
62	42058809	PANEL KICK PLASTIC - WHITE	1
63	42058476	DISPENSER	1
64	32013875	LOCK DOOR UNIT	1
65	37015330	HINGE - LEFT HAND	1
66	37015329	HINGE - RIGHT HAND	1
67	20634463	BRACKET HINGE SUPPORT	2
68	42064225	GASKET DOOR BOTTOM	1
69	37006339	SCREW SAC 3.9 x 12 YHB INOX	6
70	37006340	SCREW PT4 x 14 YHB INOX	8
71	52008512	SUPPORT DOOR STYROFOAM	1
72	37006361	SCREW M5 x 10 THB INOX BIXI	4

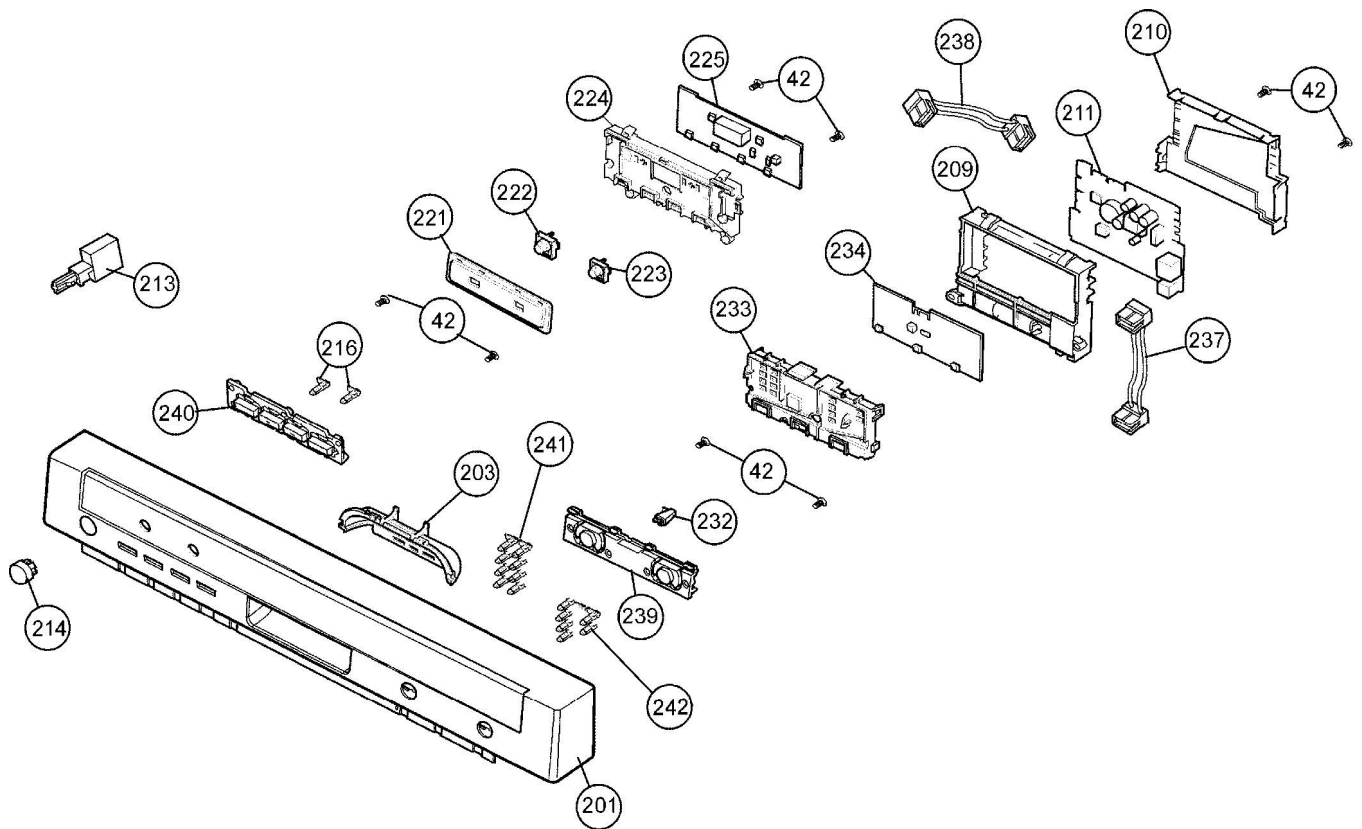


ITEM	PART N°	DESCRIPTION Ex. VIEW 8066	QTY
42	37006201	SCREW PT3.5 x 9 YSB	6
201	42088405	PANEL CONTROL WHITE - WSF6608W	1
203	42065916	HANDLE - WHITE	1
209	42058783	P.C.B. BOX DISPLAY (MID)	1
210	42058784	P.C.B. BOX DISPLAY (REAR)	1
211	32018027	P.C.B. ELECTRONIC CARD	1
213	32006362	SWITCH - ON/OFF	1
214	42065960	BUTTON - ON/OFF	1
216	42065965	BUTTON SHAFT	2
221	N.P.A.	COVER BUTTON (Part of Item 224)	-
222	42075078	BUTTON DISPLAY	1
223	42075077	BUTTON DISPLAY	1
224	42080724	P.C.B. BOX DISPLAY	1
225	32013846	P.C.B. DISPLAY CARD	1
232	42065964	BUTTON SHAFT/PAGOS	1
233	42058782	P.C.B. BOX DISPLAY (FRONT)	1
234	32013843	P.C.B. DISPLAY CARD	1
237	32015166	CABLE DISPLAY	1
238	32015192	CABLE DISPLAY	1
239	42111761	BUTTON PROGRAM	1
240	42075064	BUTTON OPTIONS	1
241	42065966	LENS LIGHTGUIDE-1 8P	1
242	42076891	LENS LIGHTGUIDE-2 6P	1

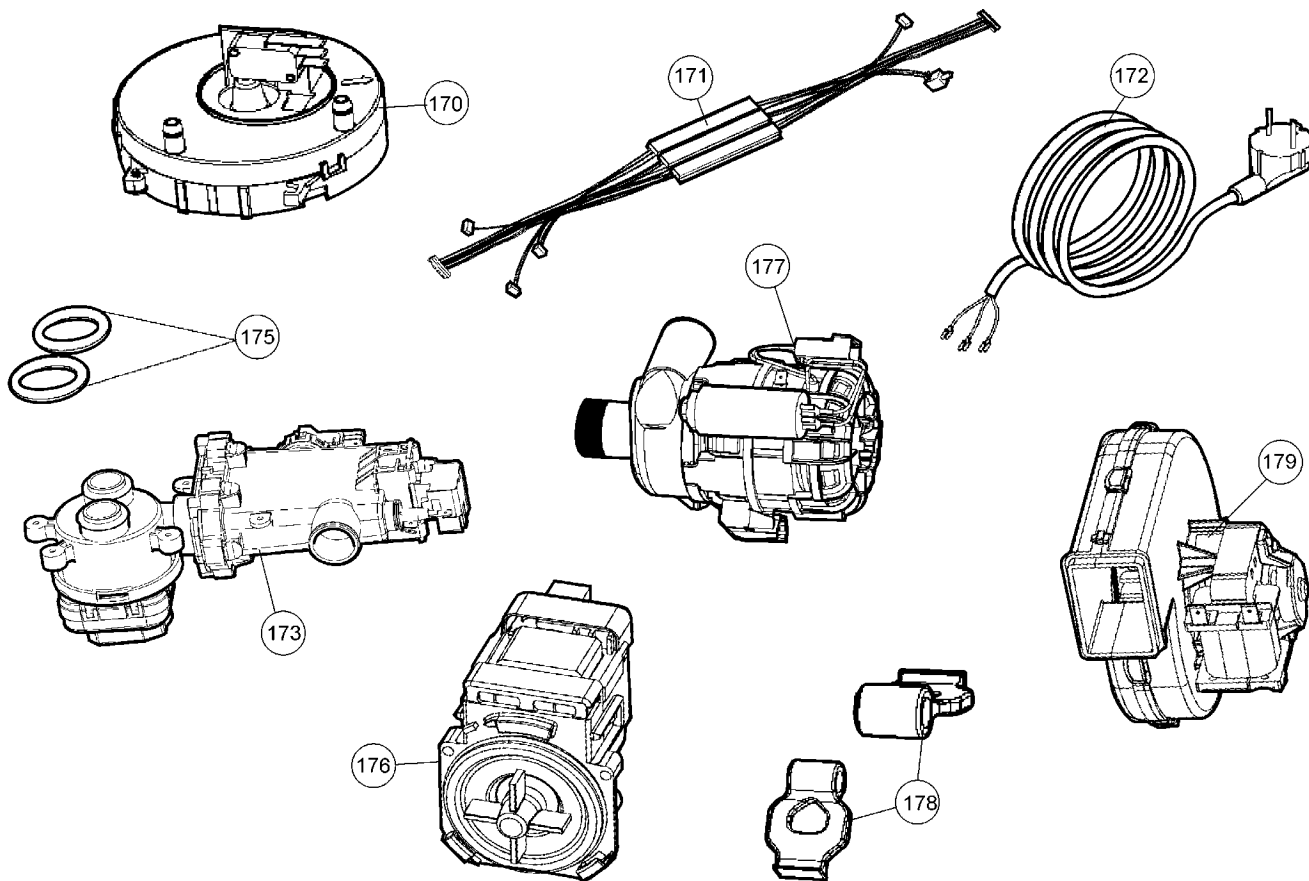


ITEM	PART N°	DESCRIPTION	Ex VIEW 8071	QTY
170	32010355	FLOATER-WITH TWO SCREWS		1
171	32018952	CABLE HARNESS		1
172	32004641	POWER CABLE 180cm/AUSTRALIA/WHITE		1
173	32004303	HEATER, DIVERTER, NTC & PRESSURE SENSOR ASSY		1
175	42016285	HEATER CASING O-RING		1
176	32015595	DRAIN PUMP HANYU B30-6A		1
177	32001602	WASHING PUMP/ASENKRON		1
178	42008724	WASHING PUMP VINE SUPPORT		1
179	32004535	MOTOR FAN TURBO		1

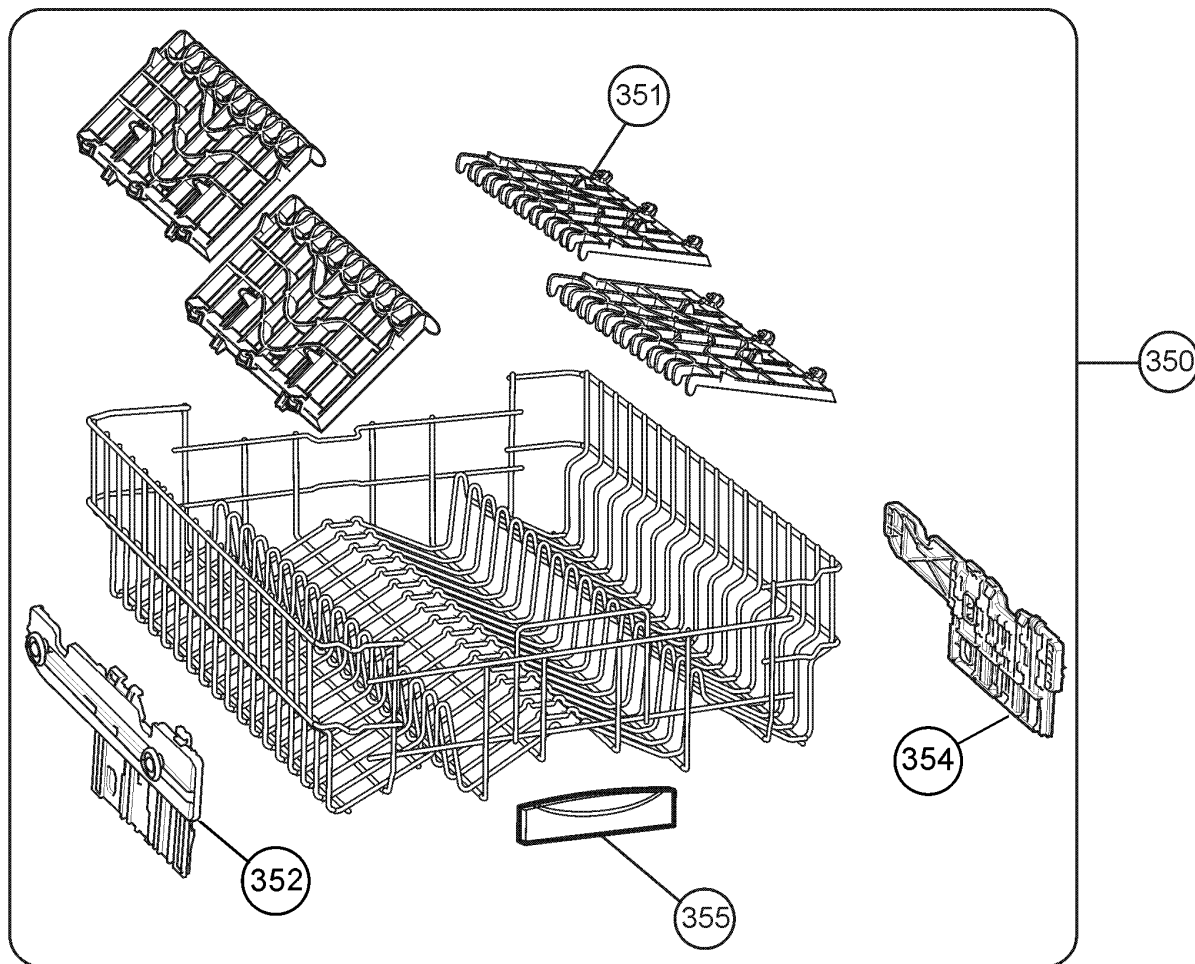

ITEM	PART N°	DESCRIPTION	Ex. VIEW 8065	QTY
350	37021971	BASKET UPPER COMPLETE ASSY		1
351	42056763	RACK CUP UPPER BASKET		4
352	N.P.A.	PLATE EASYLIFT L/H (Part of Item 350)		-
354	N.P.A.	PLATE EASYLIFT r/H (Part of Item 350)		-
355	42021081	HANDLE UPPER BASKET ASSY		1

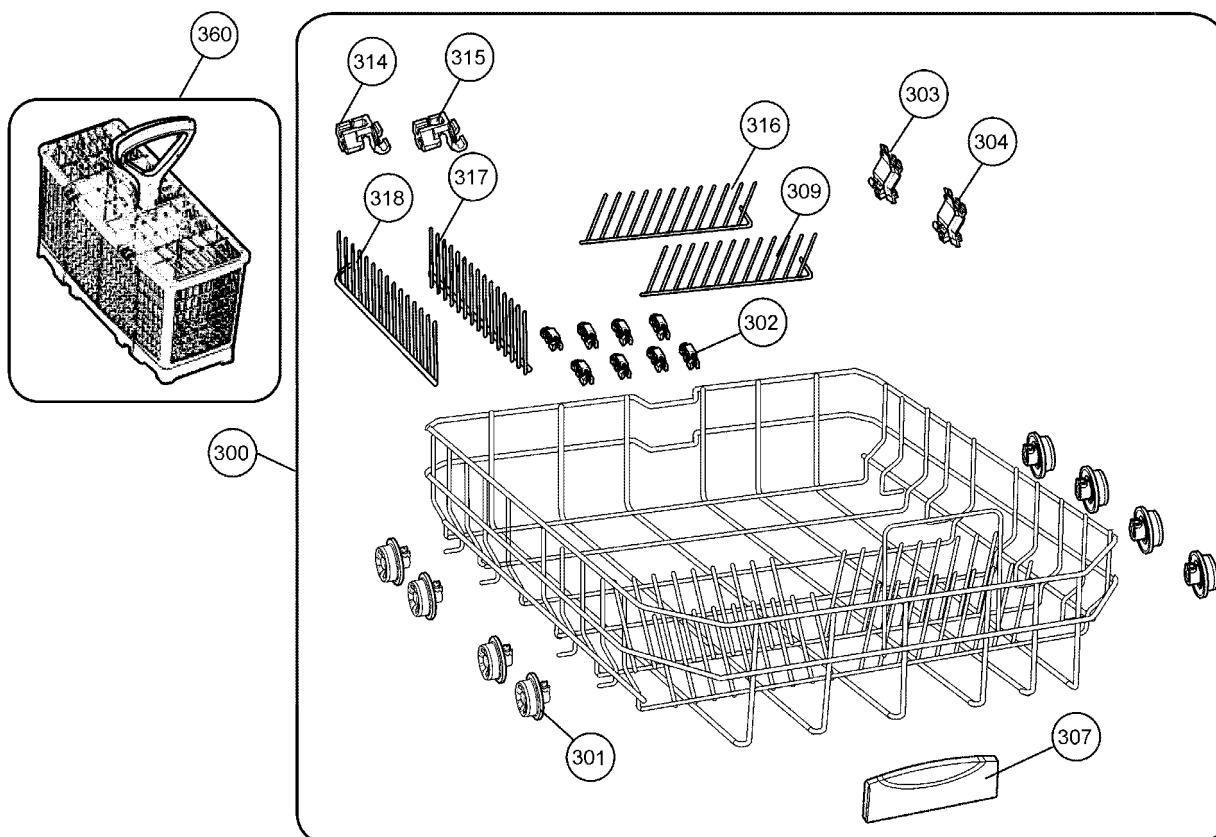MODEL: WSF6608W**PNC: 942001221 00****EX. VIEW DRAWING 8064
BASKET LOWER
ASSEMBLY**

ITEM	PART N°	DESCRIPTION	Ex. VIEW 8064	QTY
300	37022454	BASKET LOWER COMPLETE ASSY		1
301	42052035	WHEEL BASKET LOWER		8
302	42021078	CLIP RACK FOLD DOWN		8
303	42021904	CLIP FOLD DOWN - REAR		1
304	42021077	CLIP FOLD DOWN - FRONT		1
307	42021905	HANDLE BASKET LOWER ASSY		1
309	37012907	RACK FOLD DOWN - FRONT		1
314	42046132	CLIP FOLD DOWN - LEFT		1
315	42046133	CLIP FOLD DOWN- RIGHT		1
316	37012906	RACK FOLD DOWN - REAR		1
317	37012908	RACK FOLD DOWN- RIGHT		1
318	37012909	RACK FOLD DOWN- LEFT		1
360	42091579	BASKET CUTLERY HALF- GREY		1

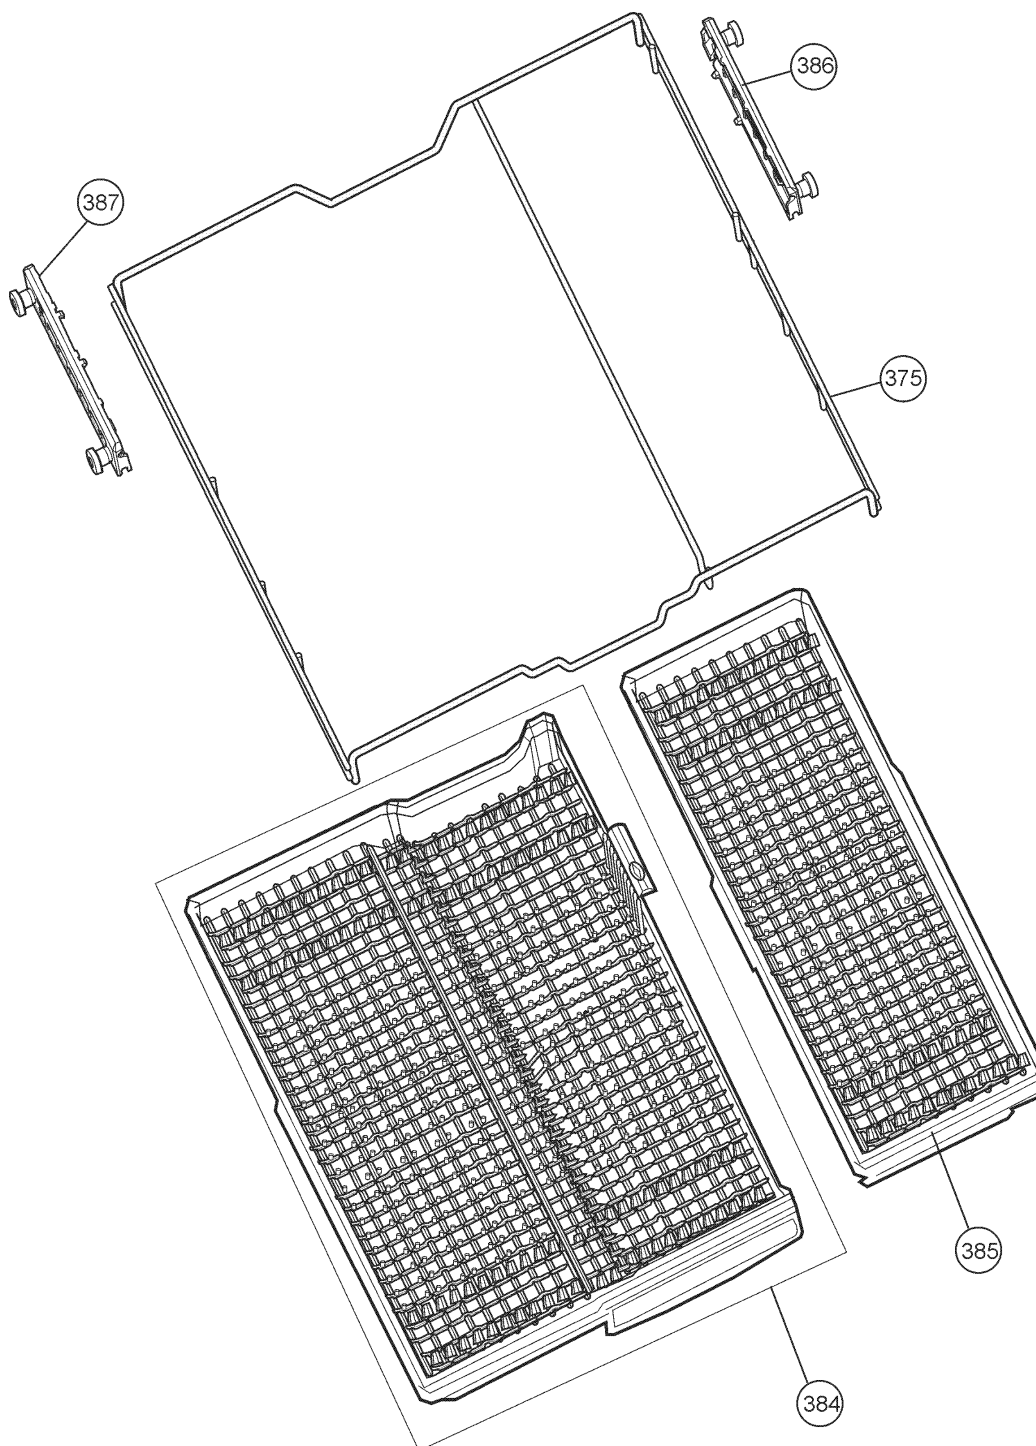MODEL: WSF6608W**PNC: 942001221 00****EX. VIEW DRAWING 8139
FRAME TRAY CUTLERY
UPPER ASSEMBLY**


ITEM	PART N°	DESCRIPTION	Ex. VIEW 8139	QTY
375	37016706	FRAME TRAY CUTLERY UPPER		1
384	42076111	TRAY CUTLERY LARGE - LEFT		1
385	42067792	TRAY CUTLERY SMALL - RIGHT		1
386	42067806	WHEELS TRAY CUTLERY - RIGHT		1
387	42067807	WHEELS TRAY CUTLERY - LEFT		1

MODEL: WSF6608W

PNC: 942001221 00

CIRCUIT DIAGRAM

Ex. VIEW 8142

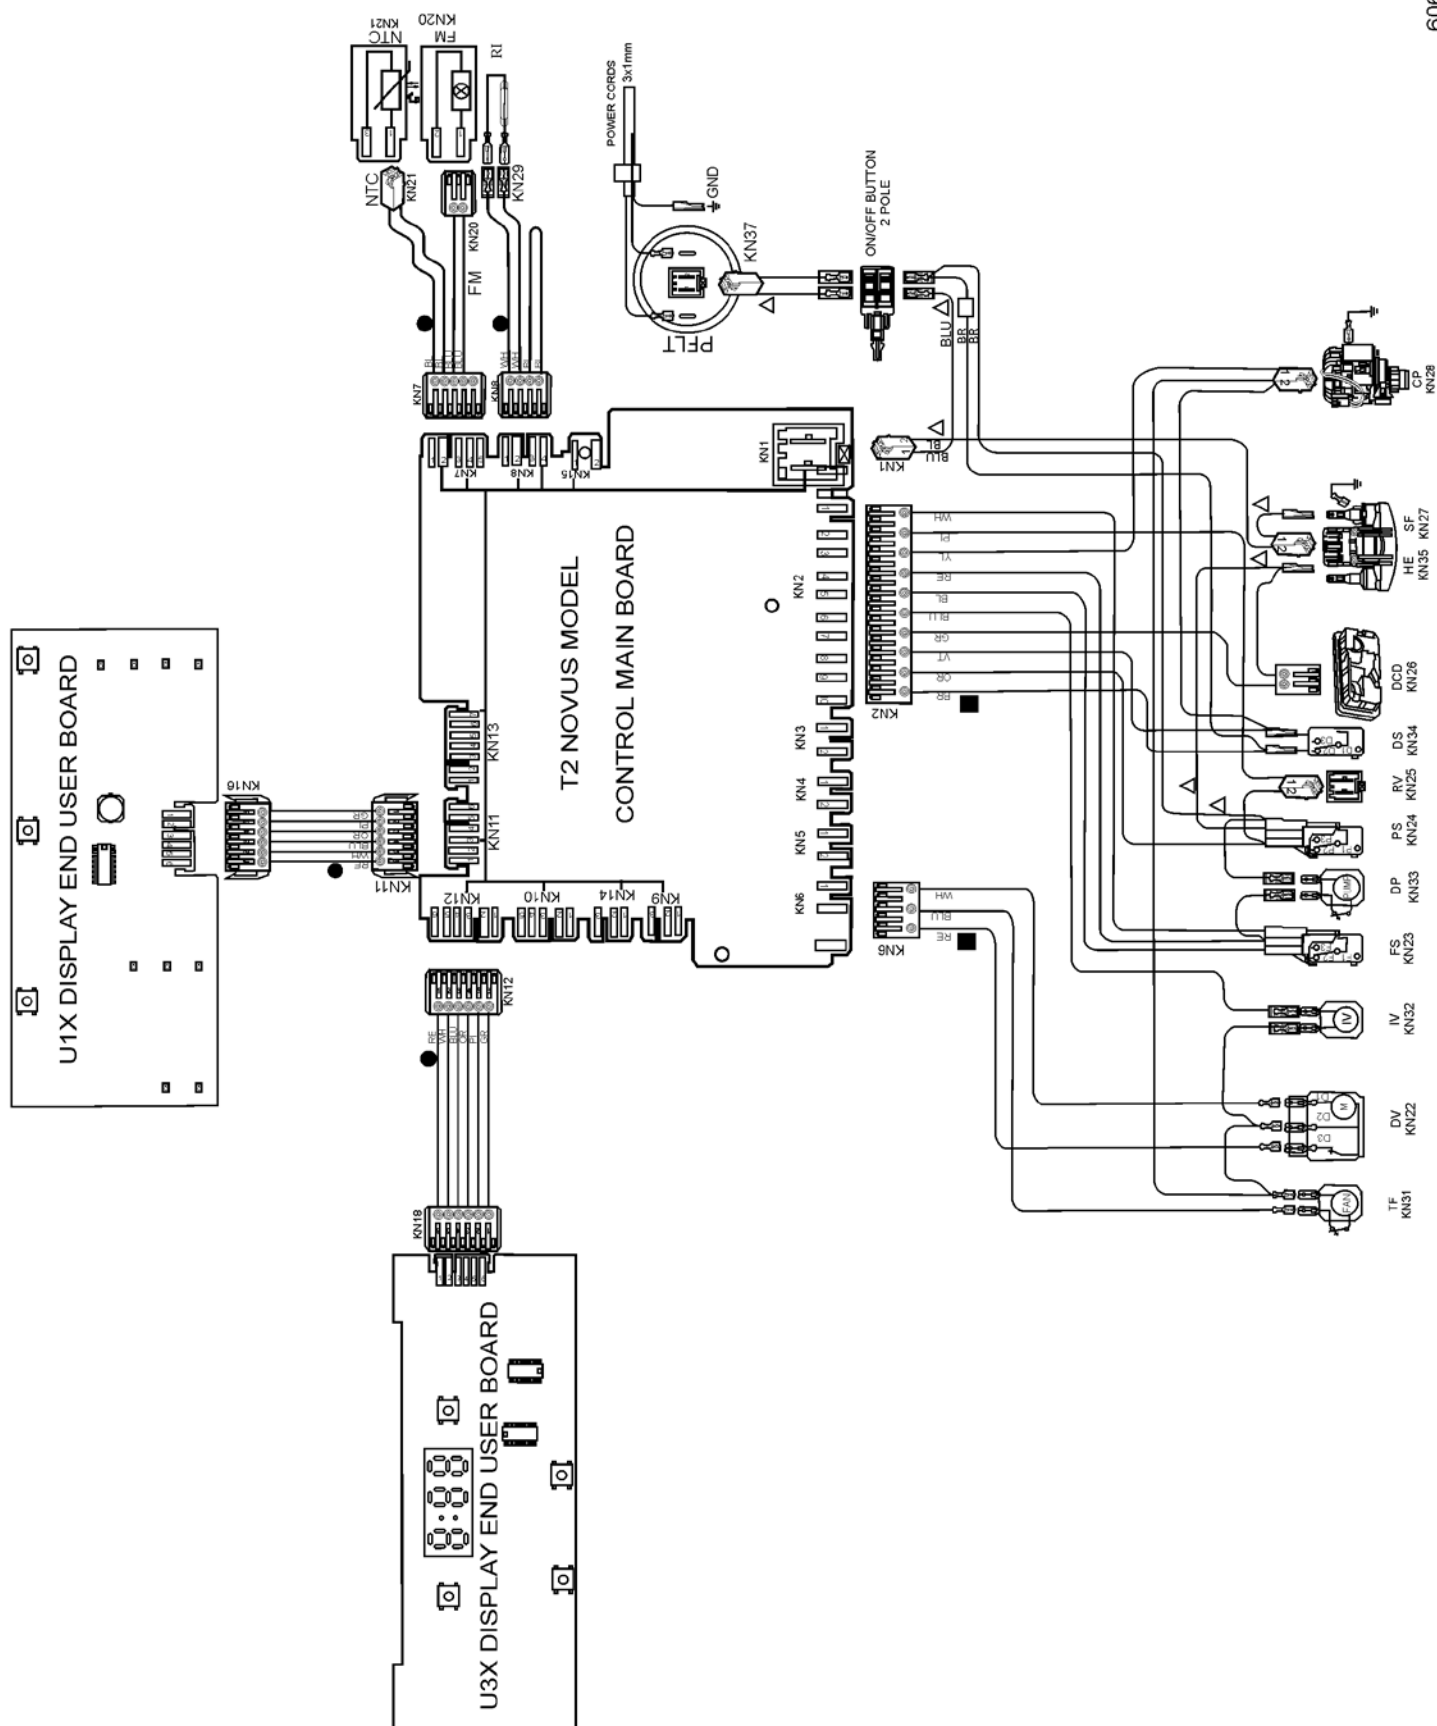

6068
8142

IMPORTANT SAFETY NOTICE

This diagram has been prepared for use by electrically qualified service technicians. Electrolux cannot be held responsible for the interpretation of its service publications nor for any injury or damage that may occur in connection with their use.

TS	-	TURBIDITY SENSOR
RI	-	RINSE AID INDICATOR
SI	-	SALT INDICATOR
FM	-	FLOWMETER
NTC	-	NTC SENSOR
DV	-	DIVERTER
IV	-	INLET VALVE
FS	-	FLOAT SENSOR
DP	-	DRAIN PUMP
F	-	TURBO FAN
PS	-	PRESSURE SWITCH
DS	-	DOOR SWITCH
DE	-	AC DISPENSER
HE	-	HEATING ELEMENT
CP	-	CIRCULATION PUMP
C	-	CAPASITOR
RV	-	REGENERATION VALVE
SF	-	HEATING SAFETY
RW	-	ROTARY SWITCH
BLDC	-	BLDC PUMP
PST	-	POWER SUPPLY TERMINAL
MS	-	MAIN SWITCH
DUB	-	DISPLAY END USER BOARD
U1X	-	DISPLAY END USER BOARD
U2X	-	DISPLAY END USER BOARD
U3X	-	DISPLAY END USER BOARD
SFL	-	SAFETY LOCK
LM	-	LIGHT MODUL
DCD	-	DC DISPENSER
ALM	-	AMBIENT LIGHT MODULE
PSW	-	PRESSURE LEVEL SWITCH
WHS	-	WATER HARDNESS SENSOR
CULCD	-	CONTROL UNIT LCD
ATSW	-	AUTOMATIC ON/OFF SWITCH
LCD	-	LIQUID CRYSTAL DISPLAY
PFLT	-	PARASIT FILTER
TRF	-	TRANSFORMERS LIGHT MODULE
ALL	-	AMBI LIGHT LED
AOD	-	AUTOMATIC OPEN DOOR
TFT	-	TFT LCD
FC	-	FERITE CORE
WRV	-	WATER RECYCLING VALVE
WRP	-	WATER RECYCLING PUMP
SC	-	SILICON CABLE
HIP	-	HEATER INTEGRATED PUMP
○	-	0.25mm CABLE
●	-	0.35mm CABLE
■	-	0.50mm CABLE
△	-	1.0mm CABLE
▲	-	1.5mm CABLE

OR	:	ORANGE
WH	:	WHITE
BLU	:	BLUE
RE	:	RED
BR	:	BROWN
PI	:	PINK
VI	:	VIOLET
BL	:	BLACK
GR	:	GREEN
YL	:	YELLOW
YE/GI	:	YELLOW/GREEN
GRY	:	GREY

DISHWASHER ACCESSORY COMPONENTS

EX. VIEW DRAWING 8155-8159



ITEM	PART N°	DESCRIPTION	Ex.
1	ACC017	Scalex Plus Descaler Sachet 75gm	
2	ACC100	Detergent Dishwasher 1kg	
3	ACC102	Rinse Aid Additive 500mls	
4	ACC103	Descaler Powder 350g (Dangerous Goods rules apply, min order Qty of 12)	
5	ACC002	Dishwasher Salt 1kg Pack	